 


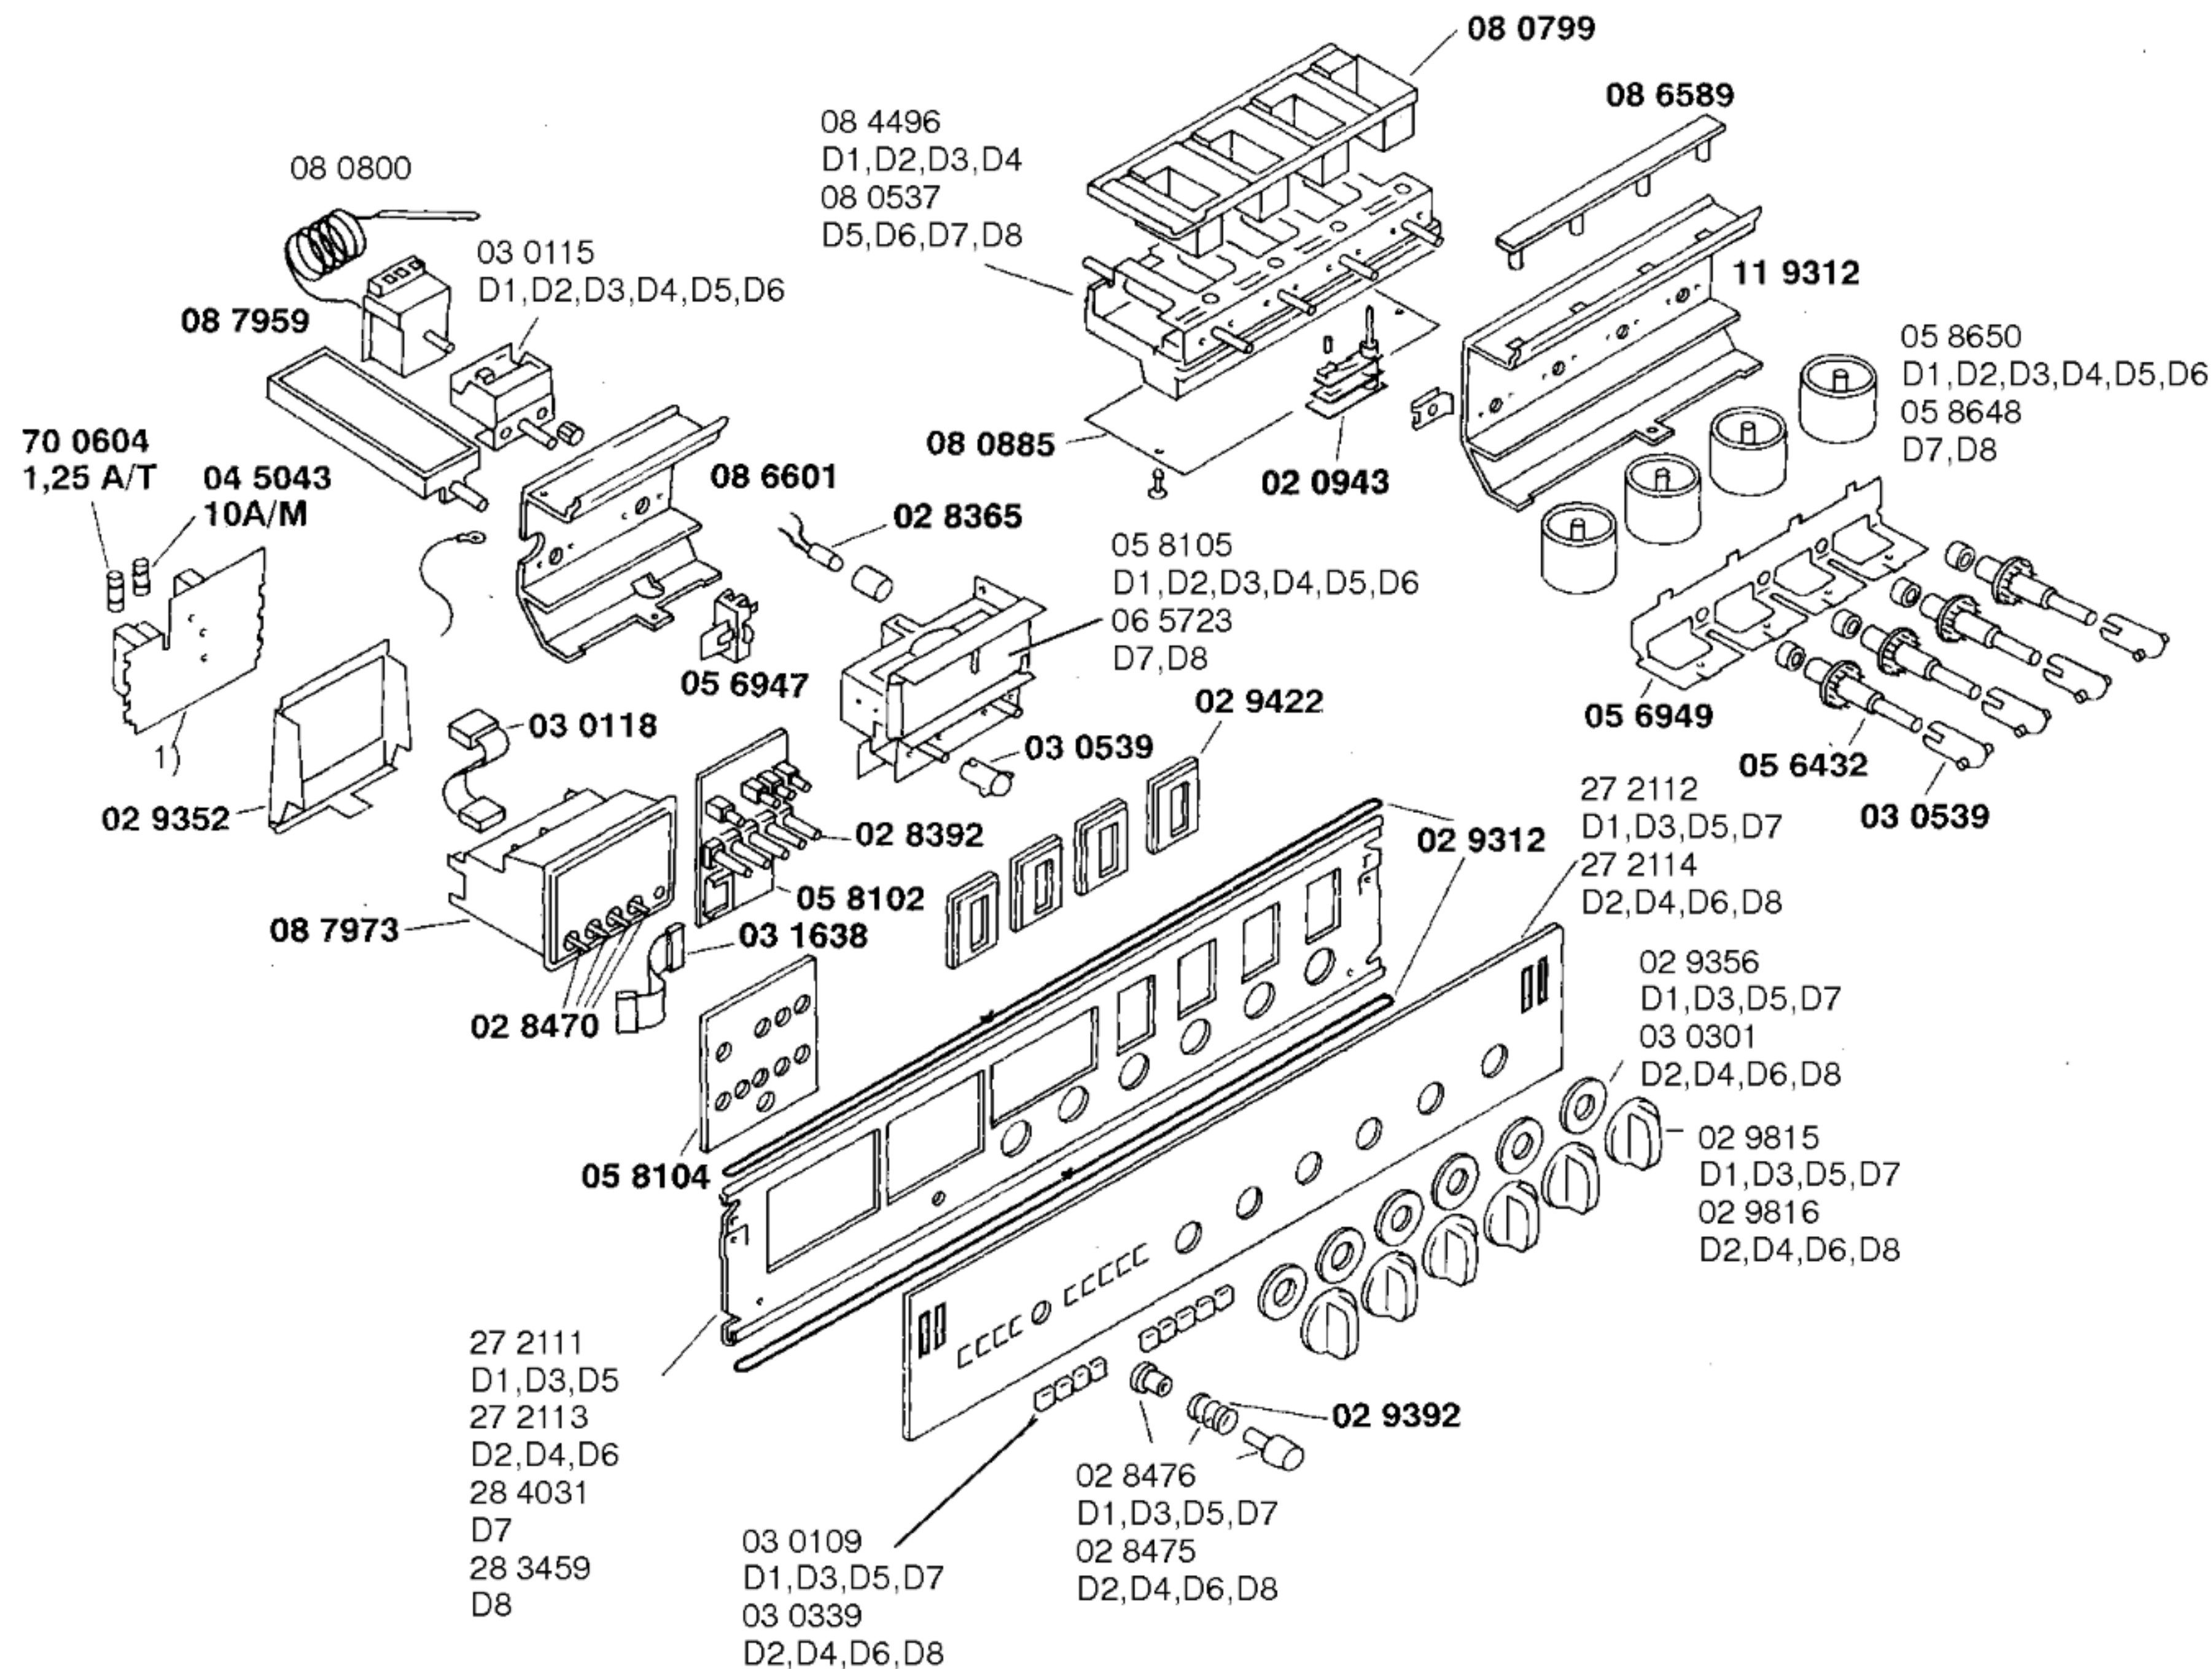

Gebrauchsanweisung

51 4440
(D, F, GB, I, NL)
D1, D2, D3, D4, D5, D6
51 6237
(D, F, GB, DK, NL)
D7, D8

Kochbuch
51 4784
(D)

1) 08 6585
D1, D2, D3, D4, D5, D6
09 3610
D7, D8

Zubehör:

HZ 8042
Bratpfanne


HZ 8044
Spritzschutzpfanne


HZ 8048
Alu-Backblech


HZ 8057
Universalpfanne

HZ 8087
Backblech emailliert

   HZ 9150
Glasbräter

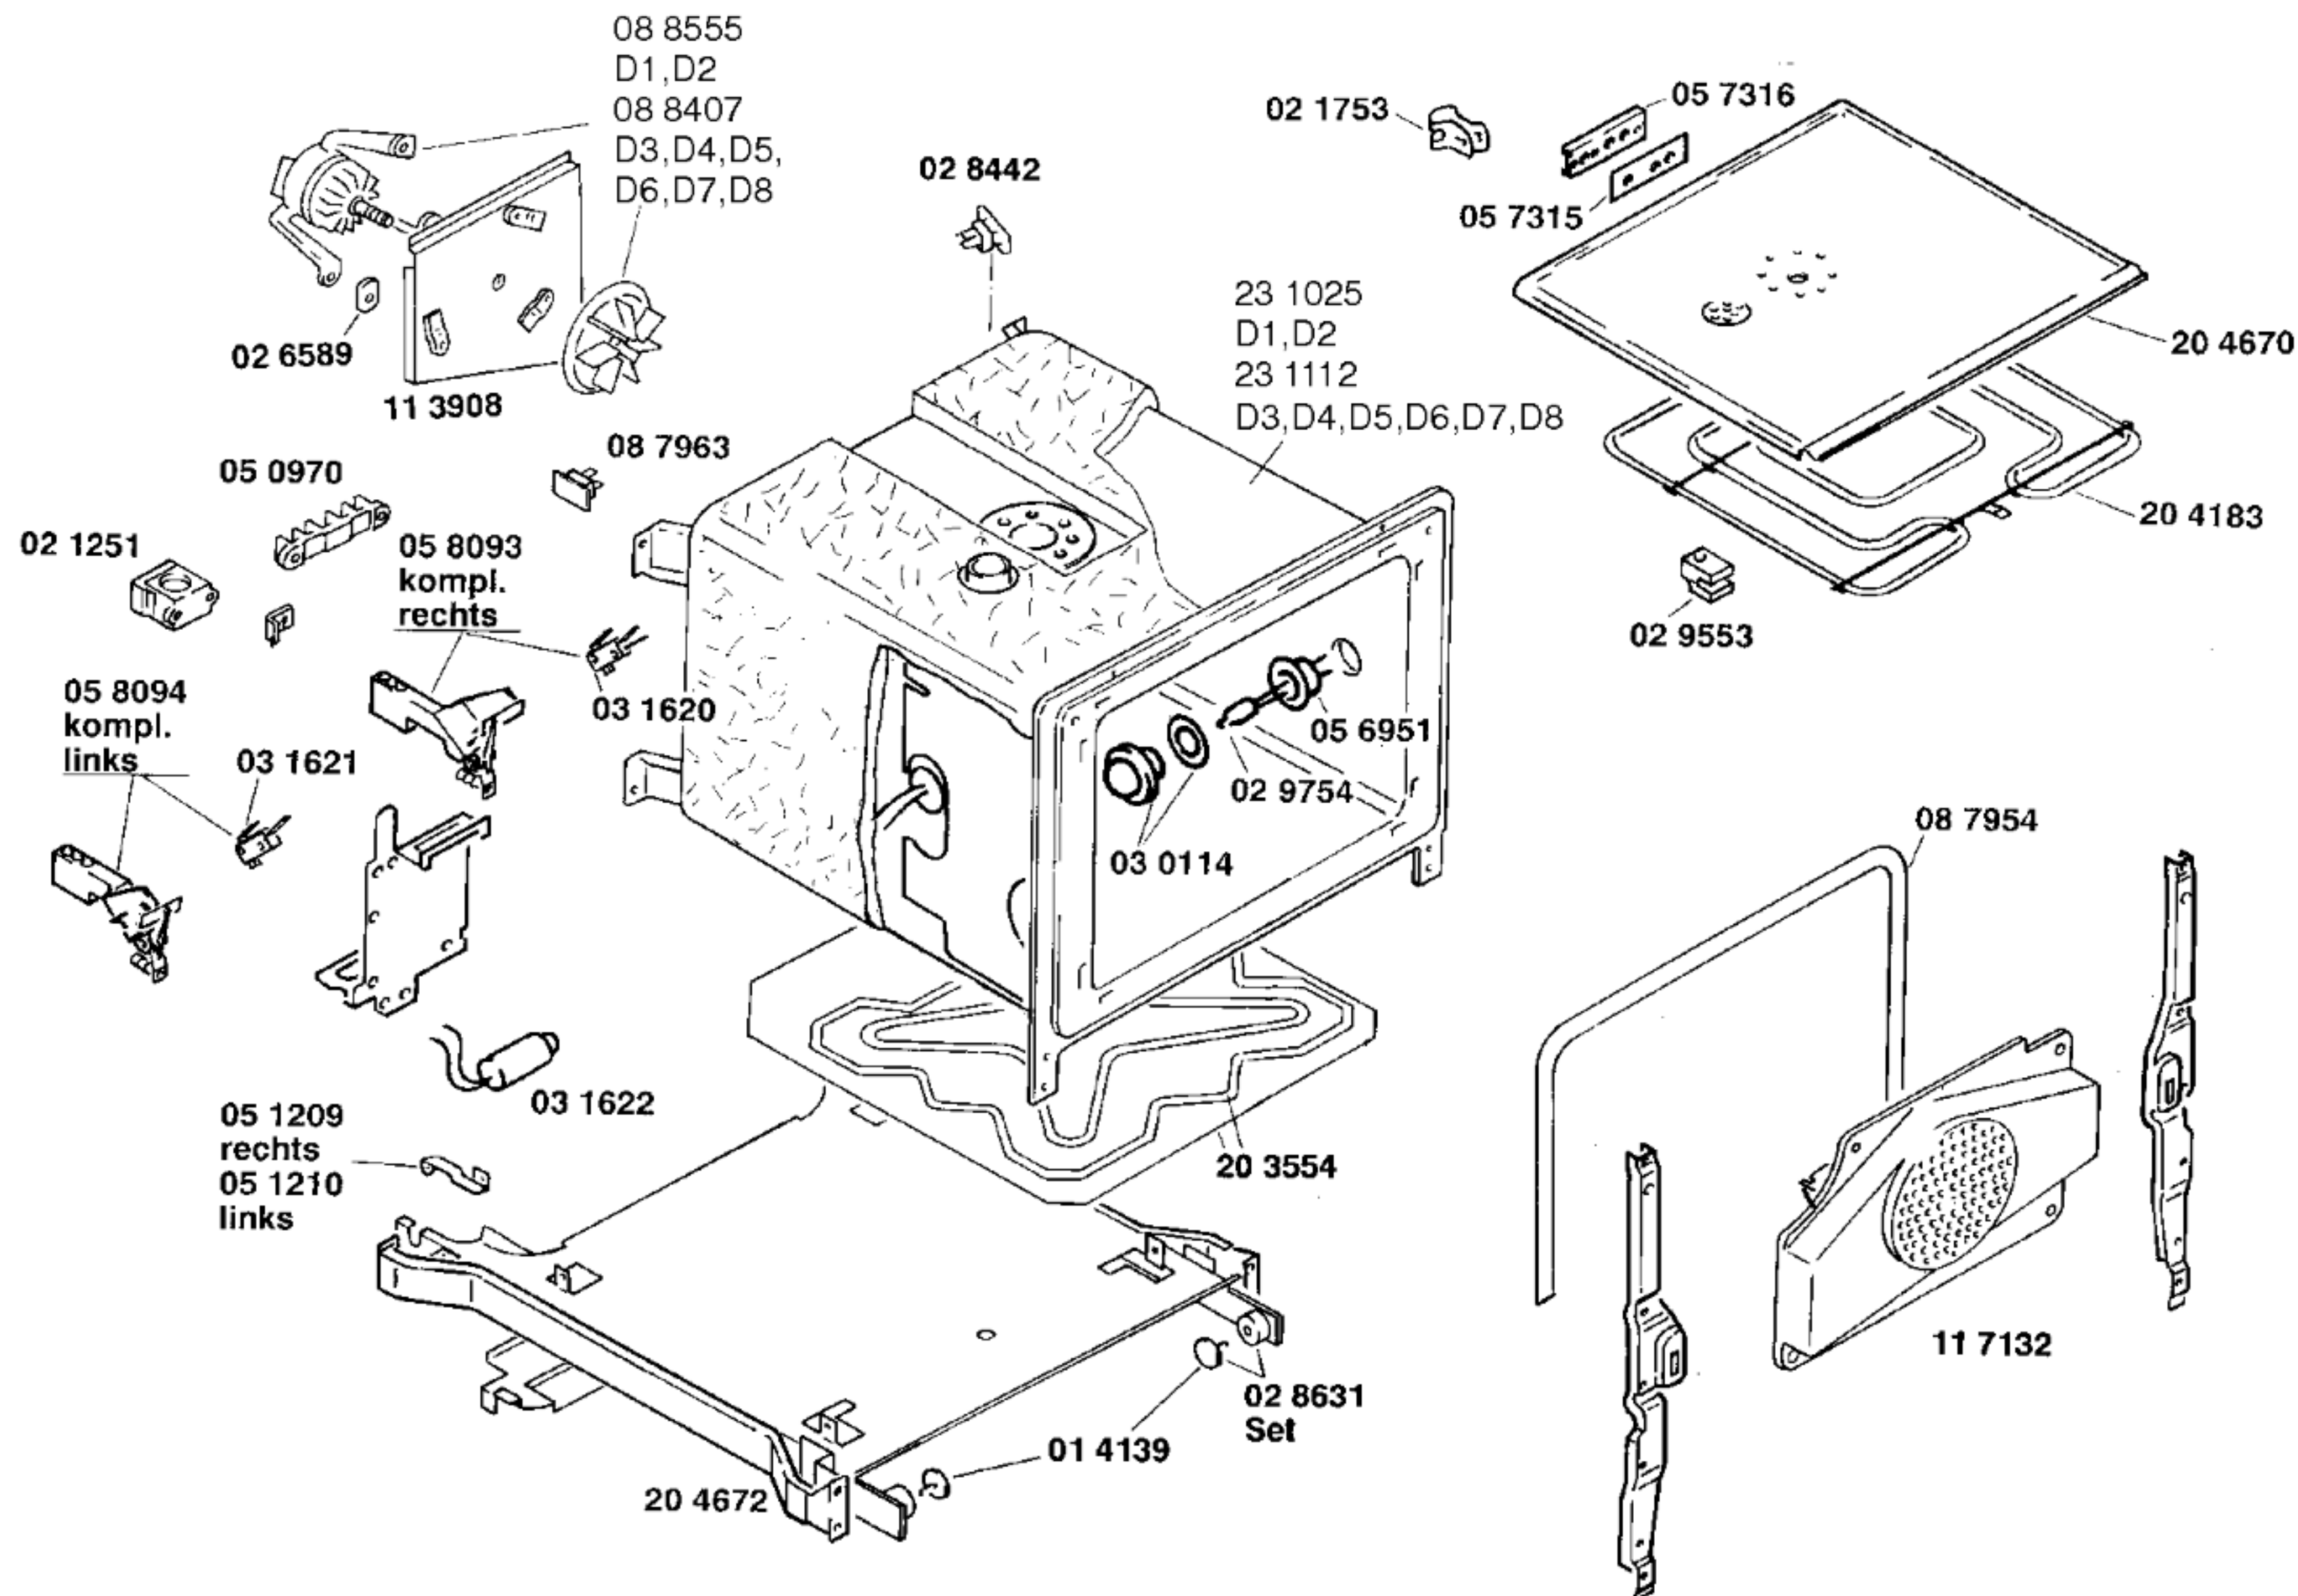

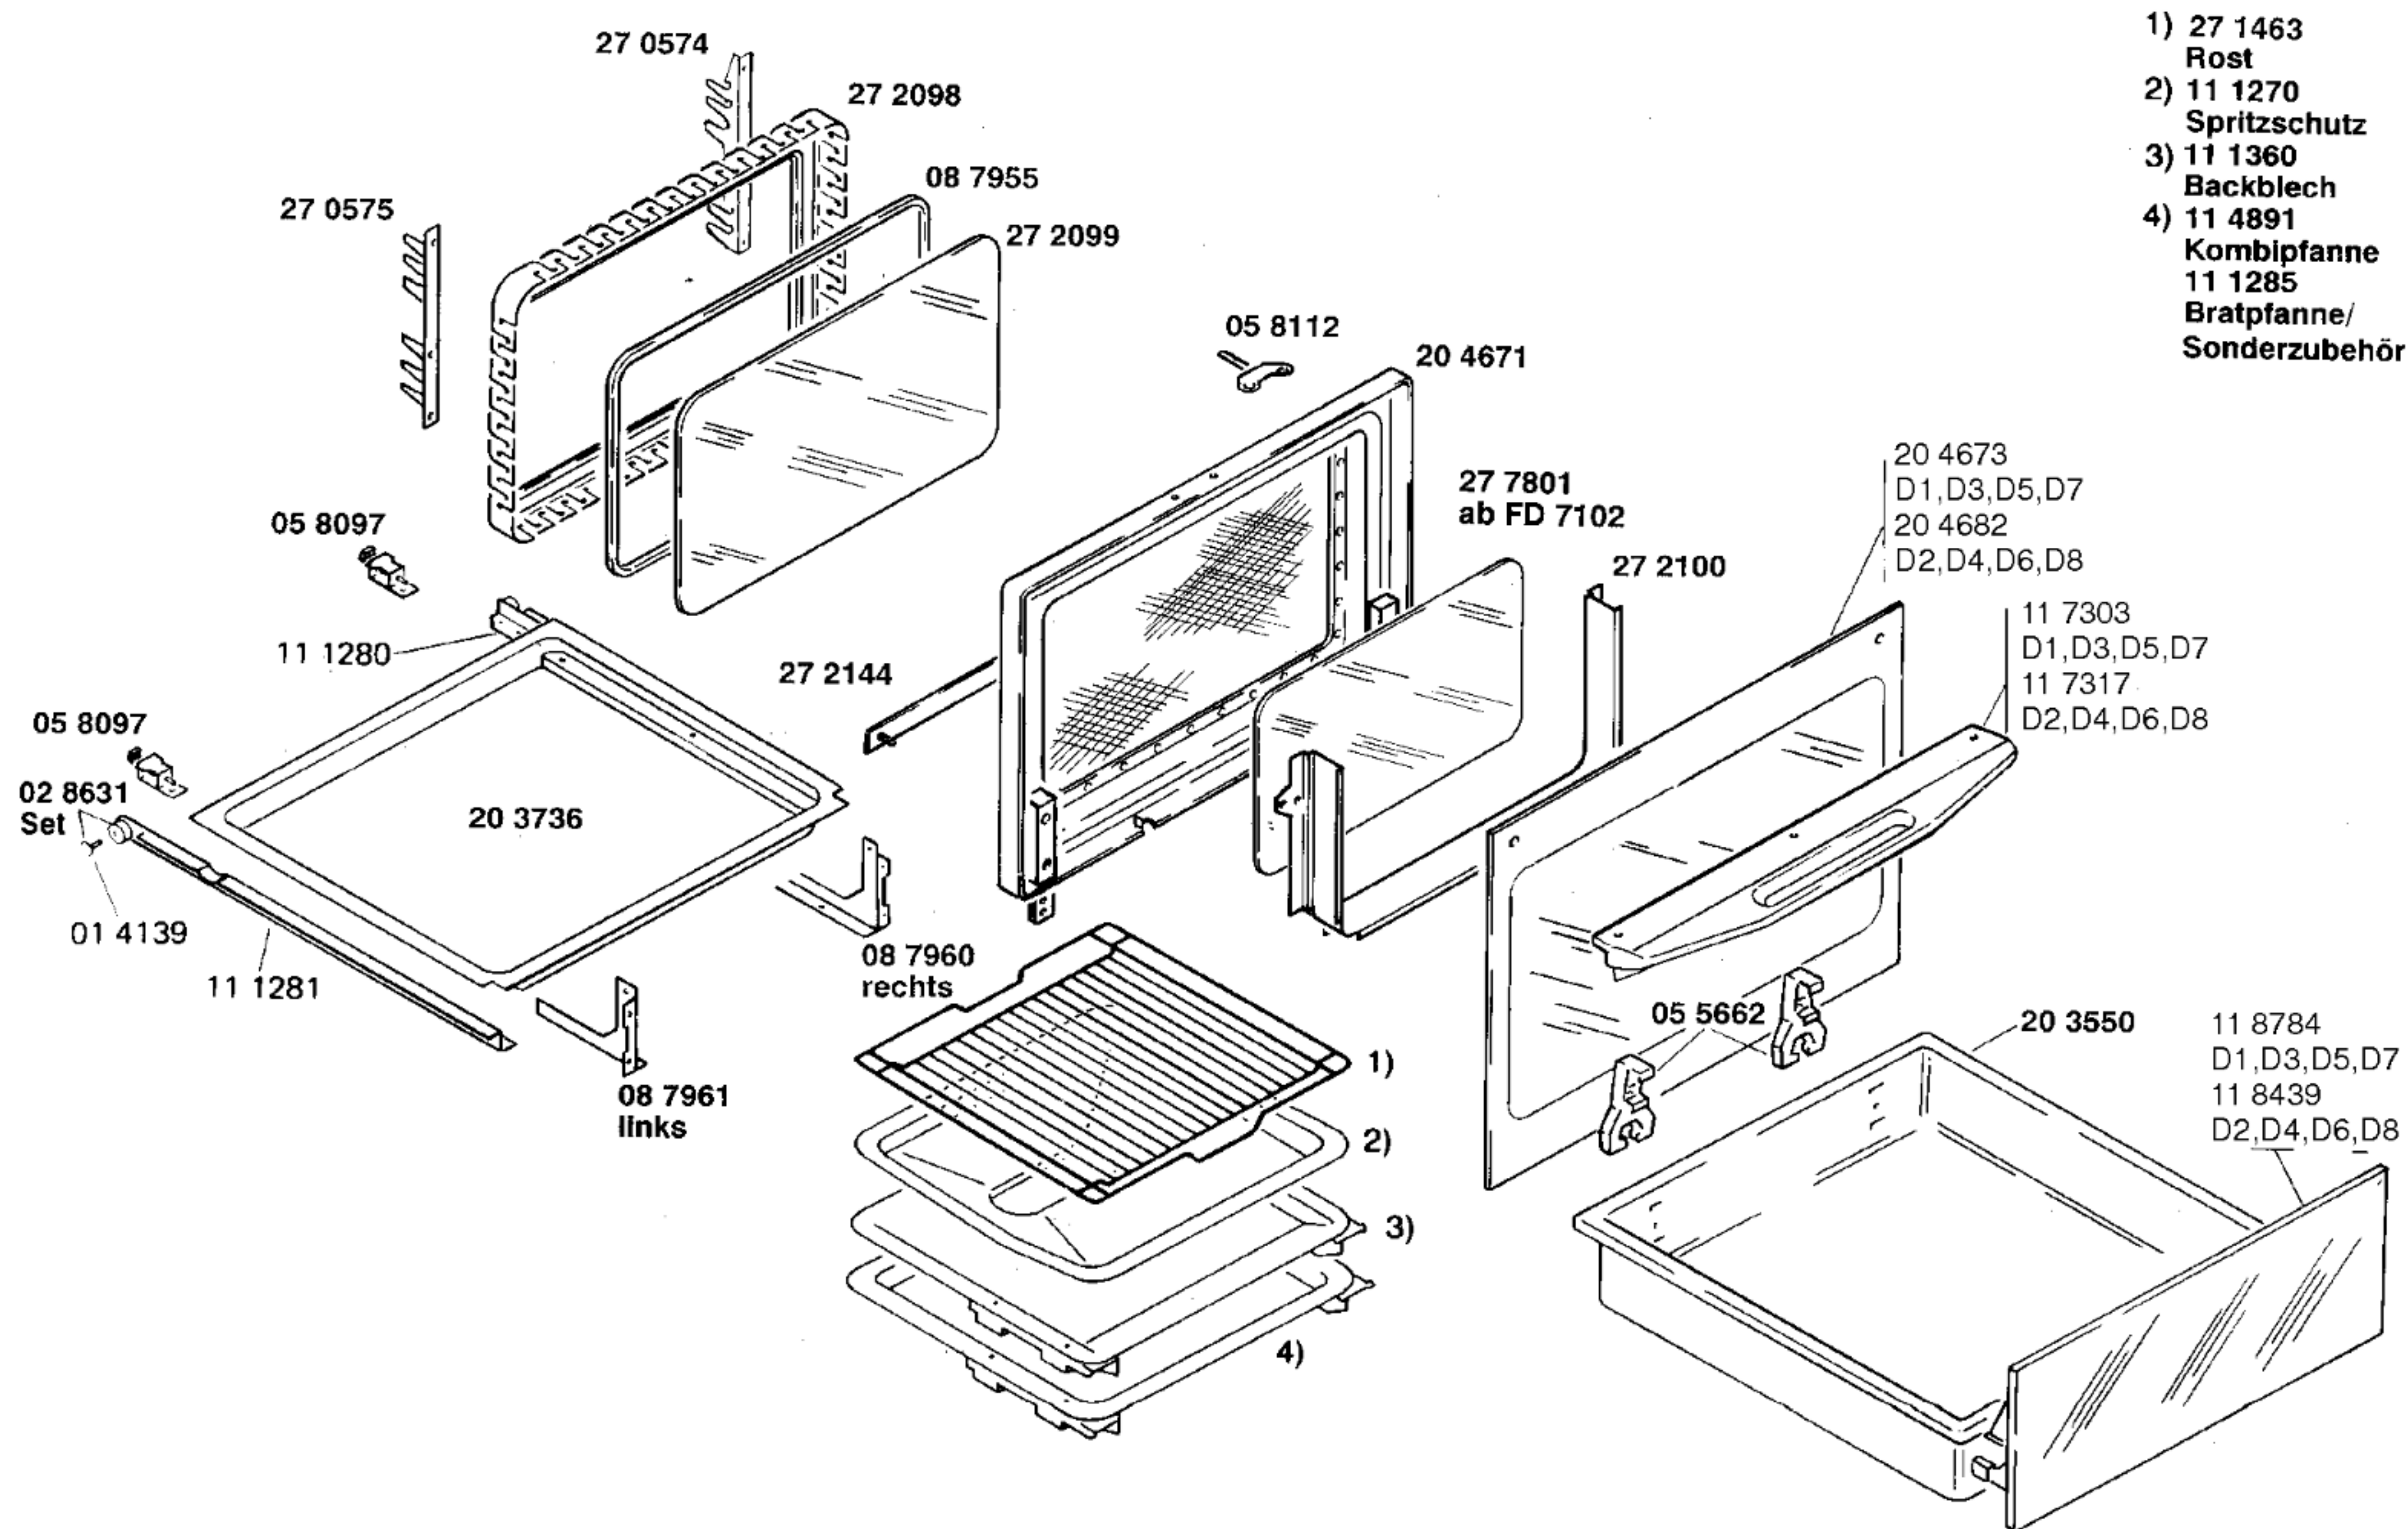

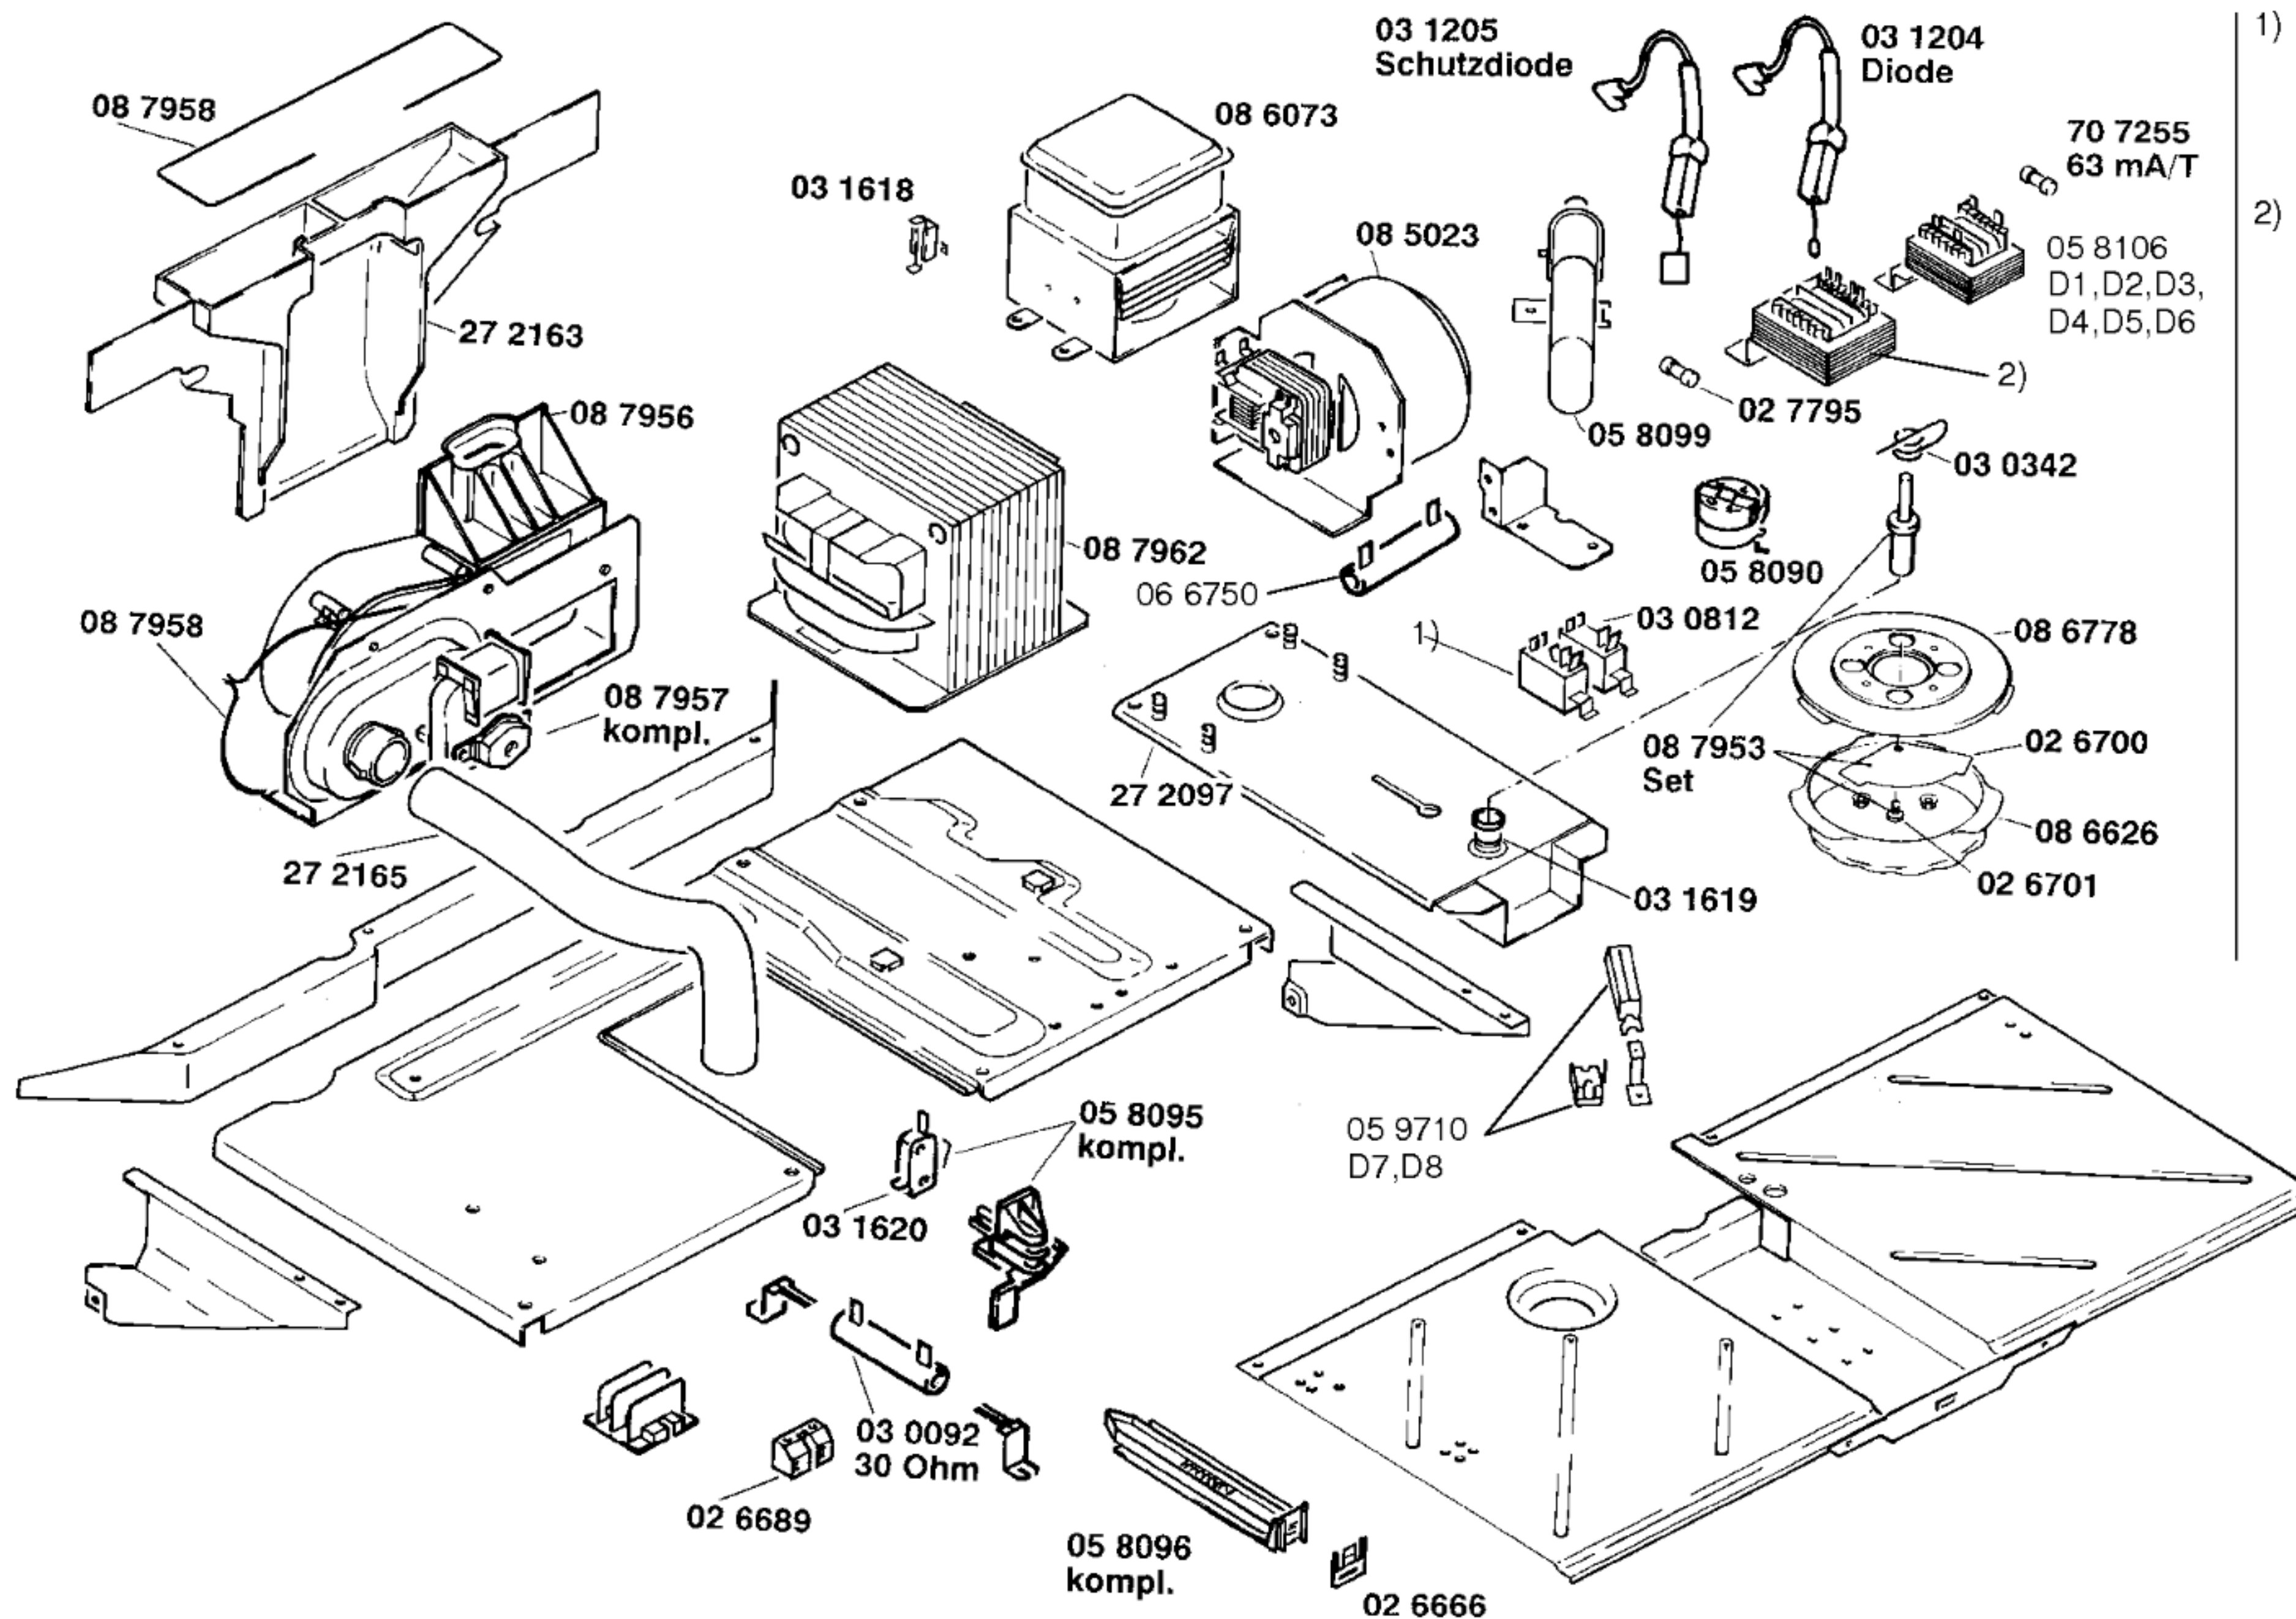

- 1) 05 8092
D1, D2, D3, D4, D5, D6
03 2407
D7, D8
- 2) 03 1628
D1, D2, D3, D4, D5, D6
05 6952
D7, D8

1) 04 4473

