


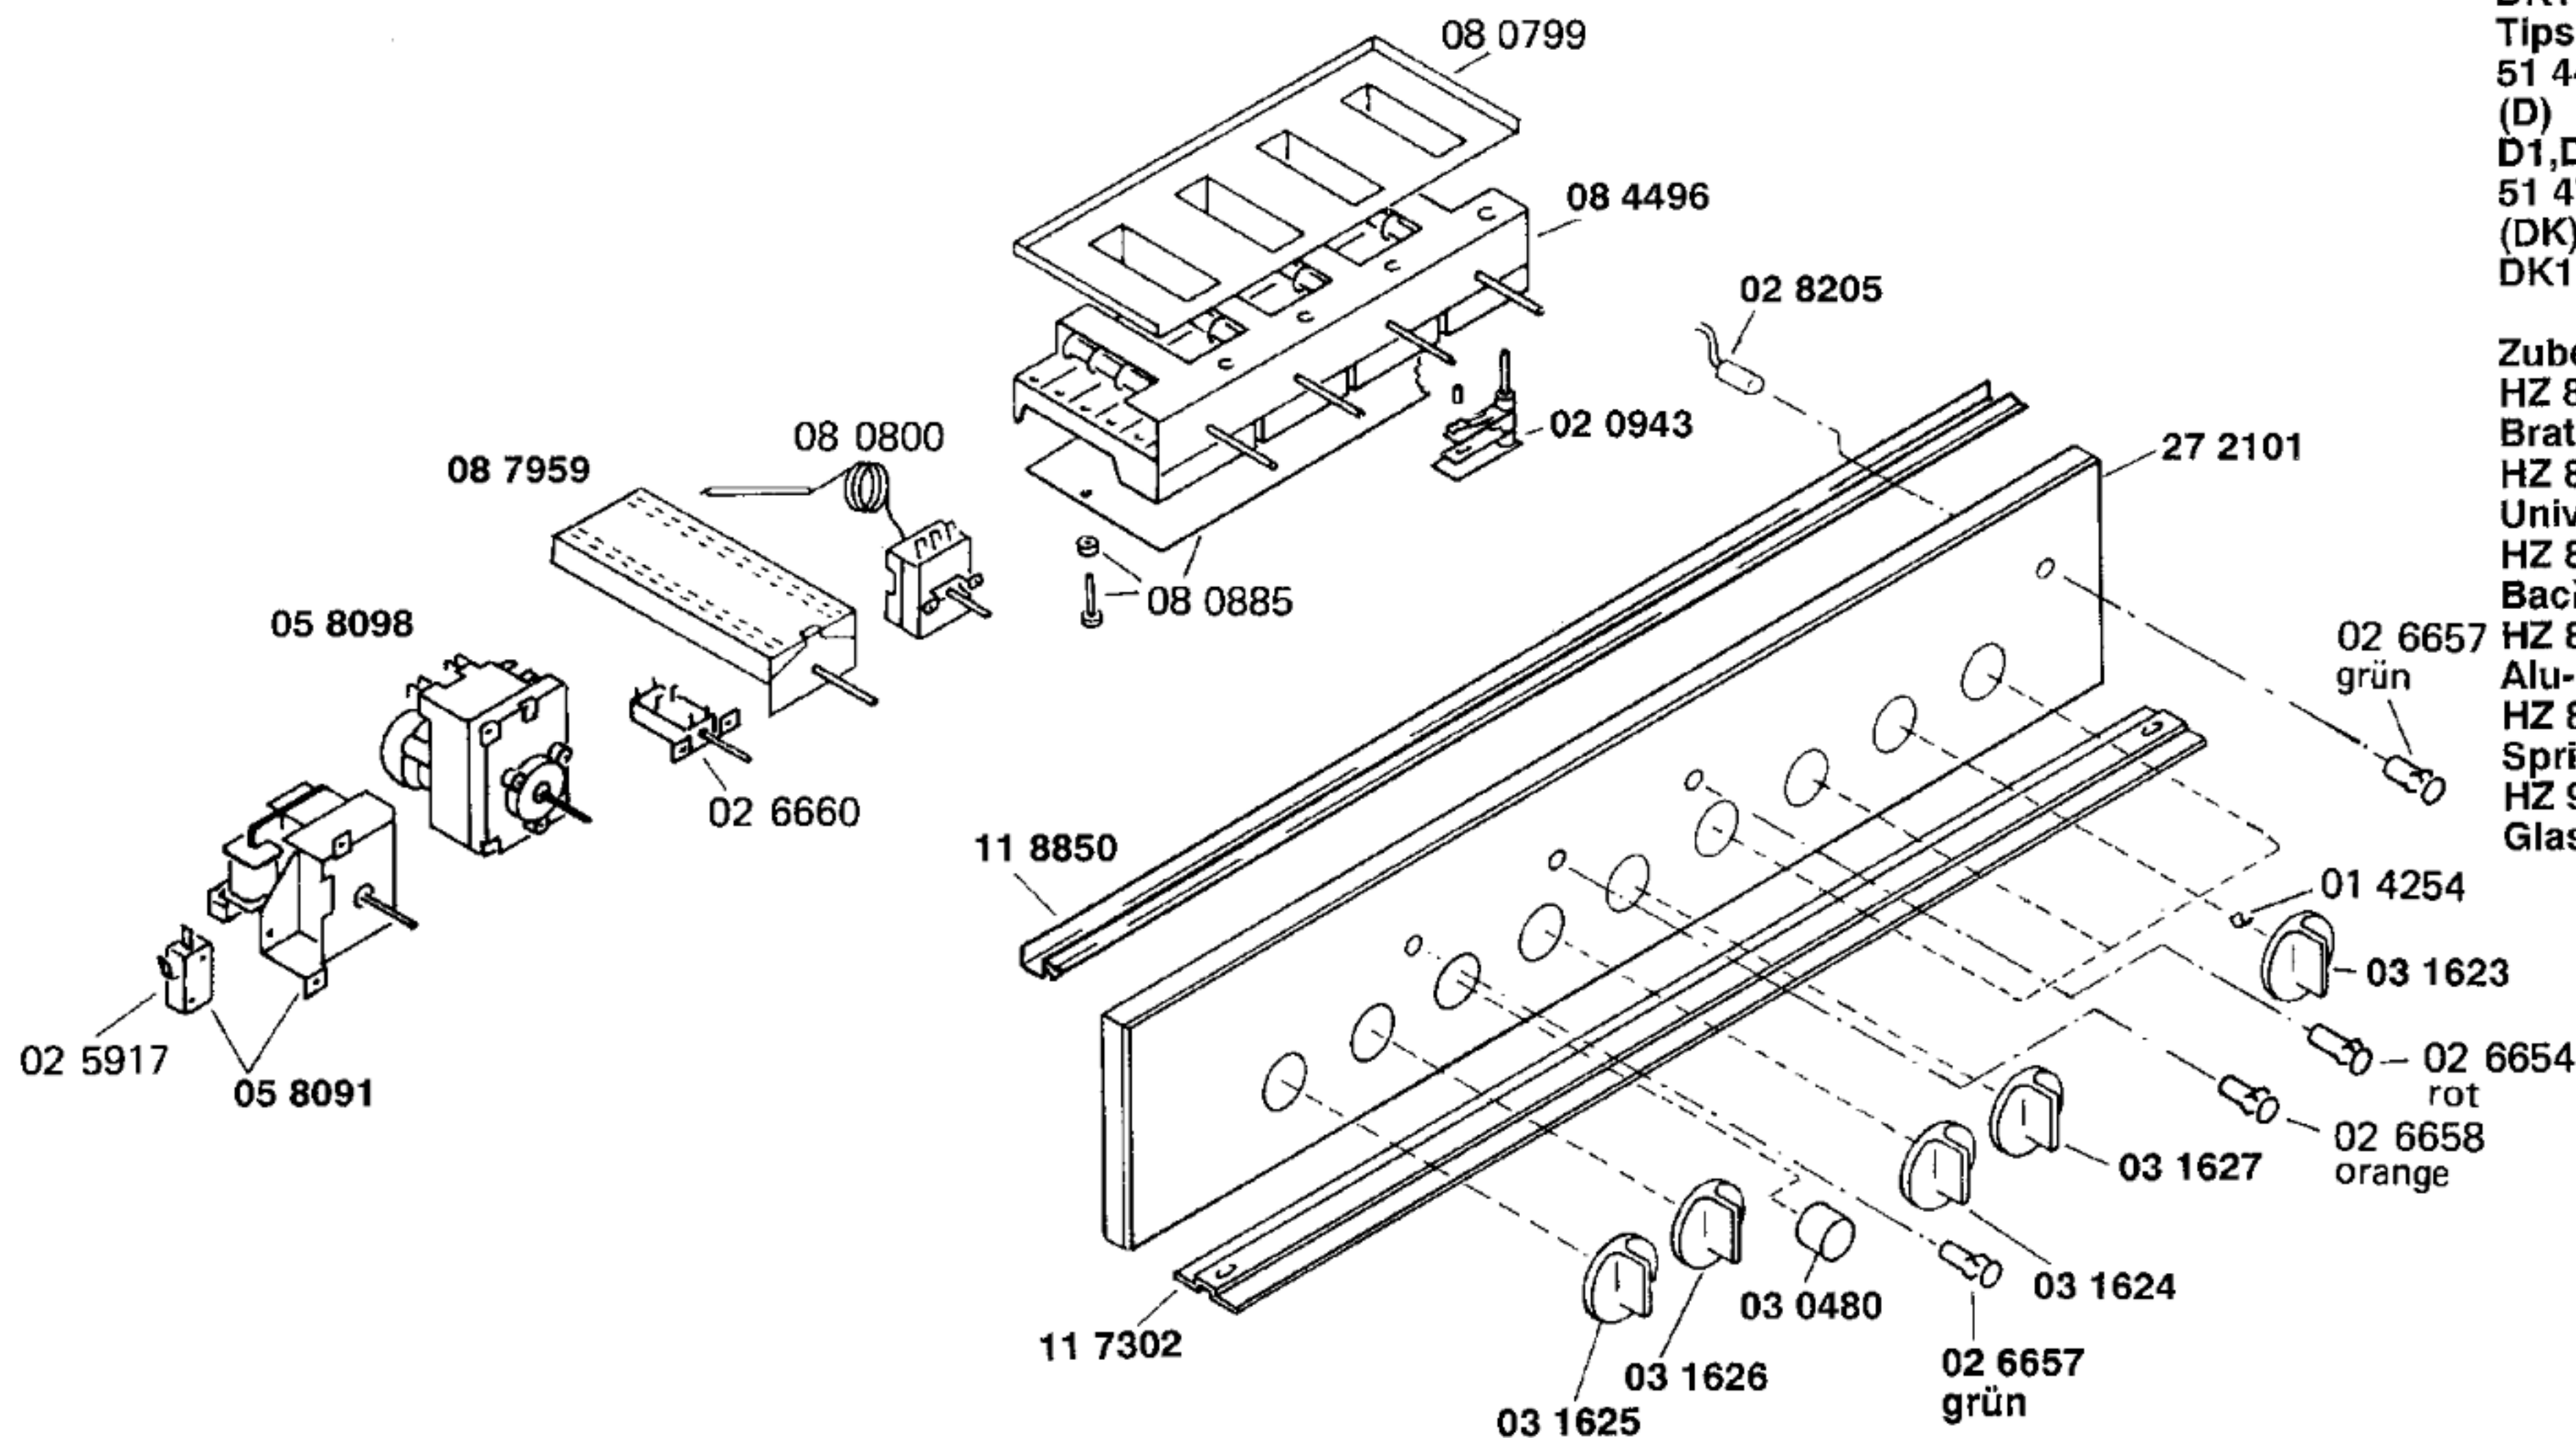

Gebrauchsanweisung

51 4804
 (D, F, GB, DK, NL)

D1, D2

51 4800

(DK)

DK1

Tips und Rezepte

51 4446

(D)

D1, D2

51 4770

(DK)

DK1

Zubehör:

HZ 8042

Bratpfanne

HZ 8057

Universalpfanne

HZ 8087

Backblech emailliert

HZ 8048


Alu-Backblech


HZ 8044


Spritzschutzpfanne

HZ 9150


Glasbräter

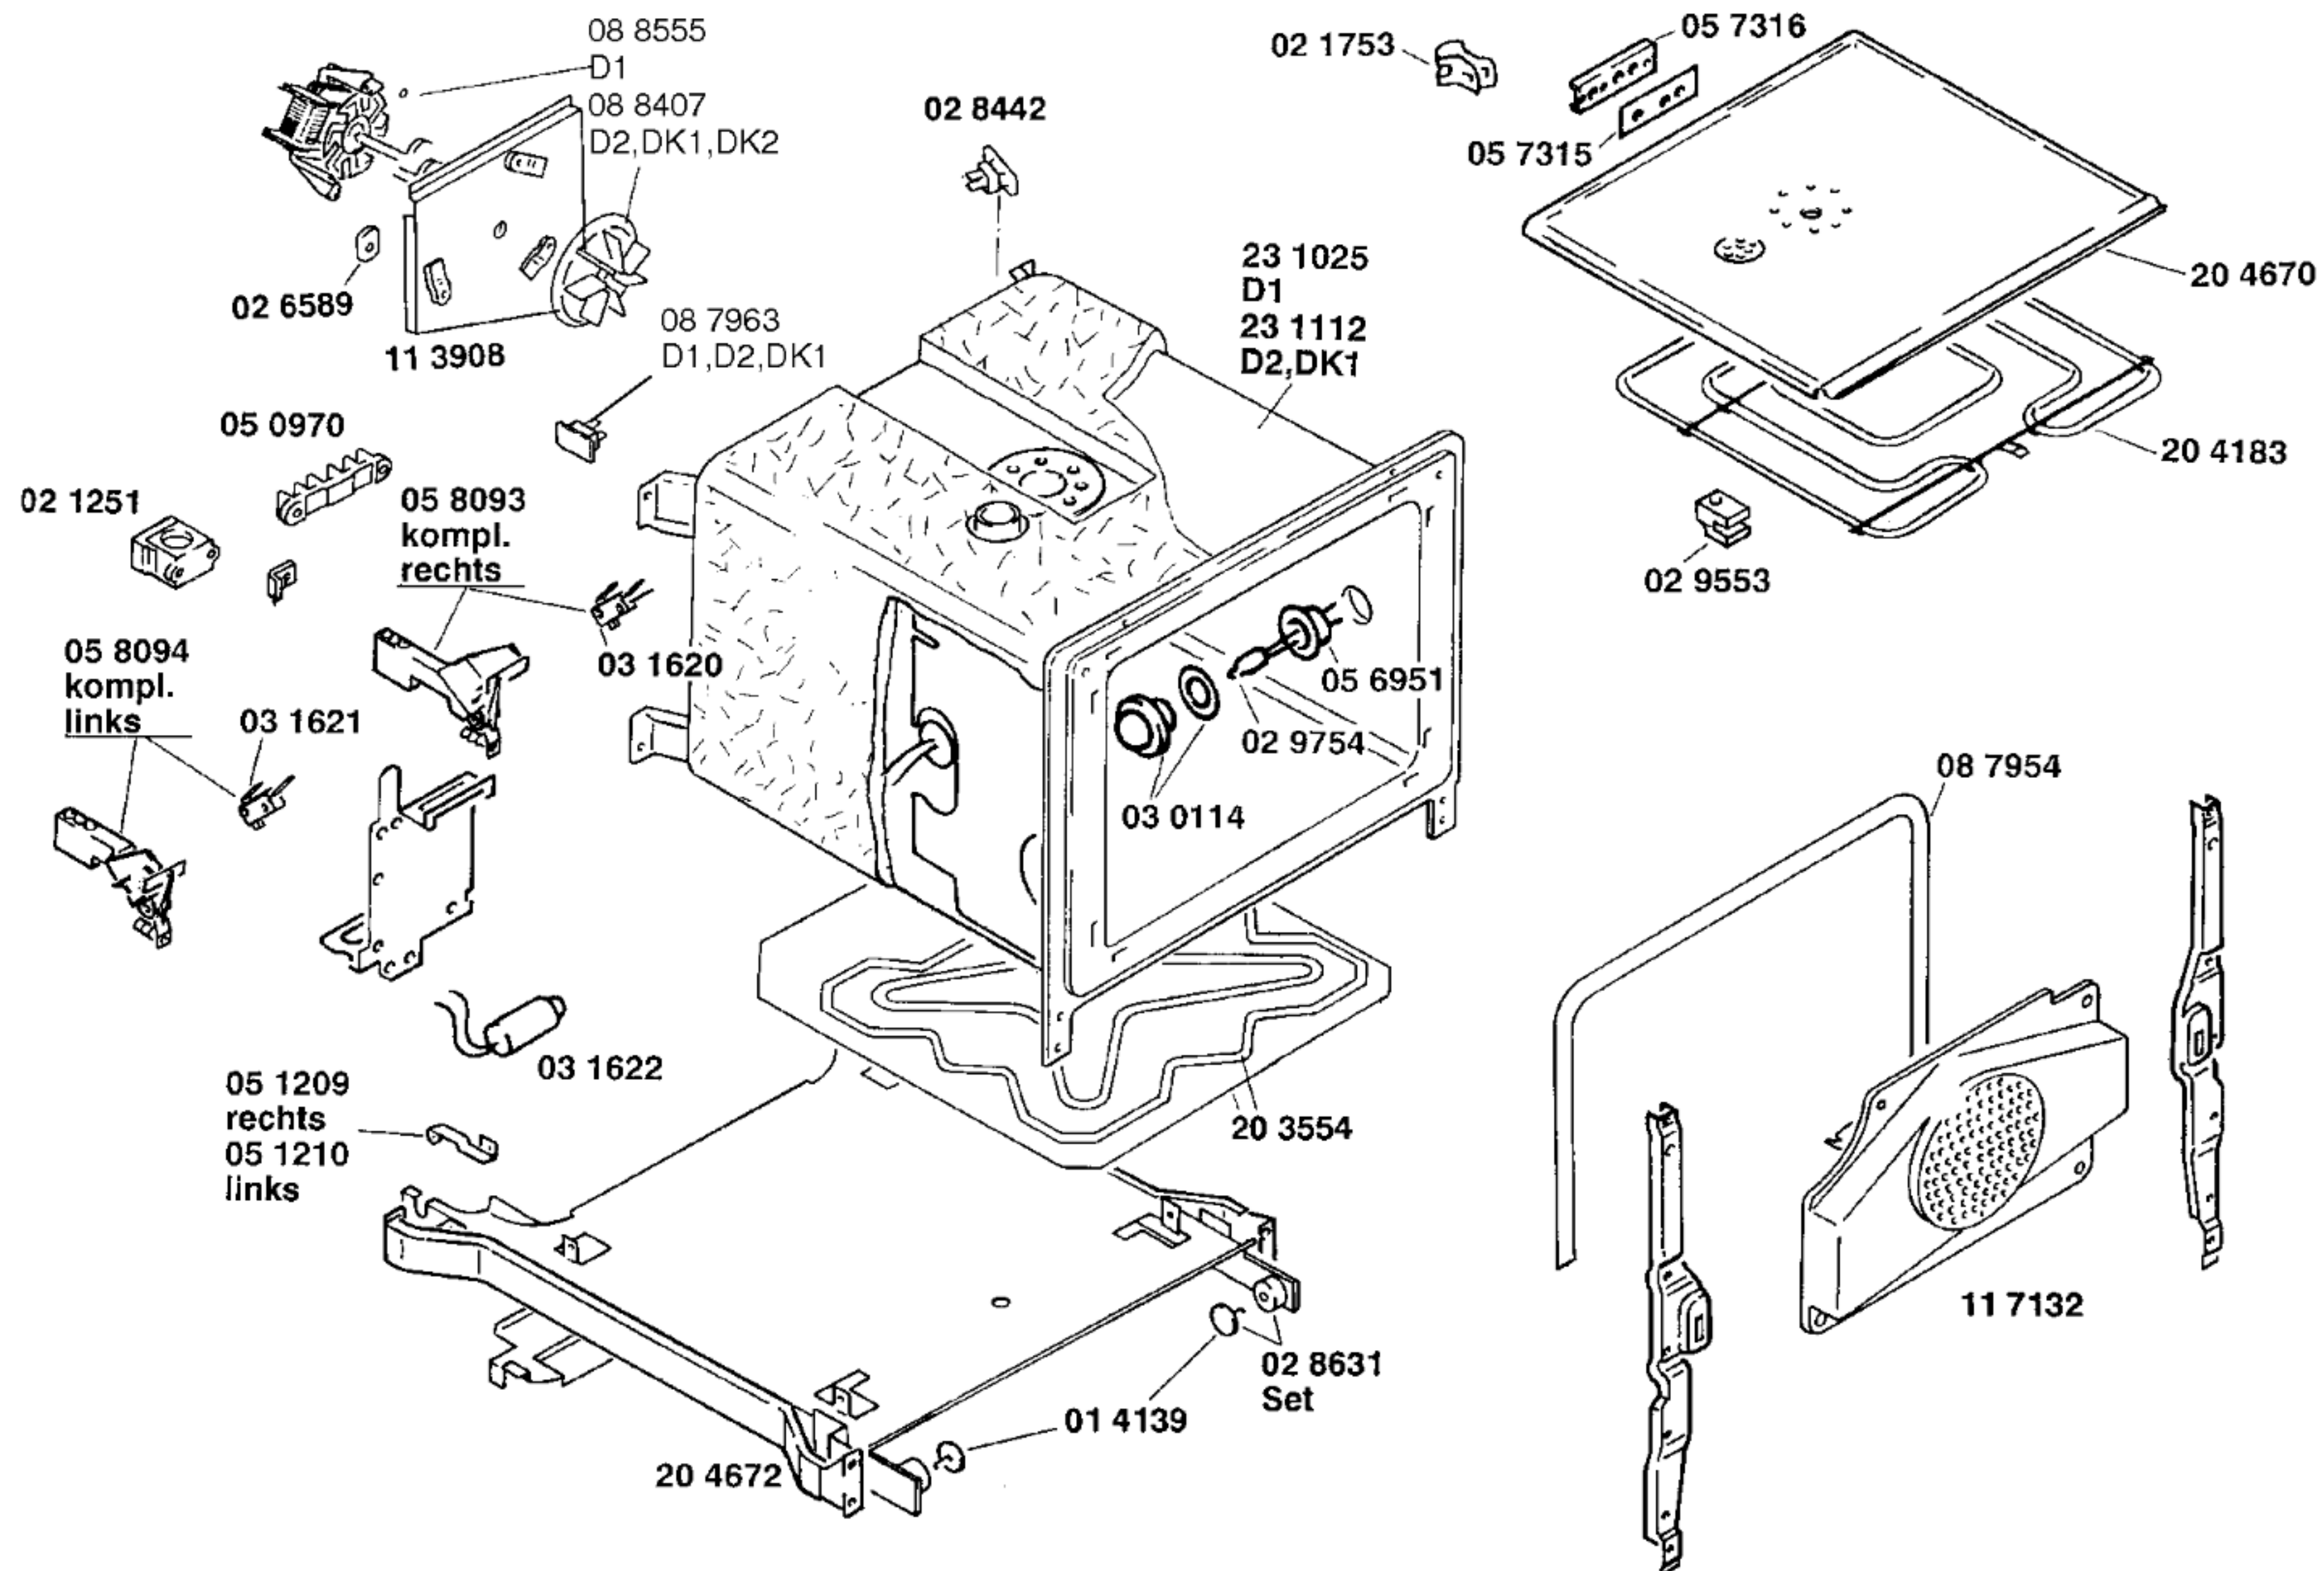

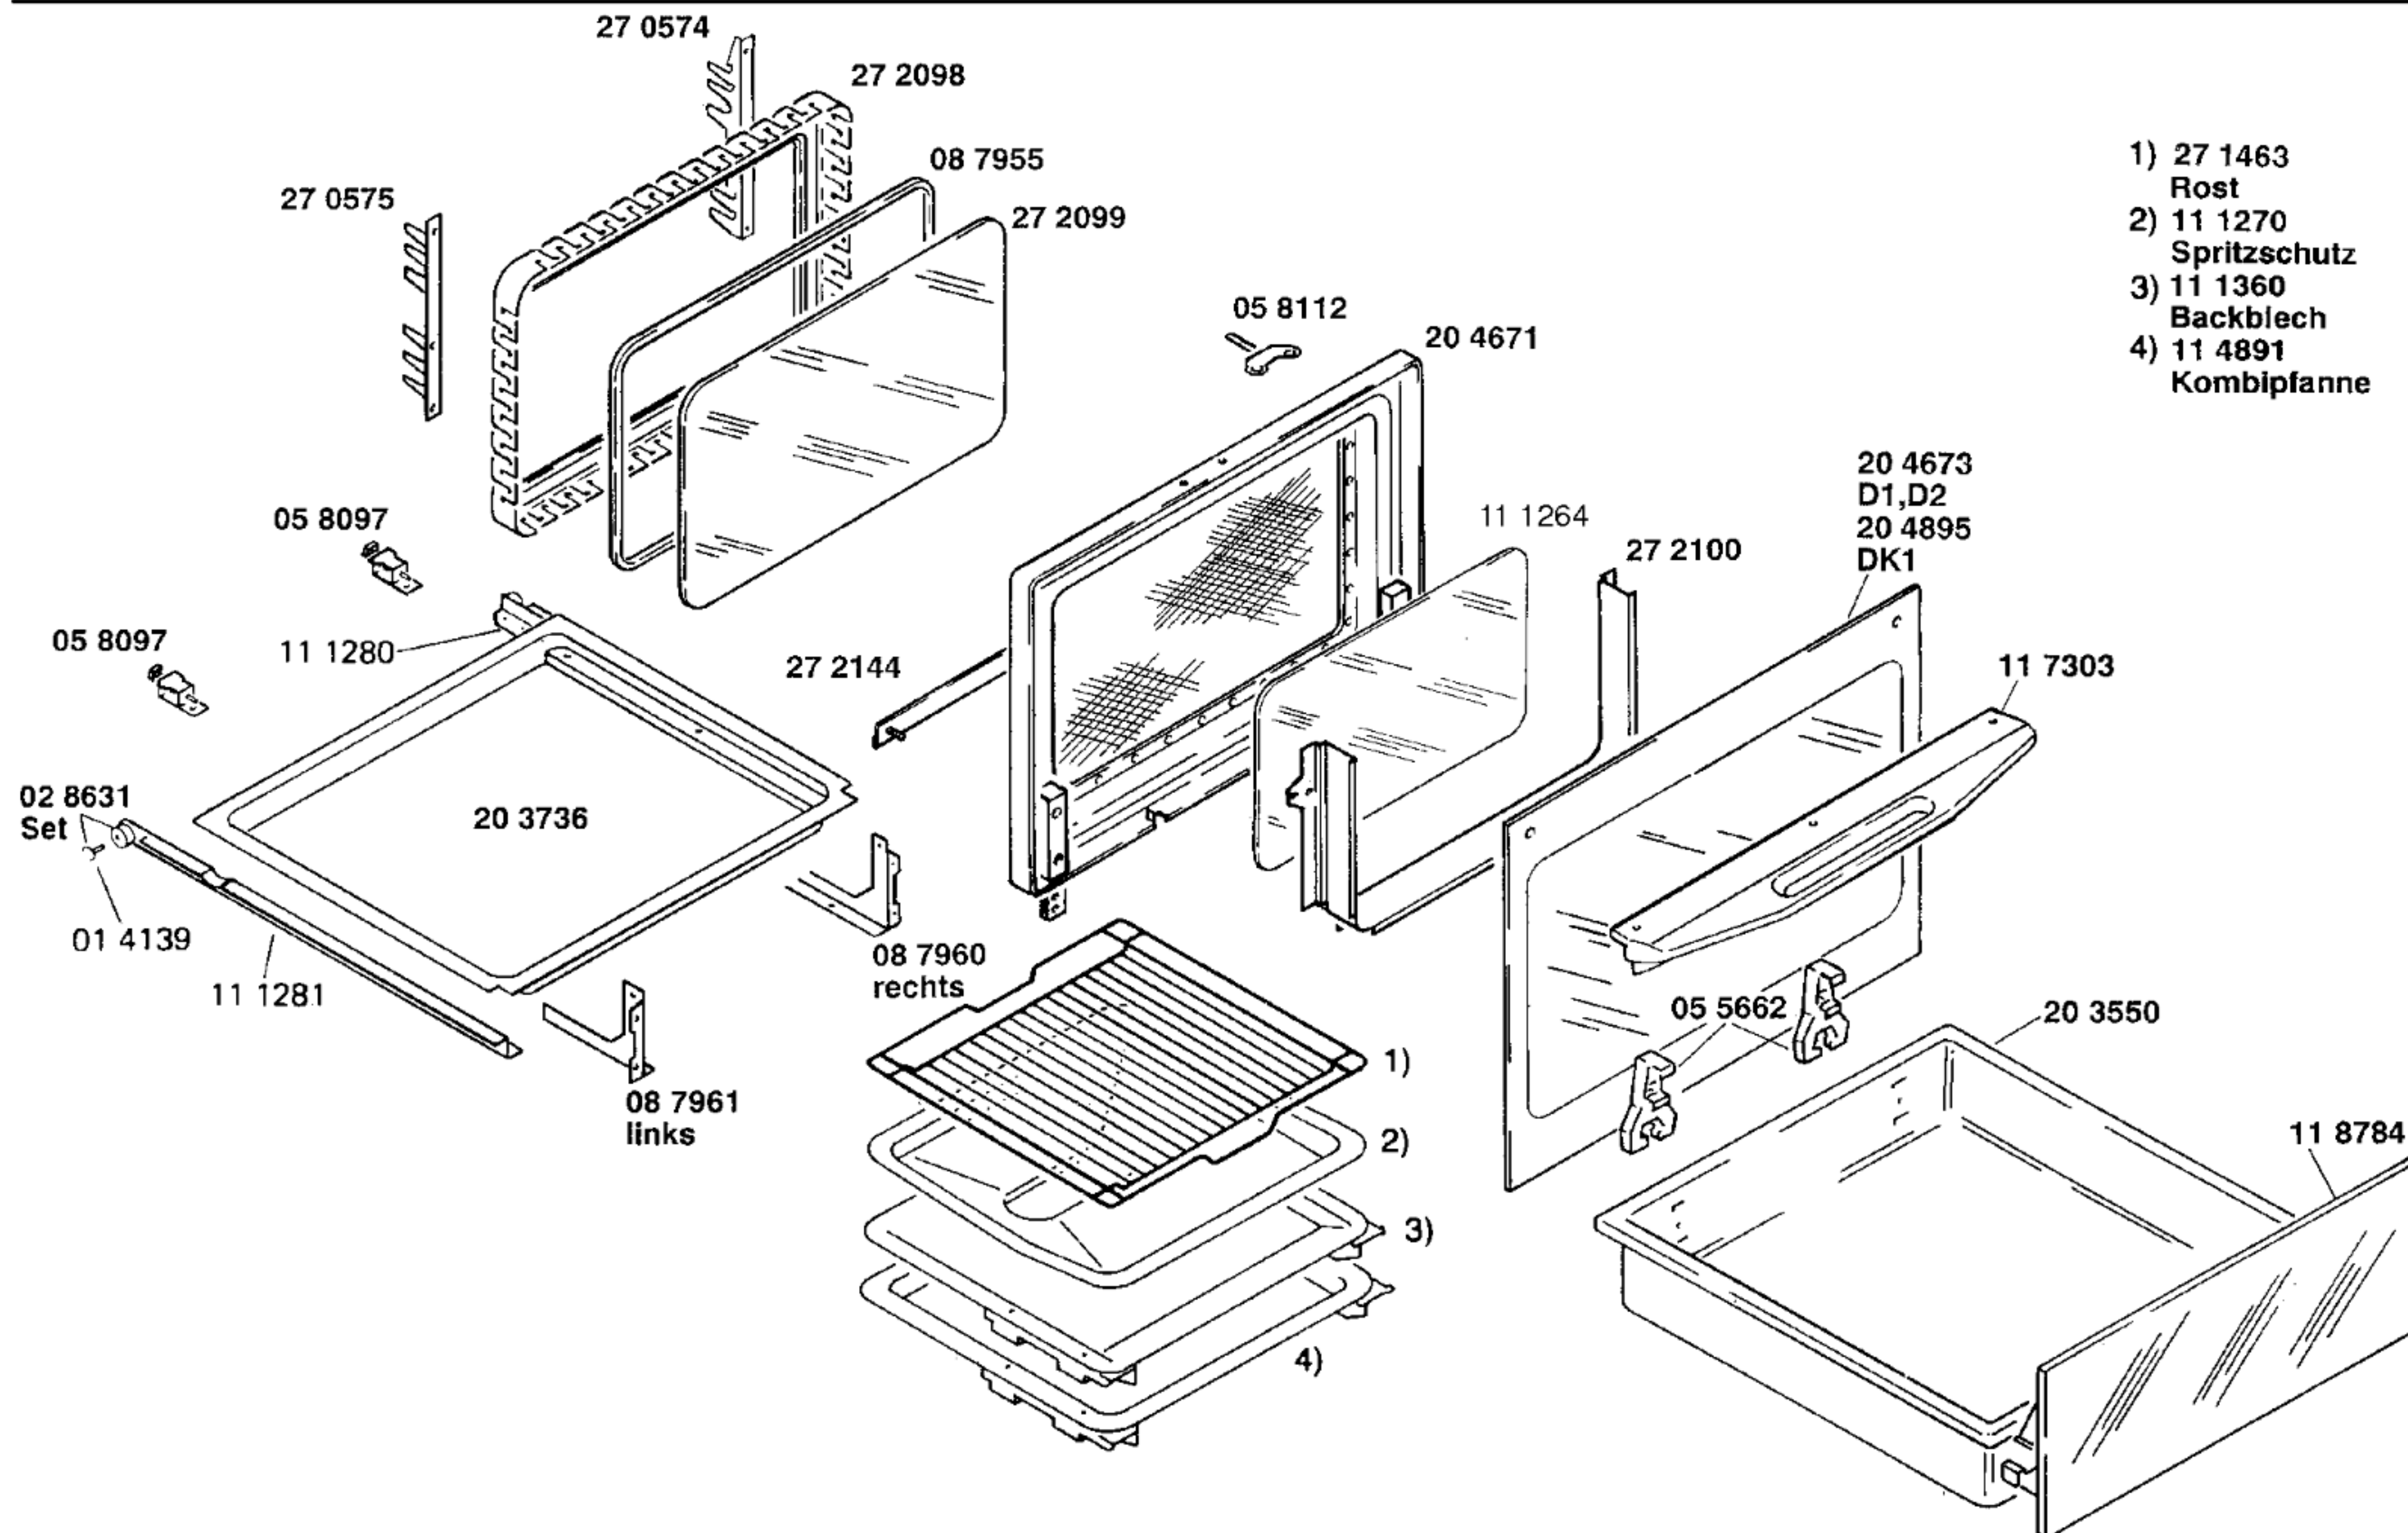


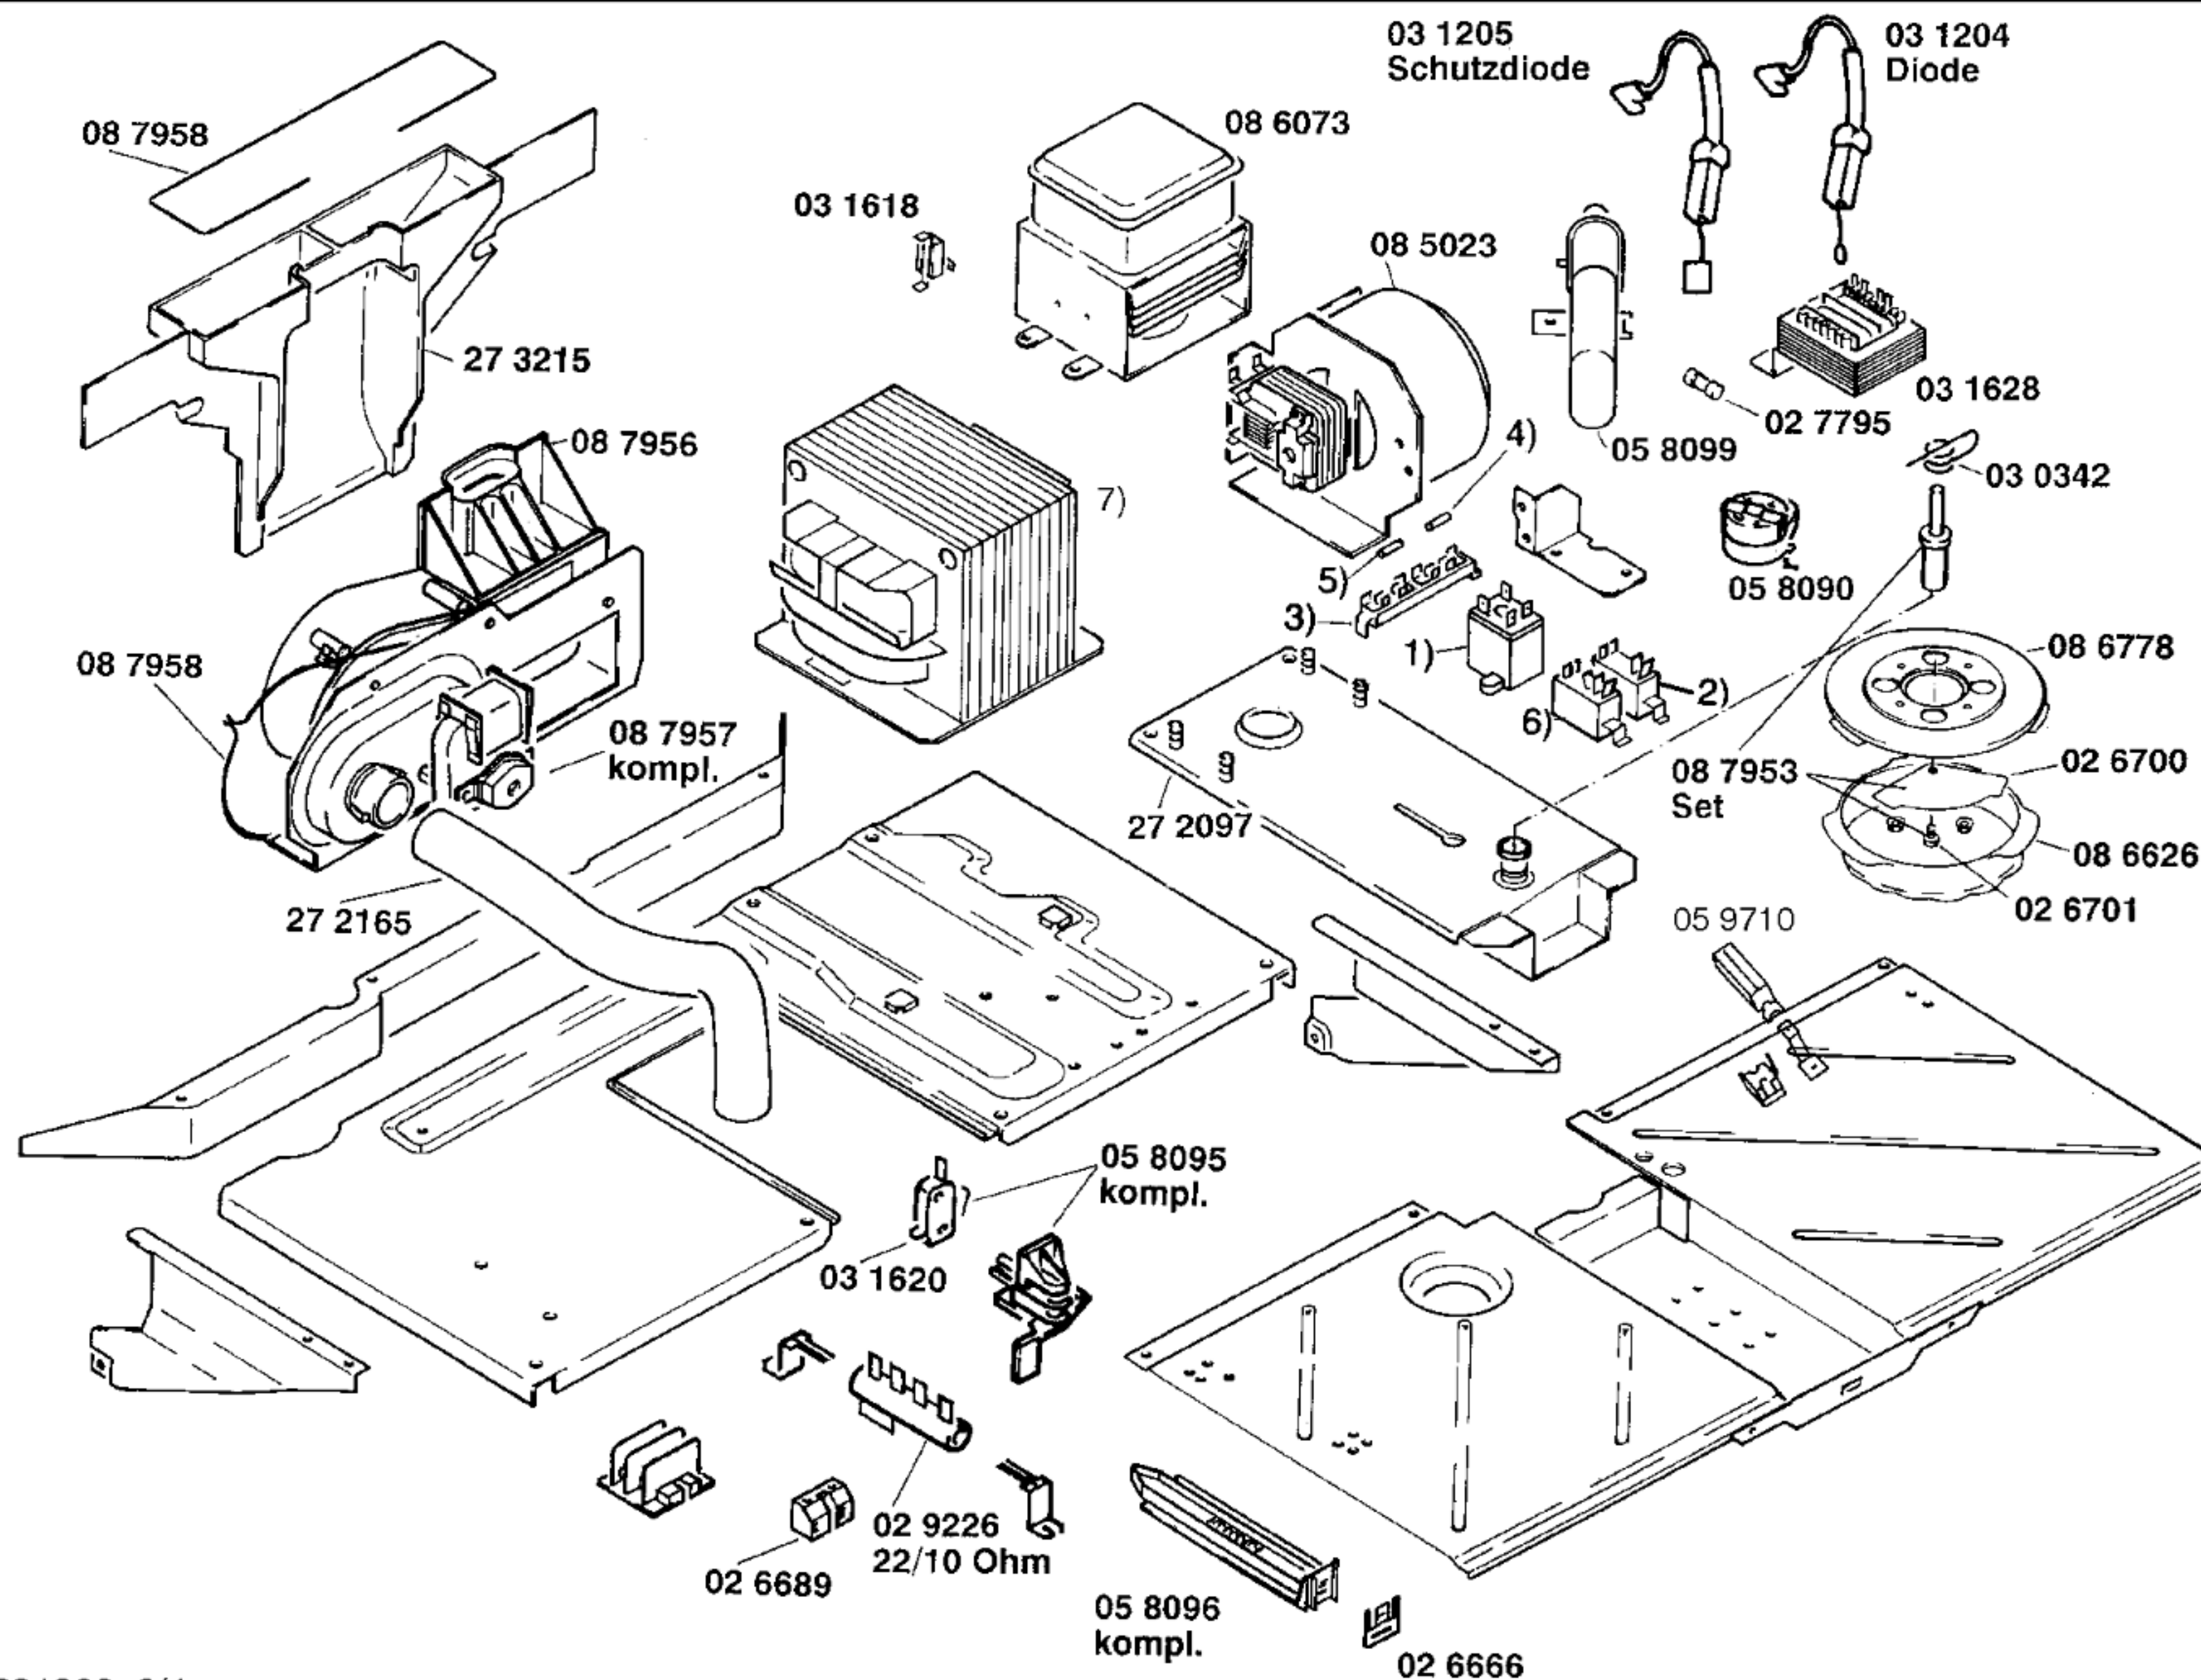

- 1) 02 9227
D1, D2, DK1
03 2750
DK2, K2
- 2) 05 4724
K1, Start
D1, D2, DK1
03 2407
DK2
- 3) 05 7412
- 4) 02 9469
M 10 A
- 5) 02 6011
F3, 15 A
- 6) 05 8092
D1, D2, DK1
03 0812
DK2
- 7) 09 4329
DK1, DK2
08 7962
D1, D2, D3

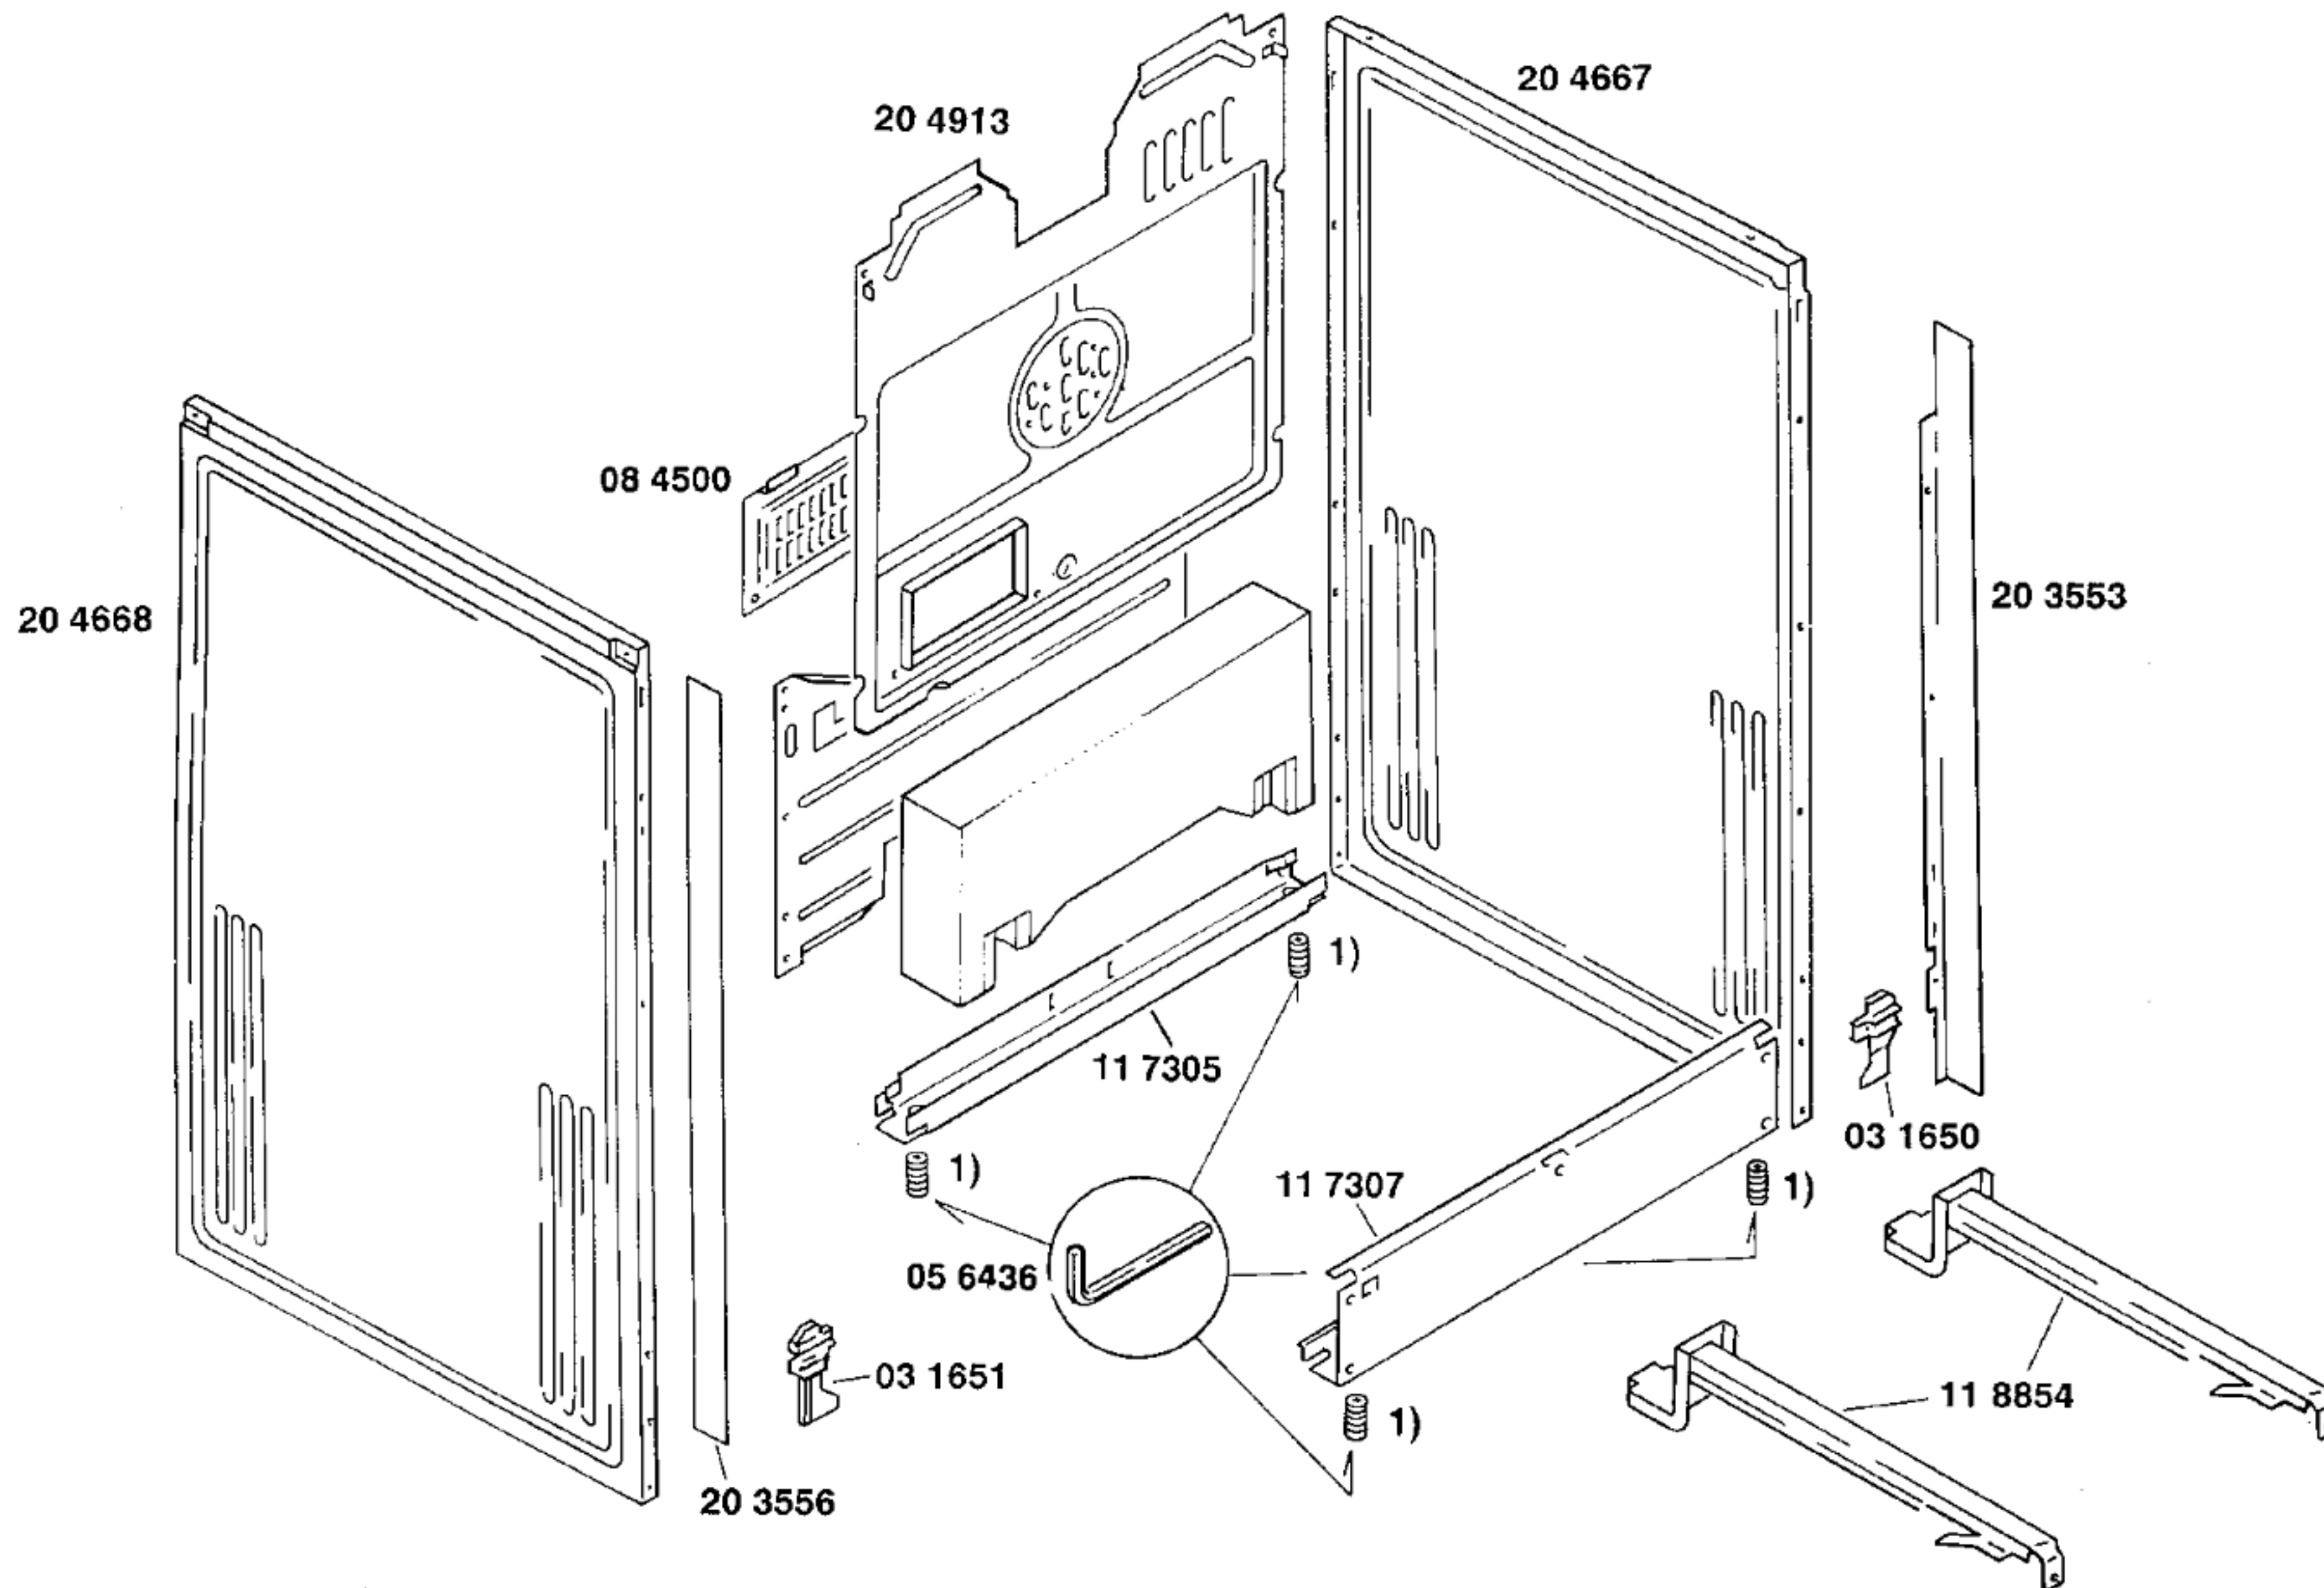

1) 04 4473

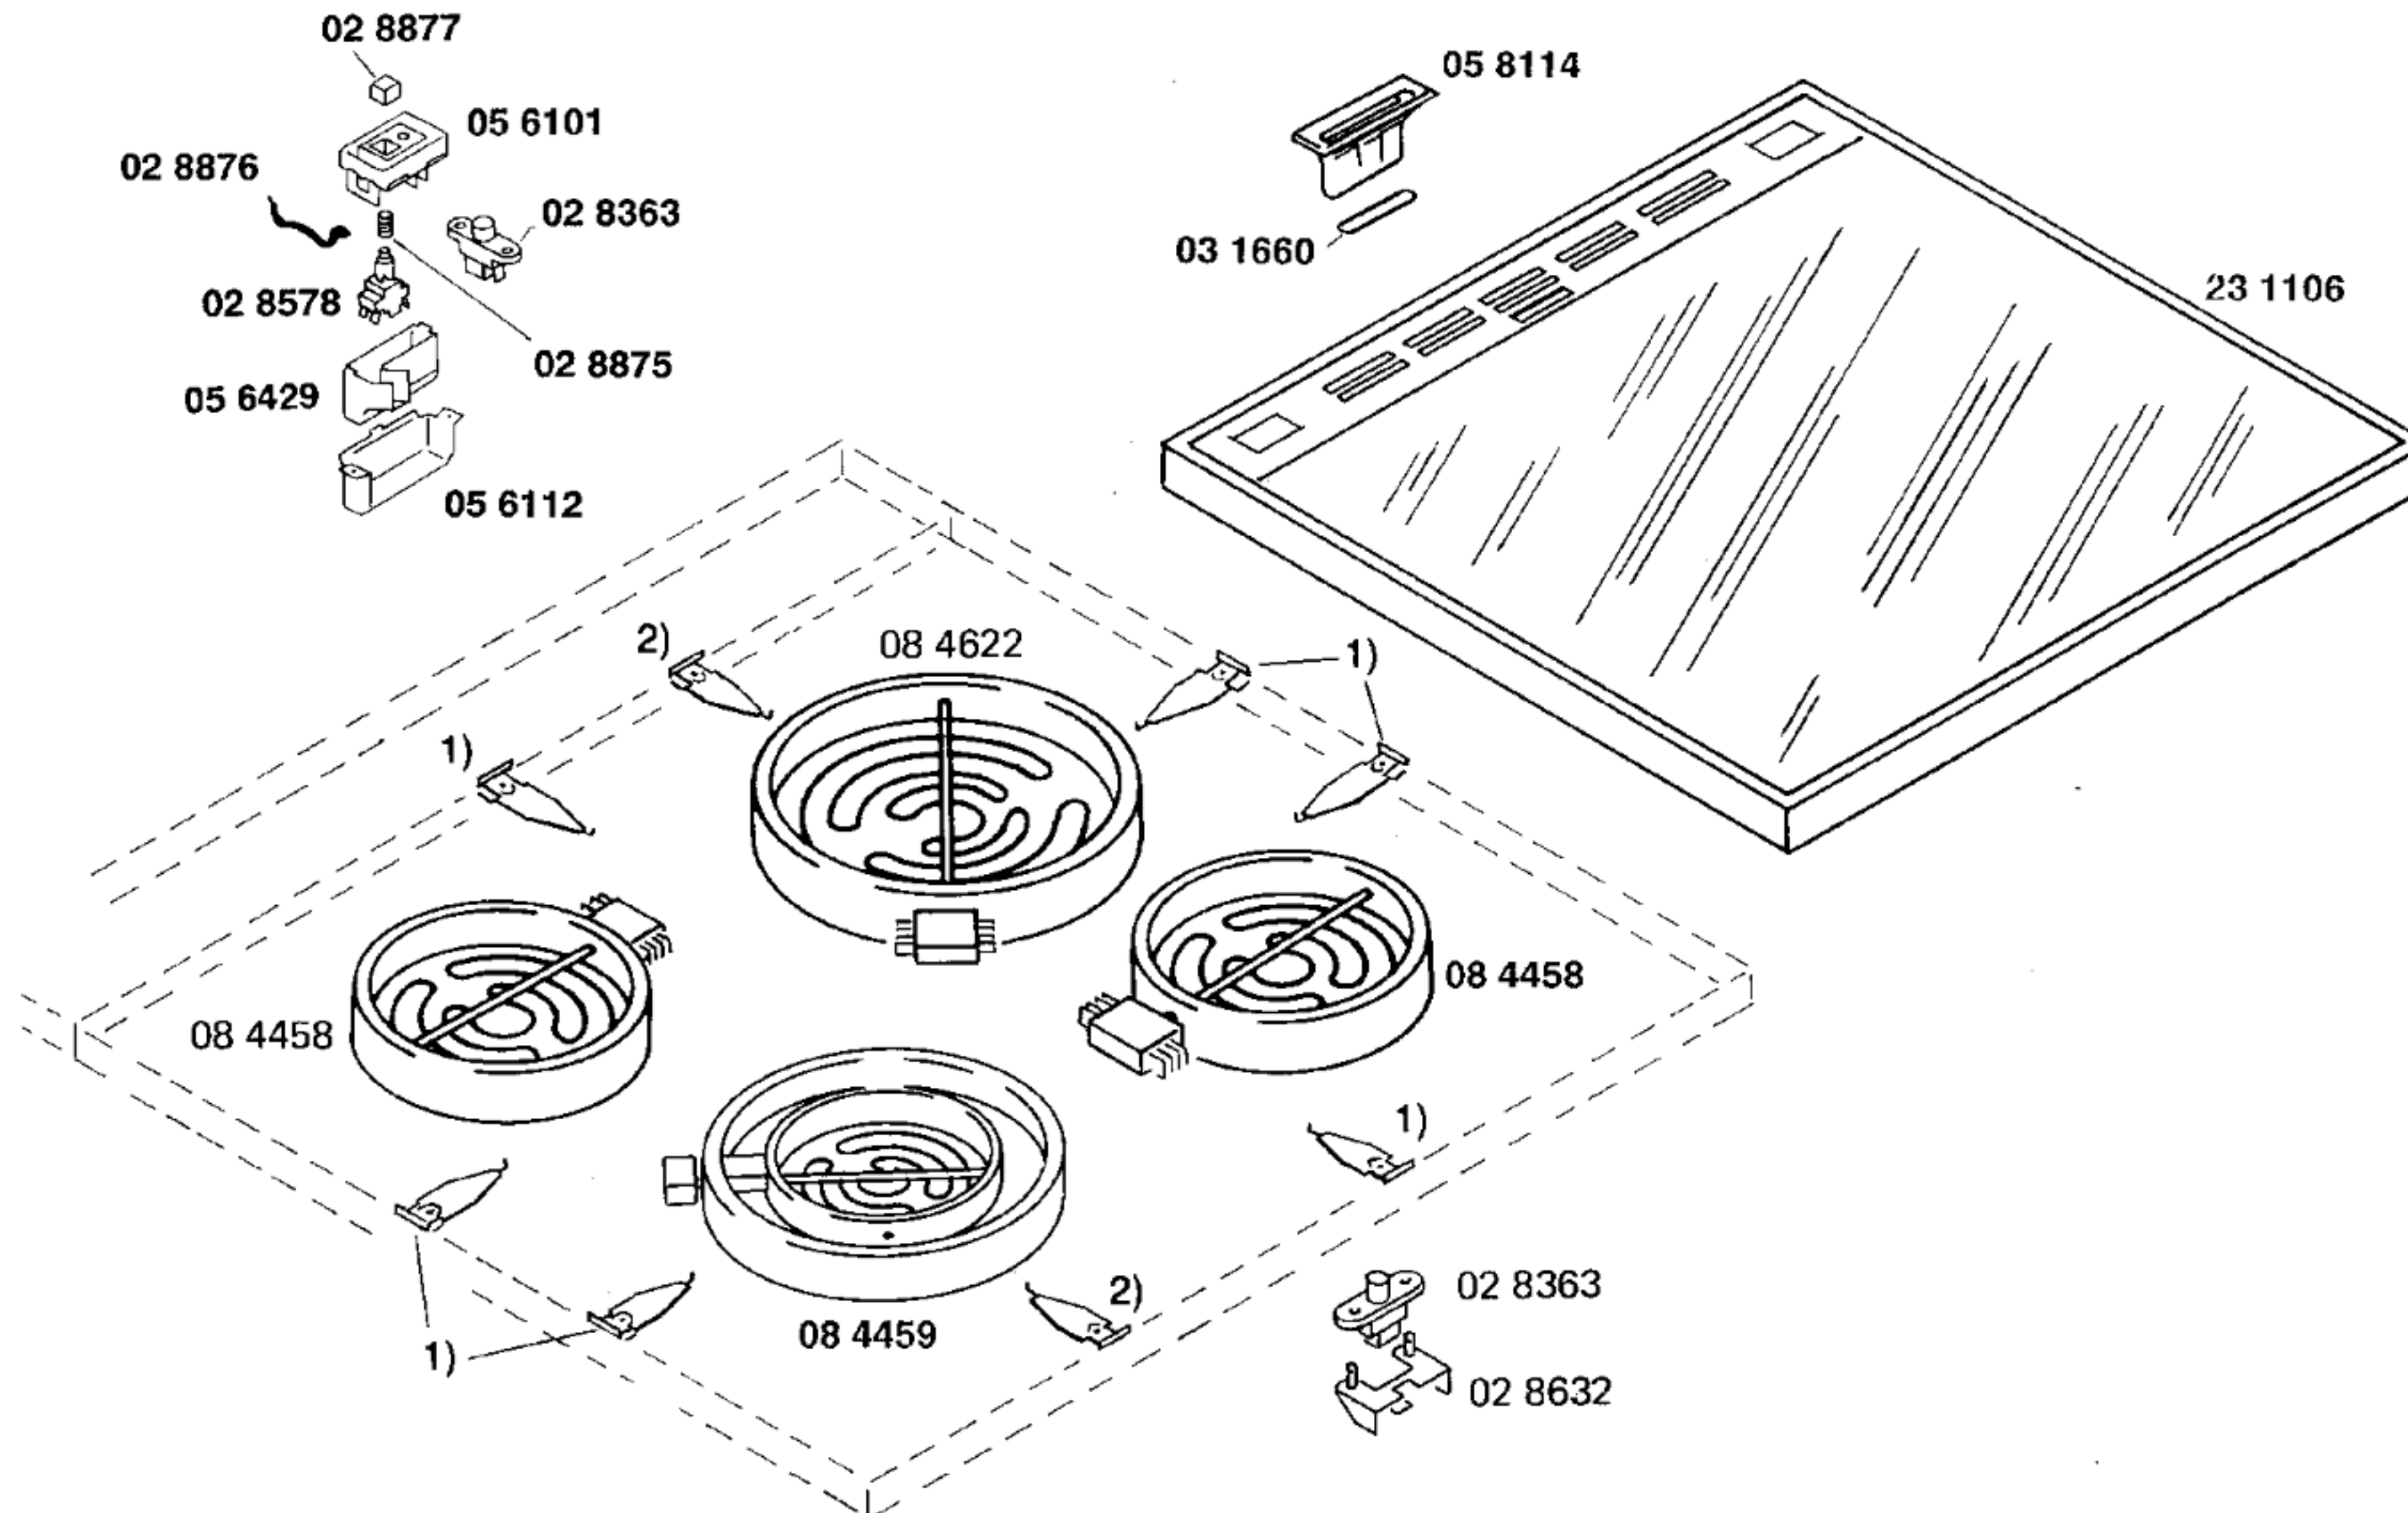

1) 02 8633
2) 02 8634

08 7670
Glasschaber