 


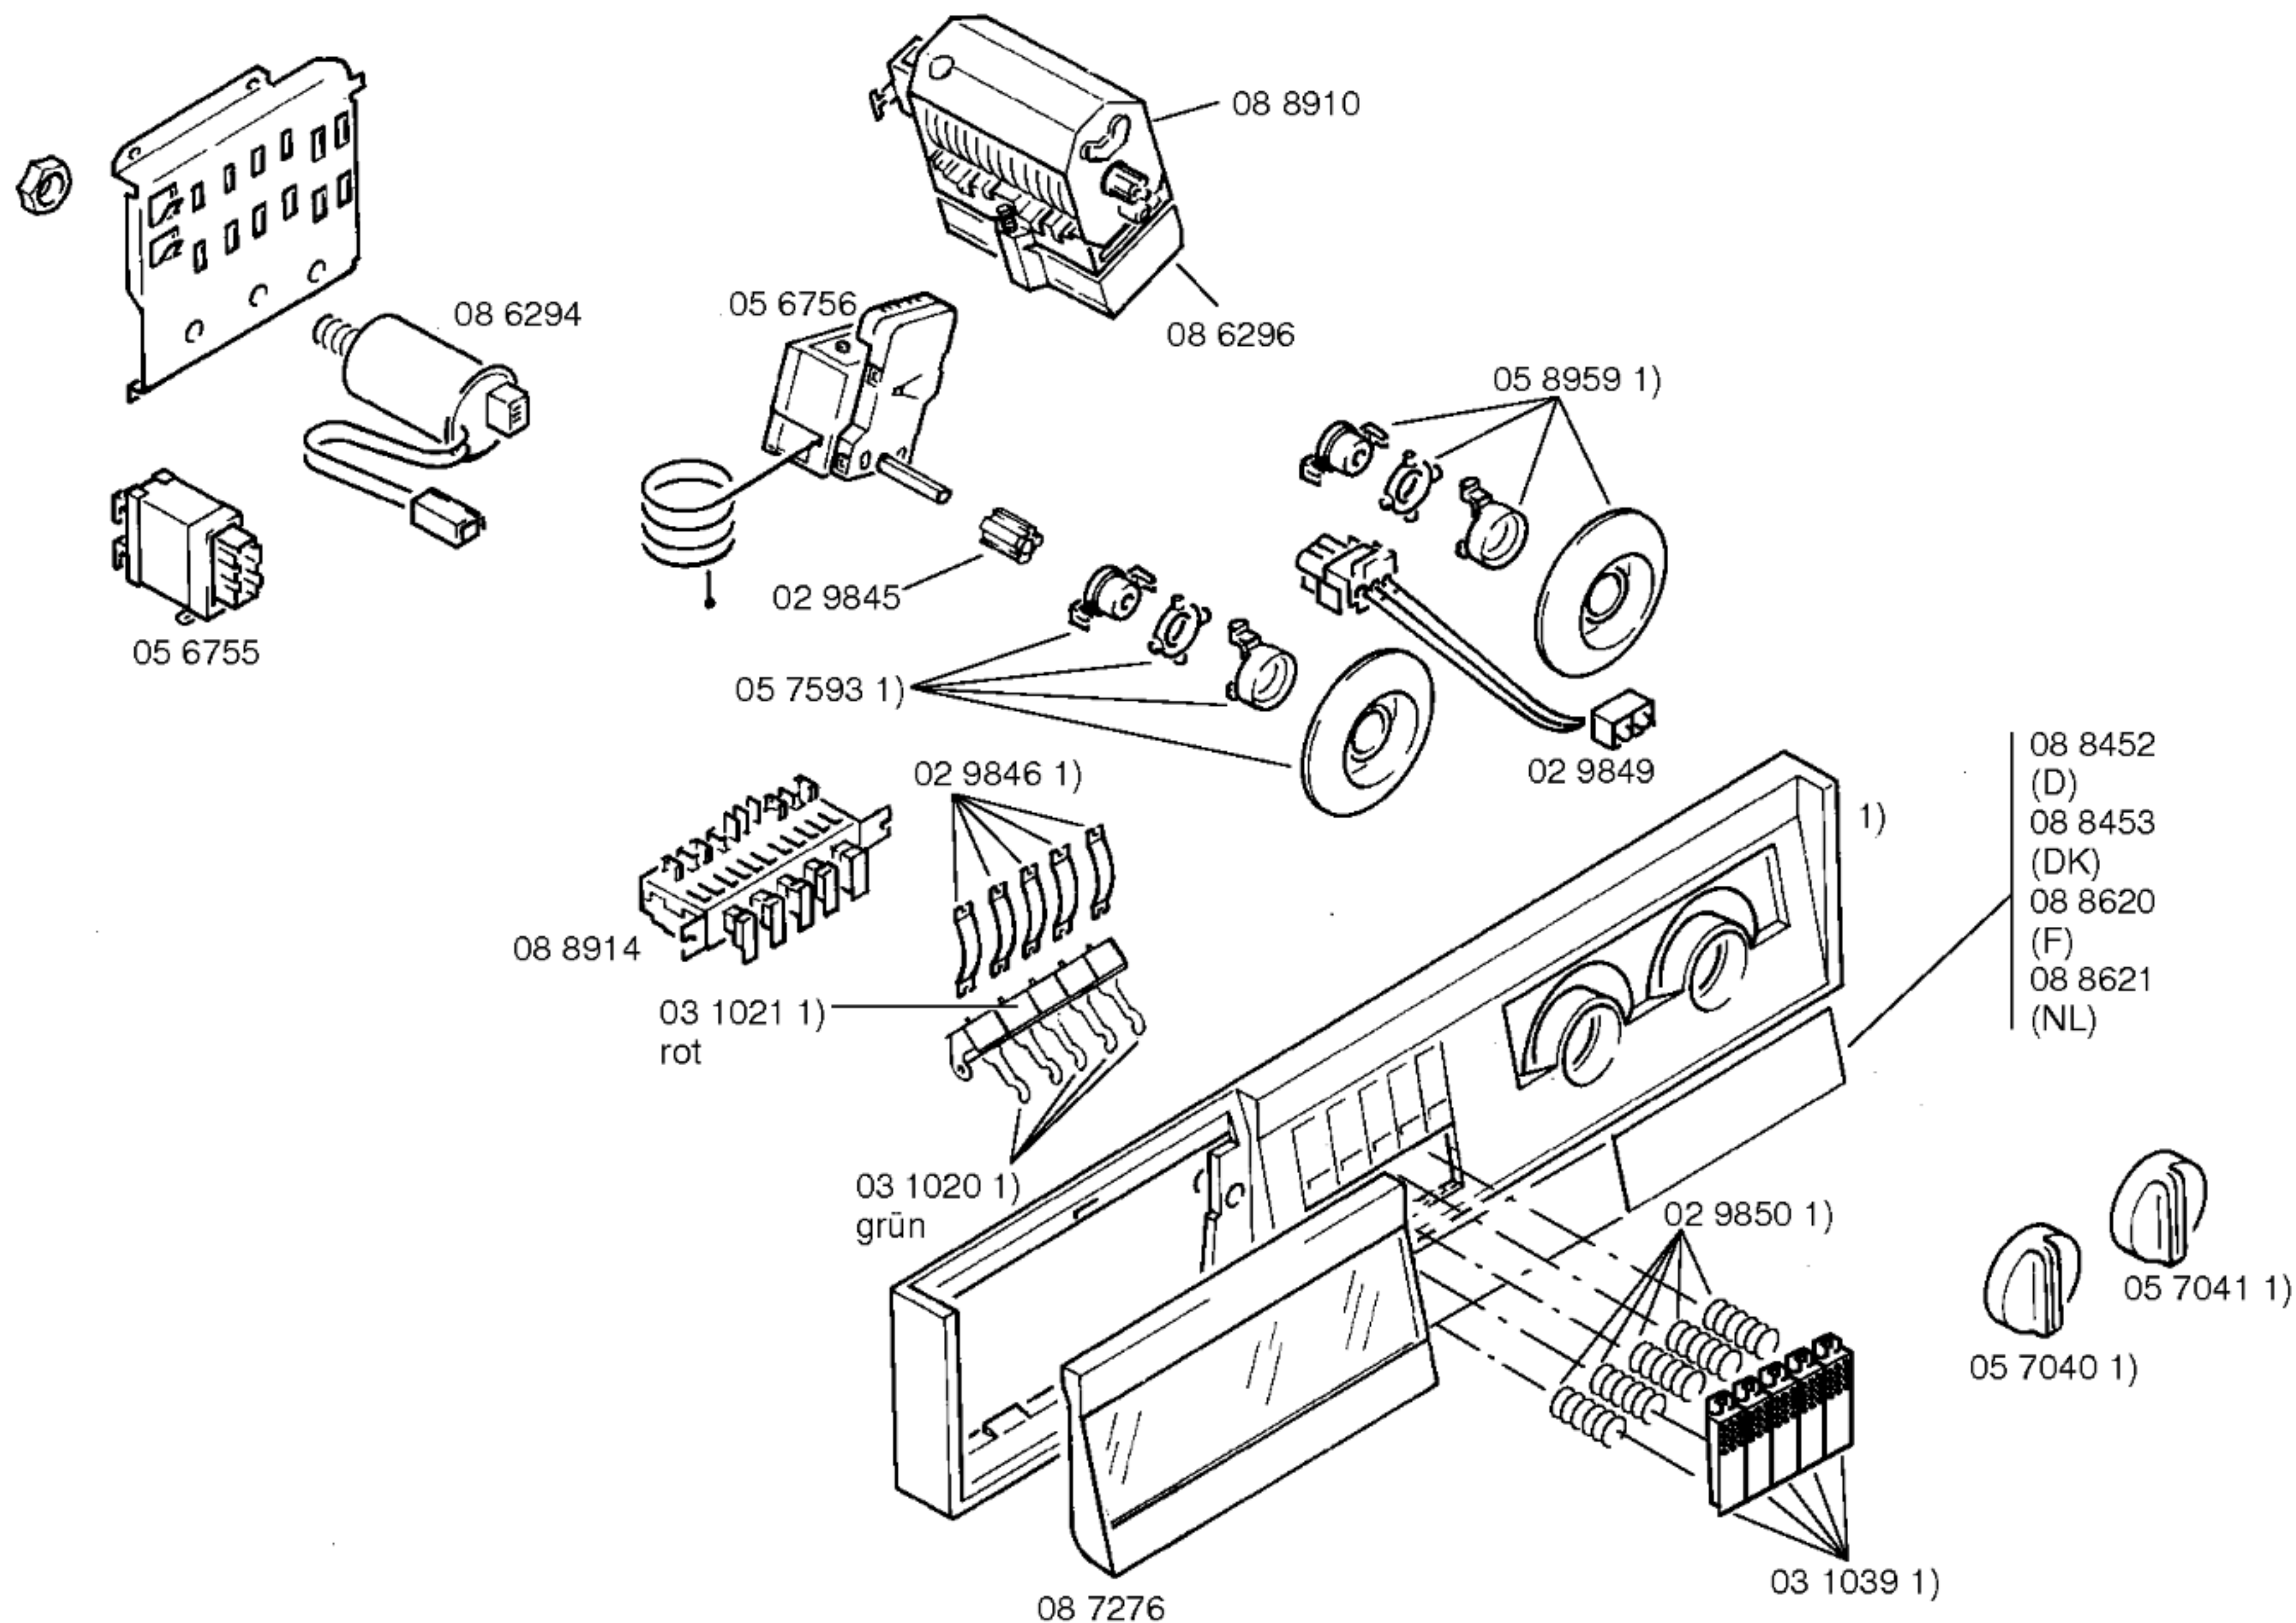

Gebrauchsanweisungen:

51 4118
(D)
51 4592
(NL,F,E,GB)

 
Aufstellanweisungen:

 
51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

Programmtabellen:

51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)

1) 27 3957
Blende kompl.

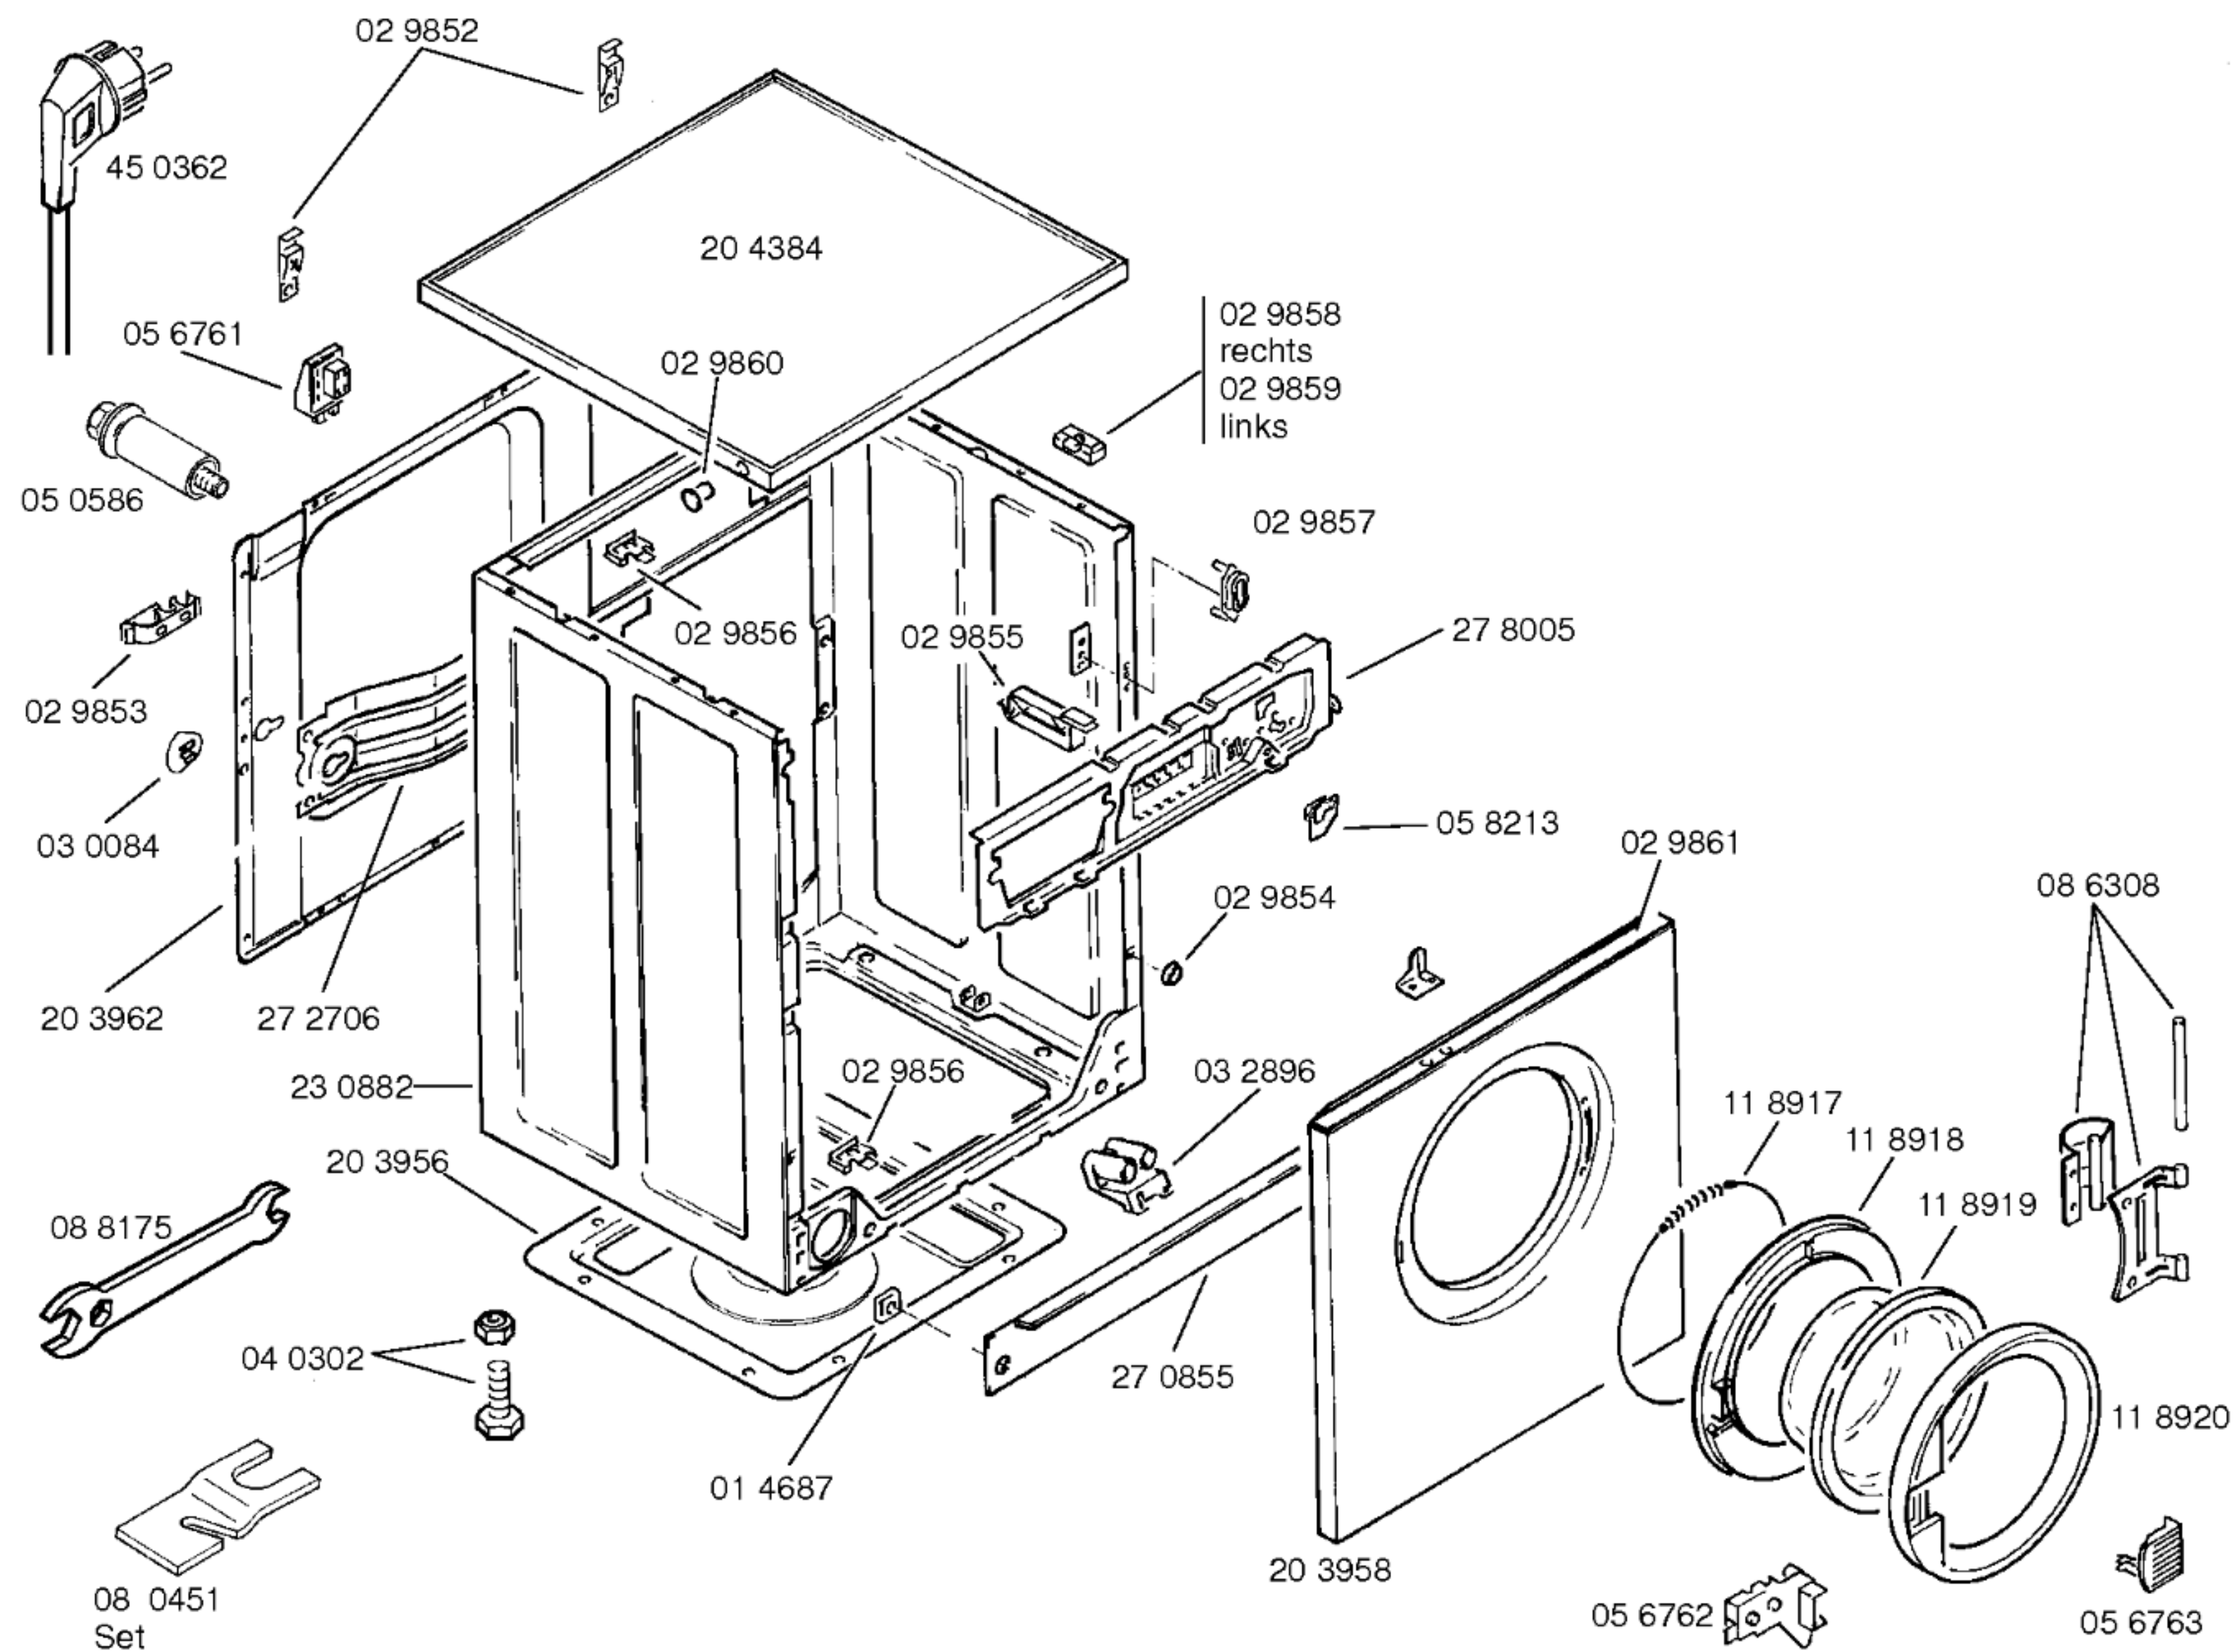

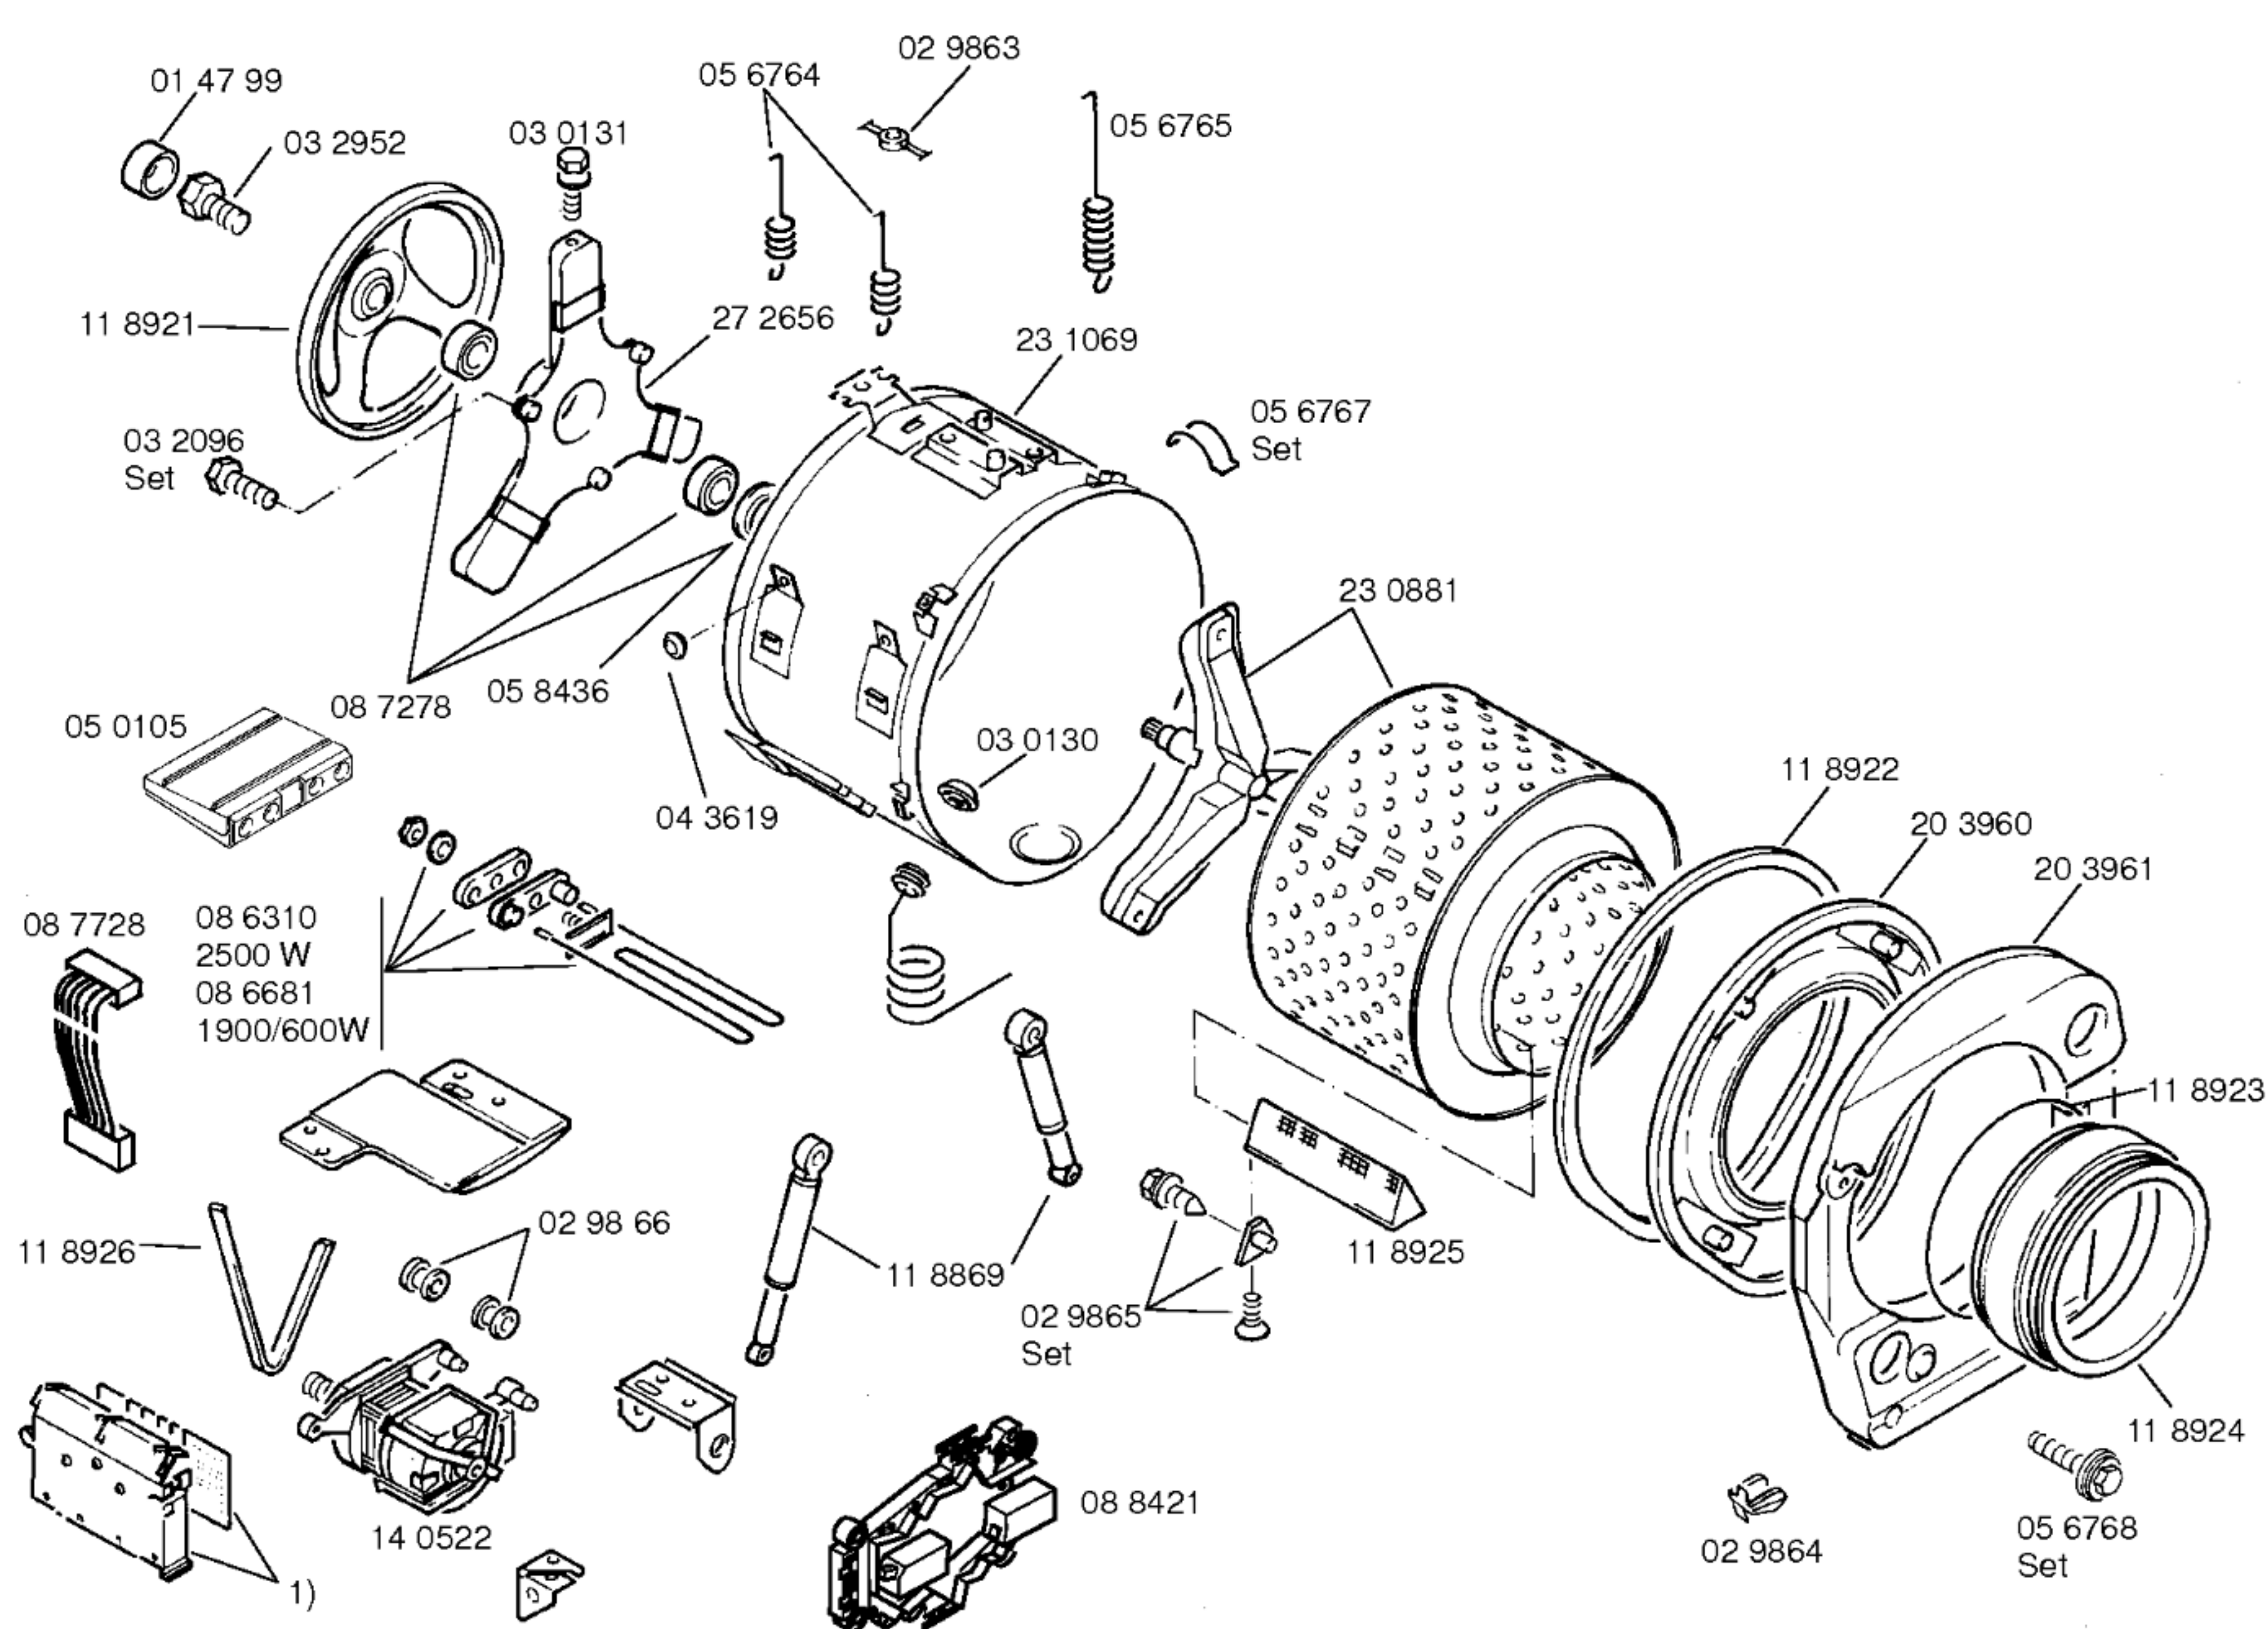

1) 27 1716
15 5272
Triac-Motorleistung

