



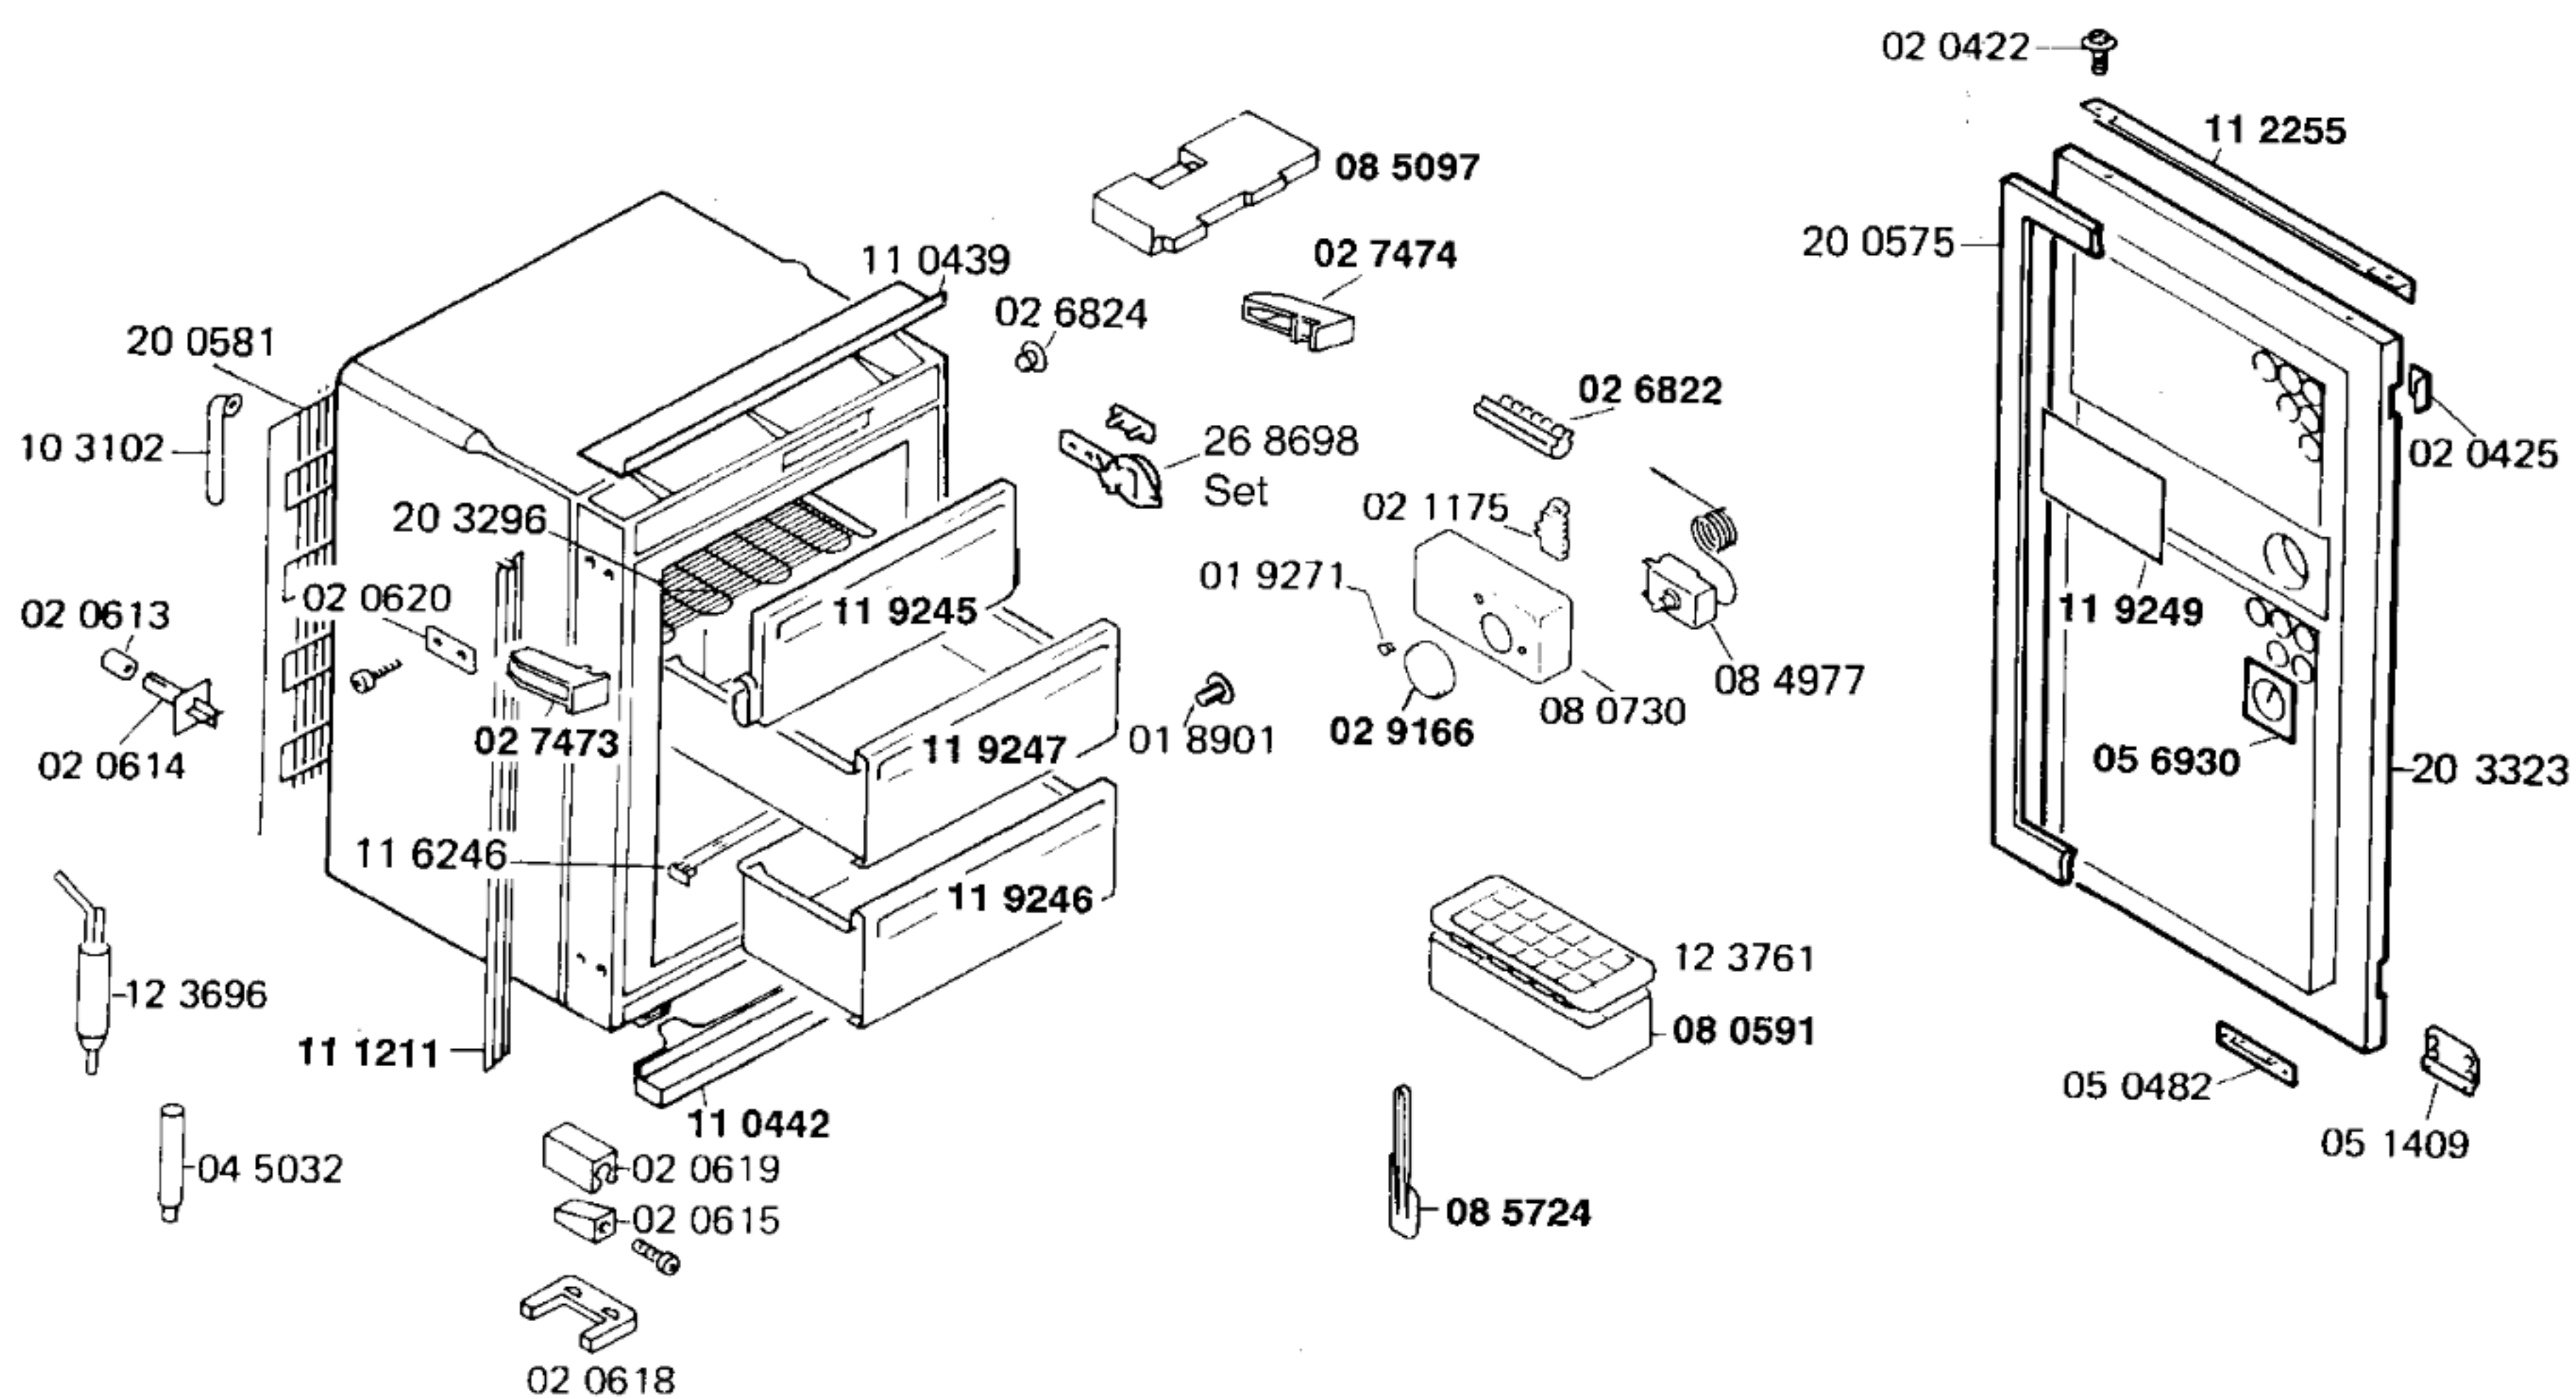

51 3634
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)

51 2737
Aufstellanweisung
(D,GB,F,I,NL,S,E,SF,N)

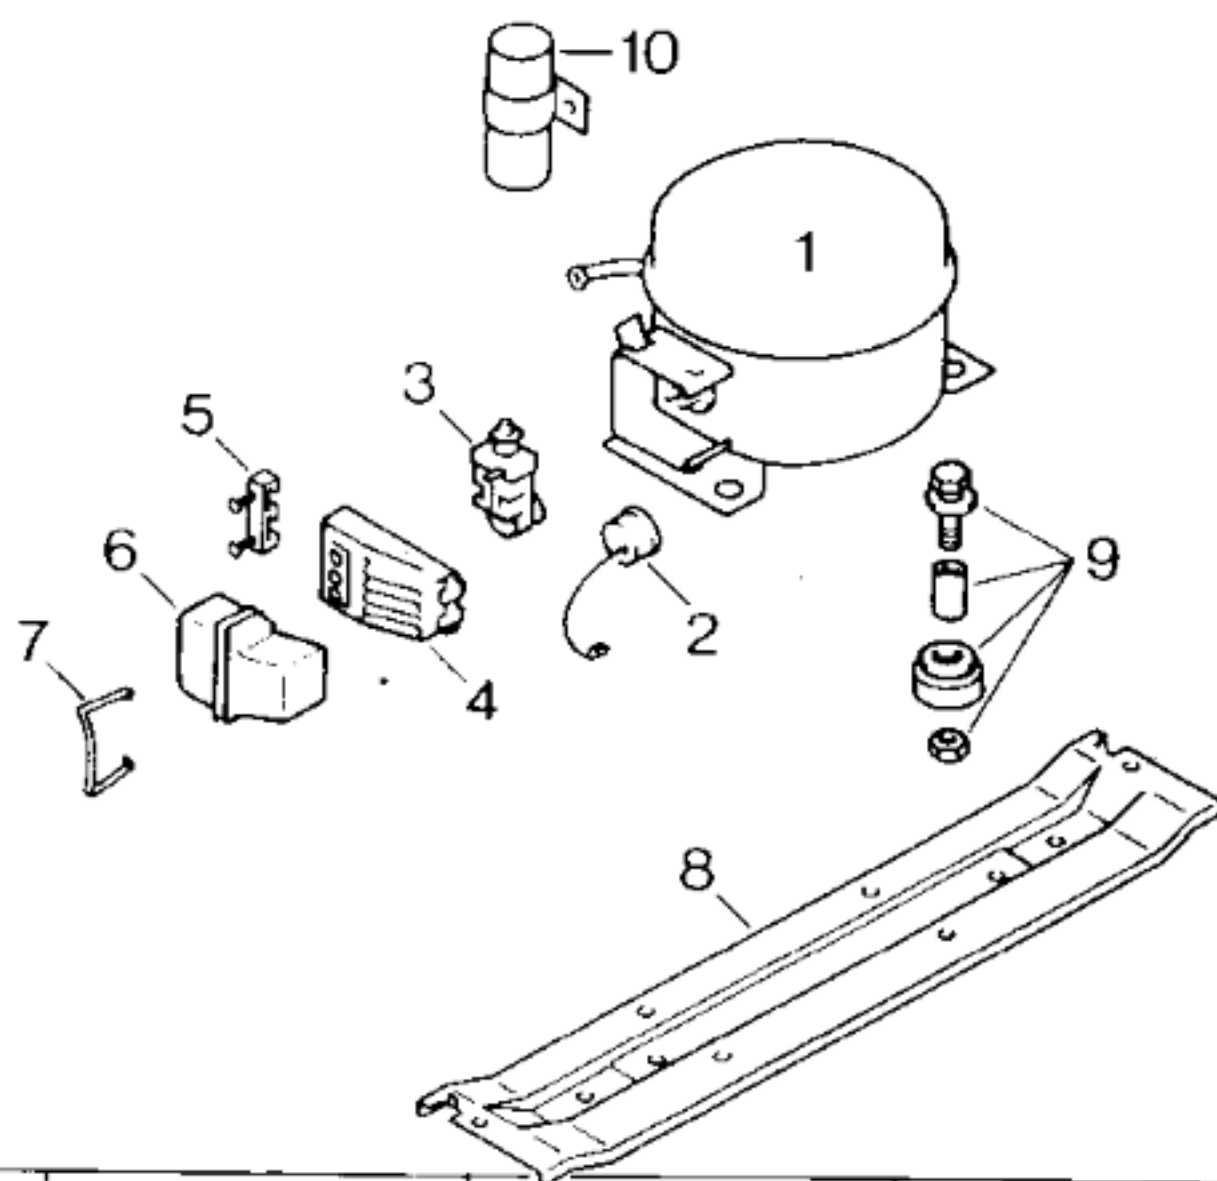

Pos.	F1			
	Danfoss			
	TL 4 A			
1	13 1064			
2				
3	02 0108			
4				
5	02 7310			
6	05 1413			
7				
8	11 0437			
9	05 0166			
10				
11				
12				
13				
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL 4 A			
Förderleistung/Delivery/Débit		V 695			
Anlaufstrom/Starting current/Cour. de démarrage		A 8,3			
Widerstand/Resistance/Résistance		Ha/main/prin. Ω 23,4			
		Hi/aux Ω 15,5			
Temp.-Regler/Thermostat		M & J			
Typ/Type		TF 57 SF 2			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/		- 24 - 16			
Valeurs de commutation		- 34 - 24			
(„abtauen“ od.)		- 19 - 12			
Füllmenge/Fill.quantity/Charge		R12 g 150			
Anschlußwert/Conn.load/Puiss. connectée		W 110			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			