



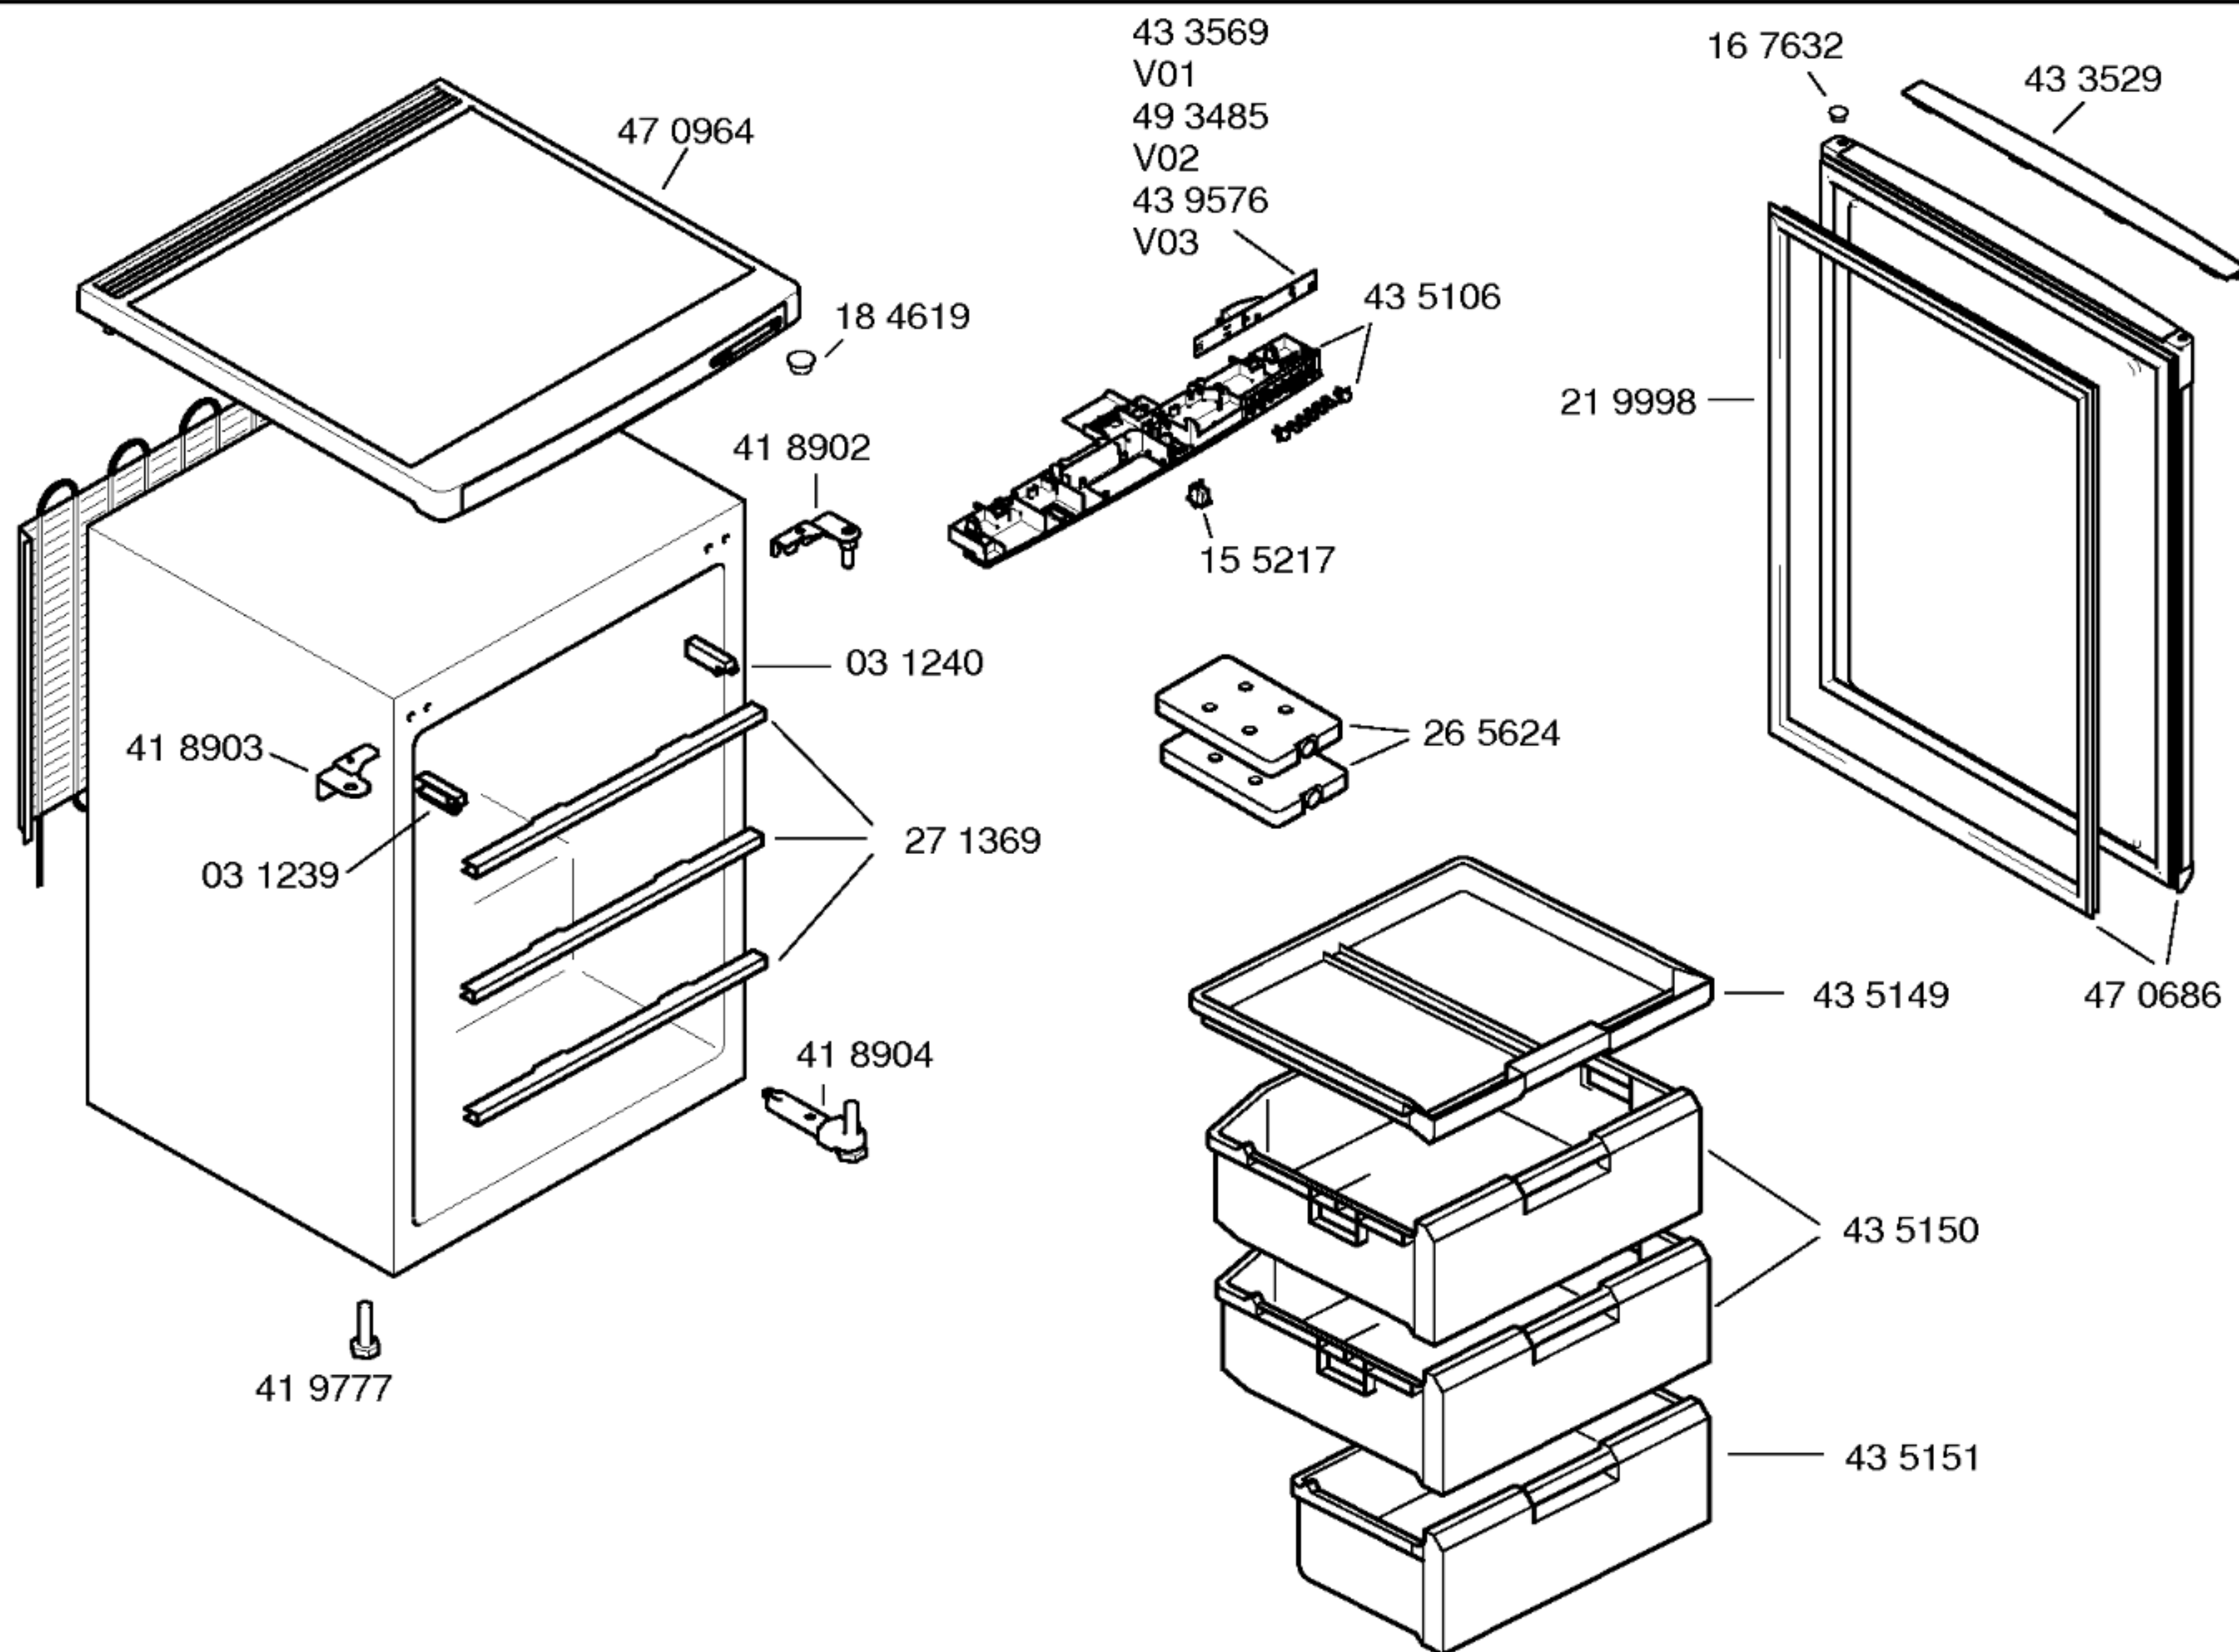

Gebrauchsanweisung
58 6985
(de,en,fr,it,nl)

Mat. – Nr. – Konstante
3740

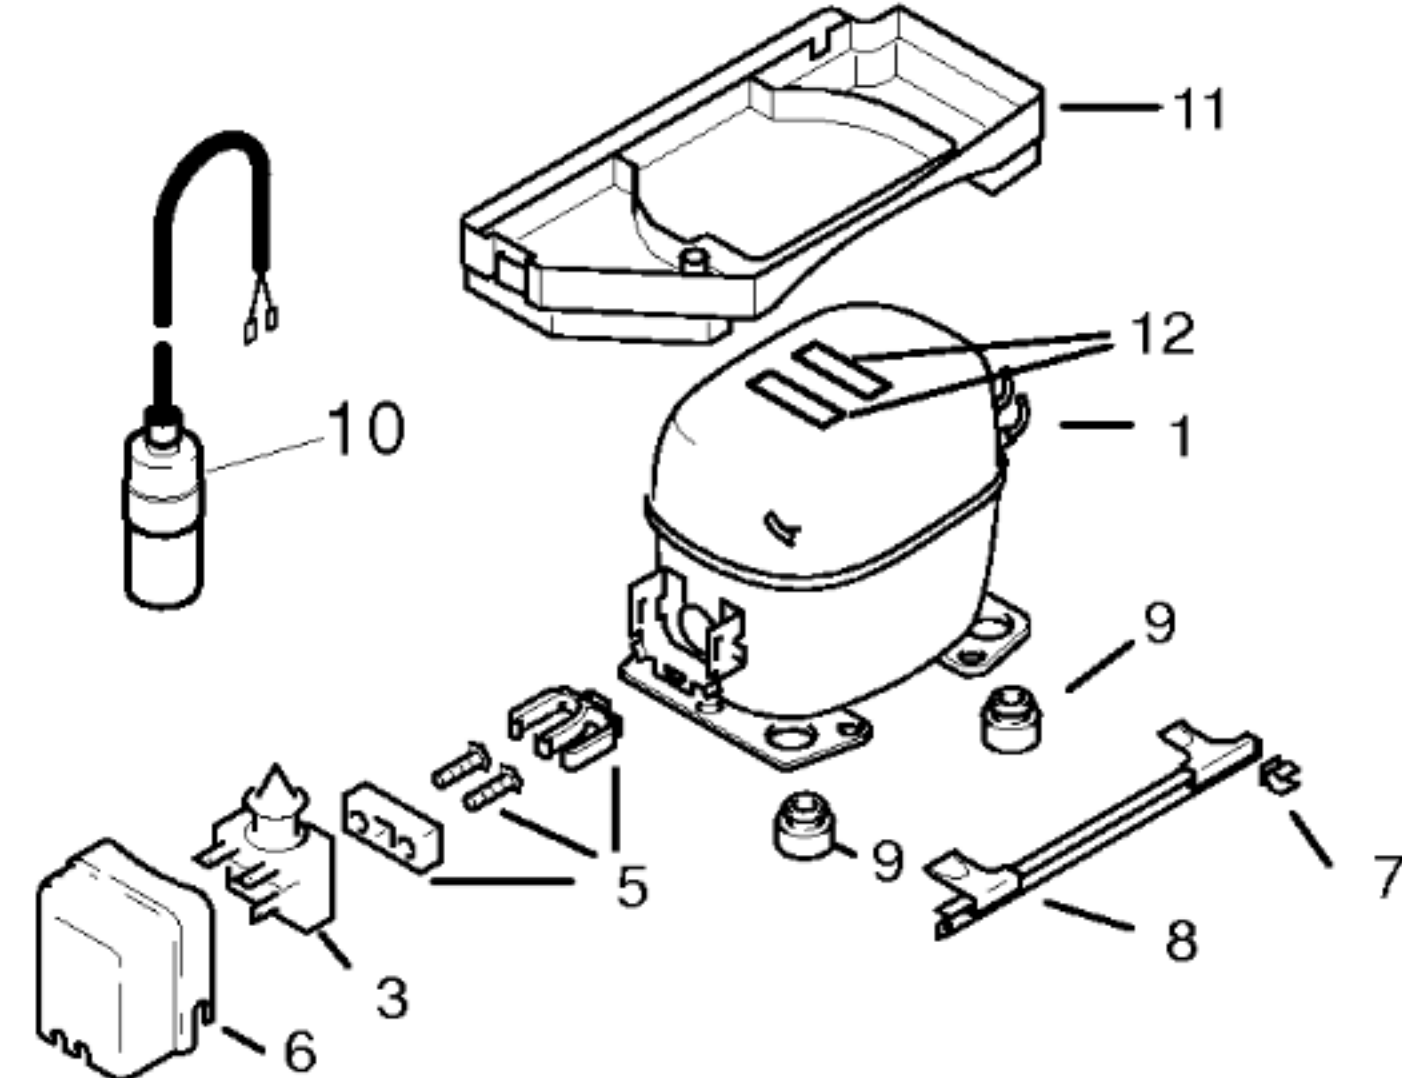

Pos.	V01		
	Goldstar		
	NDA62NAEM		
1	14 2037		
2			
3	17 0743		
4			
5	17 0745		
6	17 0744		
7			
8	26 4879		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Goldstar		
Typ/Type	NDA62NAEM		
Förderleistung/Delivery/Débit	1121		
Anlaufstrom/Starting current/Cour de démarrage	A		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	34,6	
	Hi/aux Ω	23,0	
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/	„ein“ °C		
Valeurs de commutation	„aus“		
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W	66	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild