



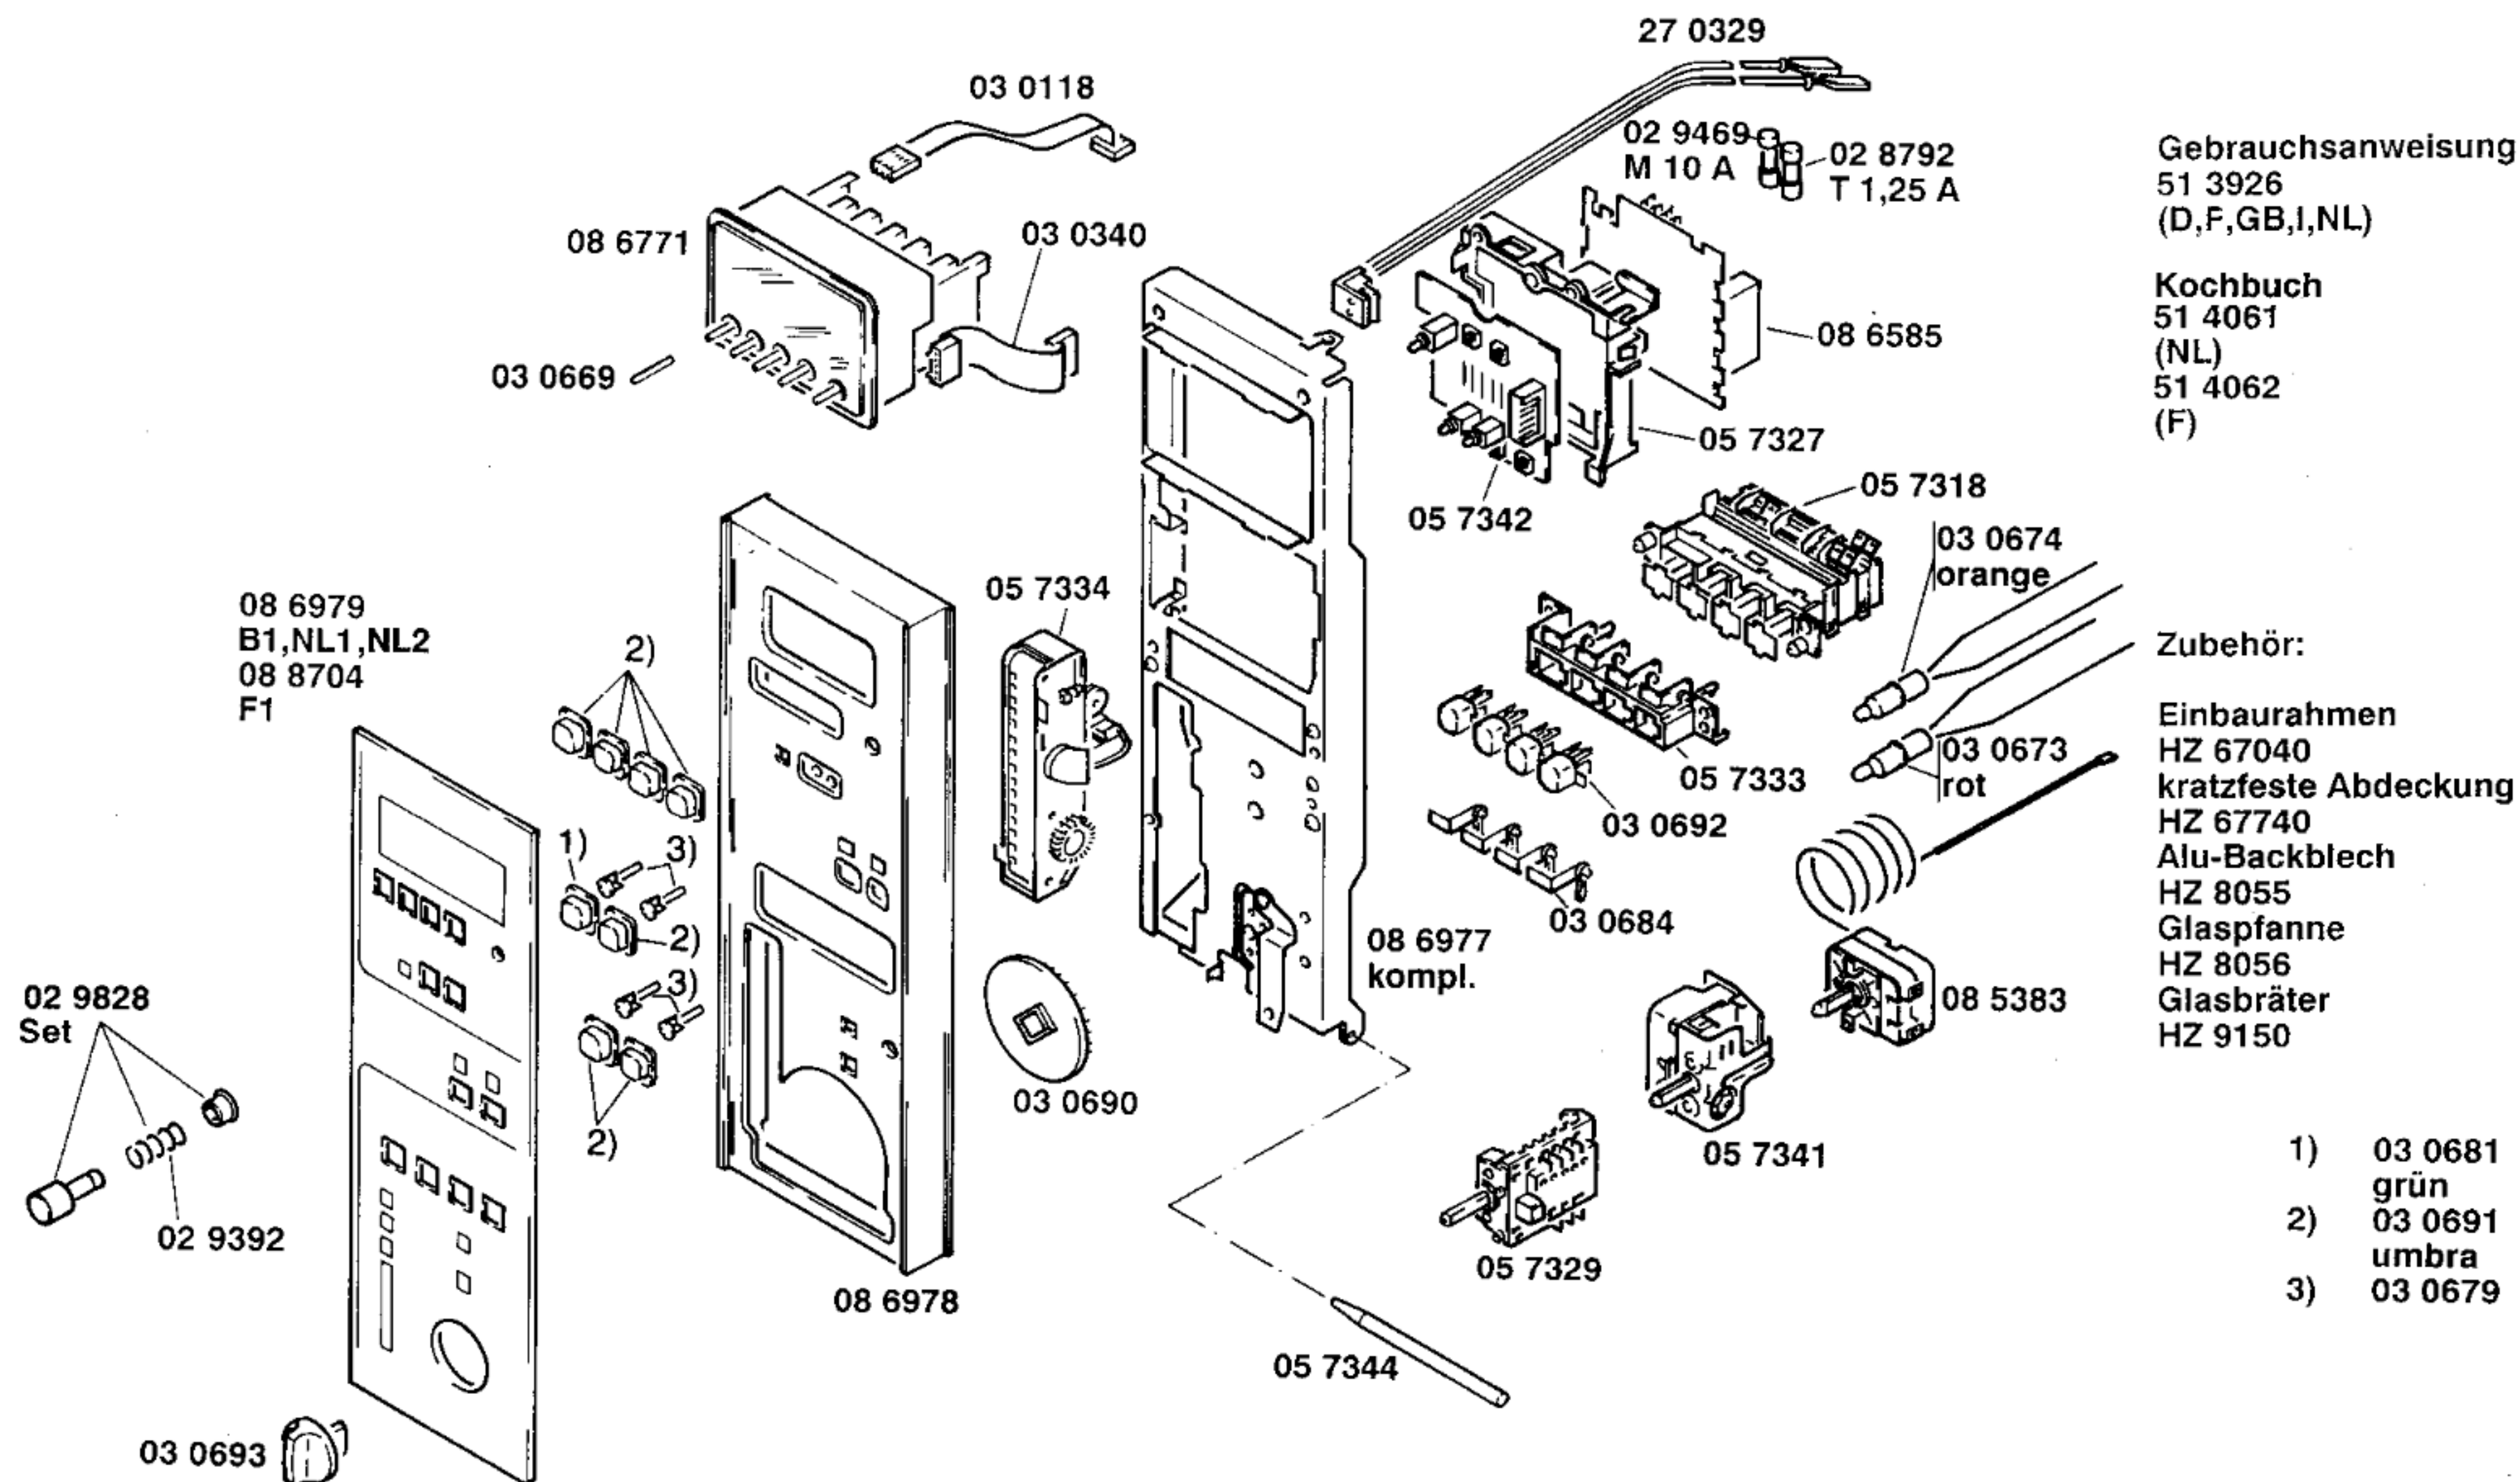


Gebrauchsanweisung
51 3926
(D,F,GB,I,NL)

Kochbuch
51 4061
(NL)
51 4062
(F)

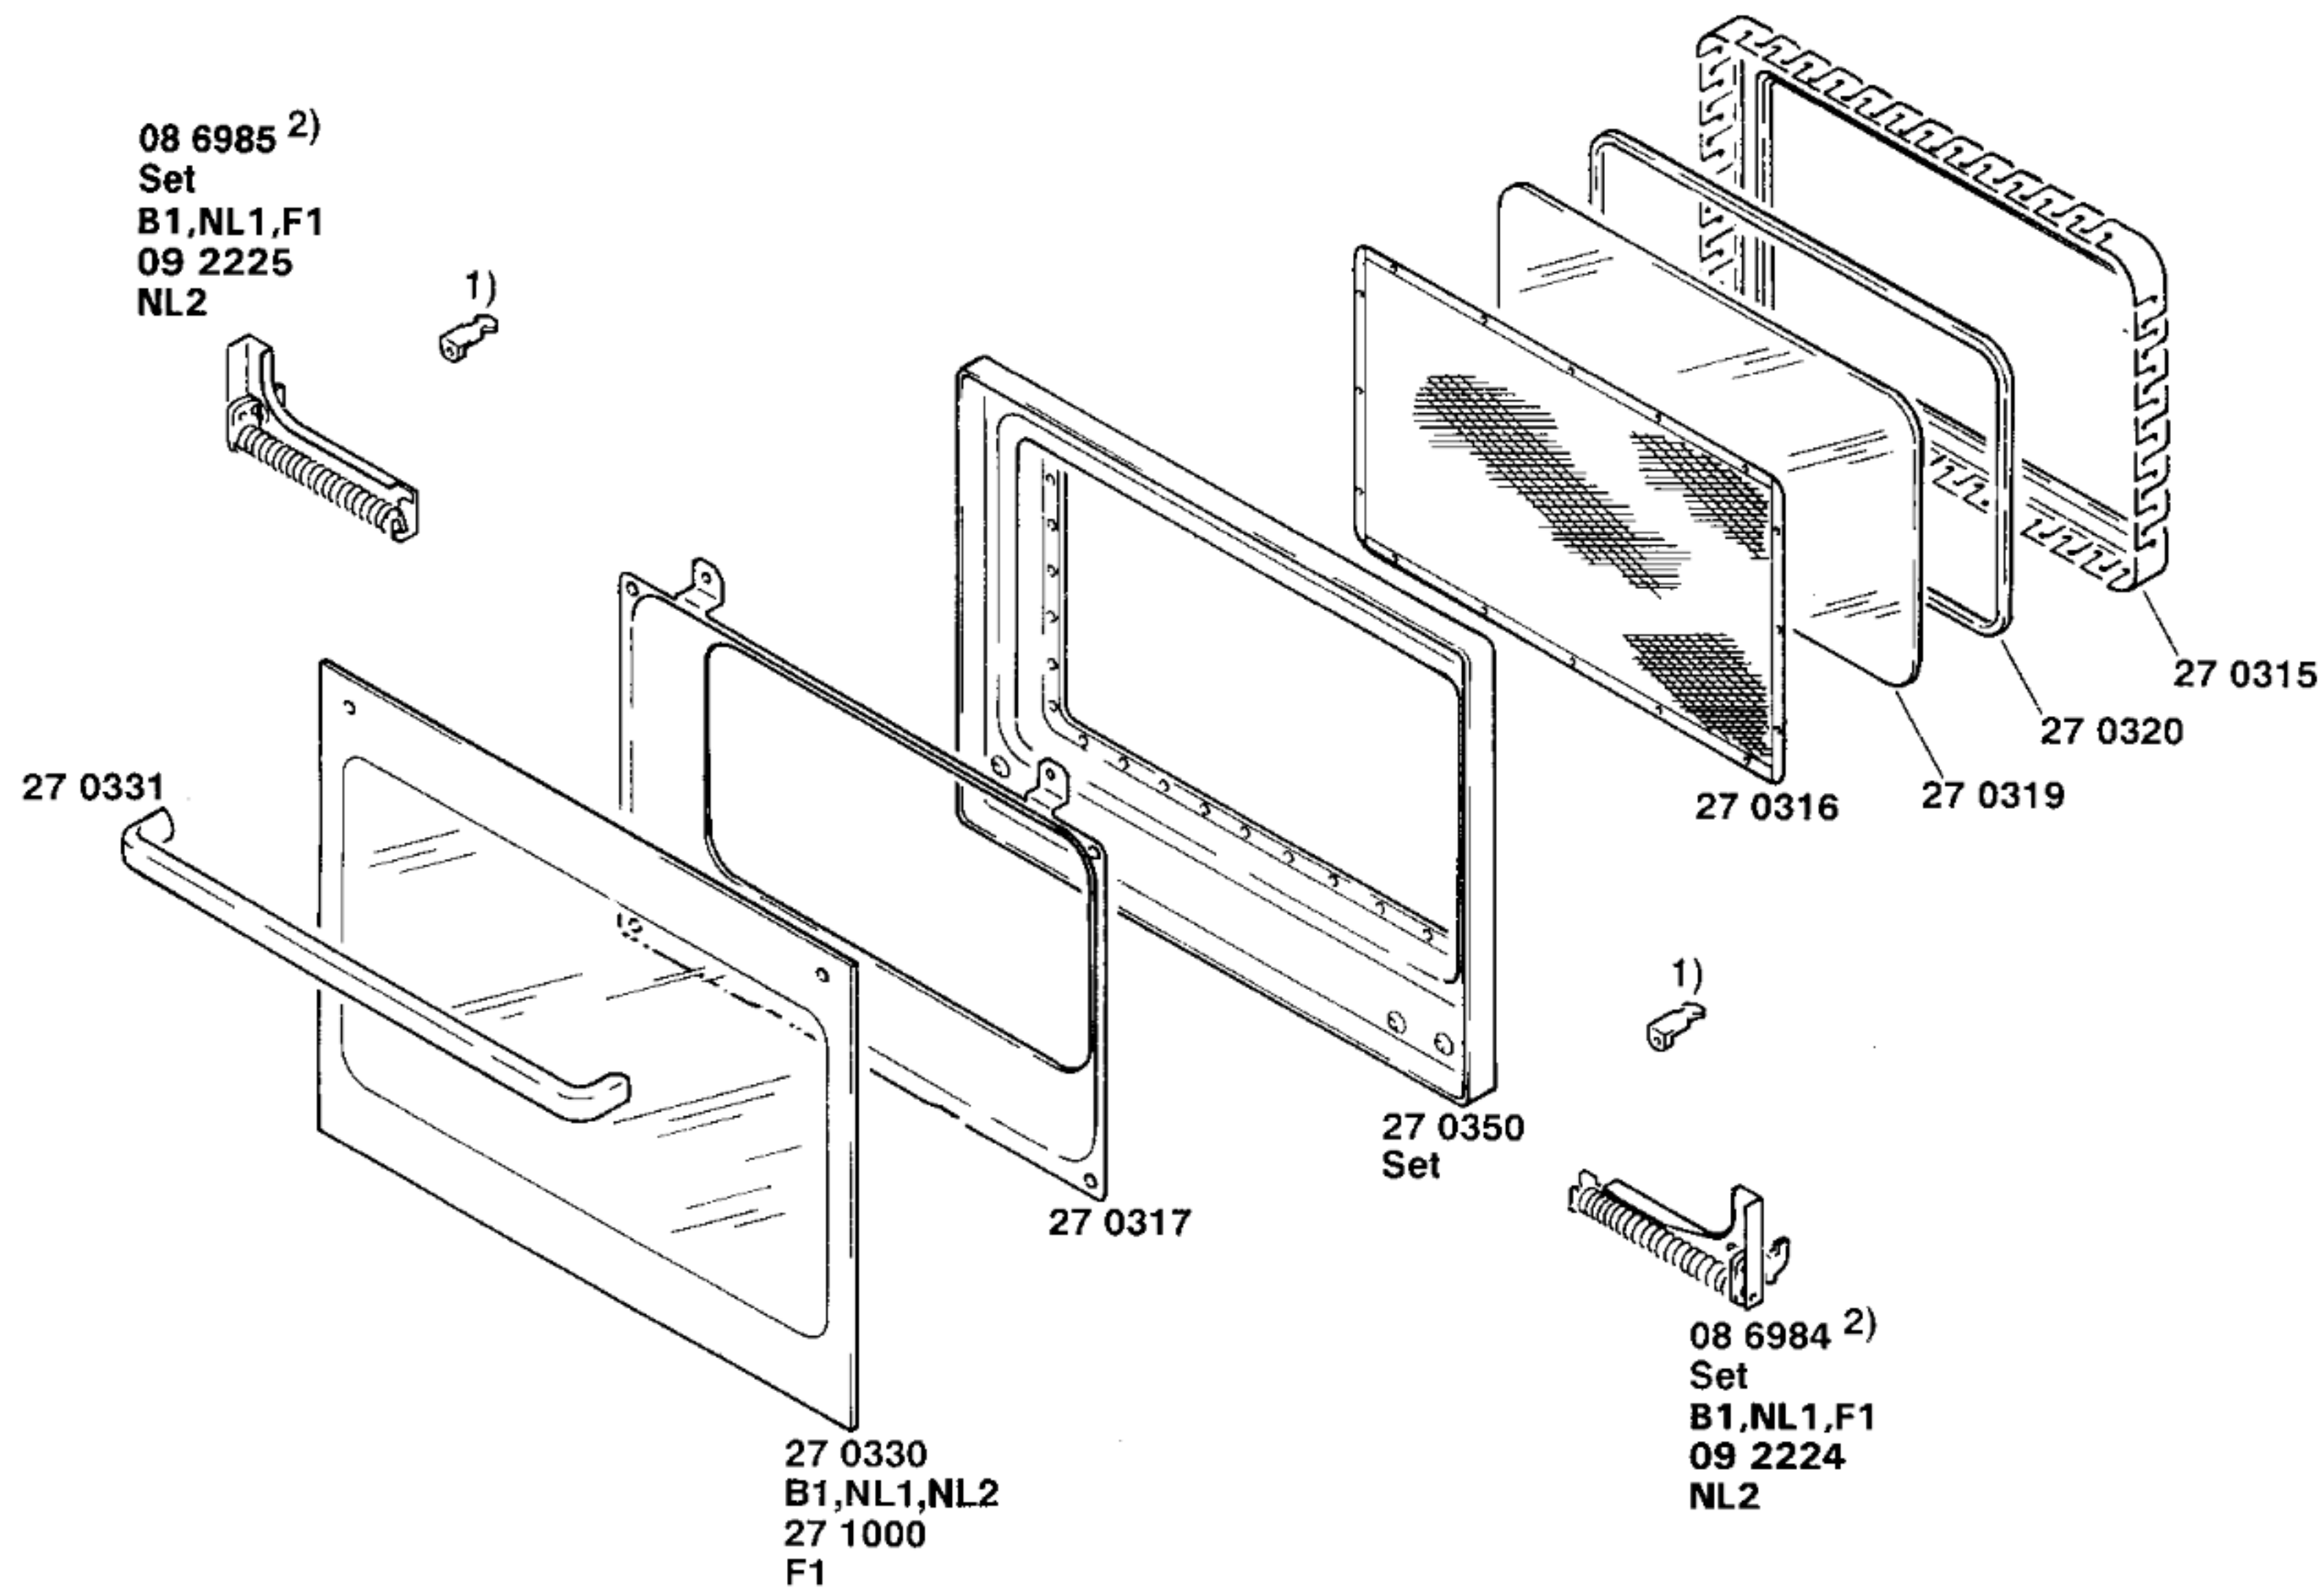

- 1) 03 0671
- 2) 03 0813
Arretierstift

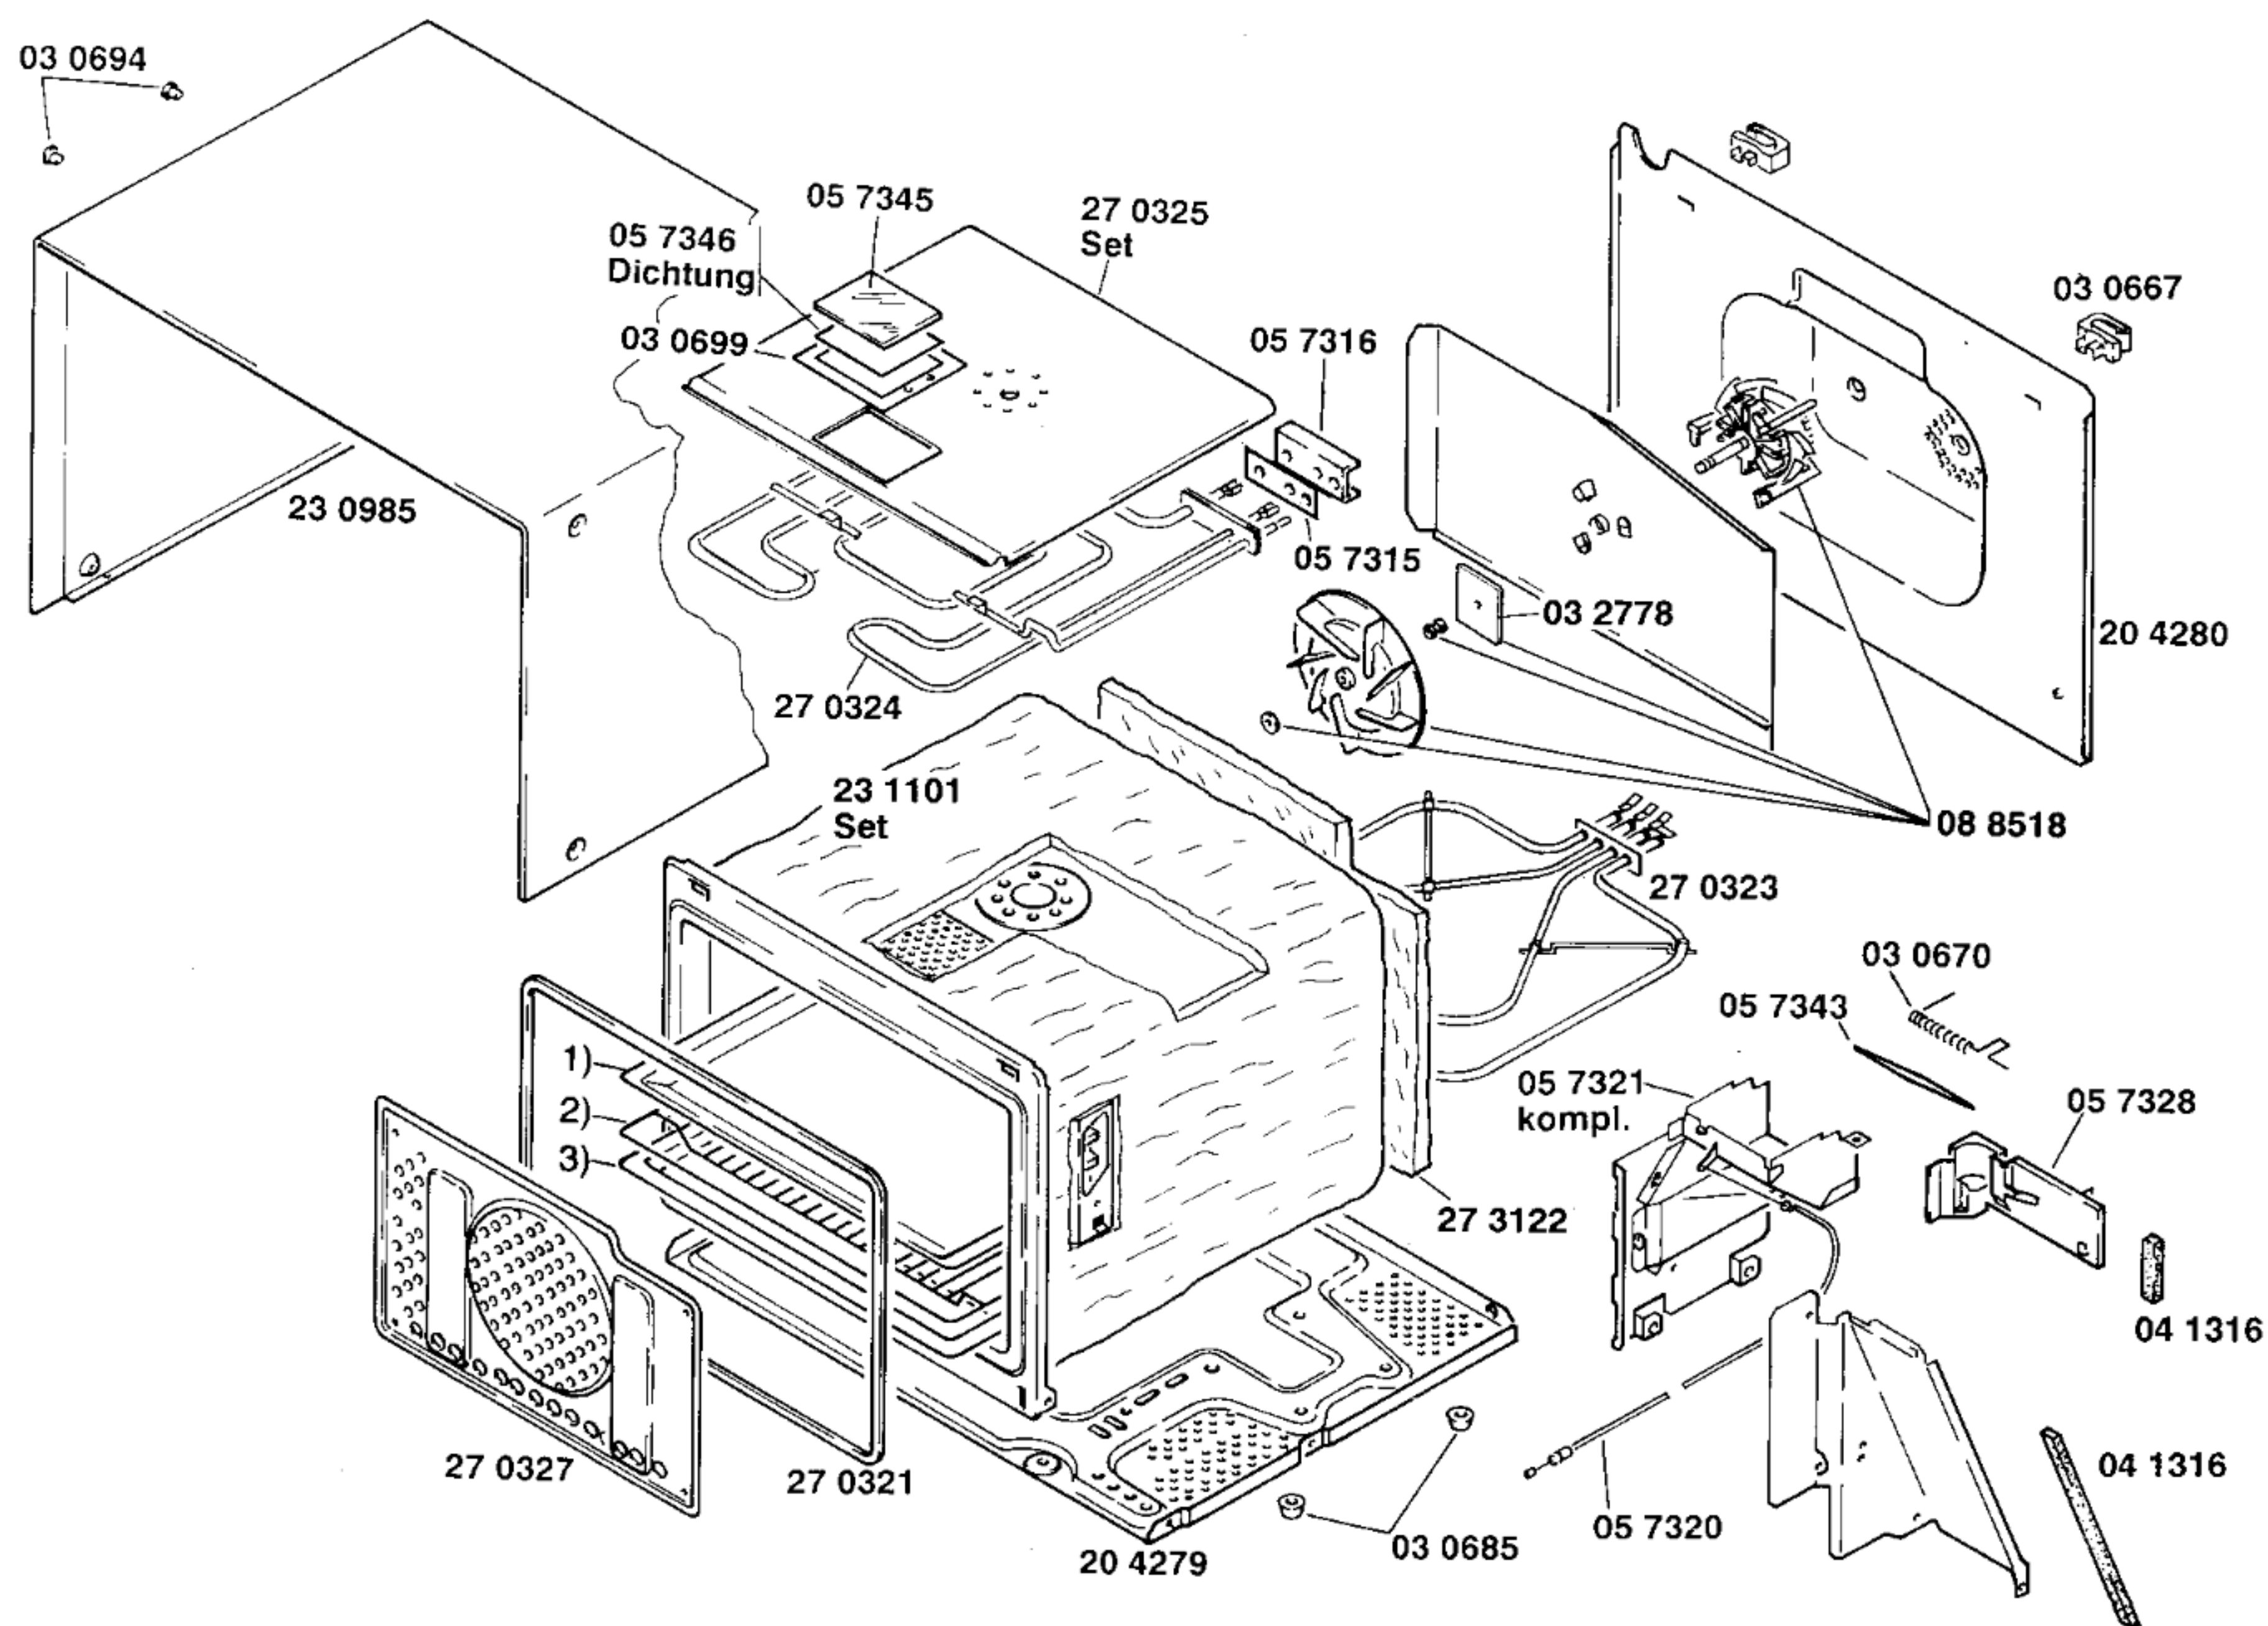

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale
- 02 8732
Anschlag-Backblech

