


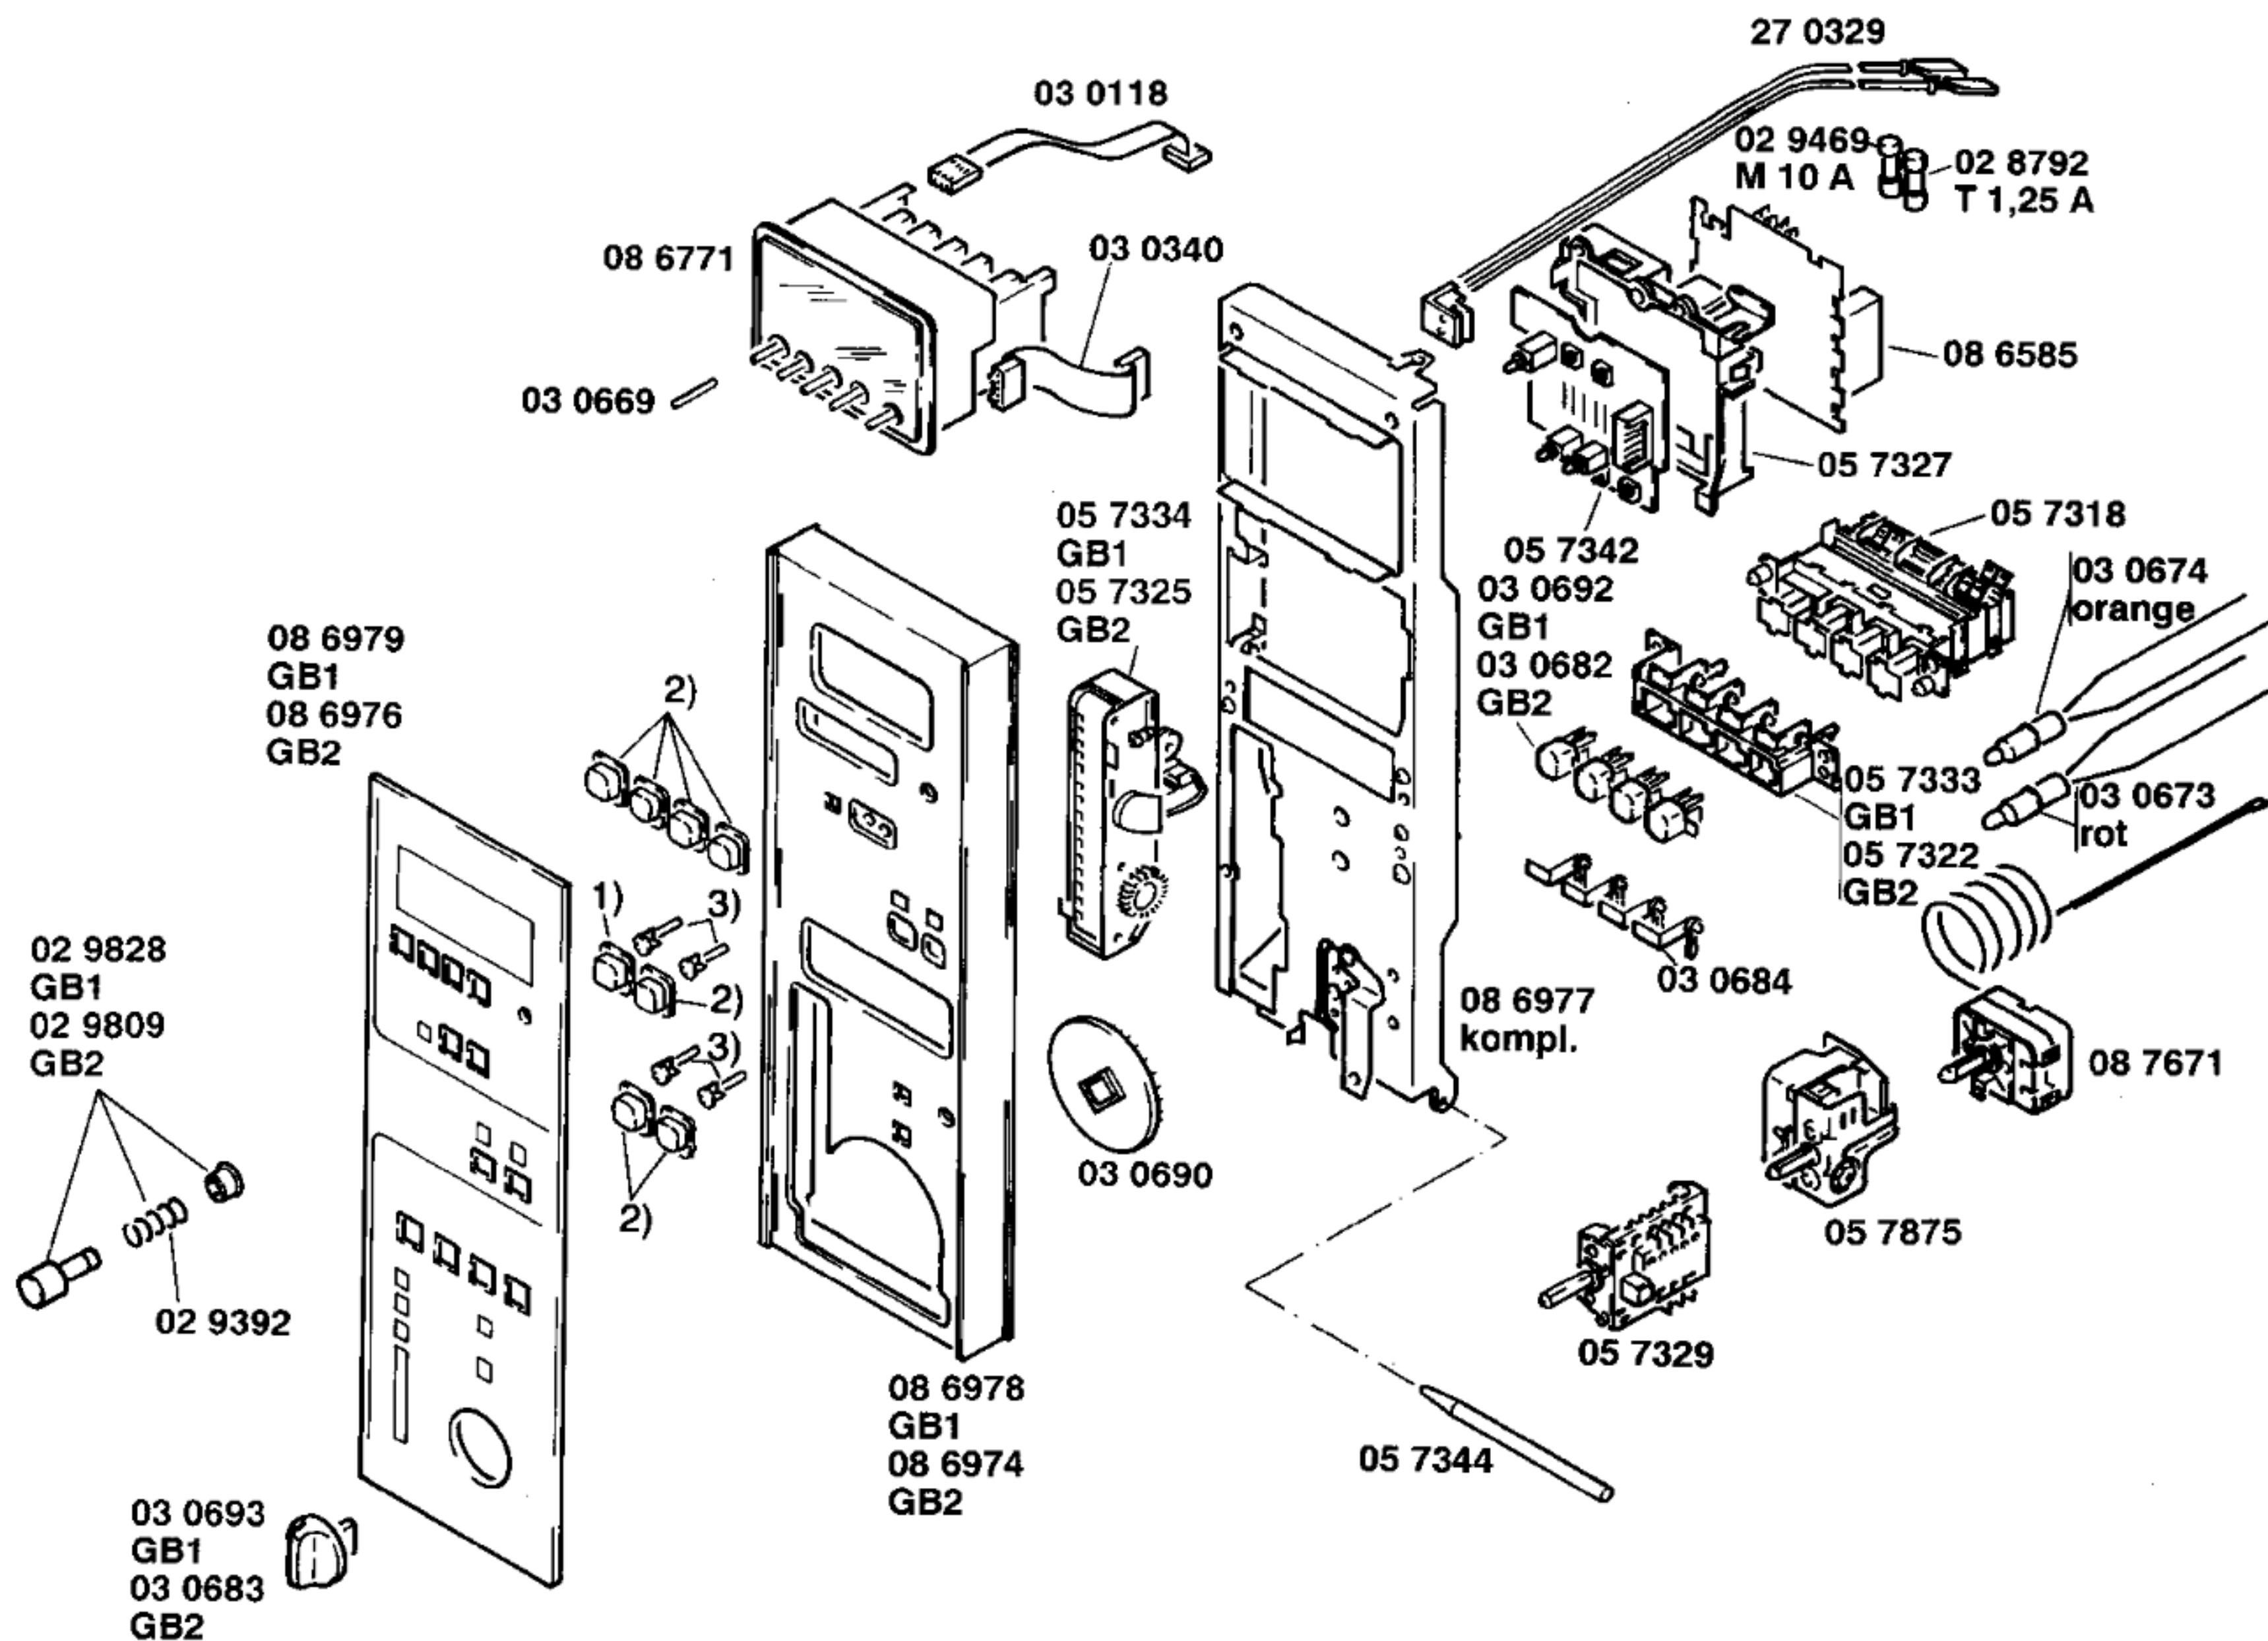


Gebrauchsanweisung  
51 3926  
(D,F,GB,I,NL)  
Kochbuch  
51 4300  
(GB)

## Zubehör:


Einbaurahmen  
HZ 67020  
GB2  
HZ 67040  
GB1  
kratzfeste Abdeckung  
HZ 67720  
GB2  
HZ 67740  
GB1  
Alu-Backblech  
HZ 8055  
Glaspfanne  
HZ 8056  
Glasbräter  
HZ 9150

- 1) 03 0681  
grün
- 2) 03 0680  
GB2  
03 0691  
GB1
- 3) 03 0679

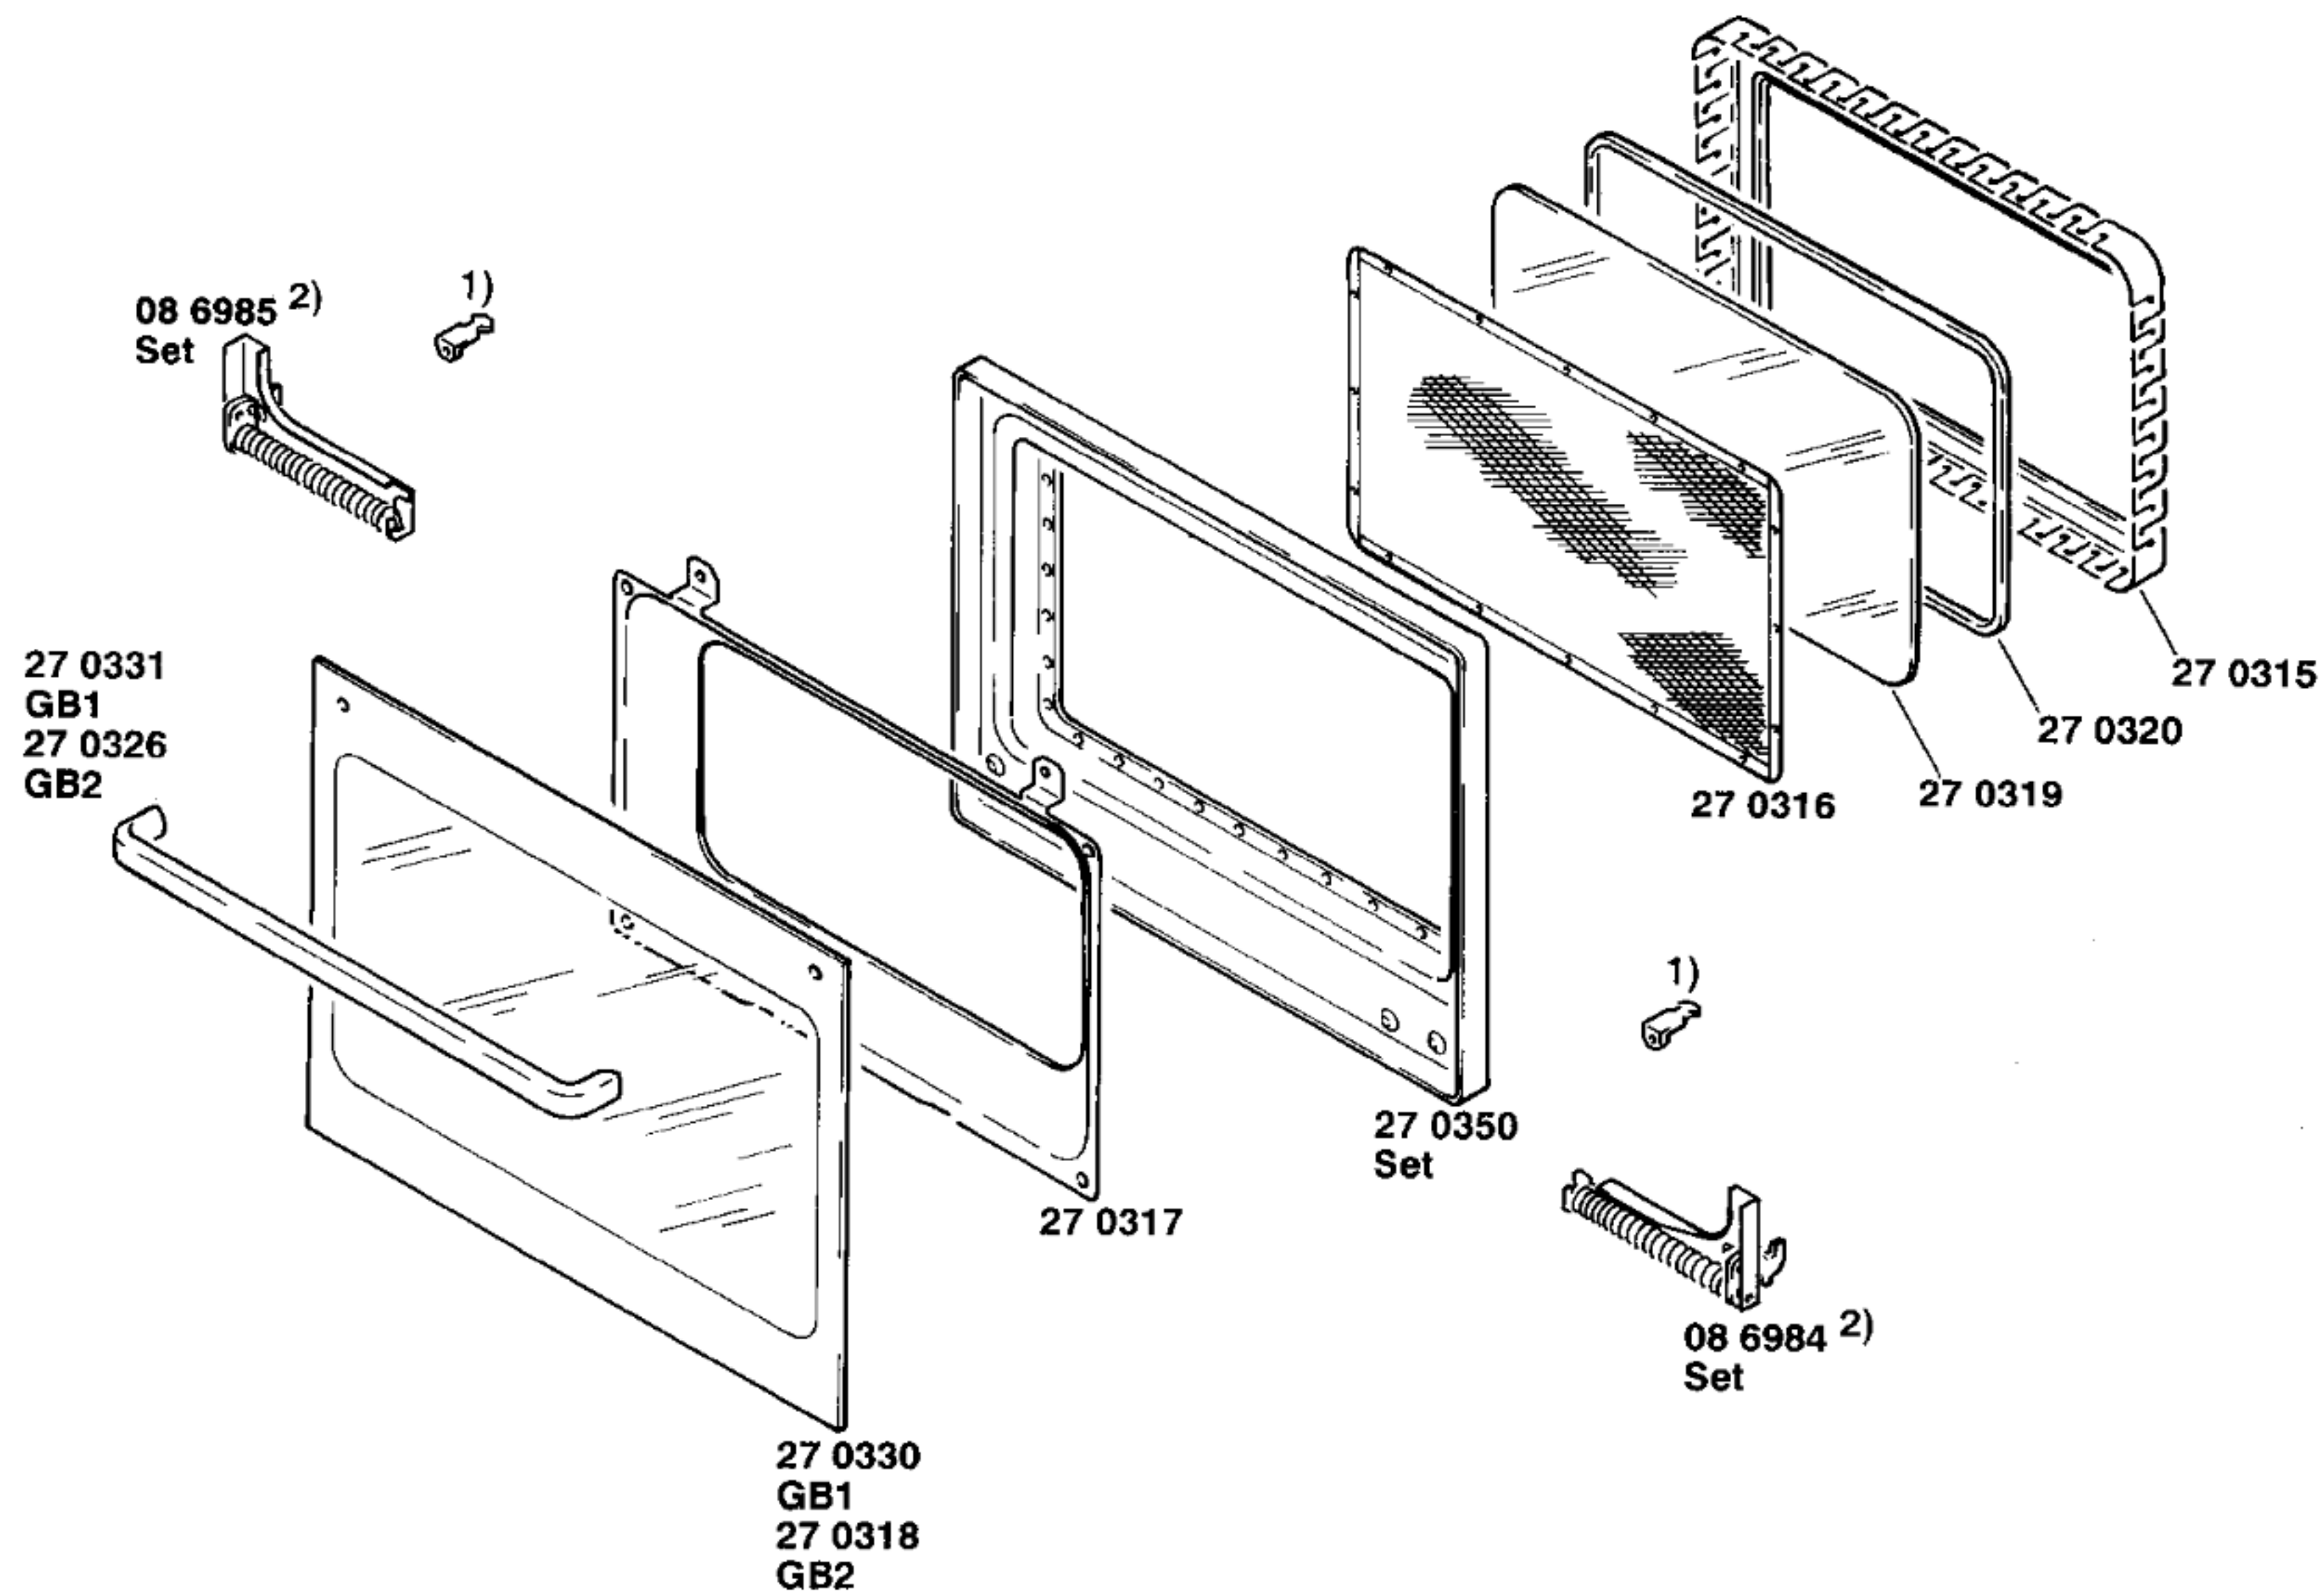

- 1) 03 0671
- 2) 03 0813
- Arretierstift

03 0698  
GB1  
03 0688  
GB2

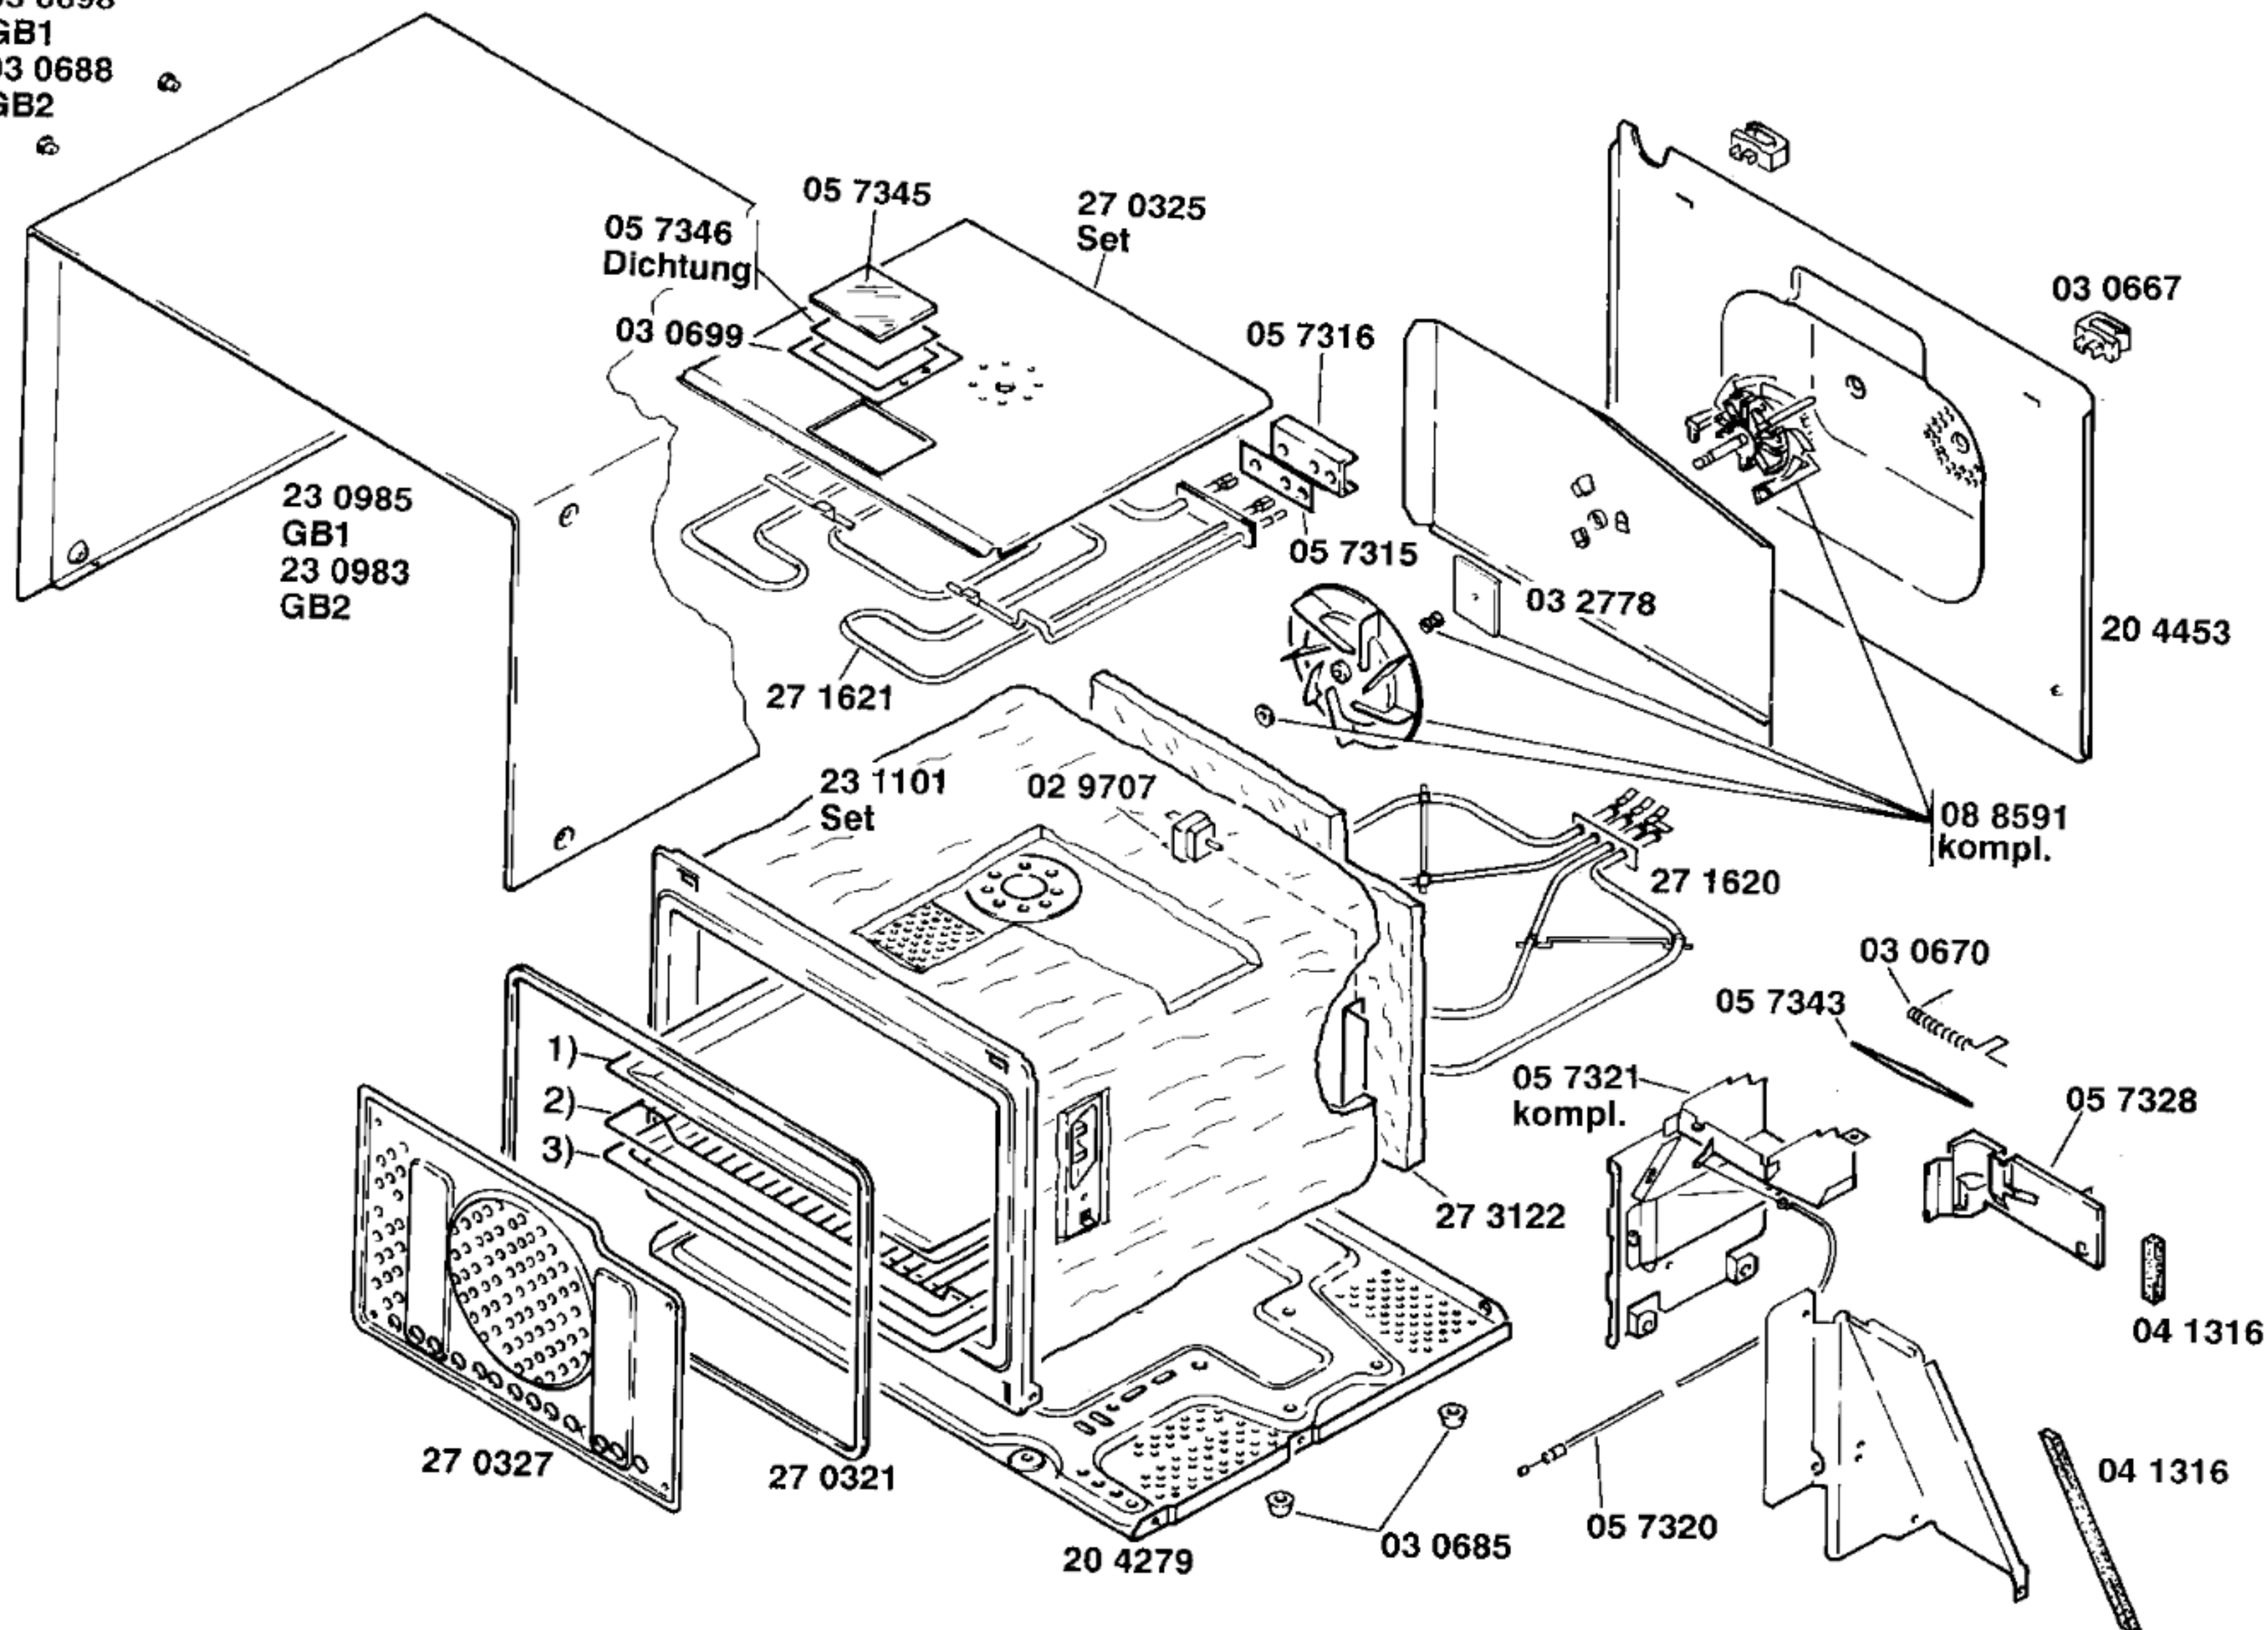

- 1) 11 4538  
Backblech
- 2) 11 4539
- 3) 11 4537  
Glasschale
- 02 8732  
Anschlag-Backblech

