


HF73020/01-D1, weiss
HF73020/02-D2, weiss
HF73220/01-D3, weiss
HF73020NL/01-NL1, weiss

HF73020NL/02-NL2, weiss
HF73020CH/01-CH1, weiss
HF73020FF/01,-F1, weiss
HF73220/02-D4, weiss

HF73220/03-D5, weiss

HERDE
Mikrowellenherde

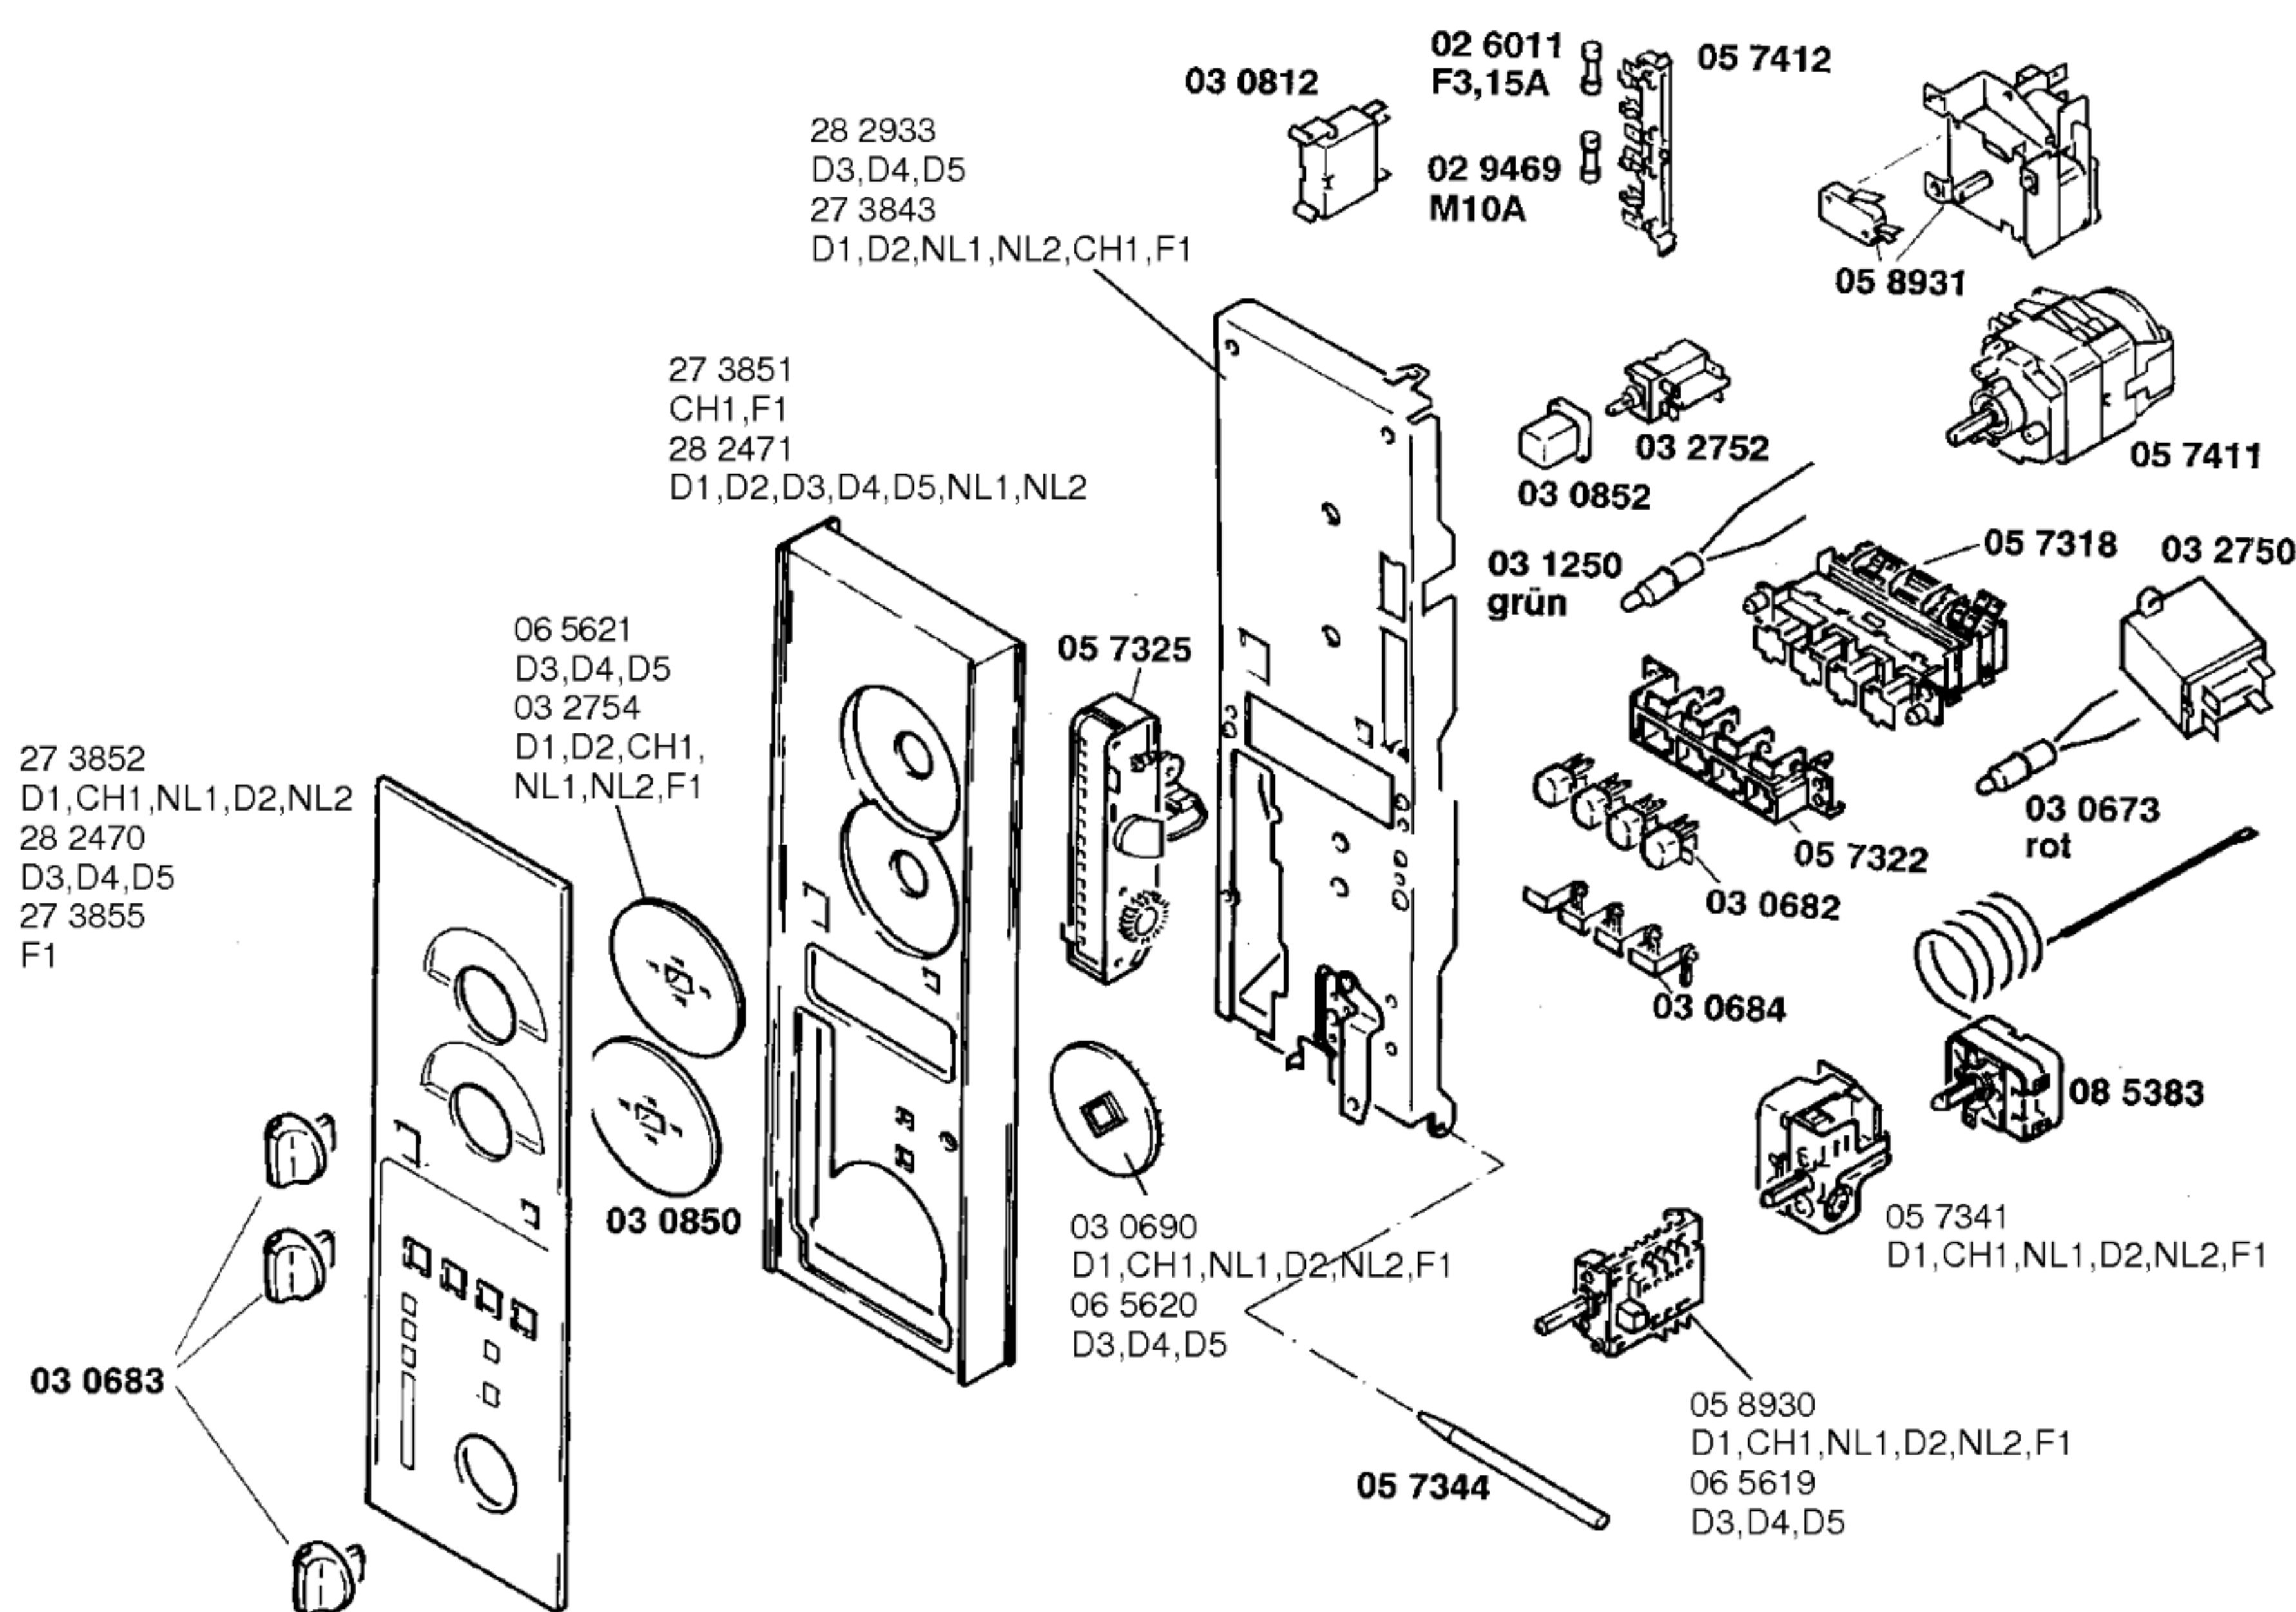

Gebrauchsanweisung

51 5730
(D)
D3,D4,D5
51 4994
D1,D2,NL1,NL2
(D,F,GB,NL)
51 4995
CH1,F1
(D,F,I)

Tips und Rezepte

51 4861
D1,D2,CH1
(D)
51 4476
NL1,NL2
(NL)
51 5729
D3,D4,D5
(D)

Zubehör:

HZ67020
Einbaurahmen

HZ67720
Abdeckung, kratzfest

HZ8056
Glaspfanne

HZ8055
Alu-Backblech

HZ67615
Universalpfanne


HZ9150
Glasbräter

HF73020/01-D1, weiss
 HF73020/02-D2, weiss
 HF73220/01-D3, weiss
 HF73020NL/01-NL1, weiss

HF73020NL/02-NL2, weiss
 HF73020CH/01-CH1, weiss
 HF73020FF/01,-F1, weiss
 HF73220/02-D4, weiss

HF73220/03-D5, weiss

HERDE
 Mikrowellenherde

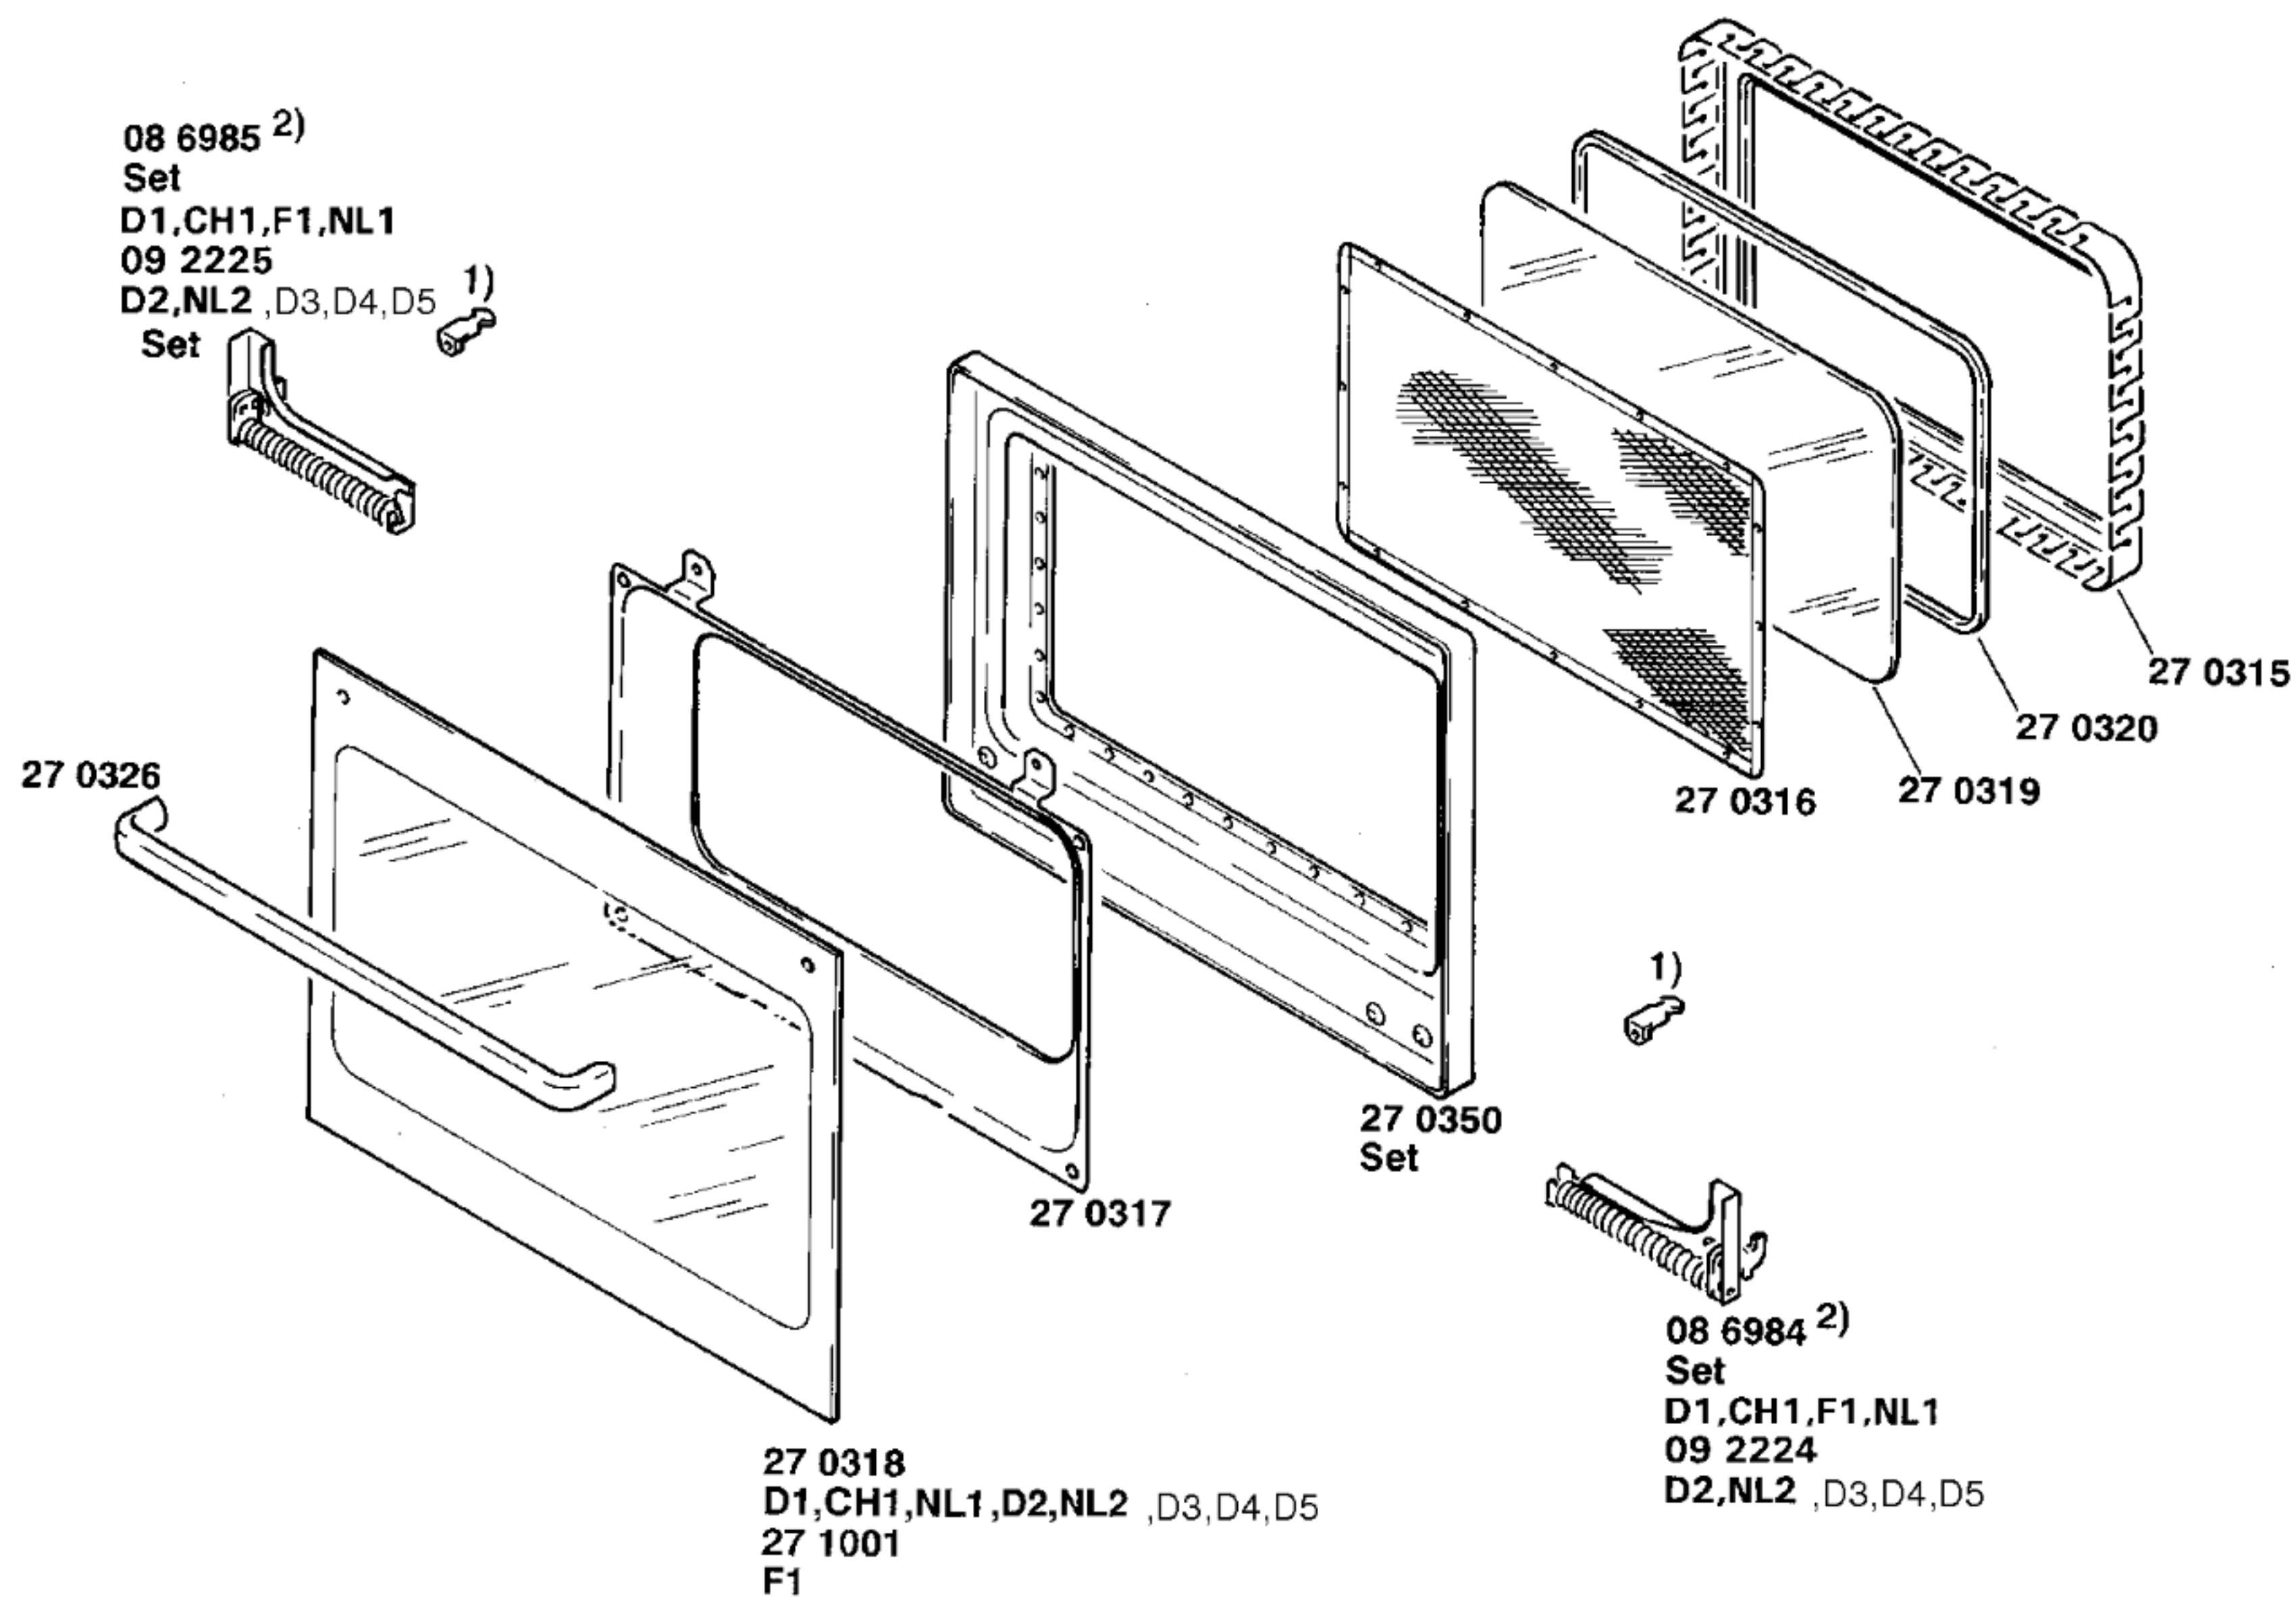


- 1) 03 0671
- 2) 03 0813
 Arretierstift

HF73020/01-D1, weiss
 HF73020/02-D2, weiss
 HF73220/01-D3, weiss
 HF73020NL/01-NL1, weiss

HF73020NL/02-NL2, weiss
 HF73020CH/01-CH1, weiss
 HF73020FF/01,-F1, weiss
 HF73220/02-D4, weiss

HF73220/03-D5, weiss

HERDE
 Mikrowellenherde

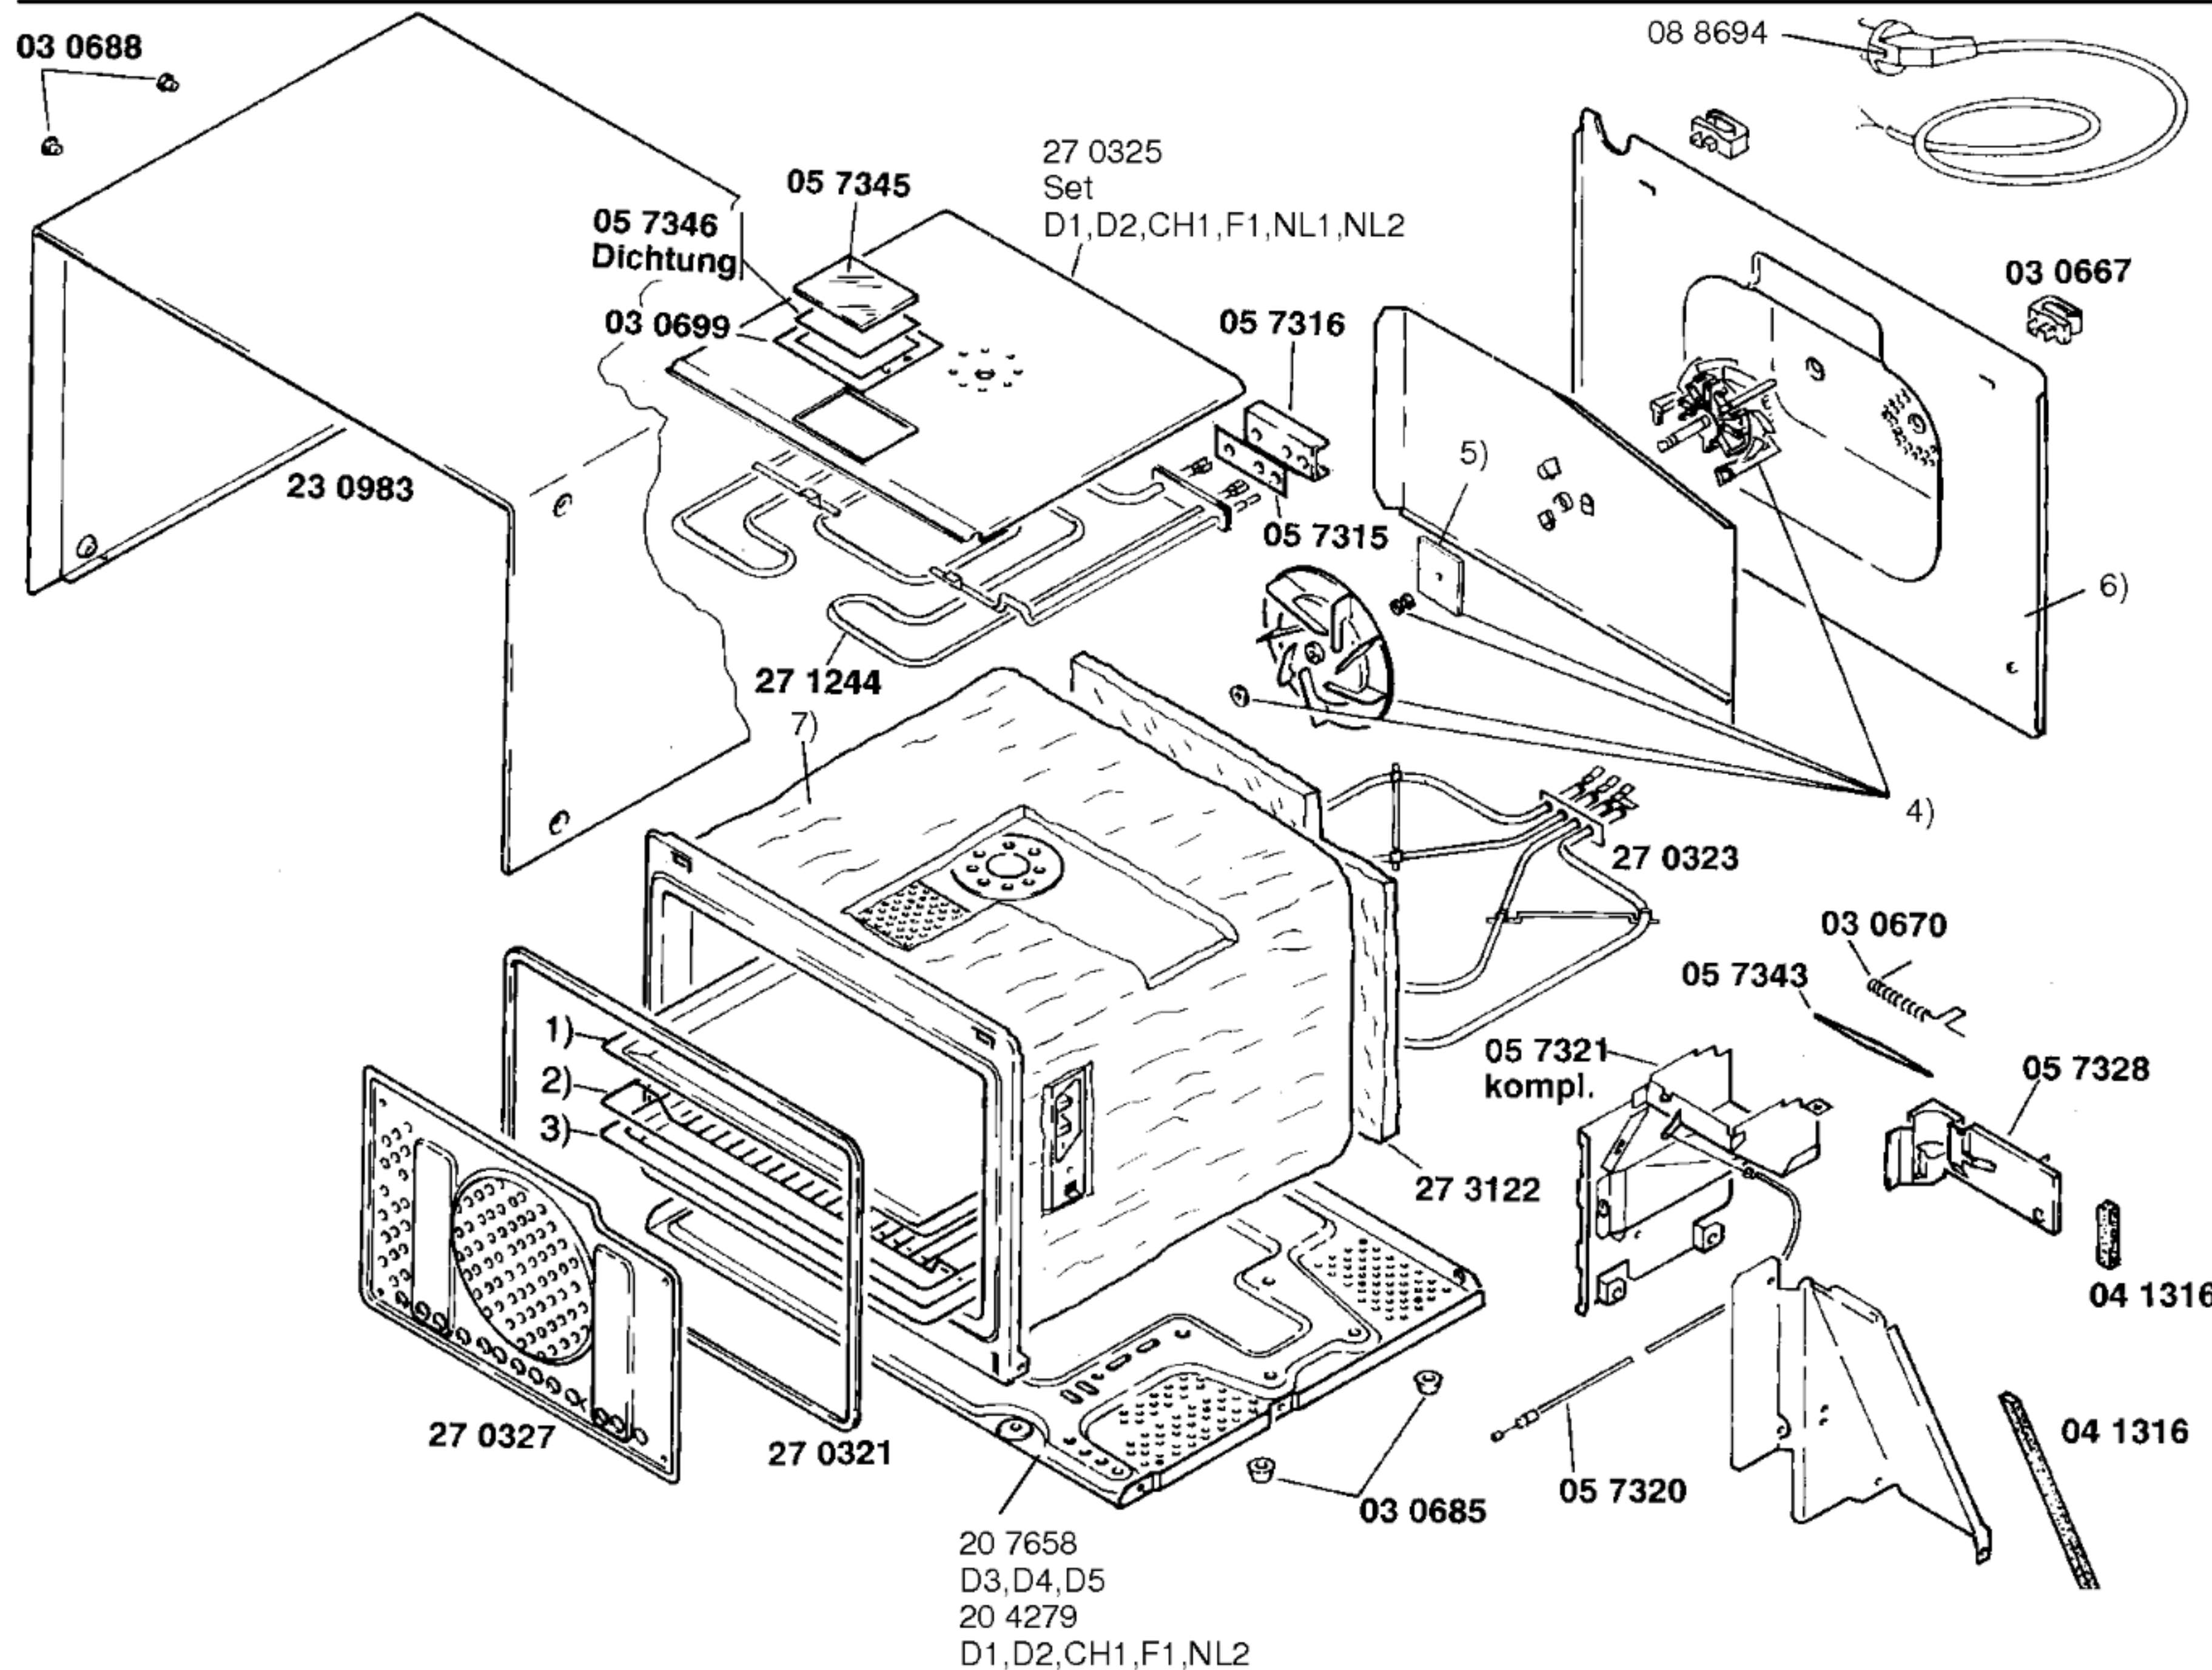

- 1) 11 4538 Backblech
- 2) 11 4539
- 3) 27 3844 Universalpfanne
- 4) kompl. 08 8518 D1,D2,D3,NL1,NL2, CH1,F1 09 2677 D4,D5
- 5) 03 2778 D1,D2,D3,NL1,NL2, CH1,F1
- 6) 20 4280 D1,D2,CH1,F1, NL1,NL2 20 7659 D3 20 7701 D4,D5
- 7) Set 23 1101 D1,D2,D3,NL1,NL2, CH1,F1 23 2269 D4,D5

HF73020/01-D1, weiss
HF73020/02-D2, weiss
HF73220/01-D3, weiss
HF73020NL/01-NL1, weiss

HF73020NL/02-NL2, weiss
HF73020CH/01-CH1, weiss
HF73020FF/01,-F1, weiss
HF73220/02-D4, weiss

HF73220/03-D5, weiss

HERDE
Mikrowellenherde

