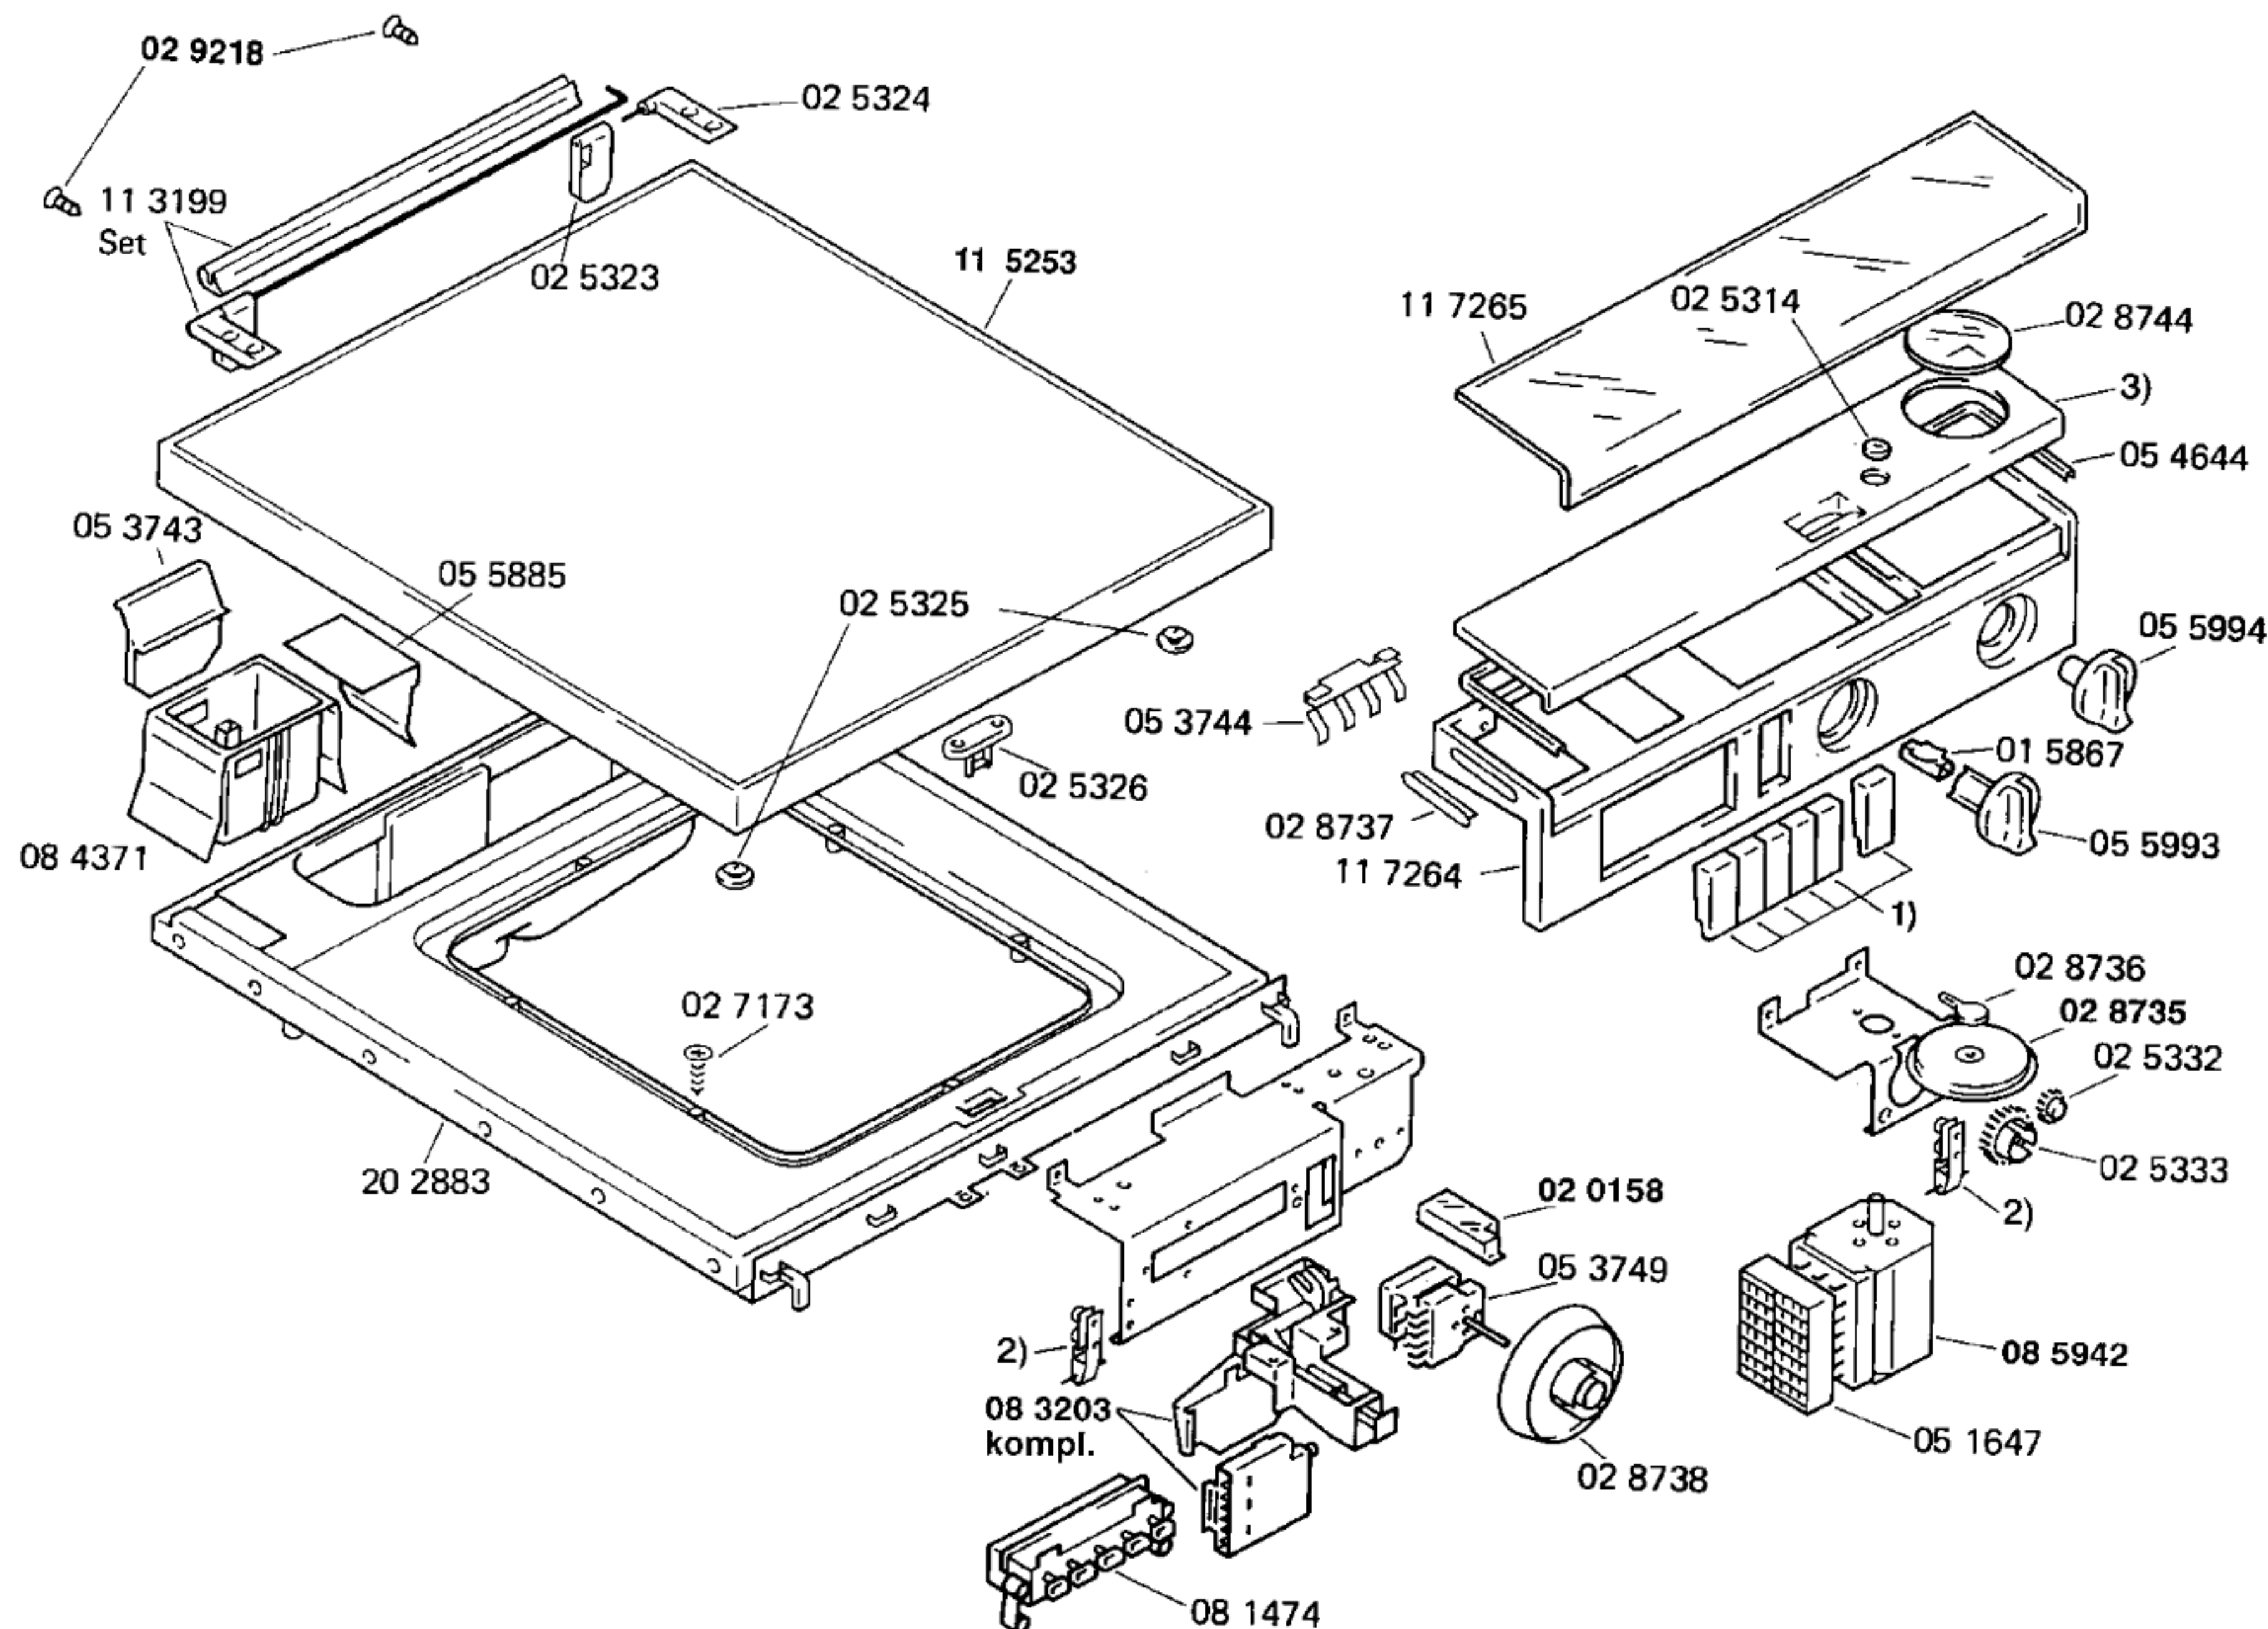


**BOSCH**

V364-WMV364225/03-F1
 V374-WMV3742FF/03-F2
 V364-WMV364225/04-F3
 V374-WMV3742FF/04-F4

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

**Aufstellanweisung**

51 3182
 (D,GB,F,I,NL,E)

Gebrauchsanweisung

51 3756
 (F)

Kurzanleitung

51 3786
 (F)


- 1) 02 8739
- 2) 02 5334
- 3) 11 9672
 F1,F3
 27 0308
 F2,F4

**BOSCH**

V364-WMV364225/03-F1
 V374-WMV3742FF/03-F2
 V364-WMV364225/04-F3
 V374-WMV3742FF/04-F4

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

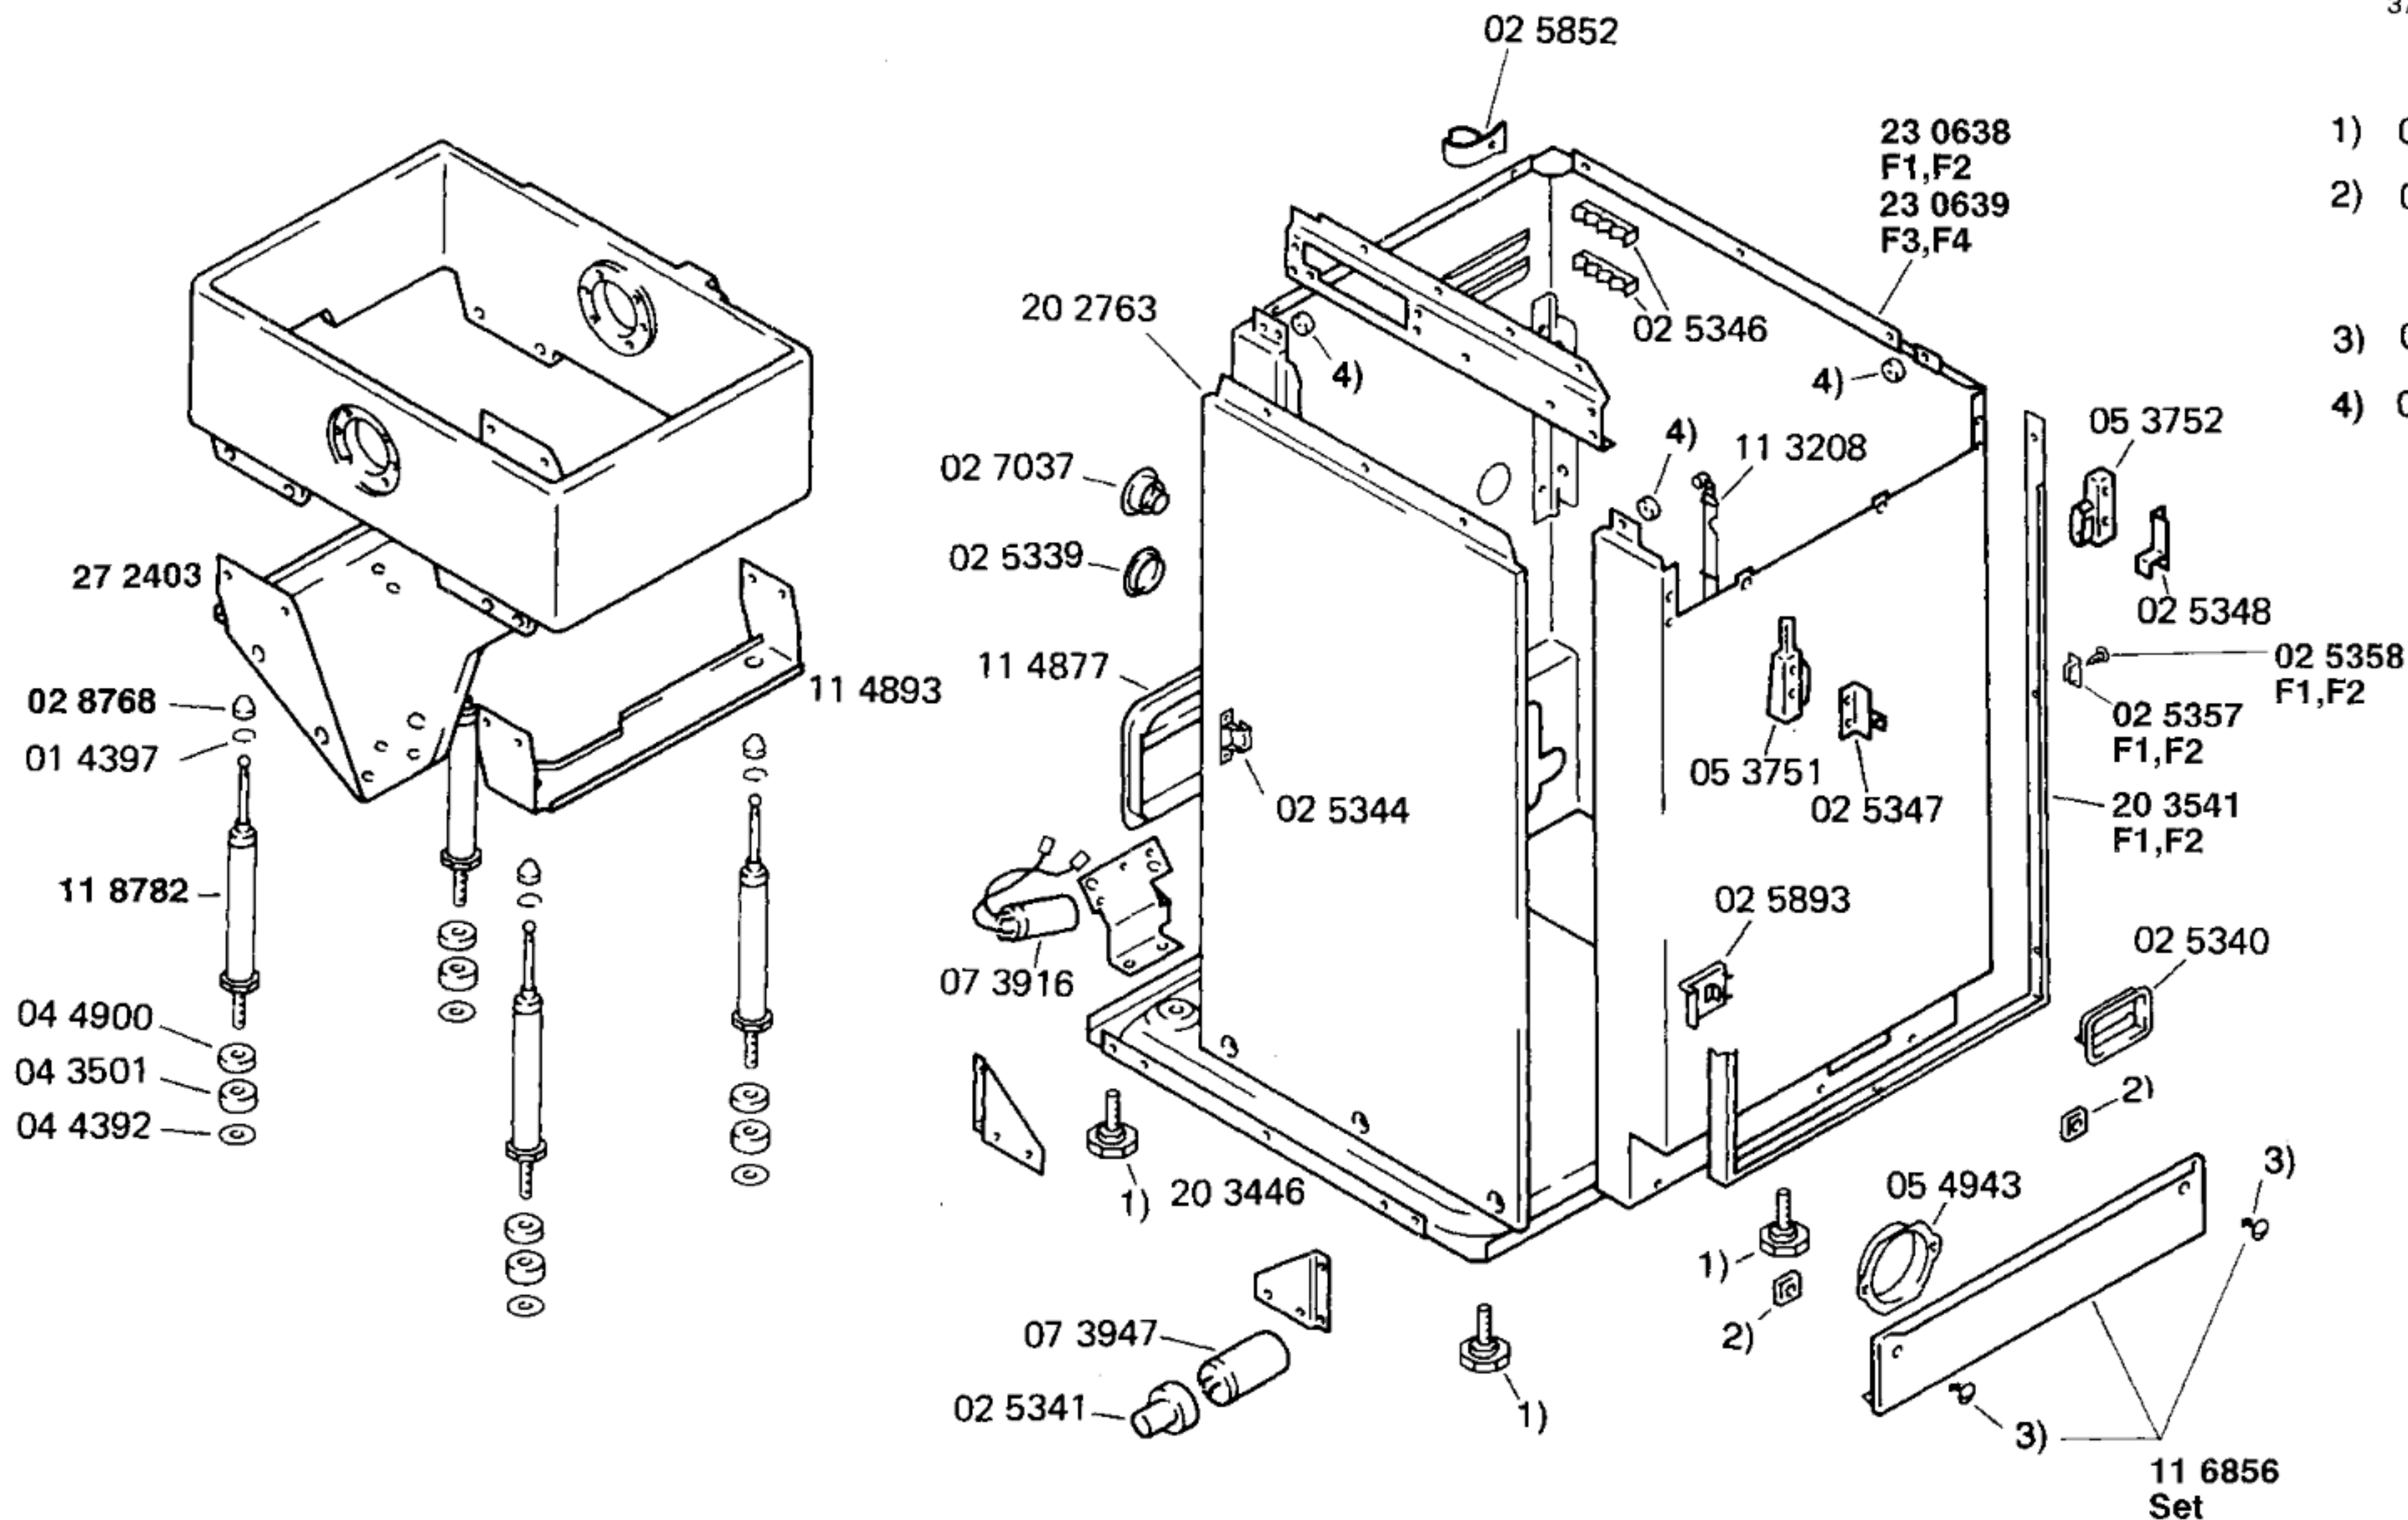




BOSCH

V364-WMV364225/03-F1
V374-WMV3742FF/03-F2
V364-WMV364225/04-F3
V374-WMV3742FF/04-F4

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

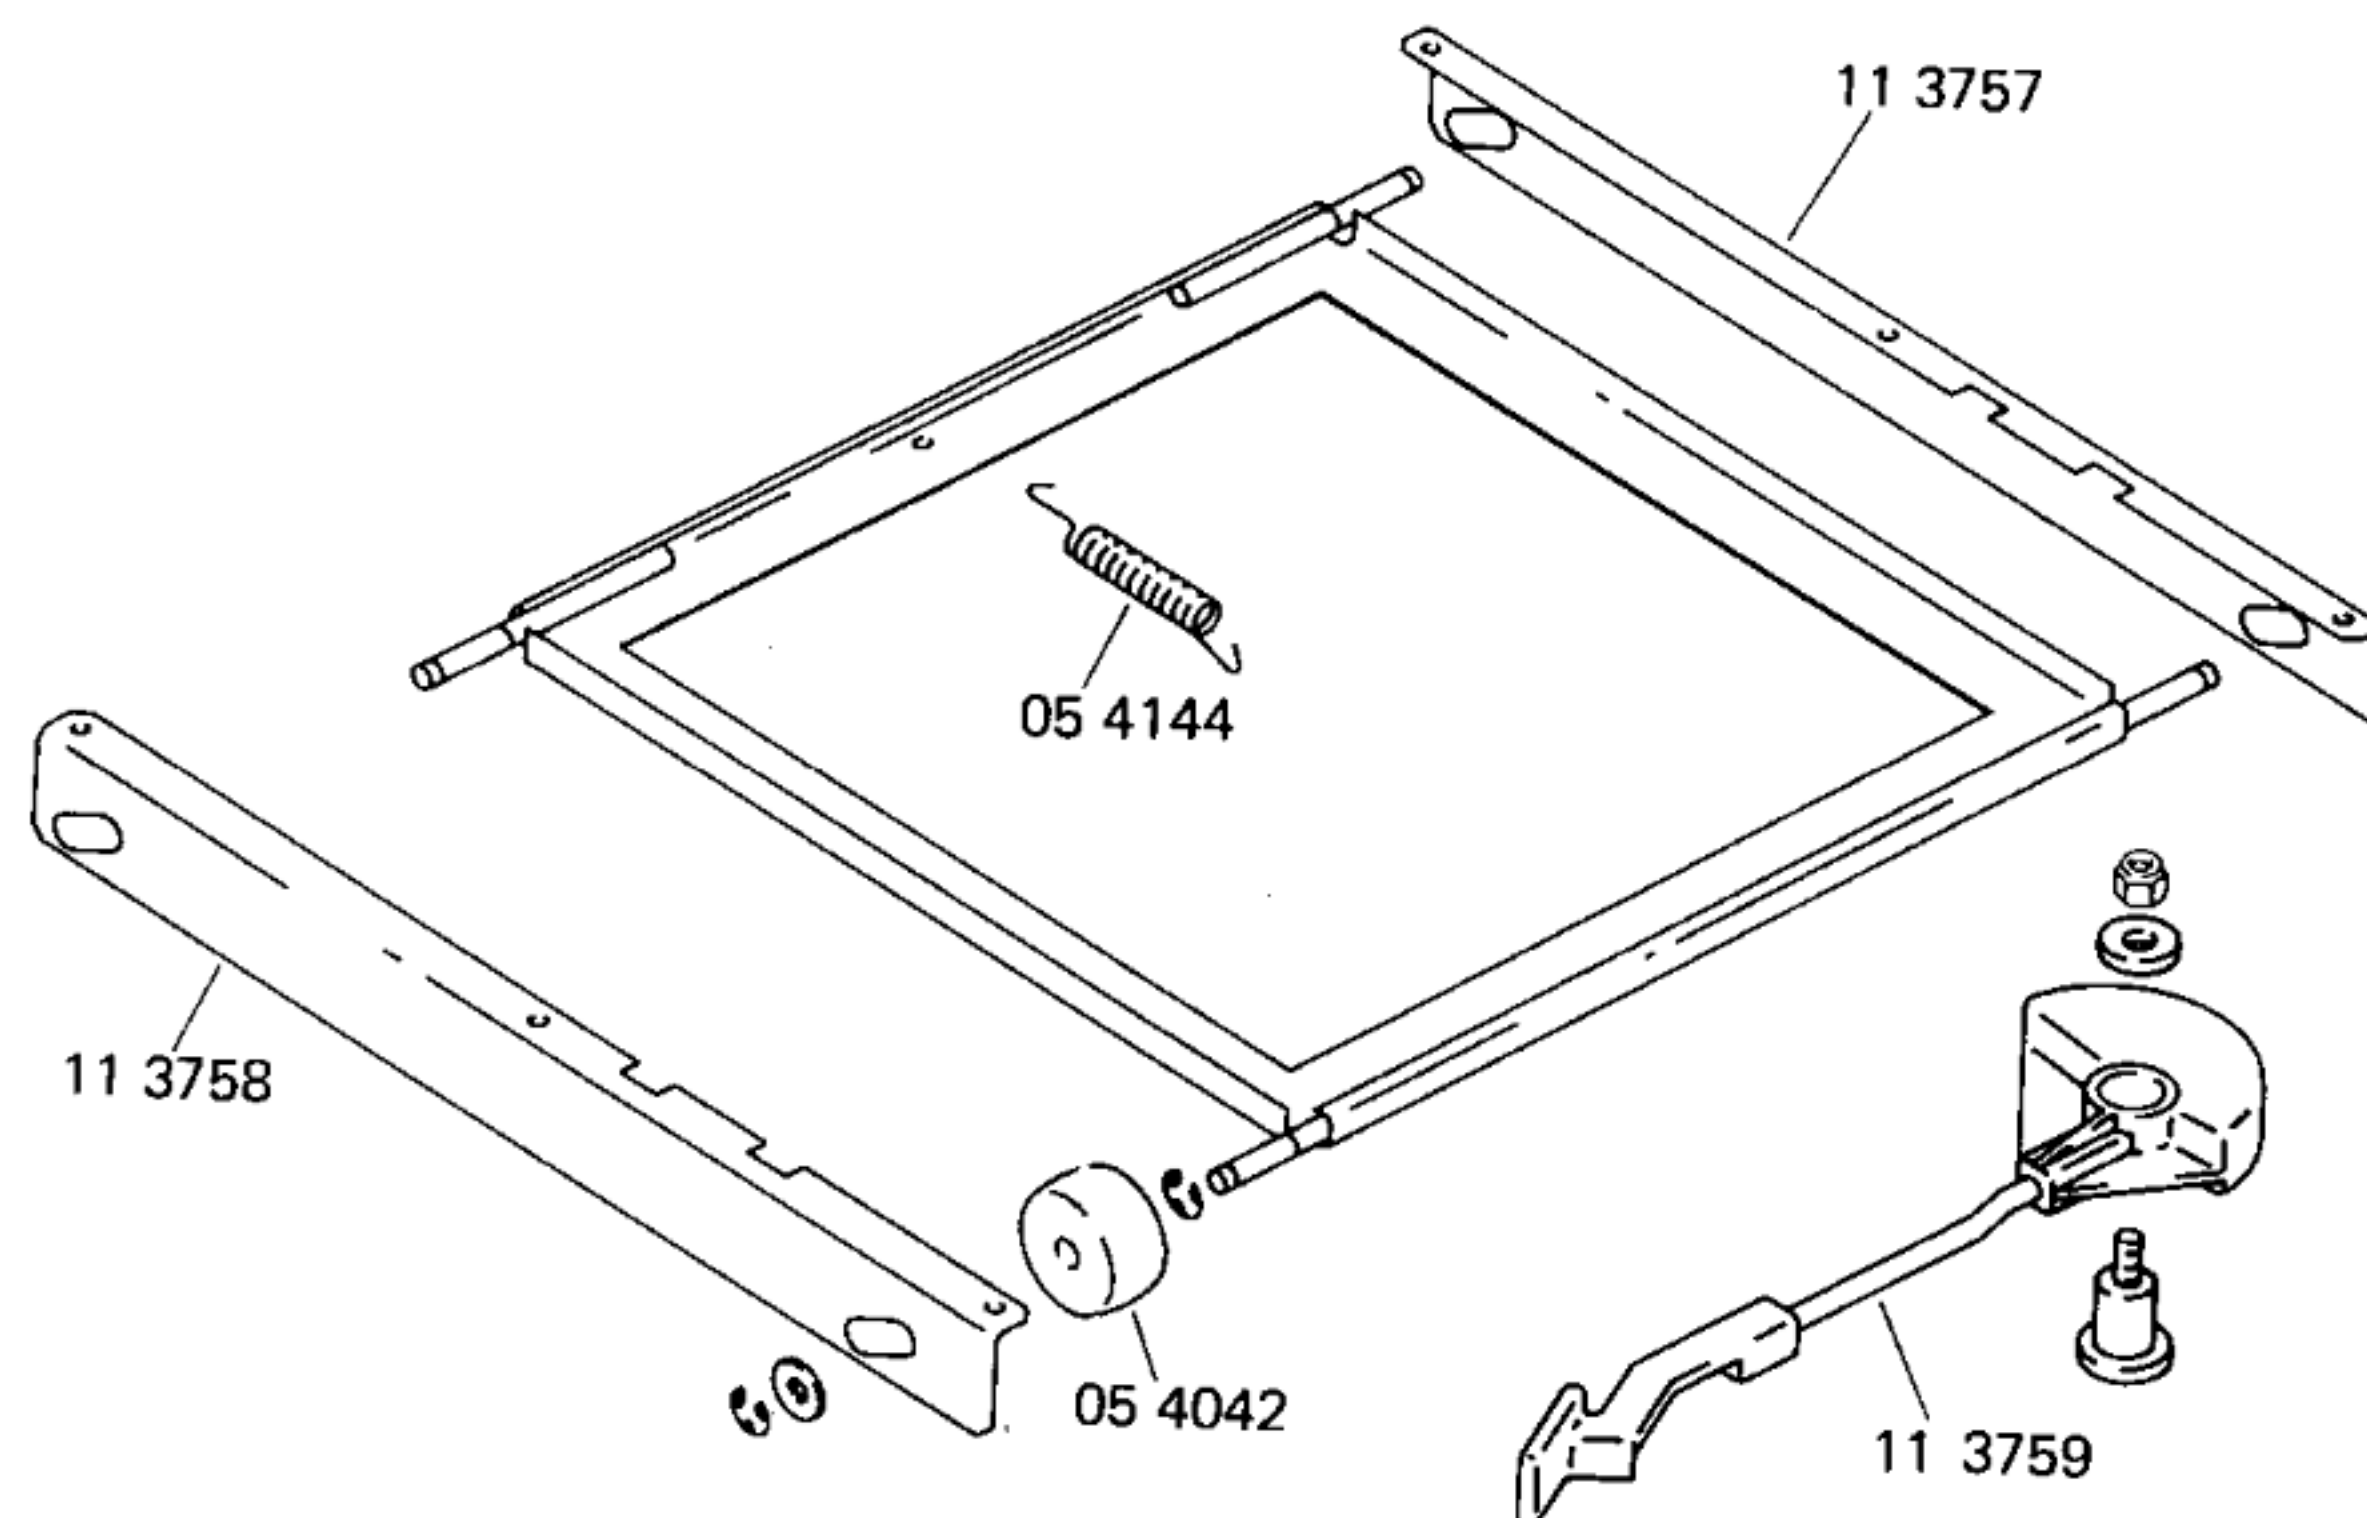


**BOSCH**

V364-WMV364225/03-F1
 V374-WMV3742FF/03-F2
 V364-WMV364225/04-F3
 V374-WMV3742FF/04-F4

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

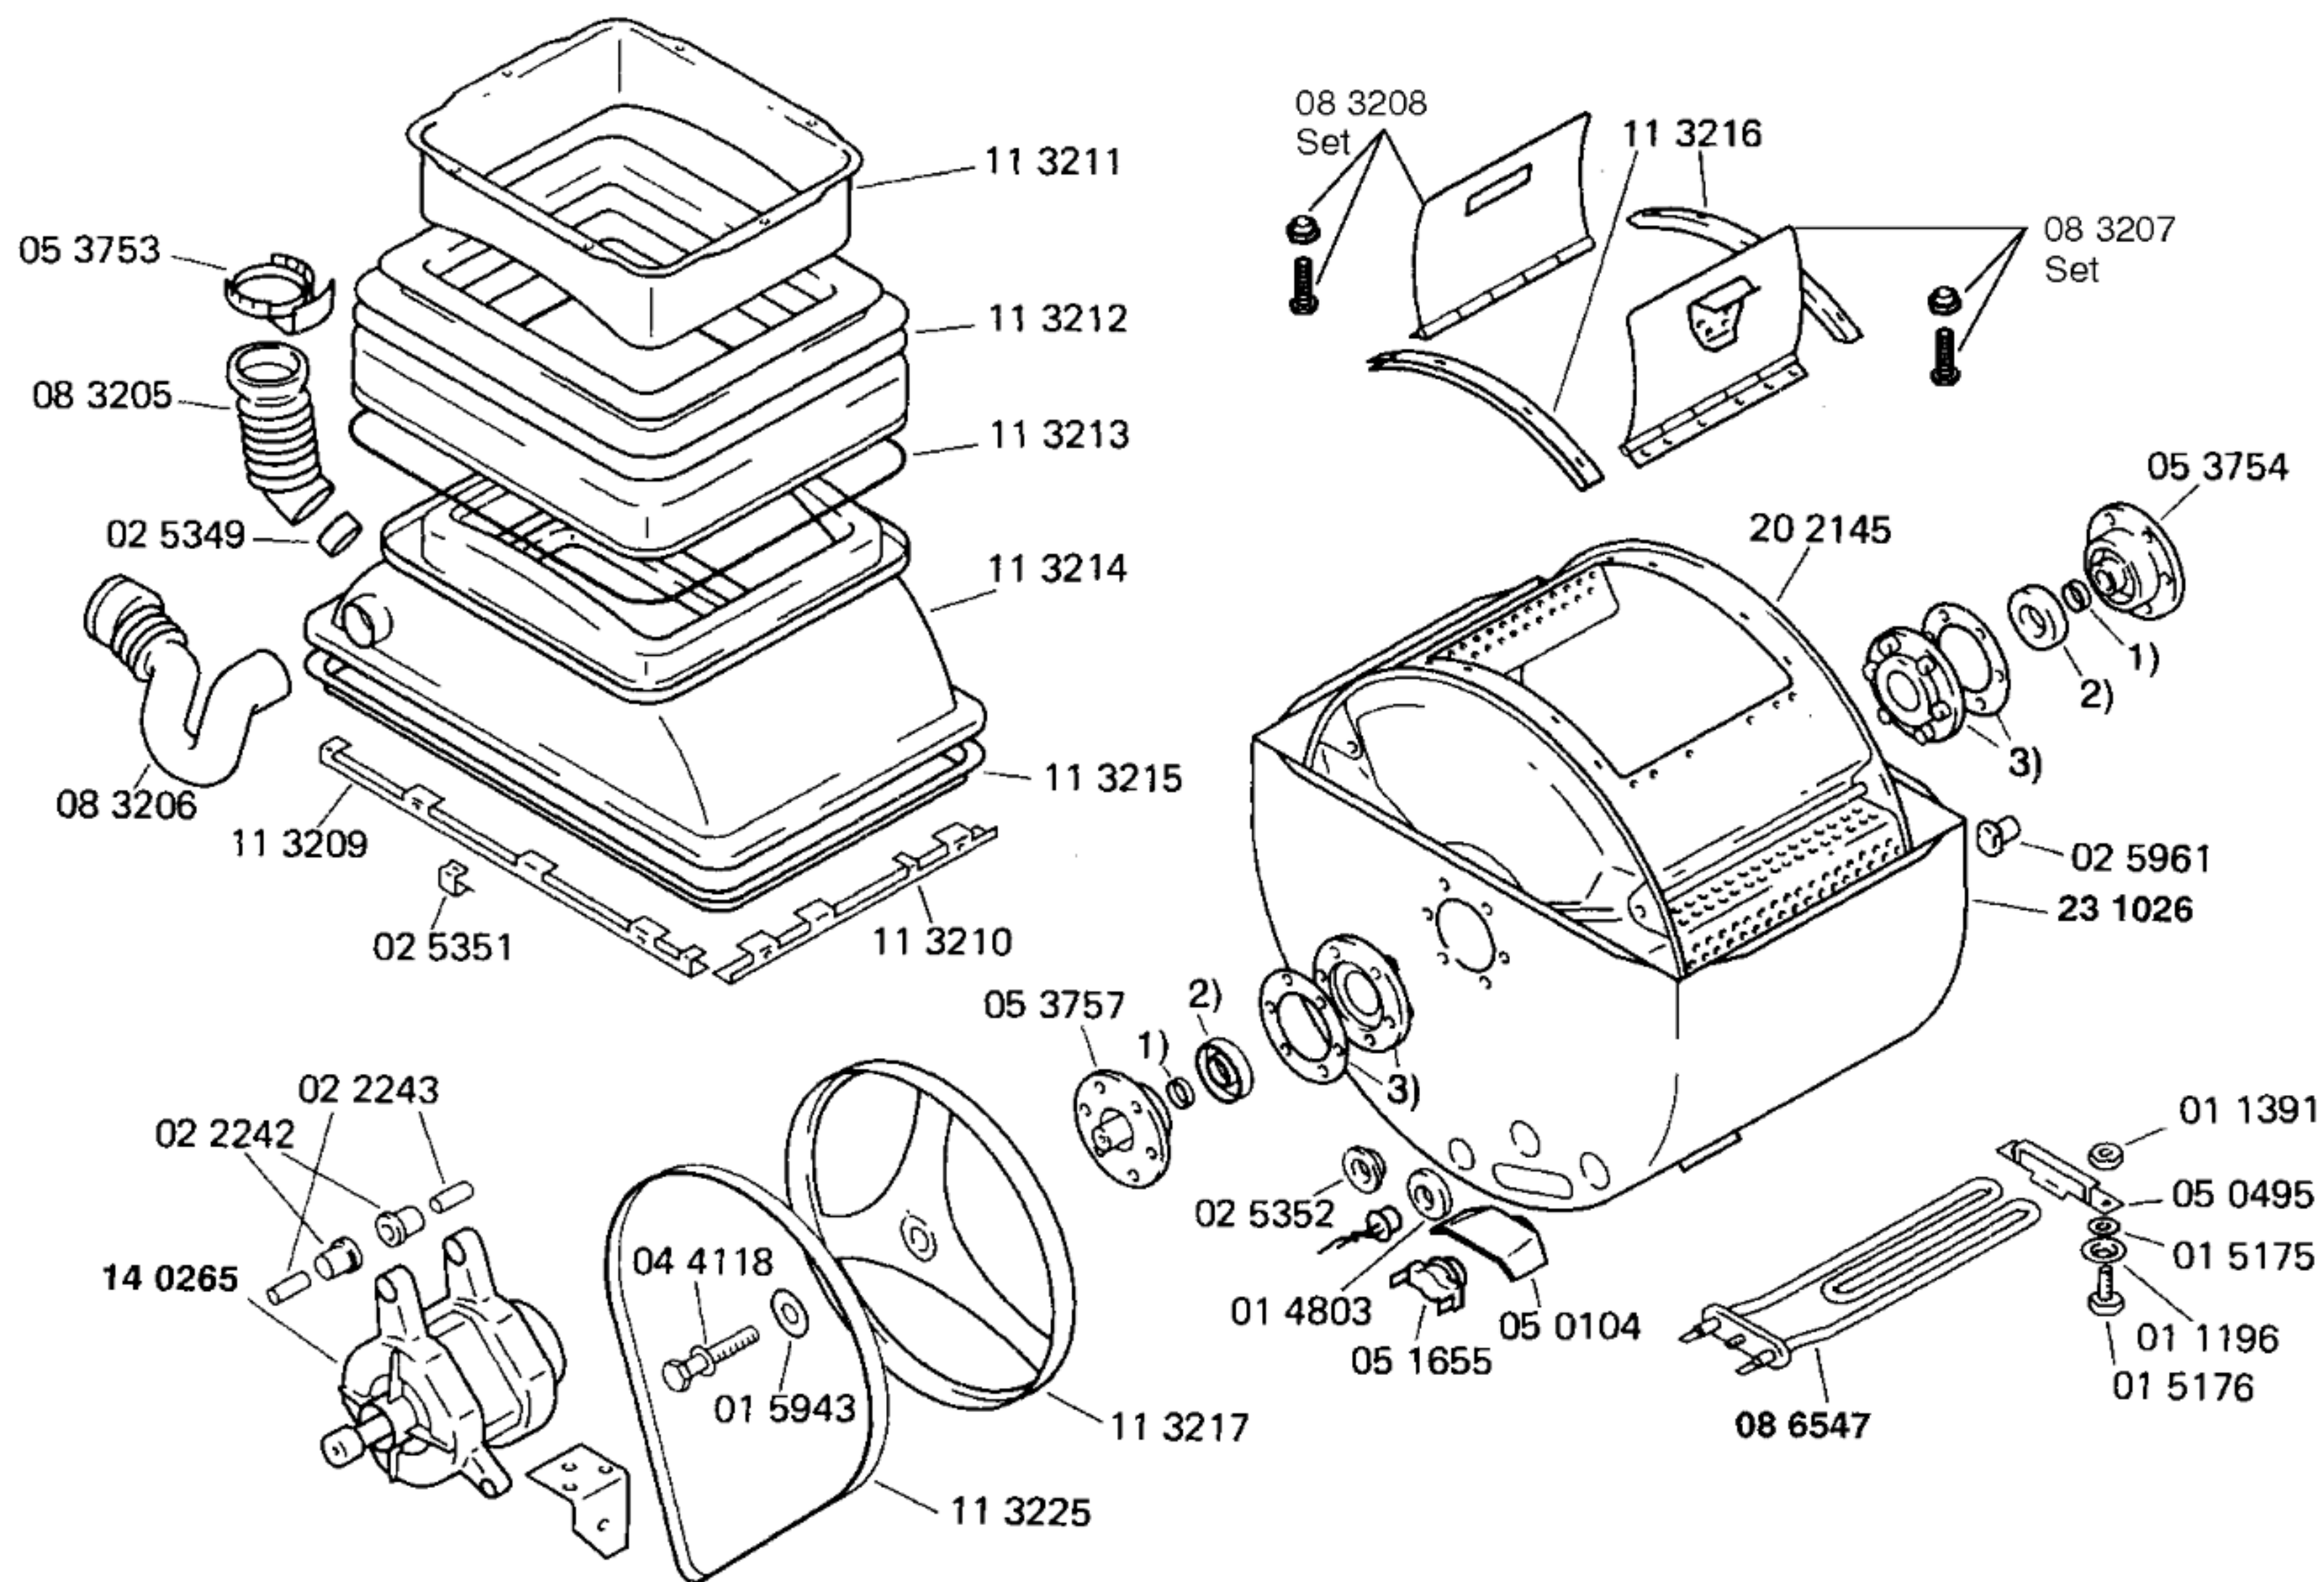

**BOSCH**

V364-WMV364225/03-F1
V374-WMV3742FF/03-F2
V364-WMV364225/04-F3
V374-WMV3742FF/04-F4

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

