


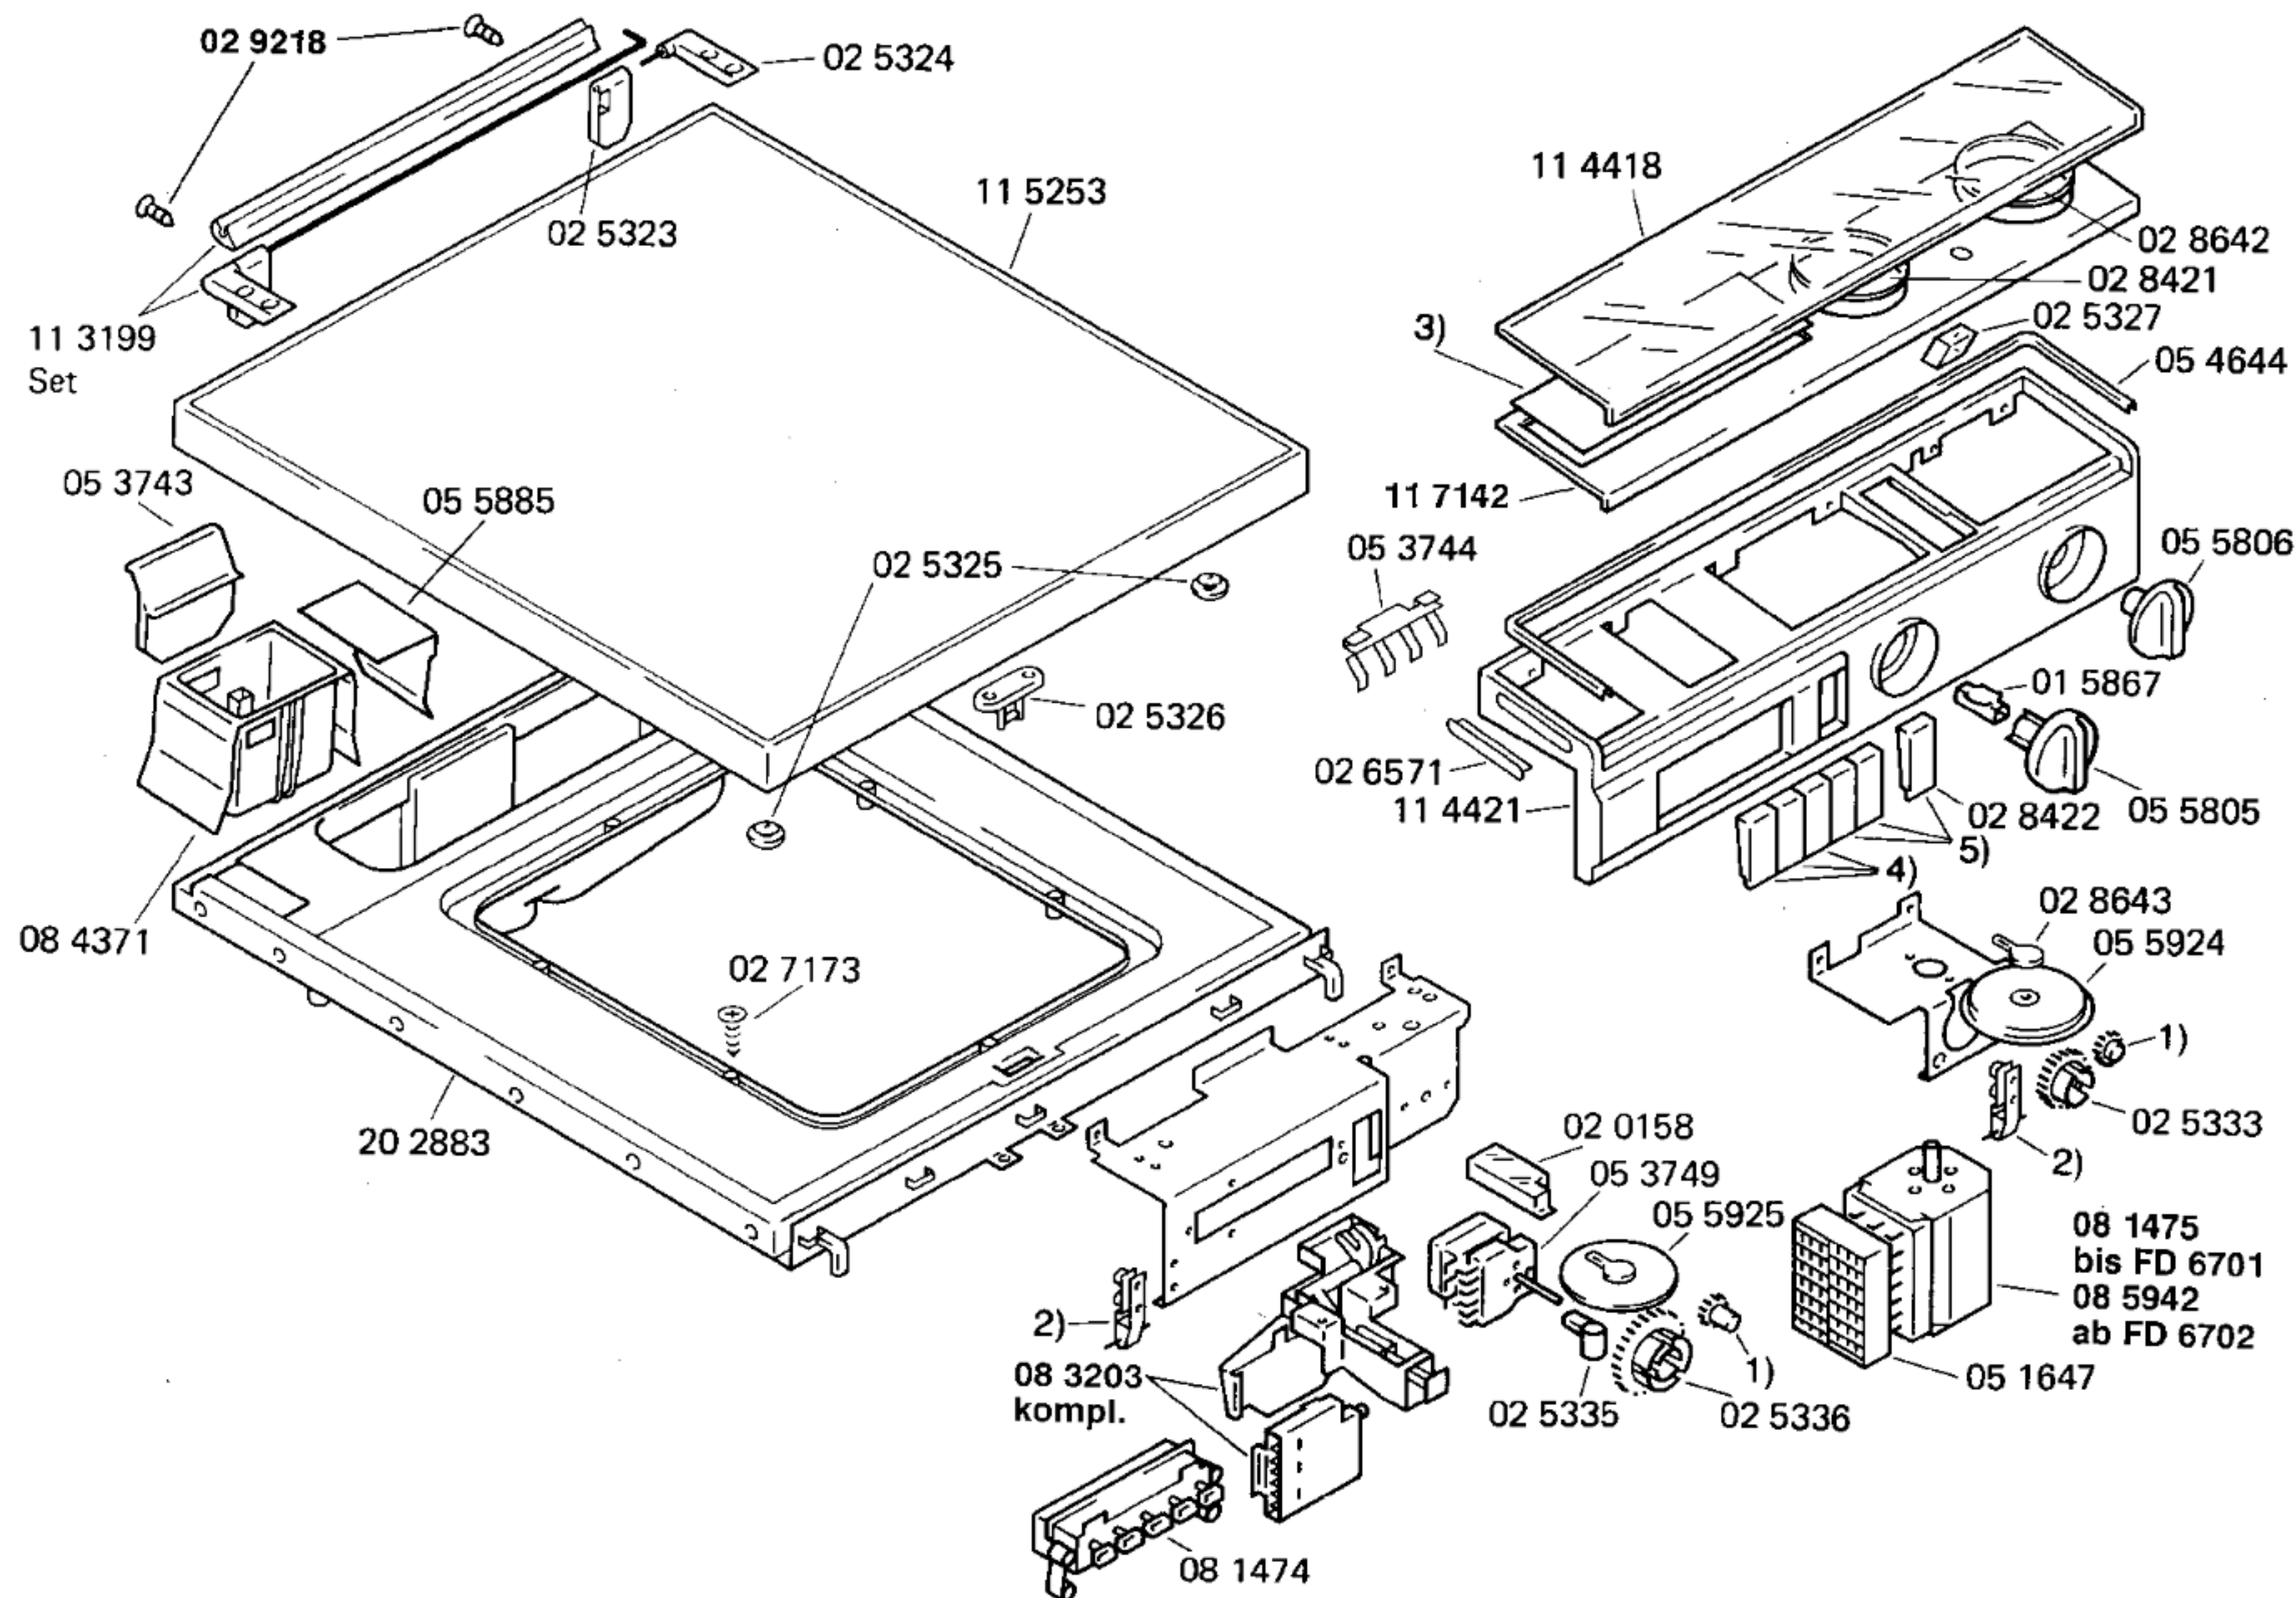

1) 02 5332

2) 02 5334

Aufstellanweisung
 51 1497

(D,GB,F,I,NL)

51 1674

(D,I,S,DK,N,SF)

Gebrauchsanweisung
 51 1491

(D,GB,F,I,NL)

51 1687

(D,I,S,DK,N,SF)

51 1688

(F)

Programmtabelle
 51 1492

(D,GB,F,I,NL)

51 1689

(D,I,S,DK,N,SF)

3) 08 5315

(D, Symbole)

08 5311

(S,N)

08 5313

(SF,DK)

08 5314

(F,NL)

08 5312


(I,GB)


08 5317


(YU,GR,TR,E)

4) 02 8640
 Set

5) 02 8639
 Set

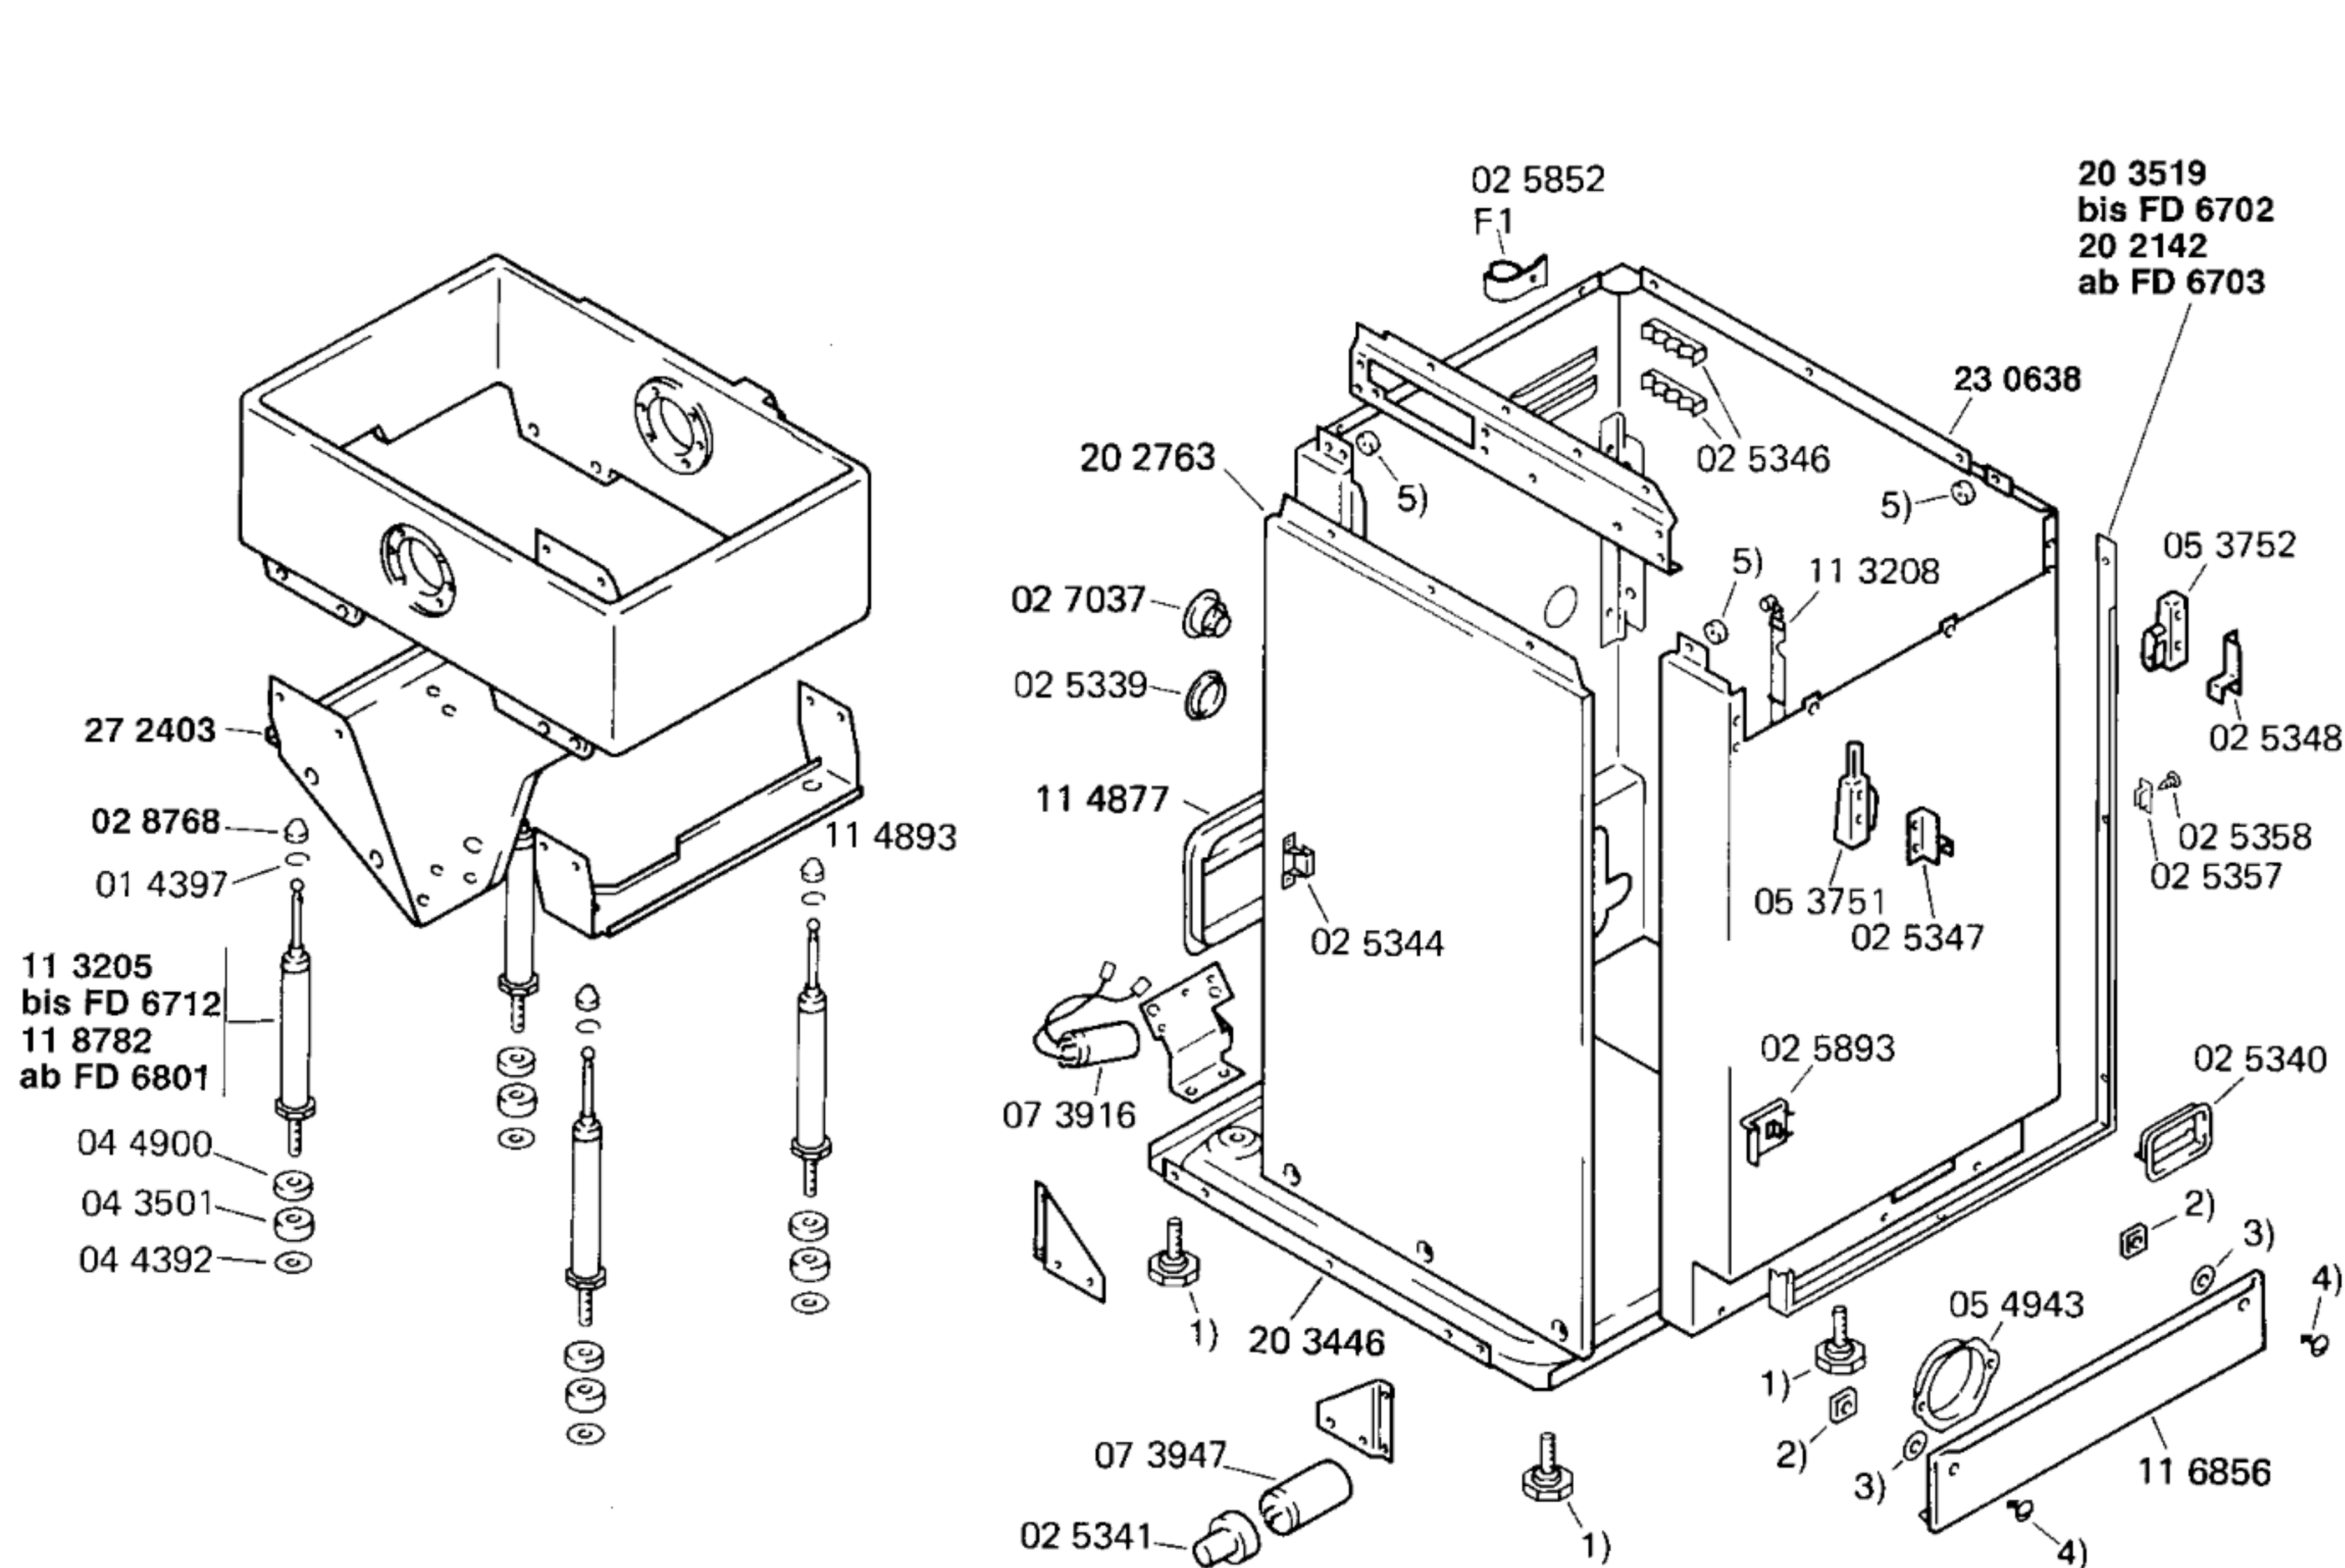

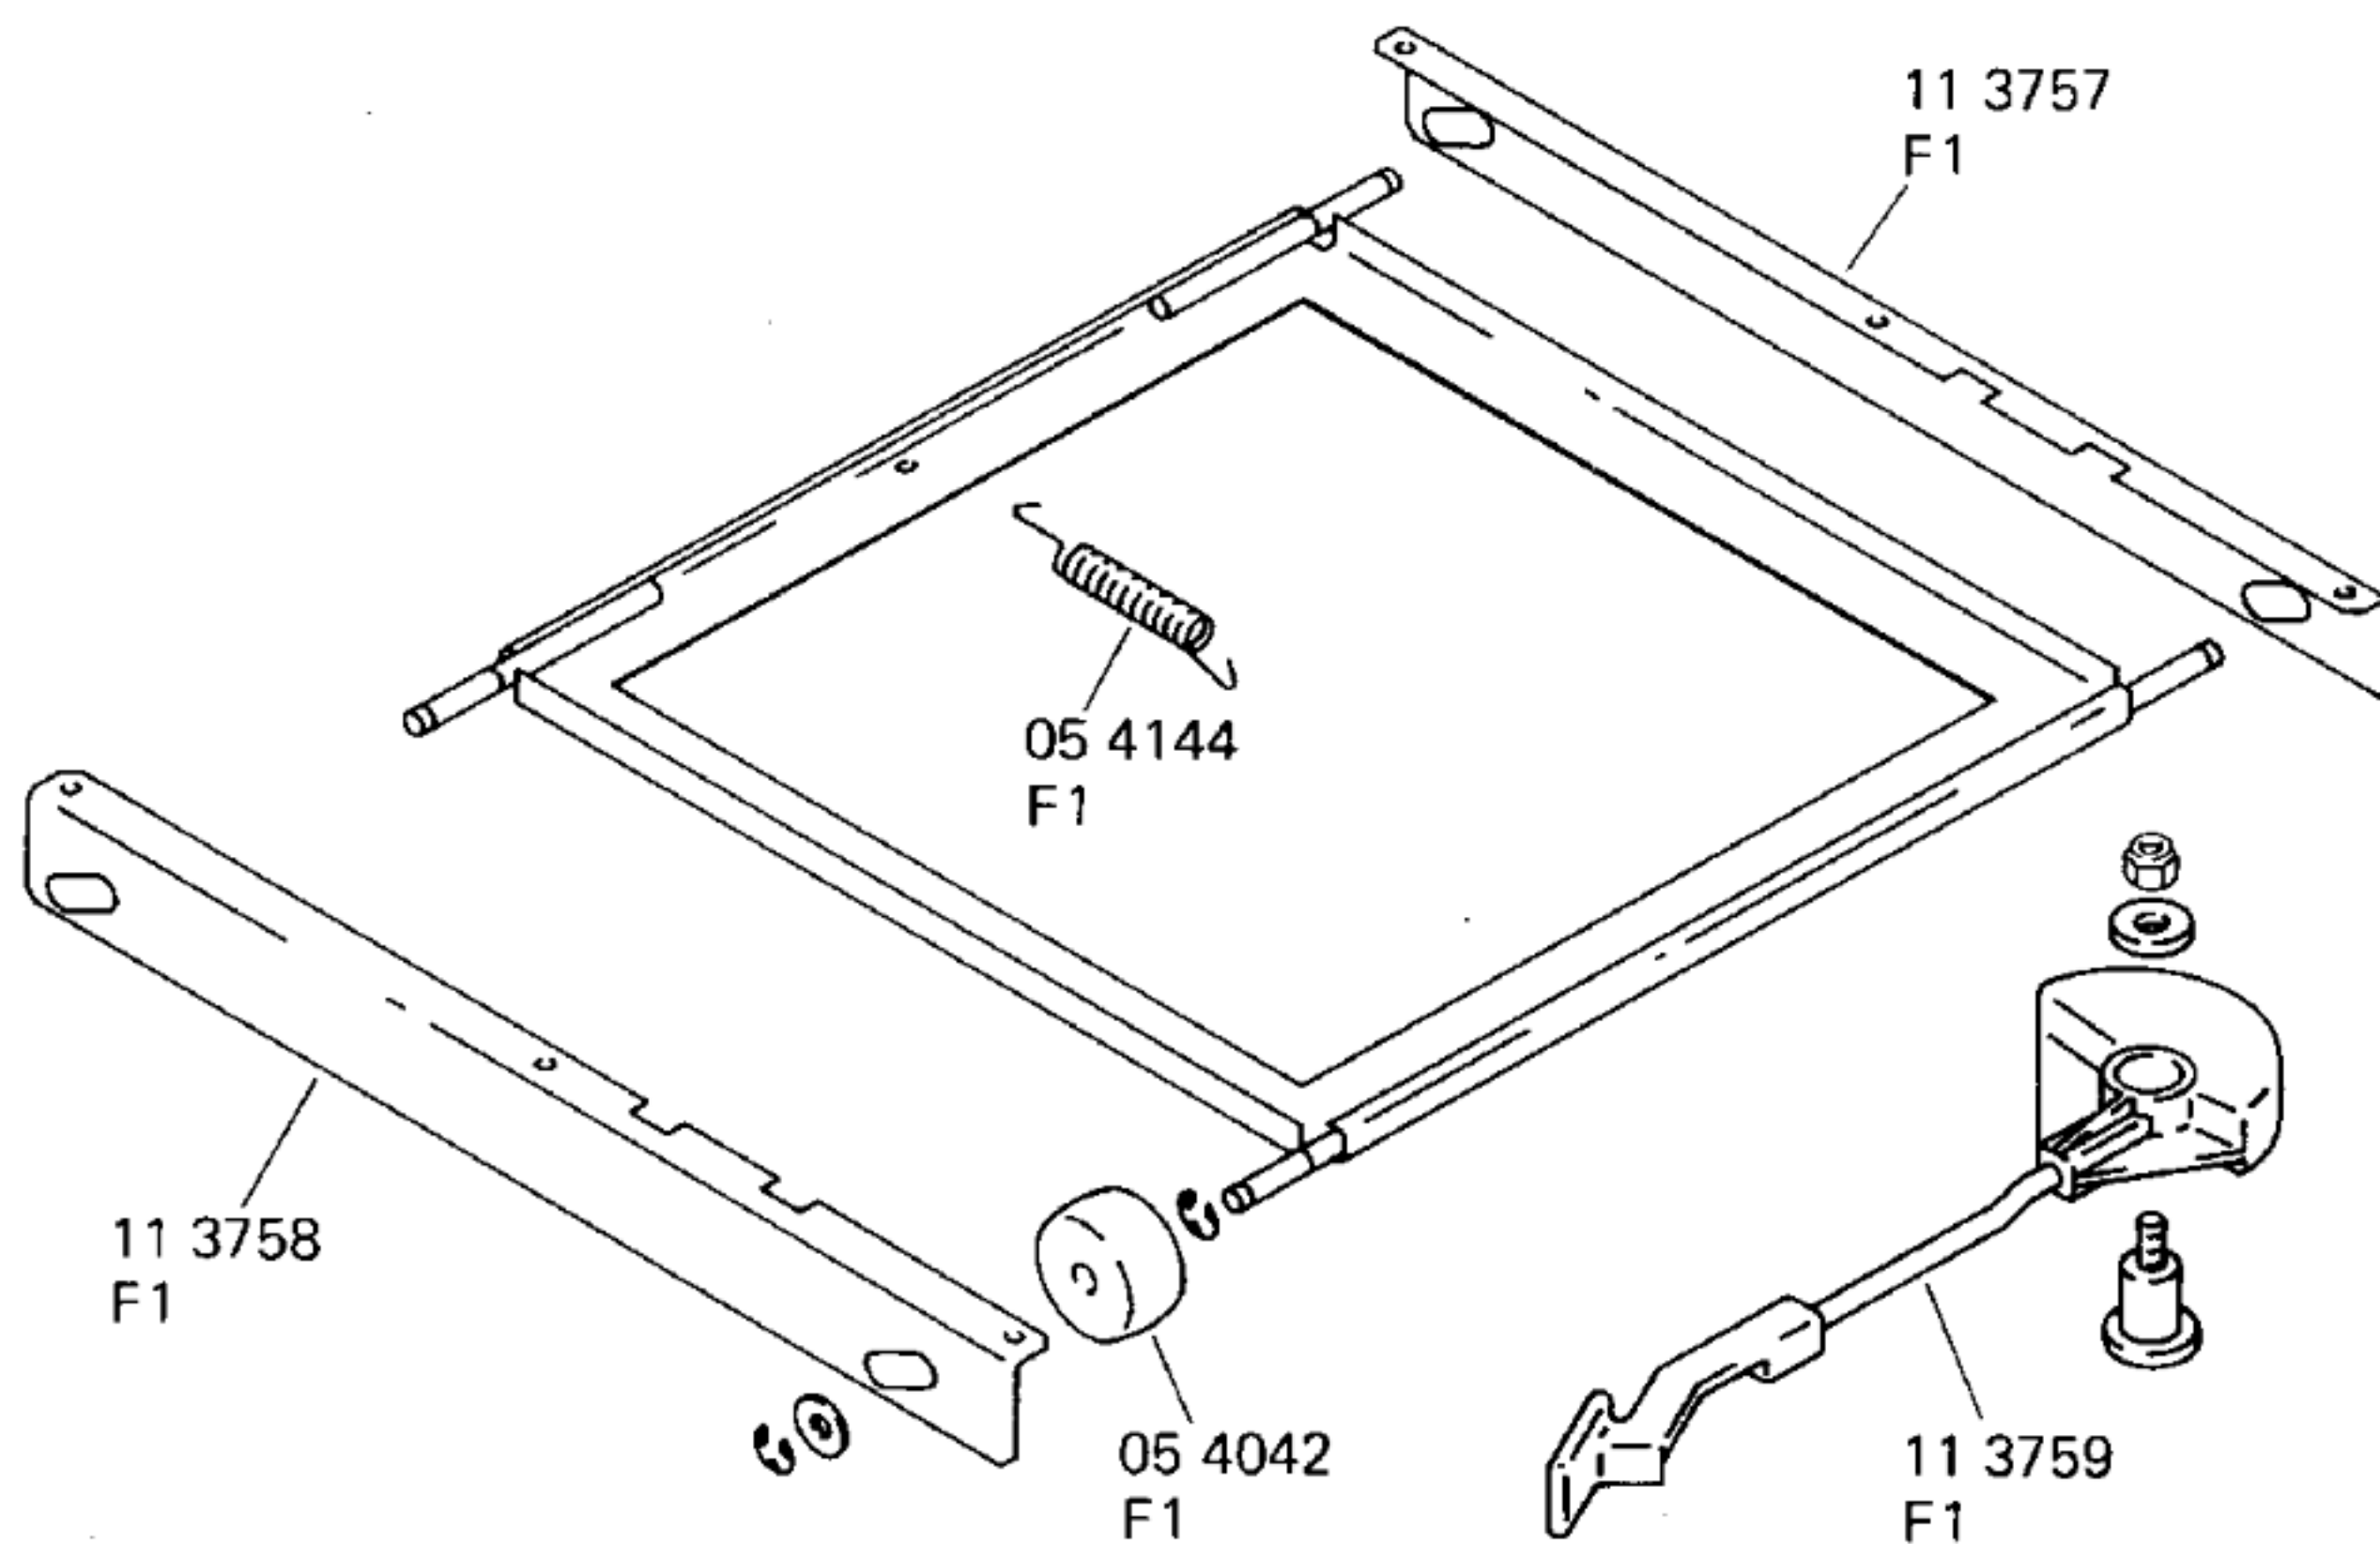

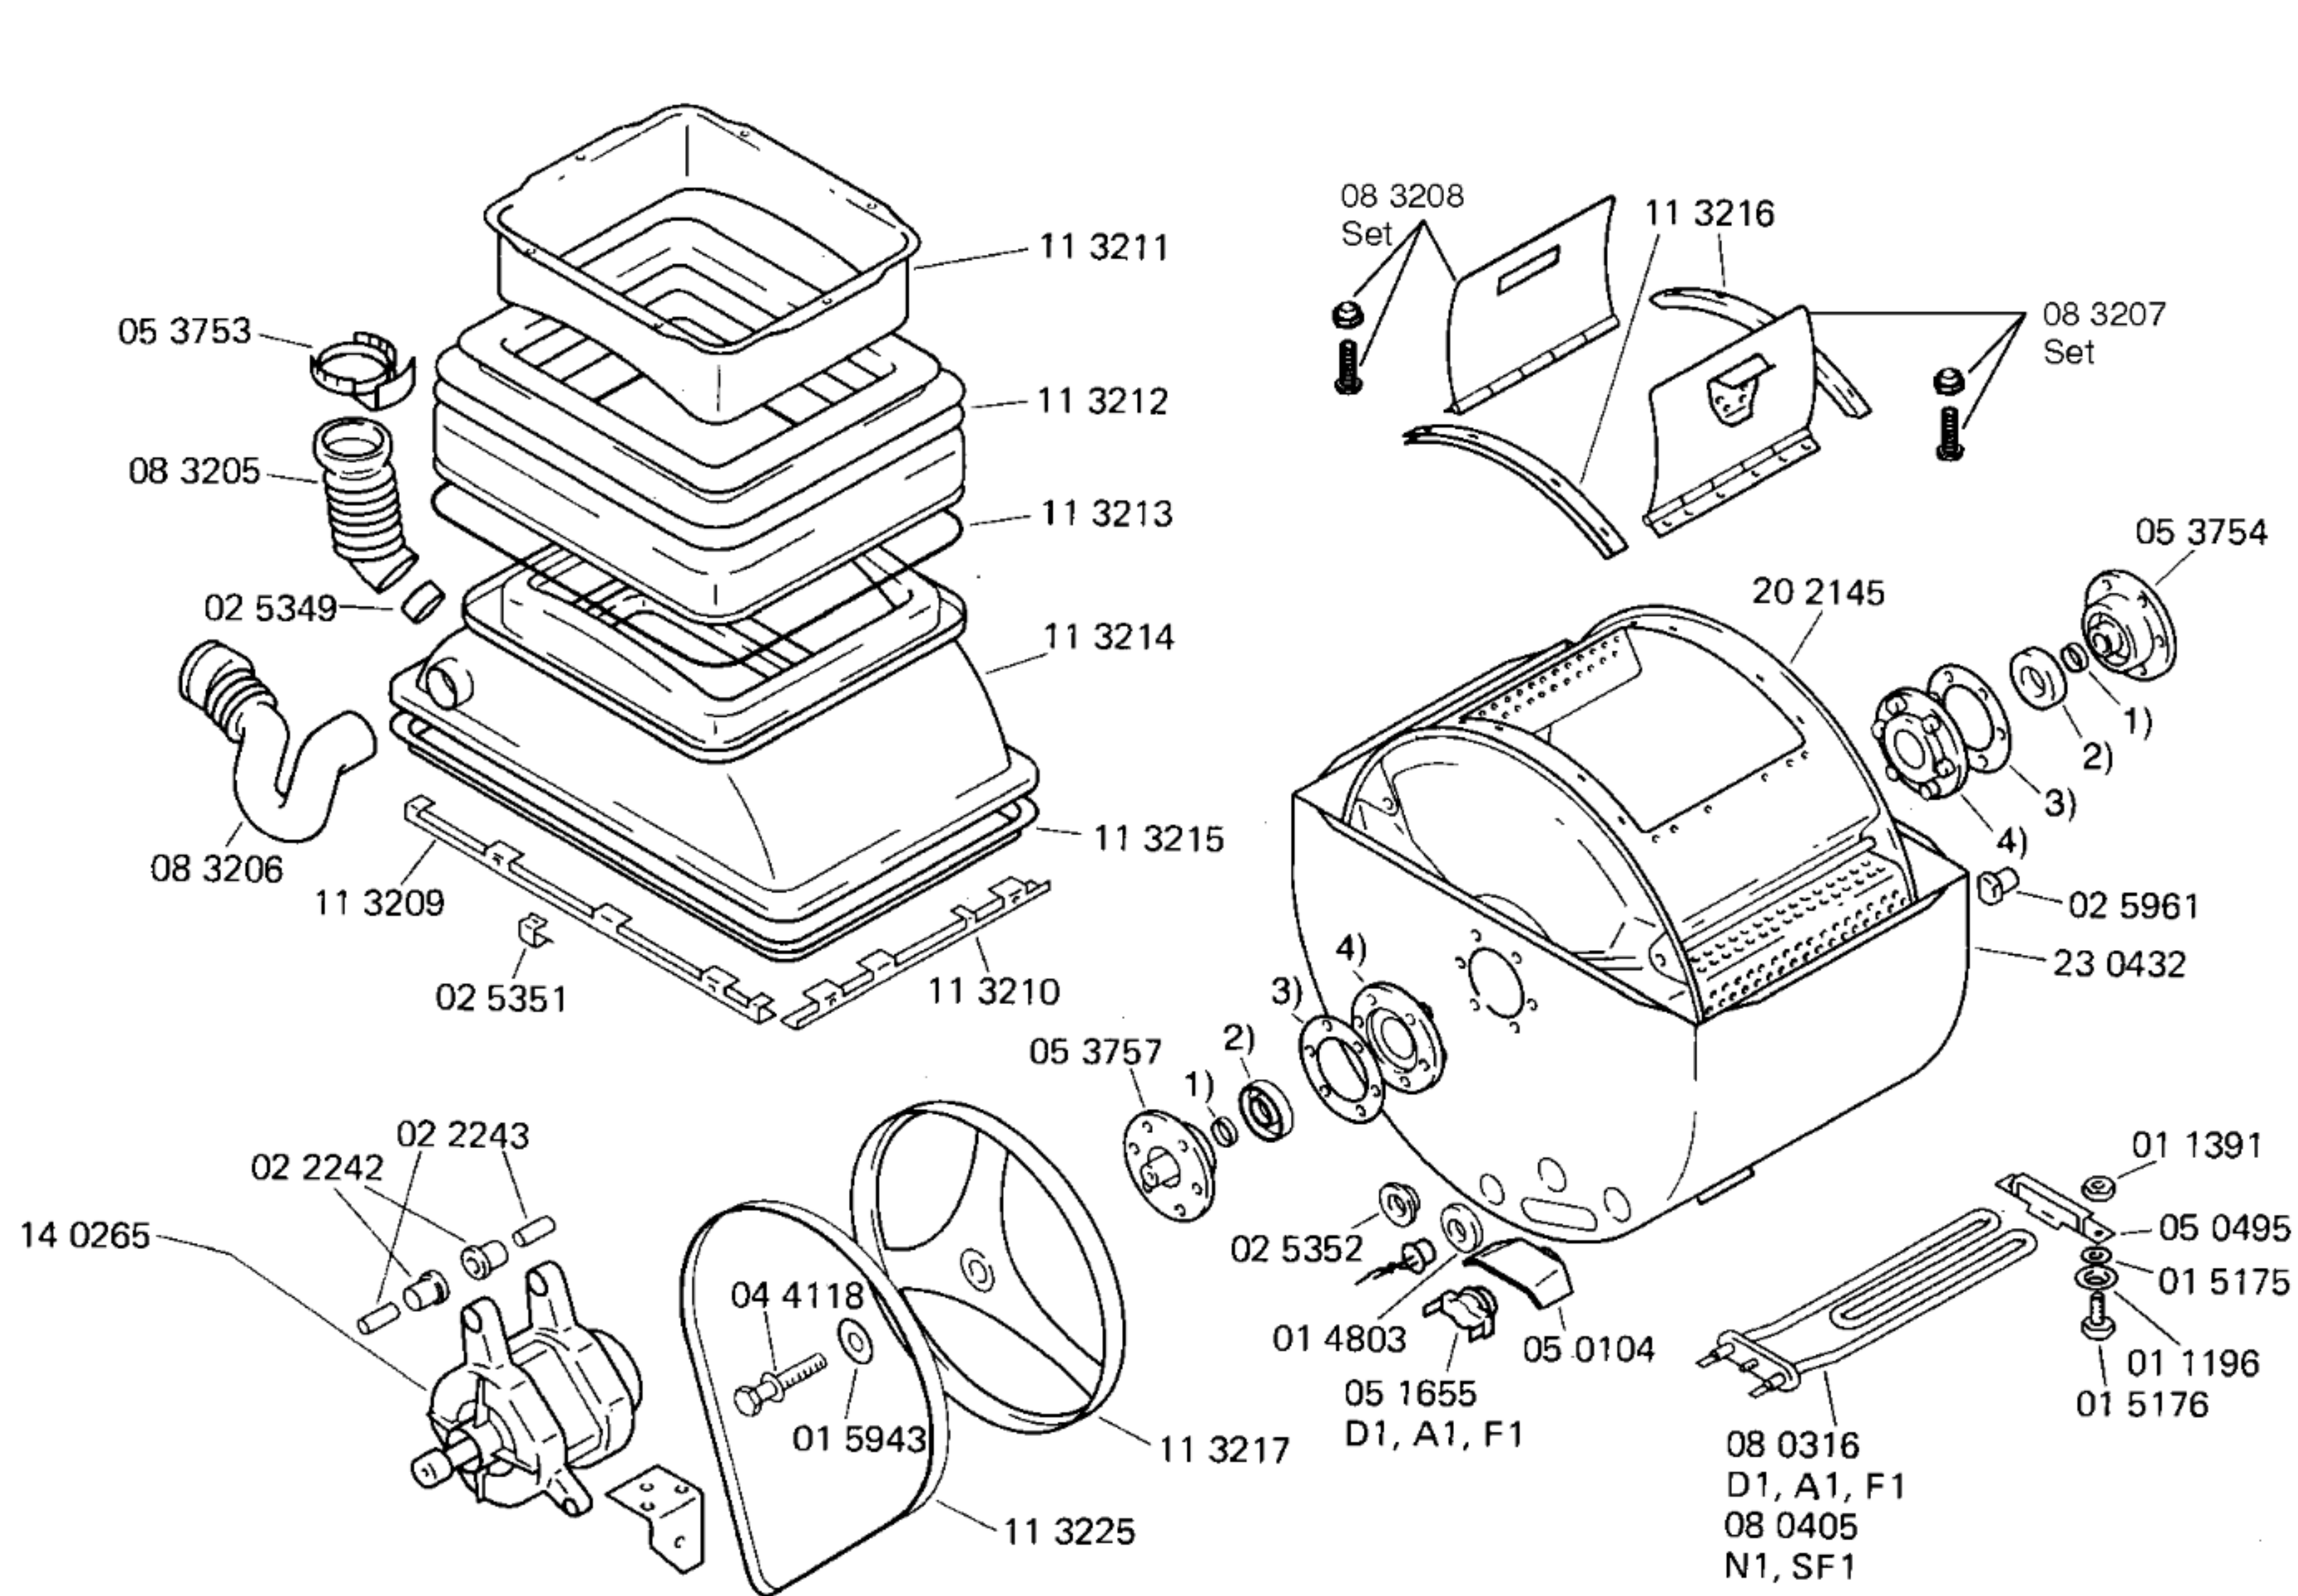

- 1) 04 2309
- 2) 02 5350
- 3) 05 3755
- 4) 05 3756

