 


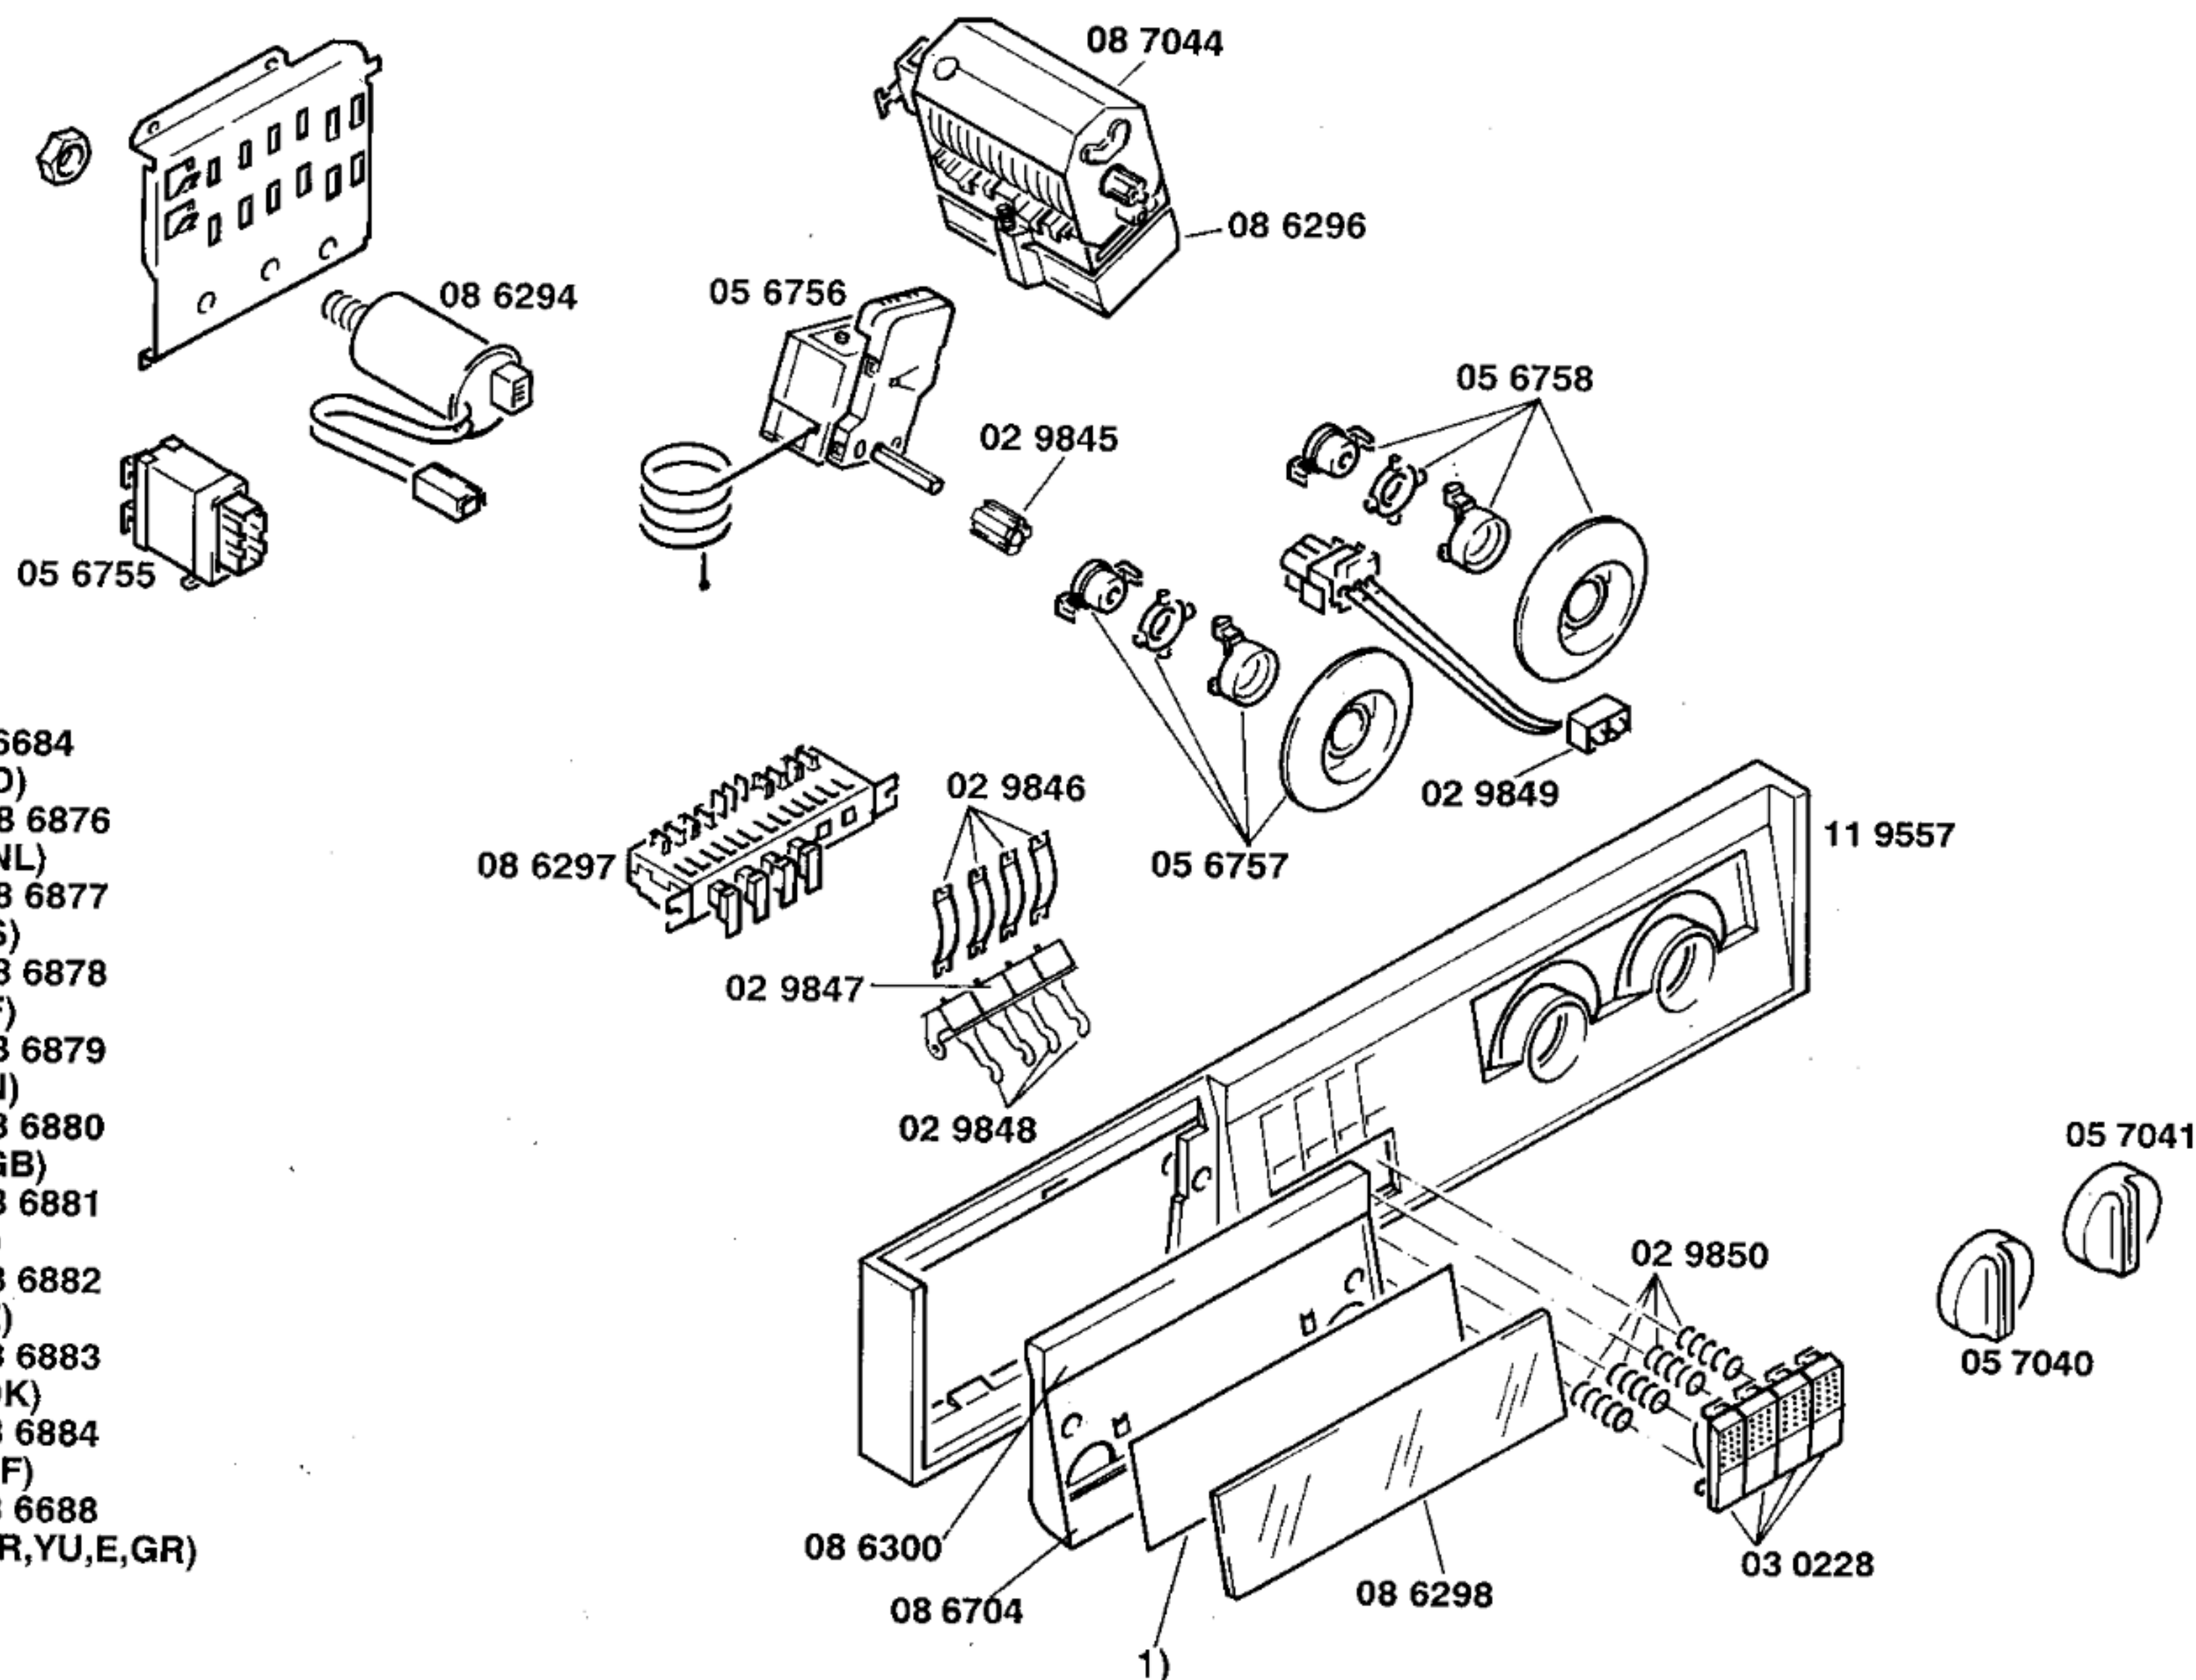

Gebrauchsanweisungen:

51 3549
(D,I,S,N,SF)

51 3550
(S,DK)

51 3551
(NL,F,E,GB)

Programmtabellen:

51 3552
(D)

51 3553
(I,S,N,SF)

51 3554
(S,DK)

 
51 3555
(NL,F,E,GB)

 
Aufstellanweisungen:

51 3556
(D,I,S,N,SF)

51 3557
(S,DK)

51 3558
(NL,F,E,GB)

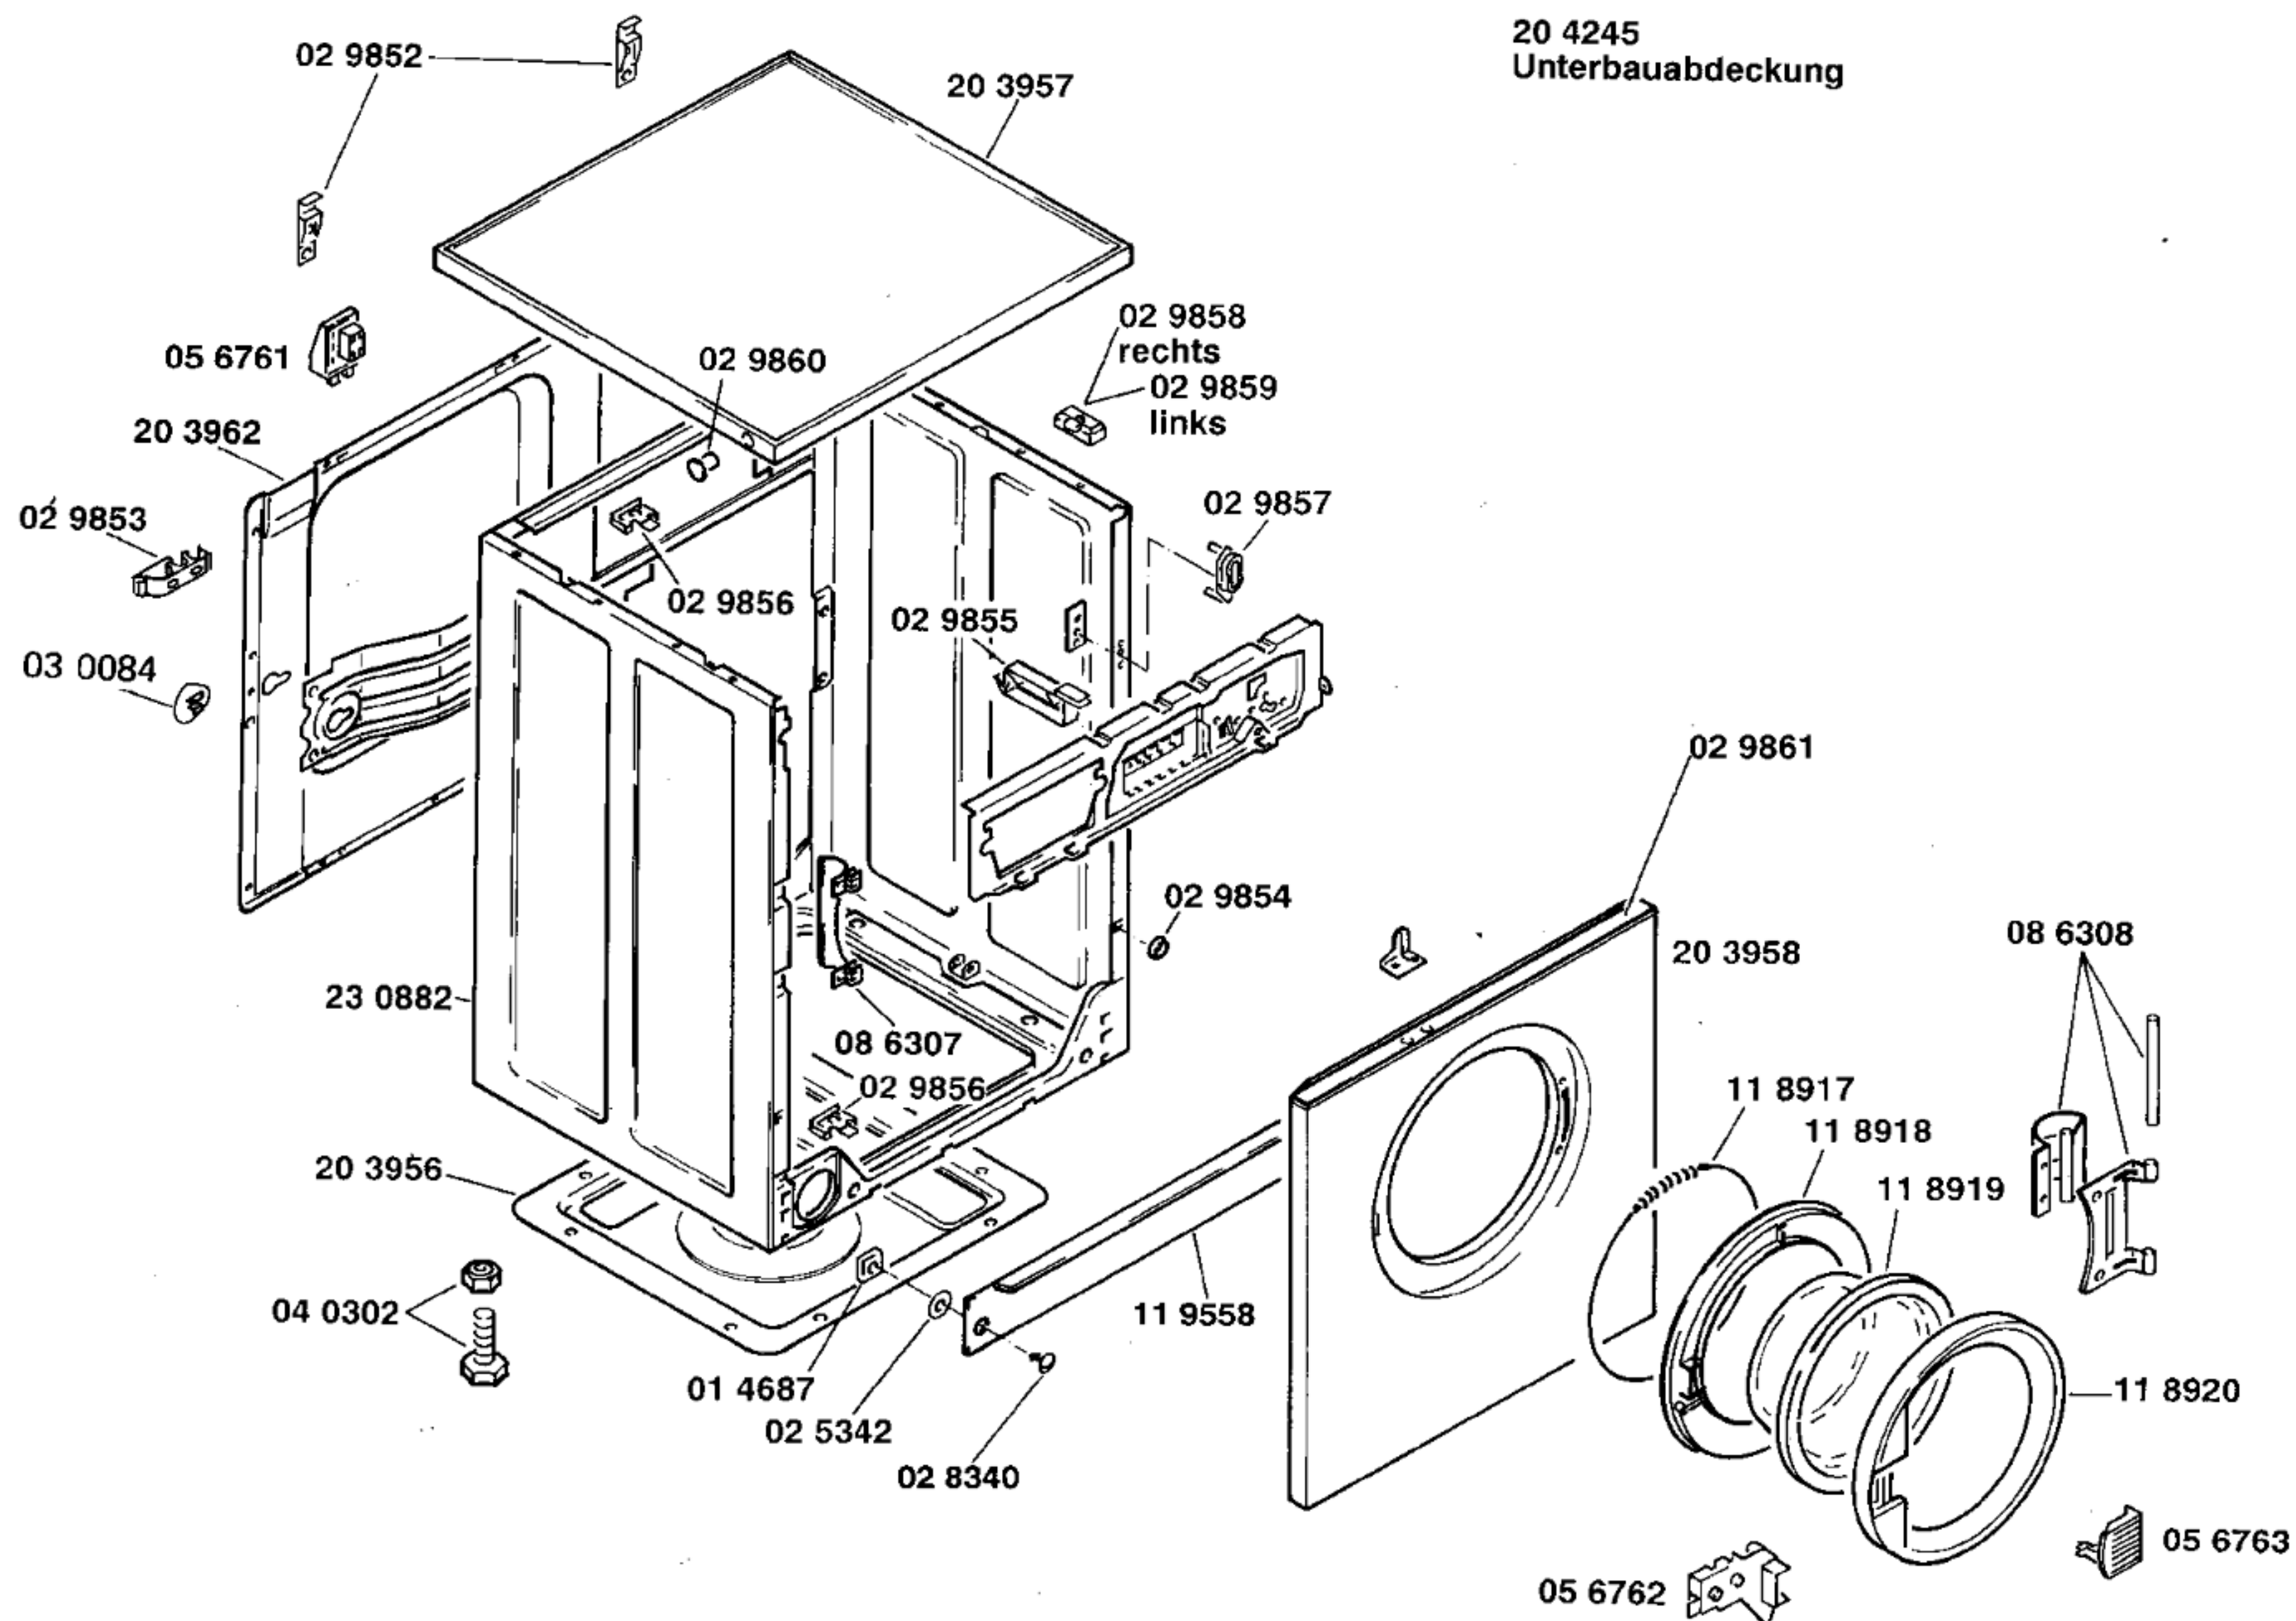

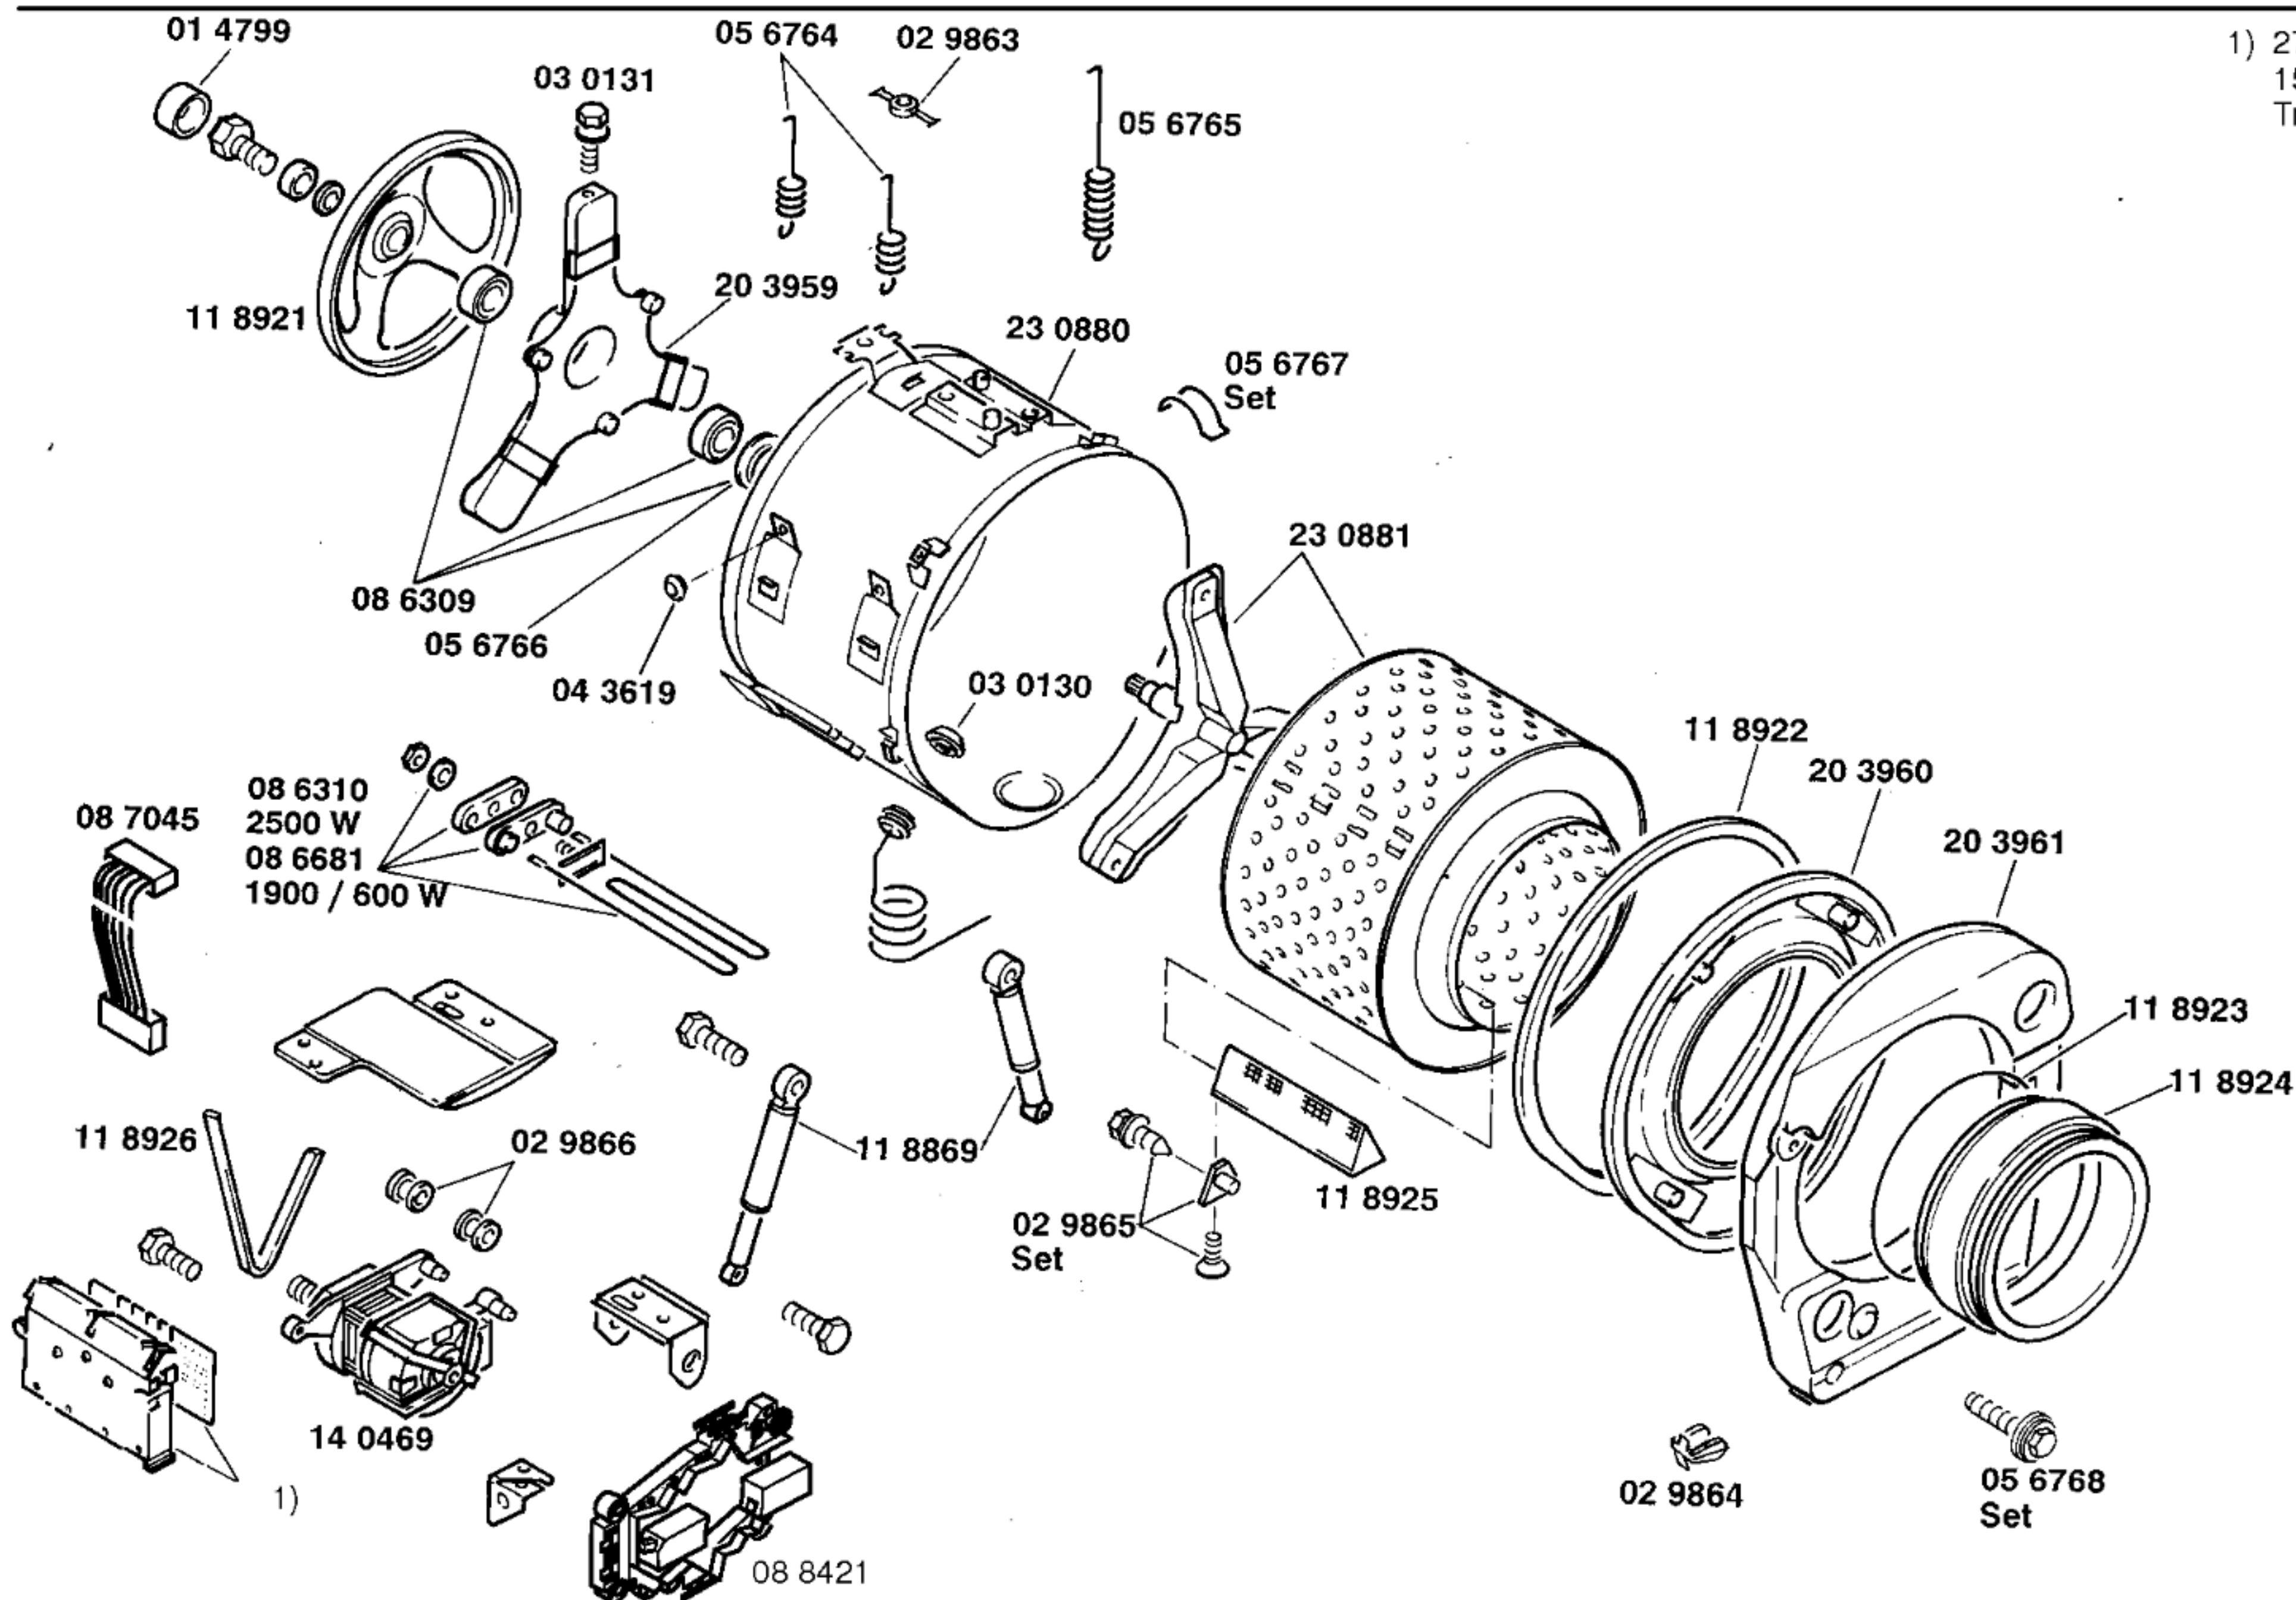

1) 27 0443
15 5272
Triac-Motorleistung

