




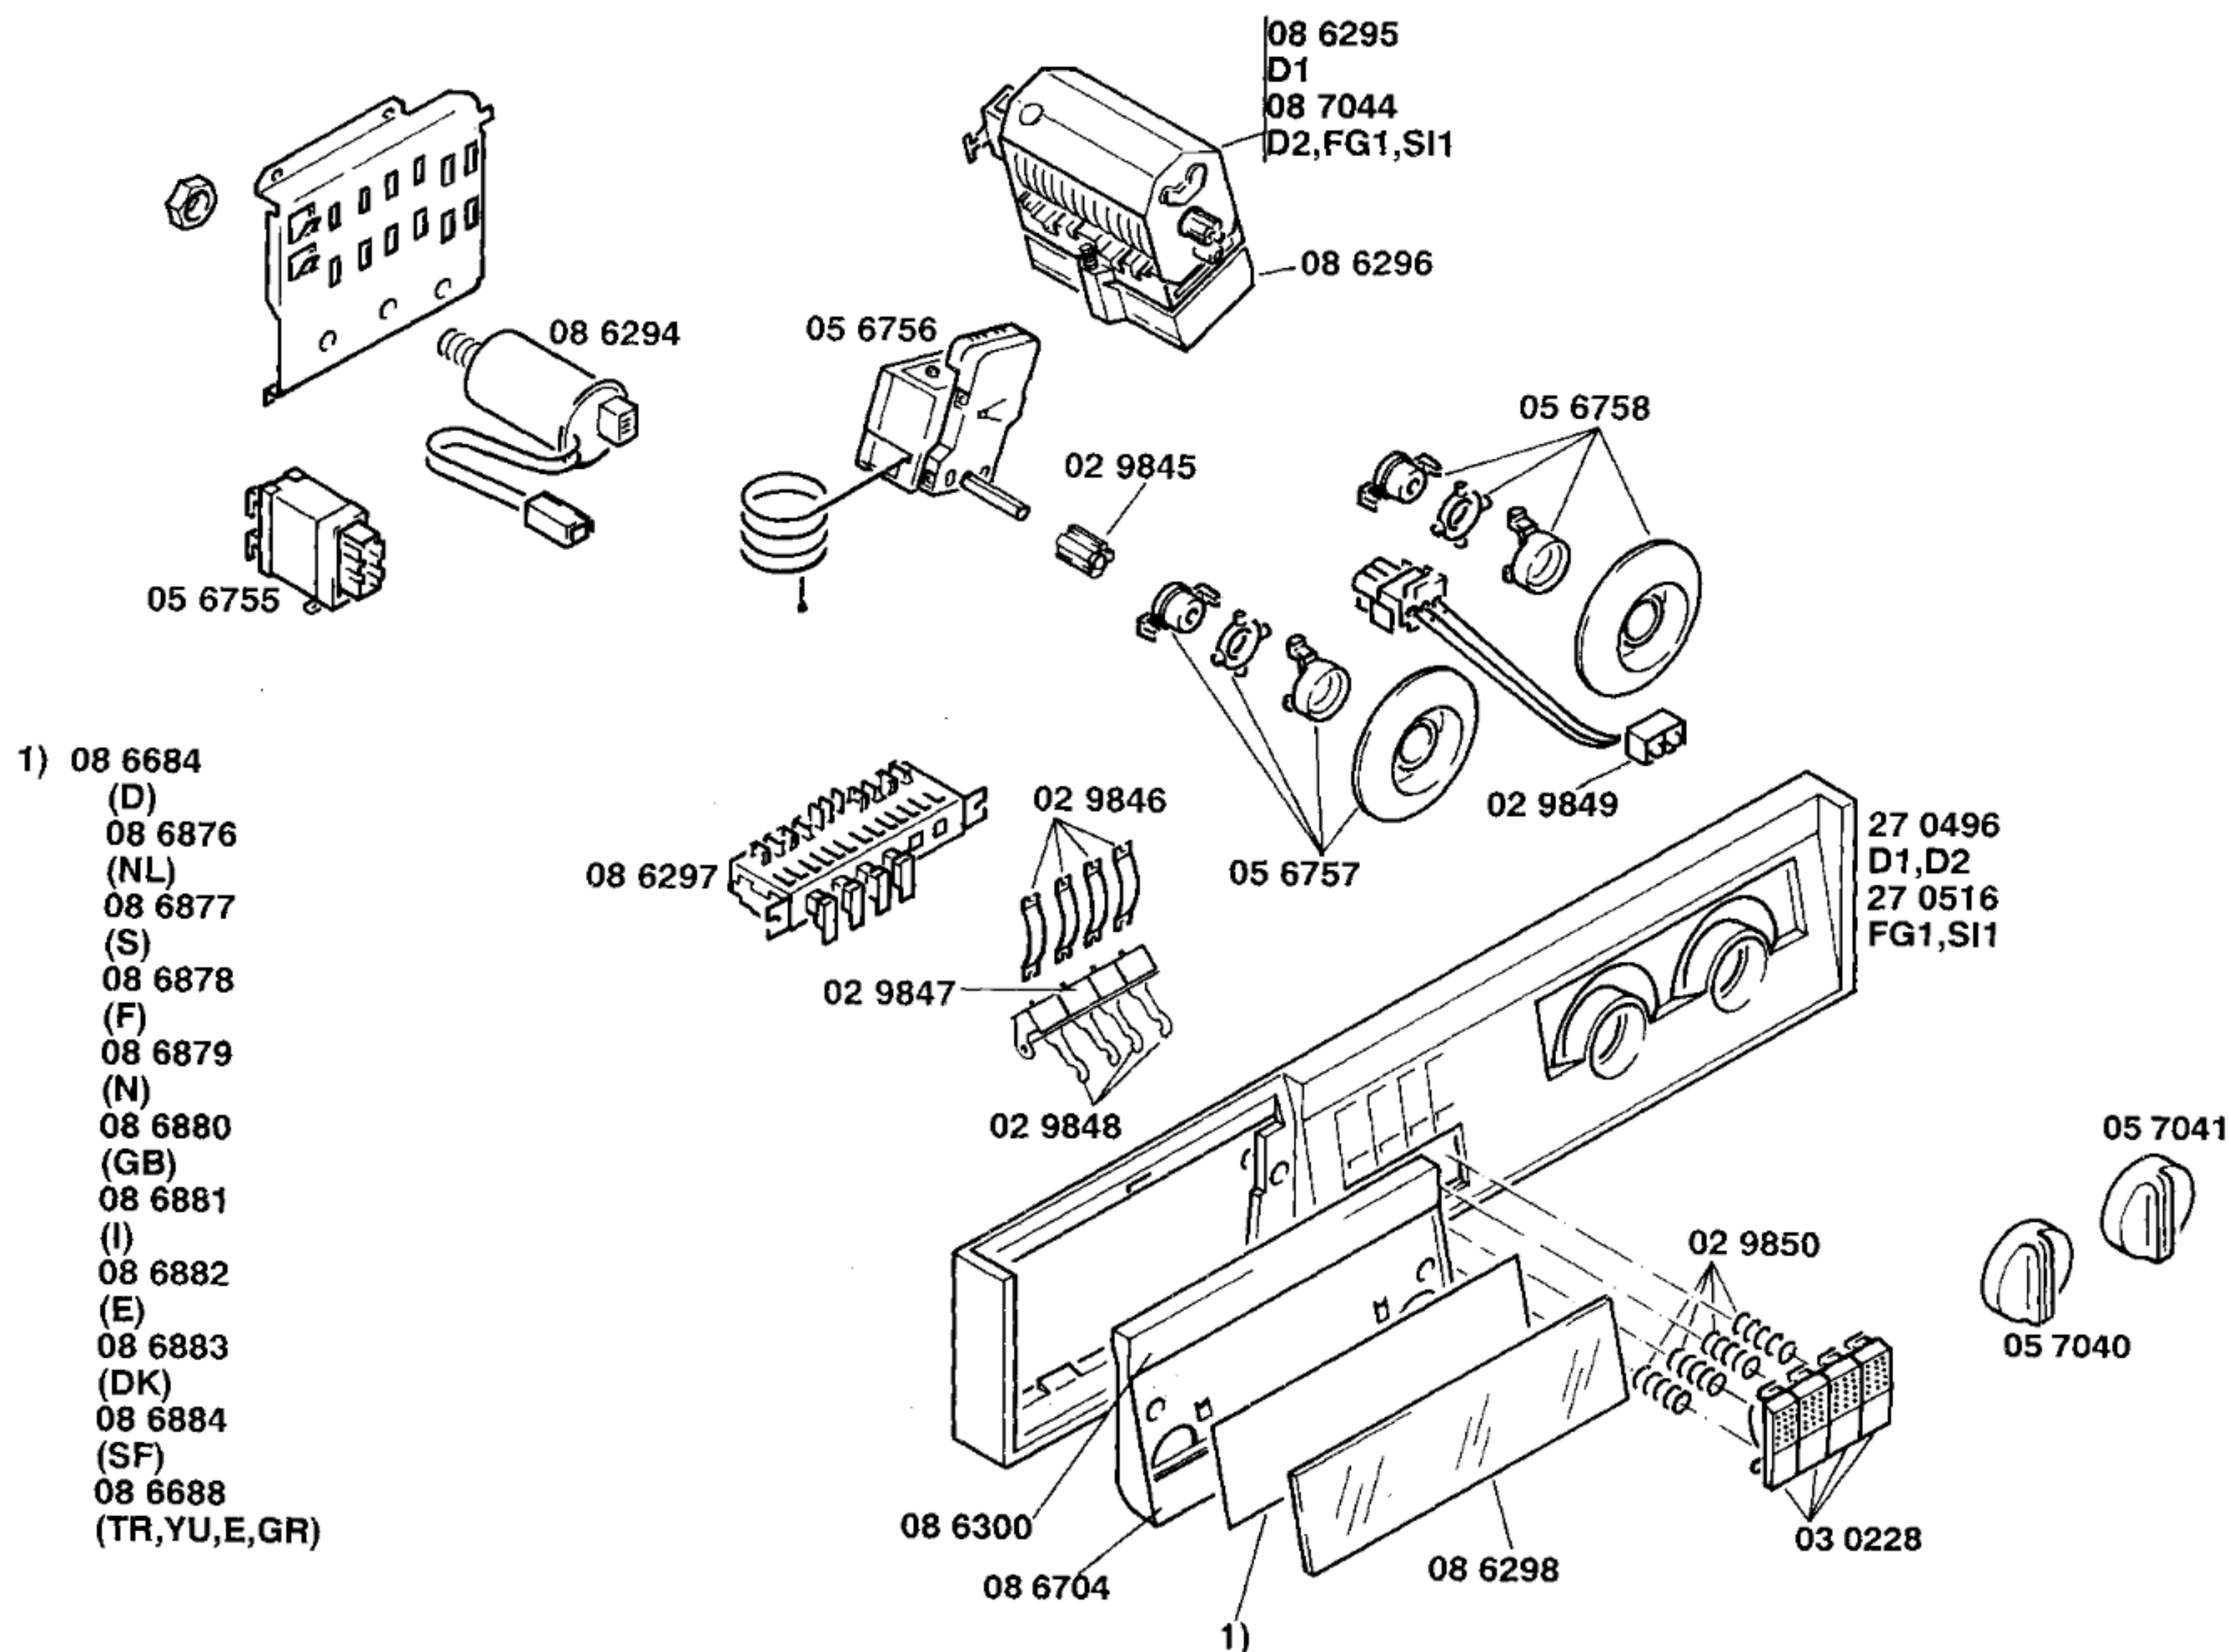

Gebrauchsanweisungen:

51 3964
 (D)
 51 3549
 (D,I,S,N,SF)
 51 3551
 (NL,F,E,GB)
 ProgrammtabelleN:
 51 3552
 (D)
 51 3967
 (D,I,S,N,SF)
 51 3555
 (NL,F,E,GB)
 Aufstellanweisungen:
 51 3965
 (D)
 51 3968
 (D,I,S,N,SF)
 51 3969
 (NL,F,E,GB)

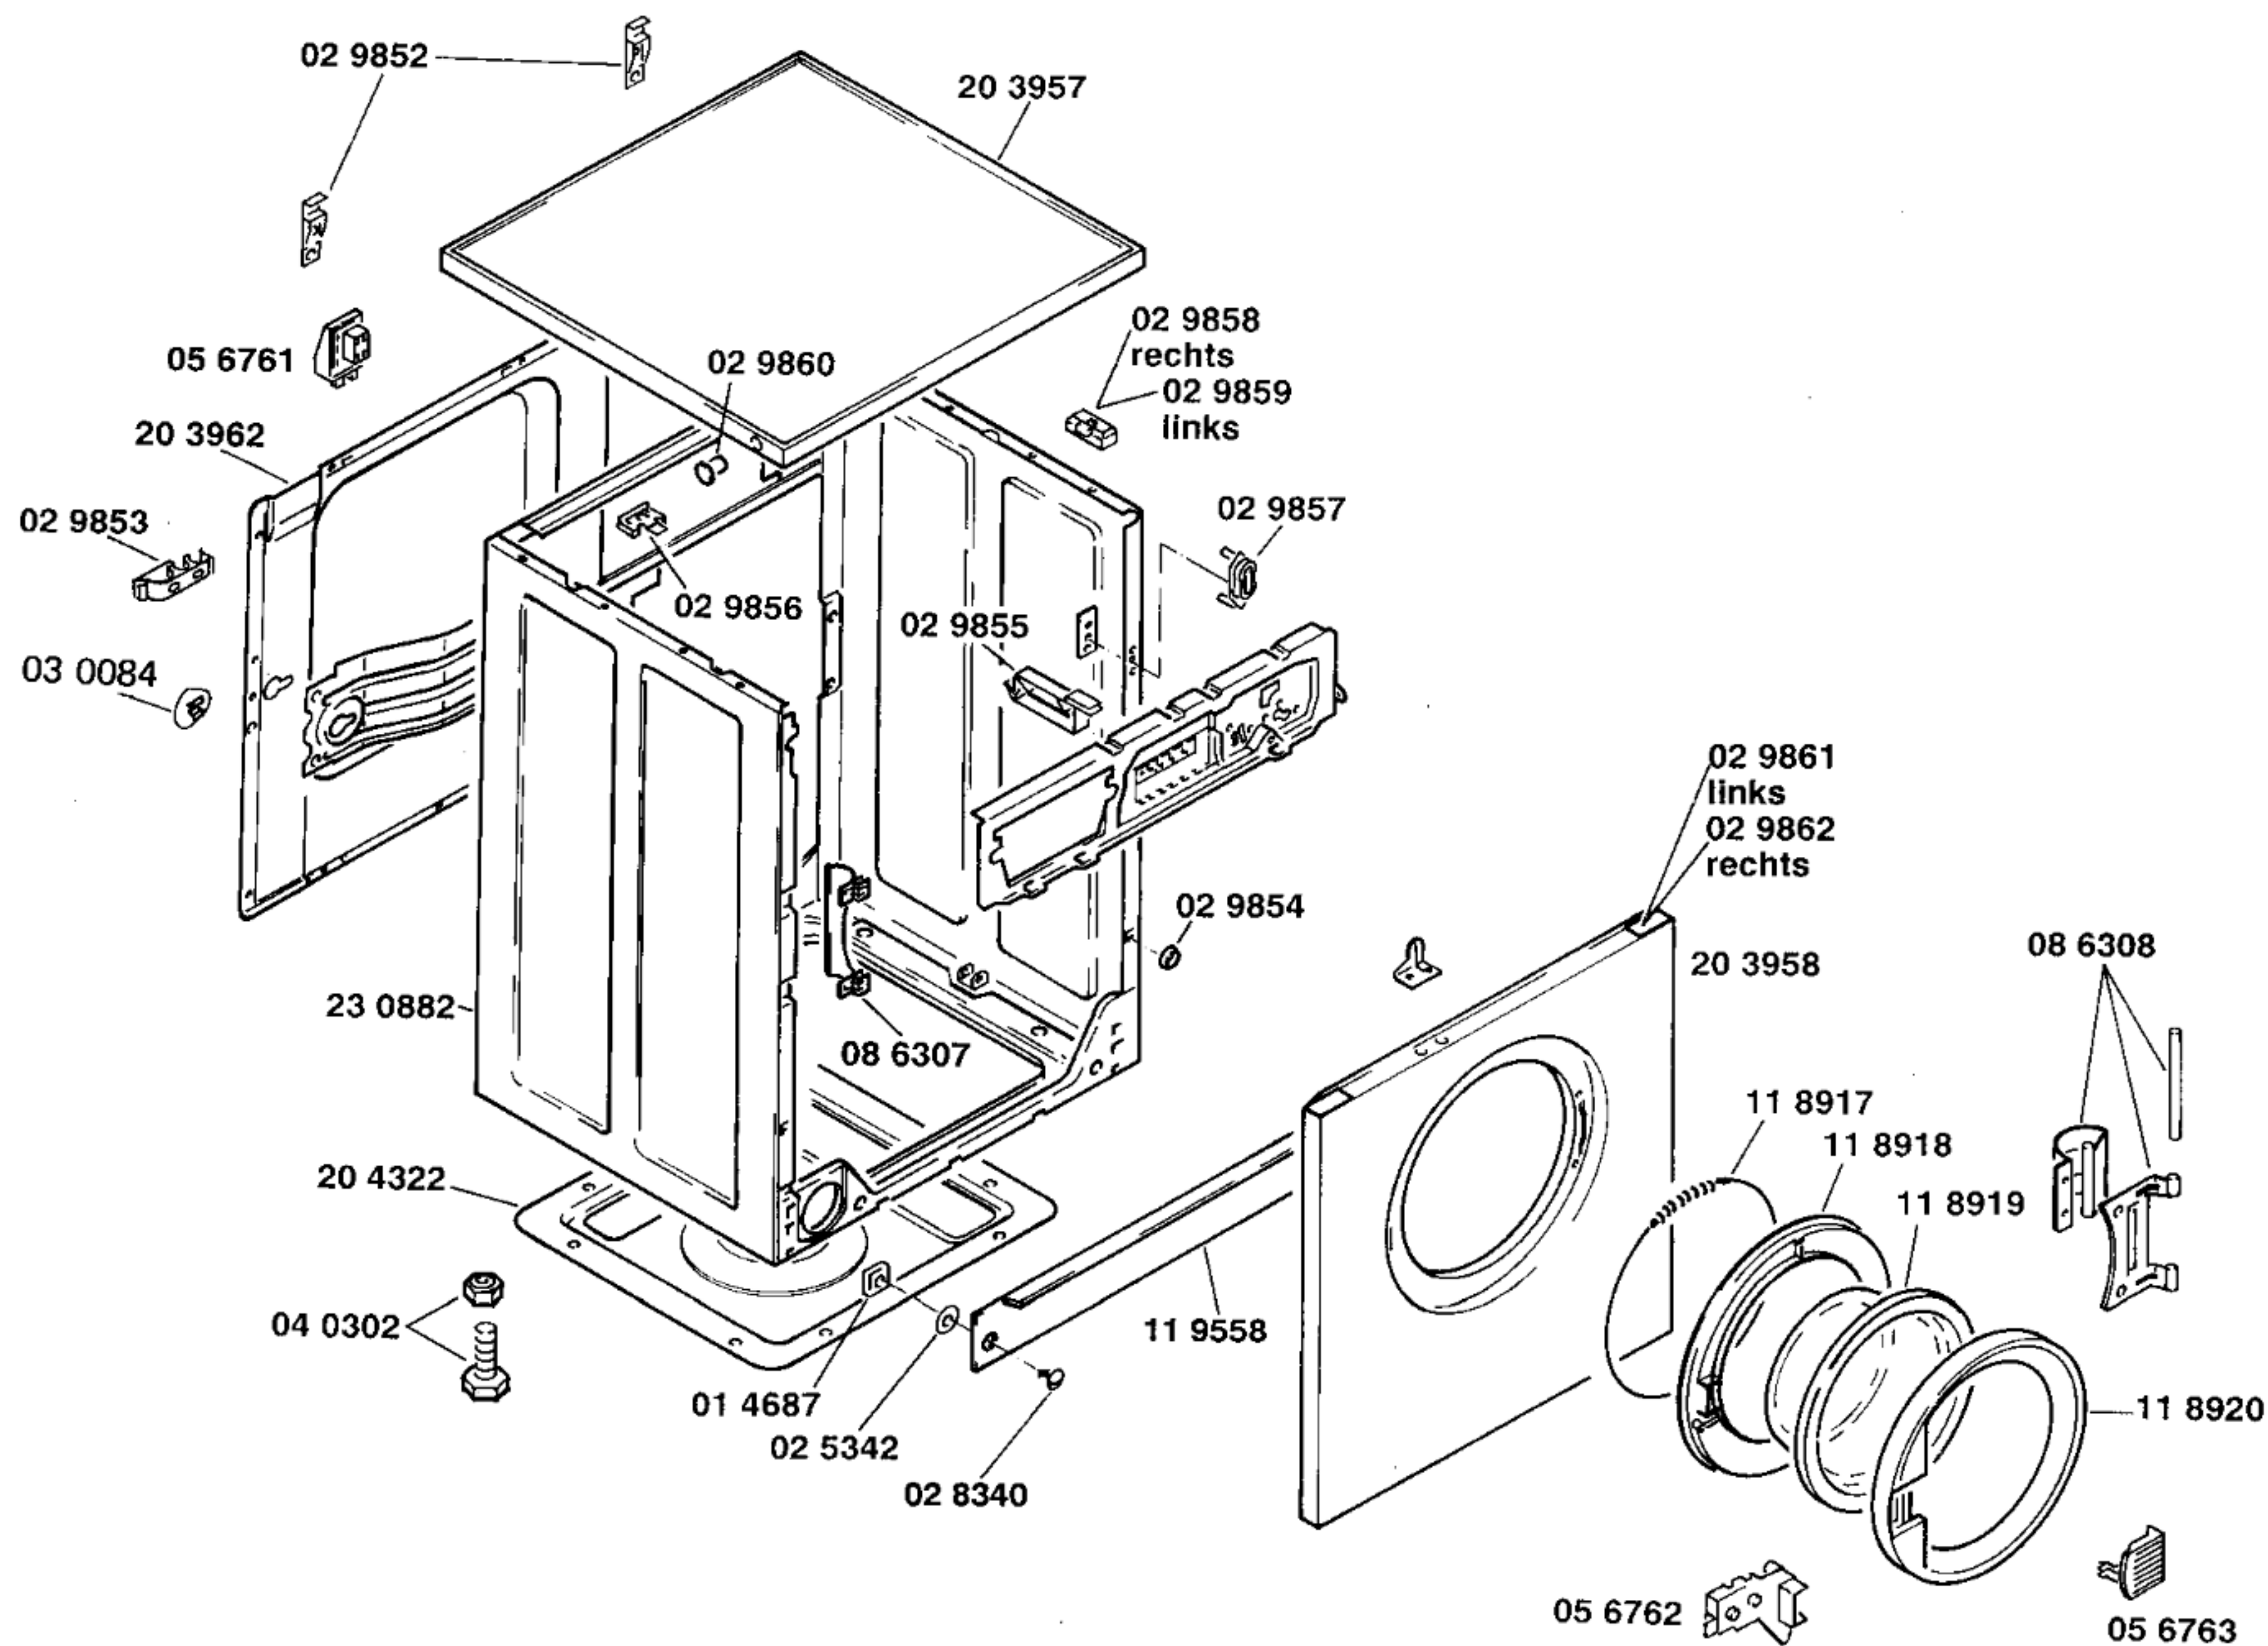

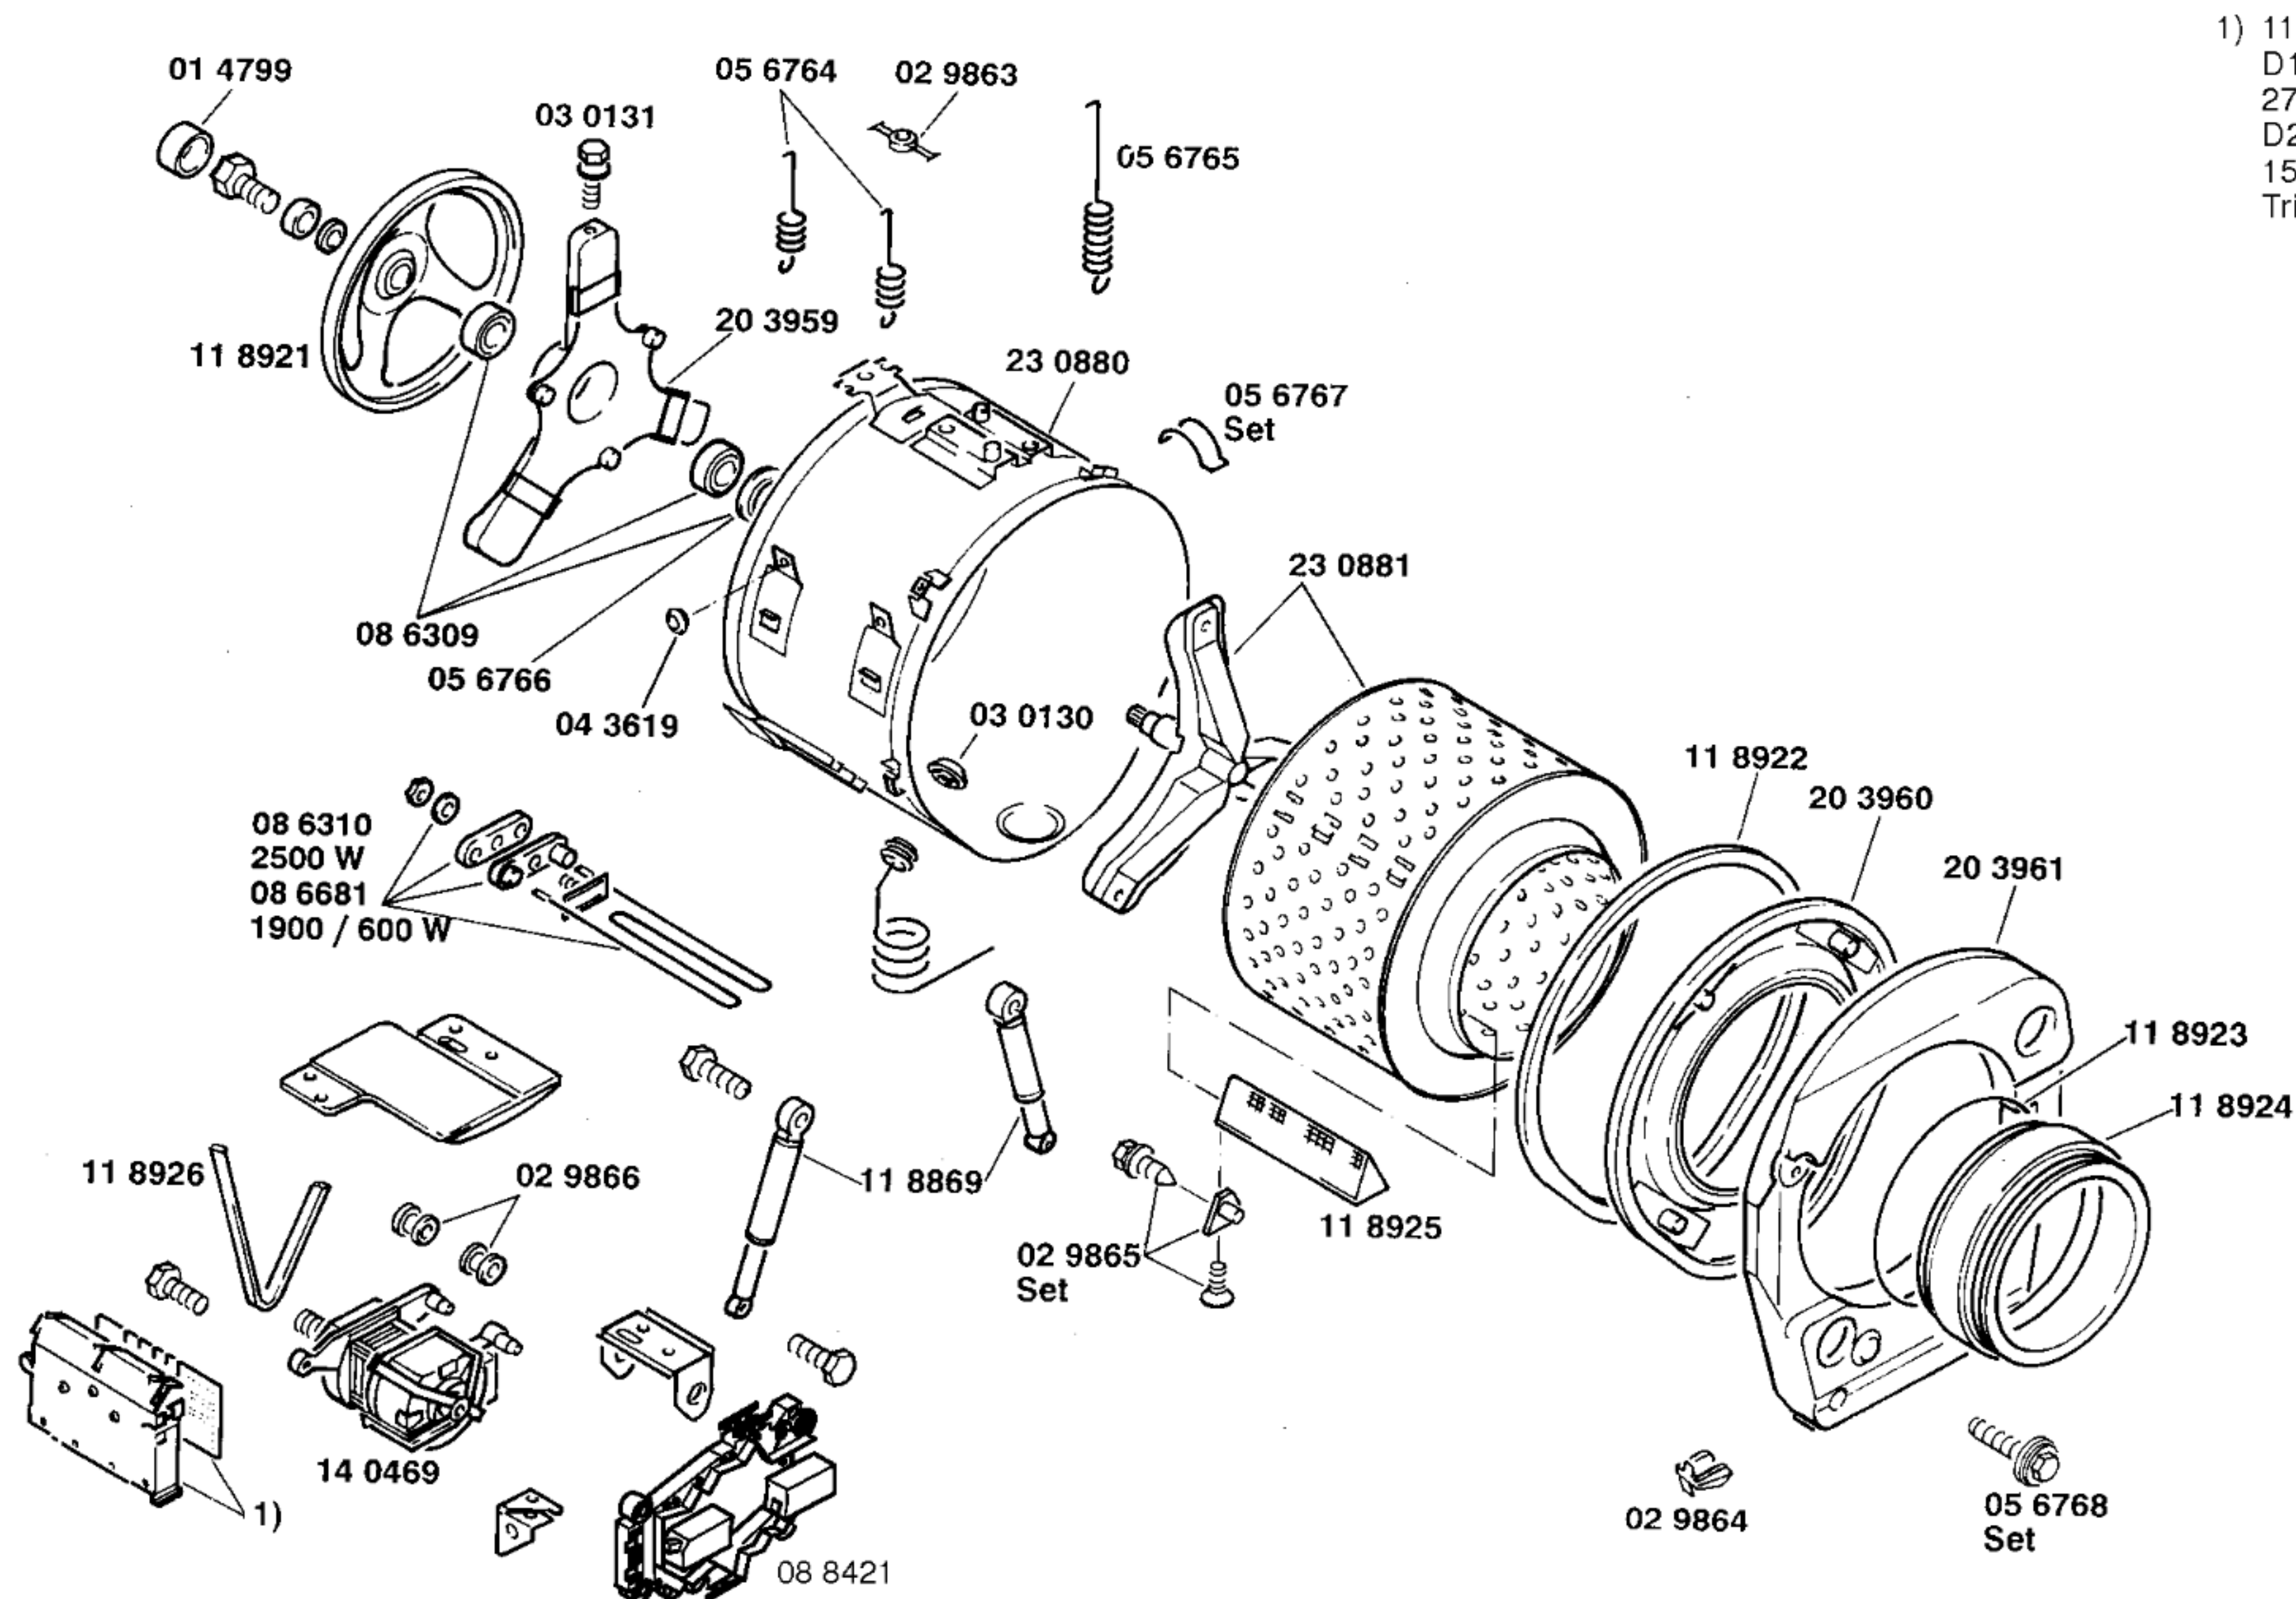

1) 11 8927
D1
27 0443
D2, FG1, SI1
15 5272
Triac-Motorleistung

