

**BOSCH**


HBE630FGB/01-GB1, braun
 HBE630FGB/02-GB4, braun
 HBE632FGB/01-GB2, weiss

HBE632FGB/02-GB5, weiss
 HBE636FGB/01-GB3, dunkelbraun
 HBE636FGB/02-GB6, dunkelbraun

HBE632FGB/03-GB7, weiss

HERDE
 Einzelbacköfen

Ident - Nummern - Konstante
 3740

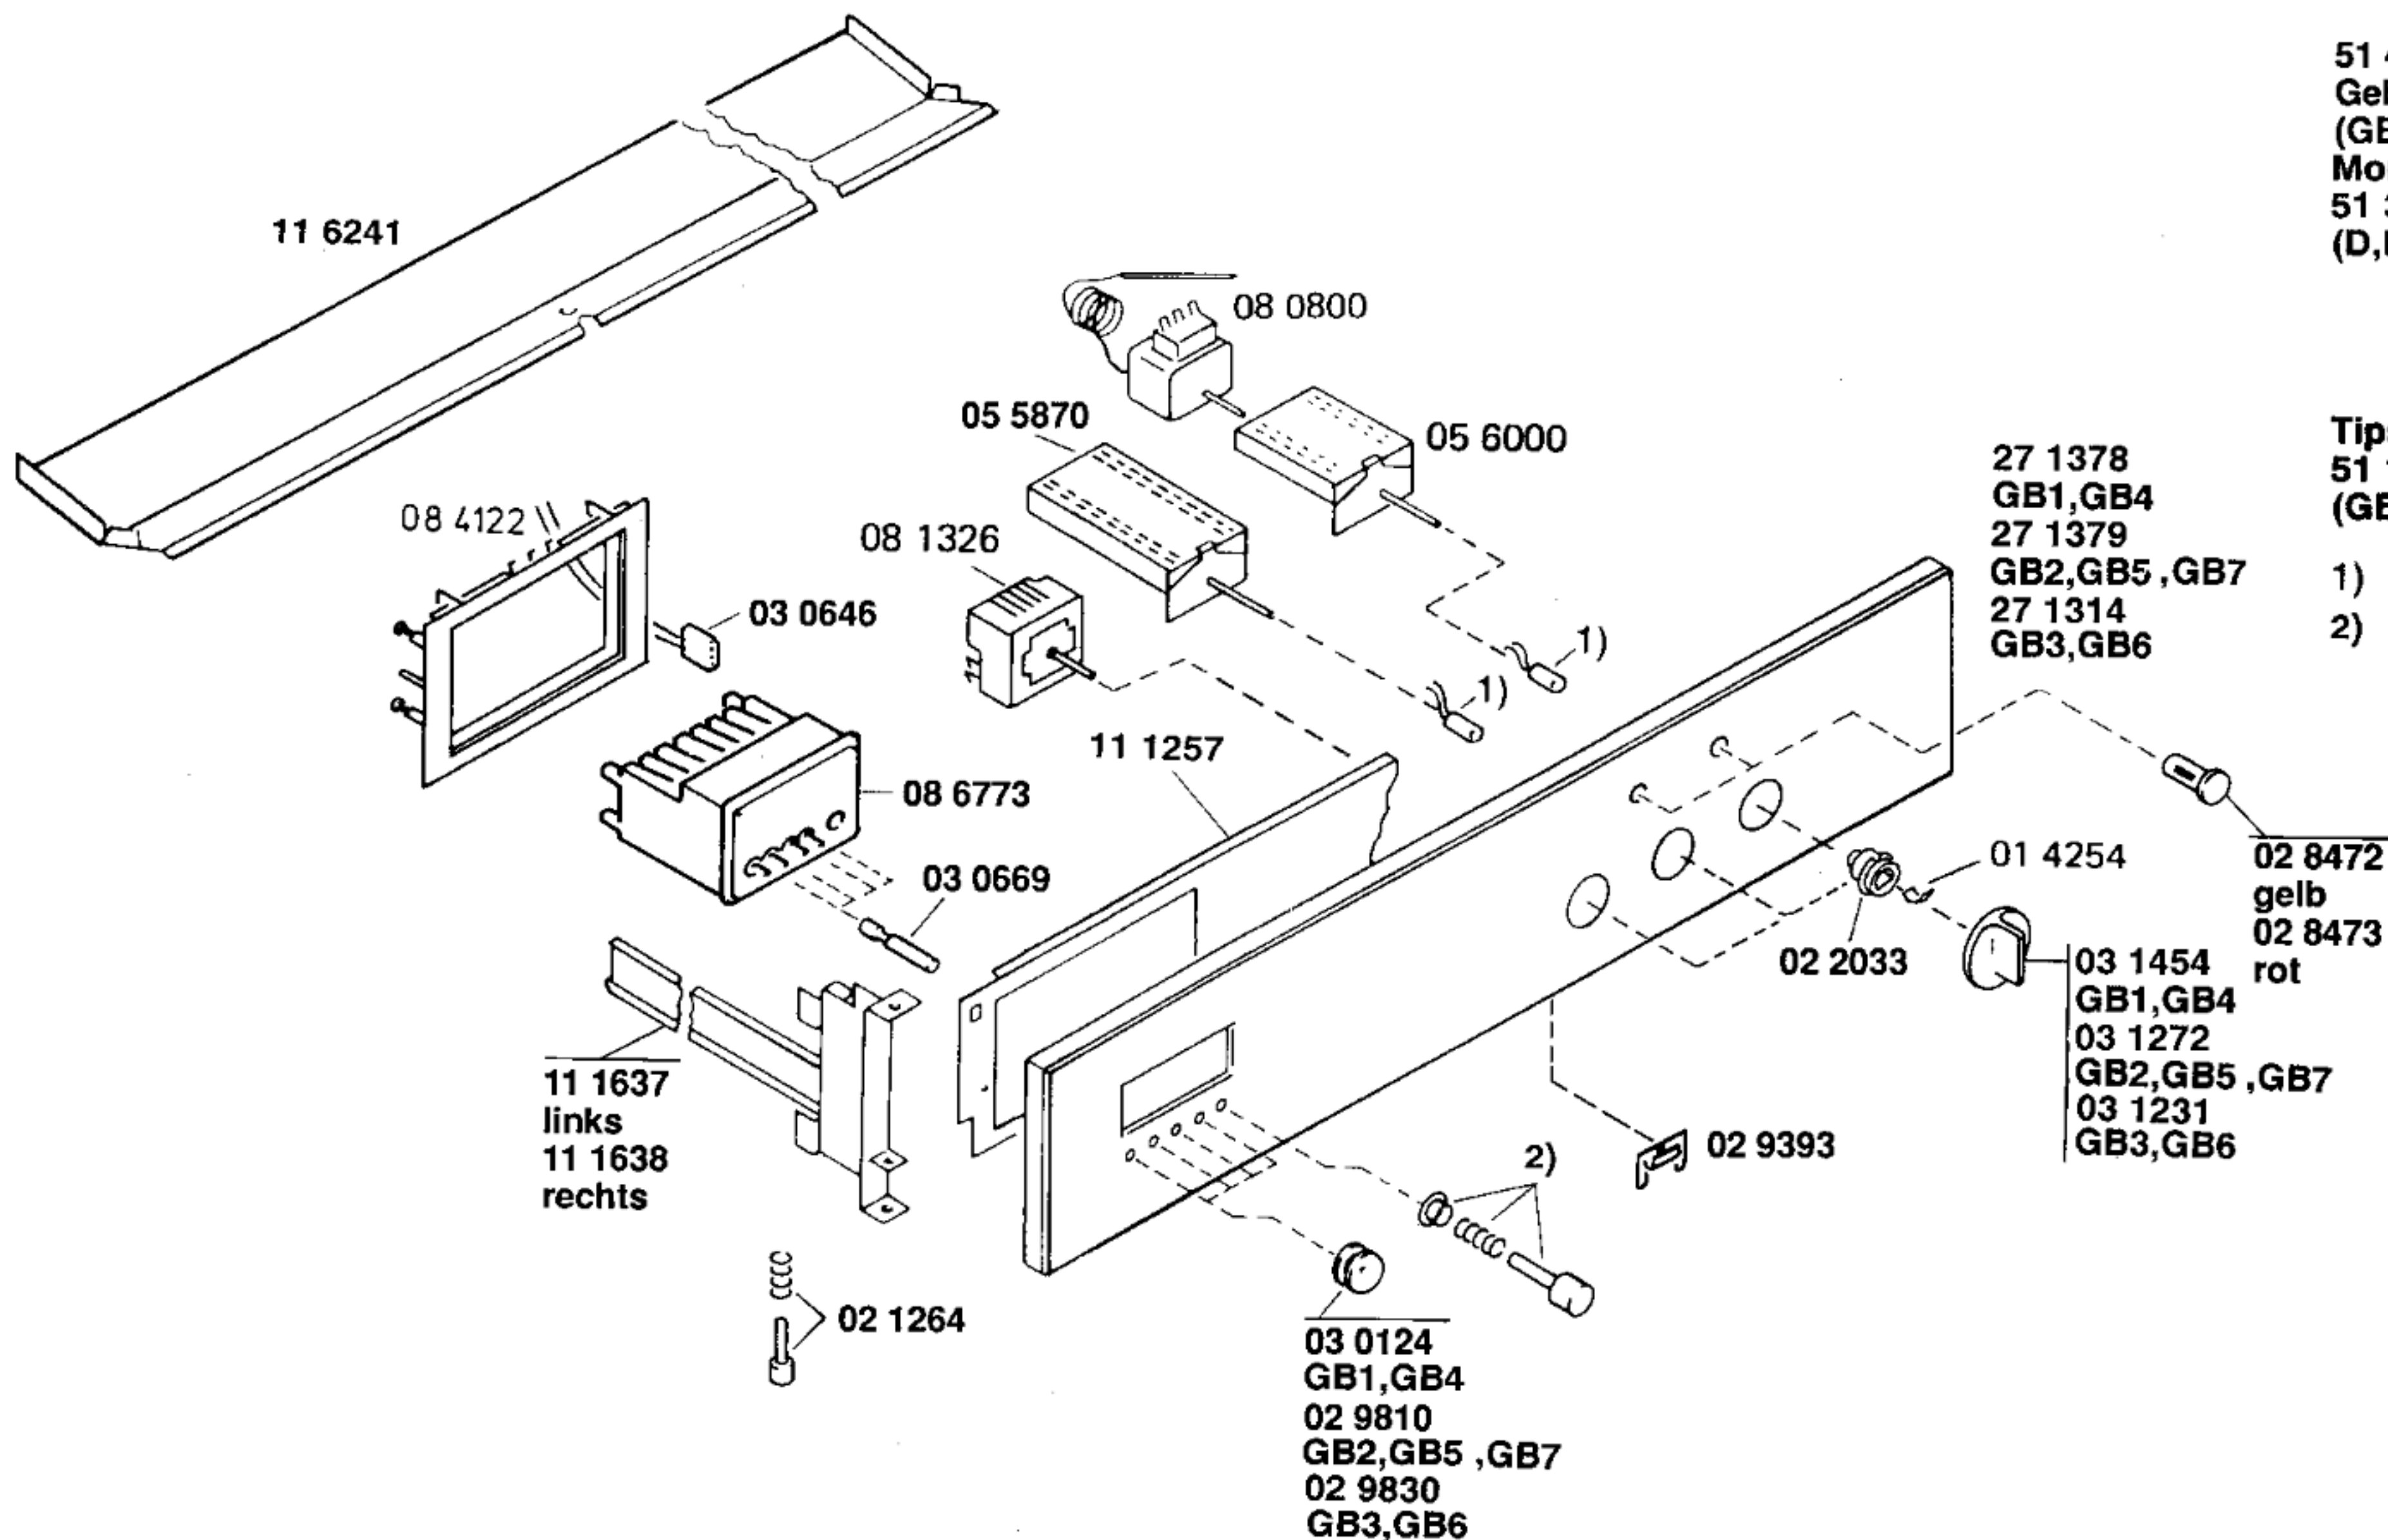

51 4507
 Gebrauchsanweisung
 (GB)
 Montageanweisung
 51 3807
 (D, F, GB, I, NL, DK)

Tips und Rezepte
 51 1215
 (GB)

- 1) 02 8383
- 2) 02 8475
 GB1, GB4
 02 8476
 GB2, GB5, GB7
 02 8696
 GB3, GB6



BOSCH

HBE630FGB/01-GB1, braun
HBE630FGB/02-GB4, braun
HBE632FGB/01-GB2, weiss


HBE632FGB/02-GB5, weiss
HBE636FGB/01-GB3, dunkelbraun
HBE636FGB/02-GB6, dunkelbraun

HBE632FGB/03-GB7, weiss


HERDE
Einzelbacköfen

Ident - Nummern - Konstante
3740

1) 02 1982
Vorwiderstand

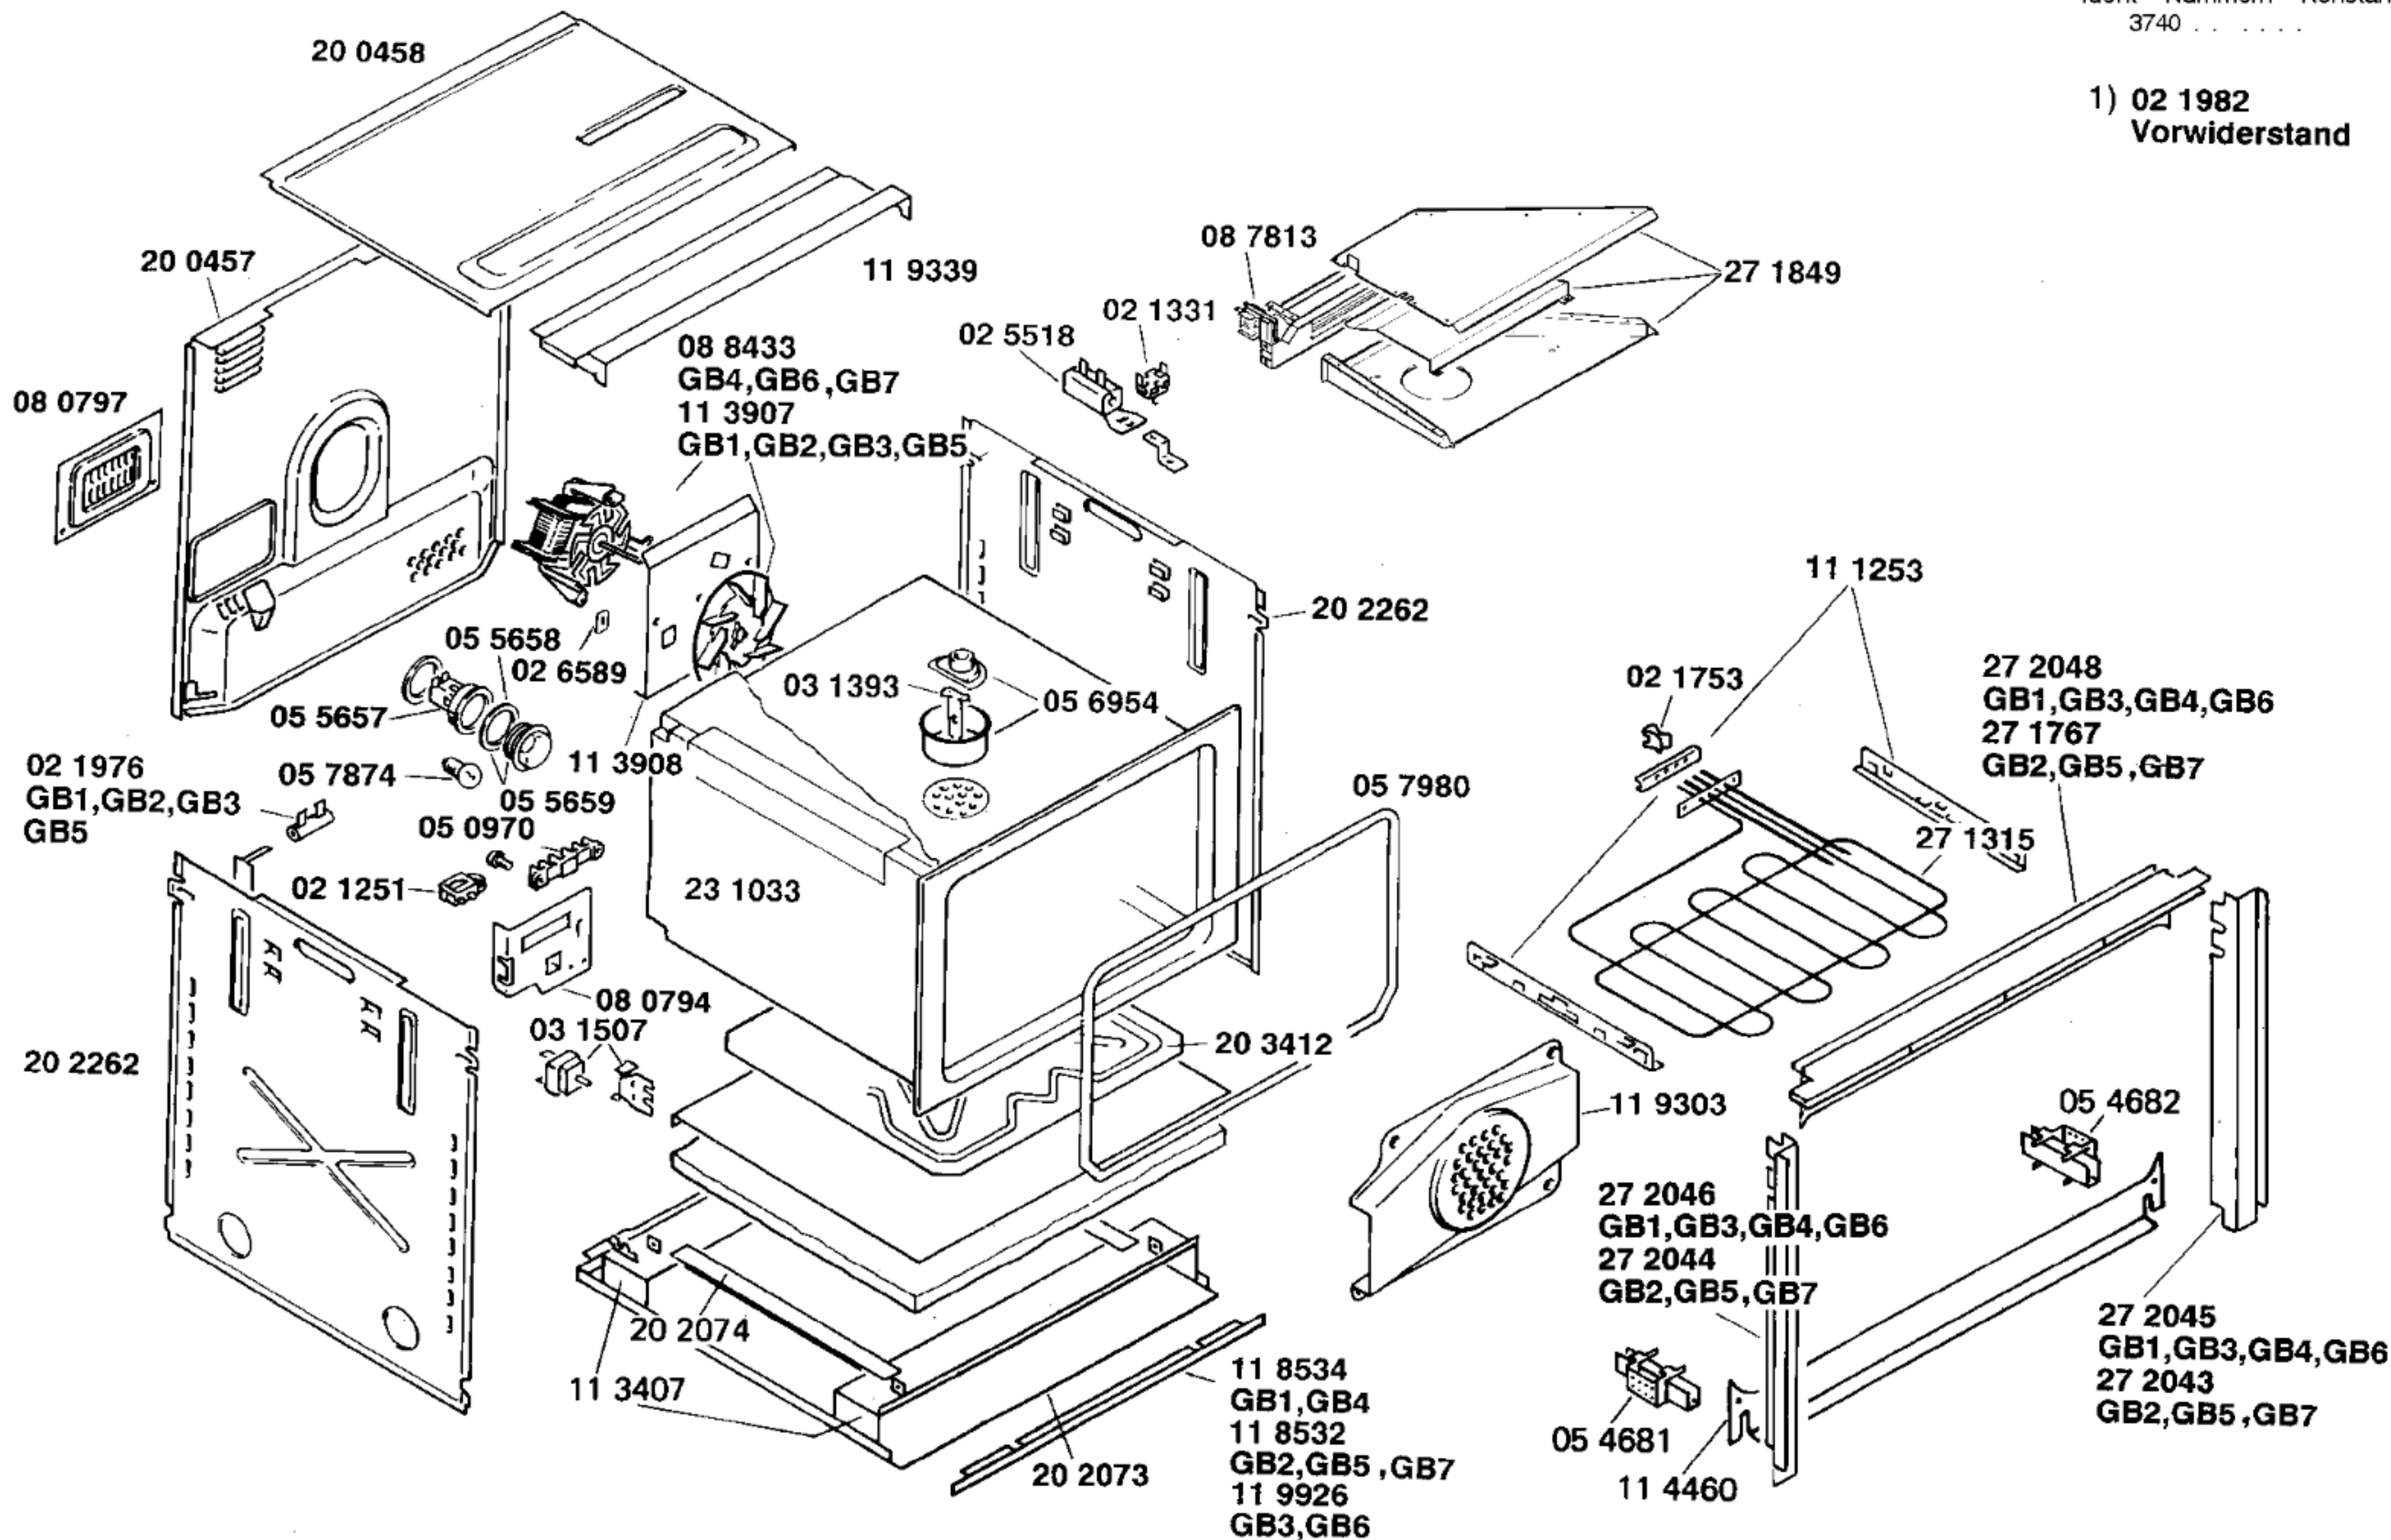

Ident - Nummern - Konstante
 3740

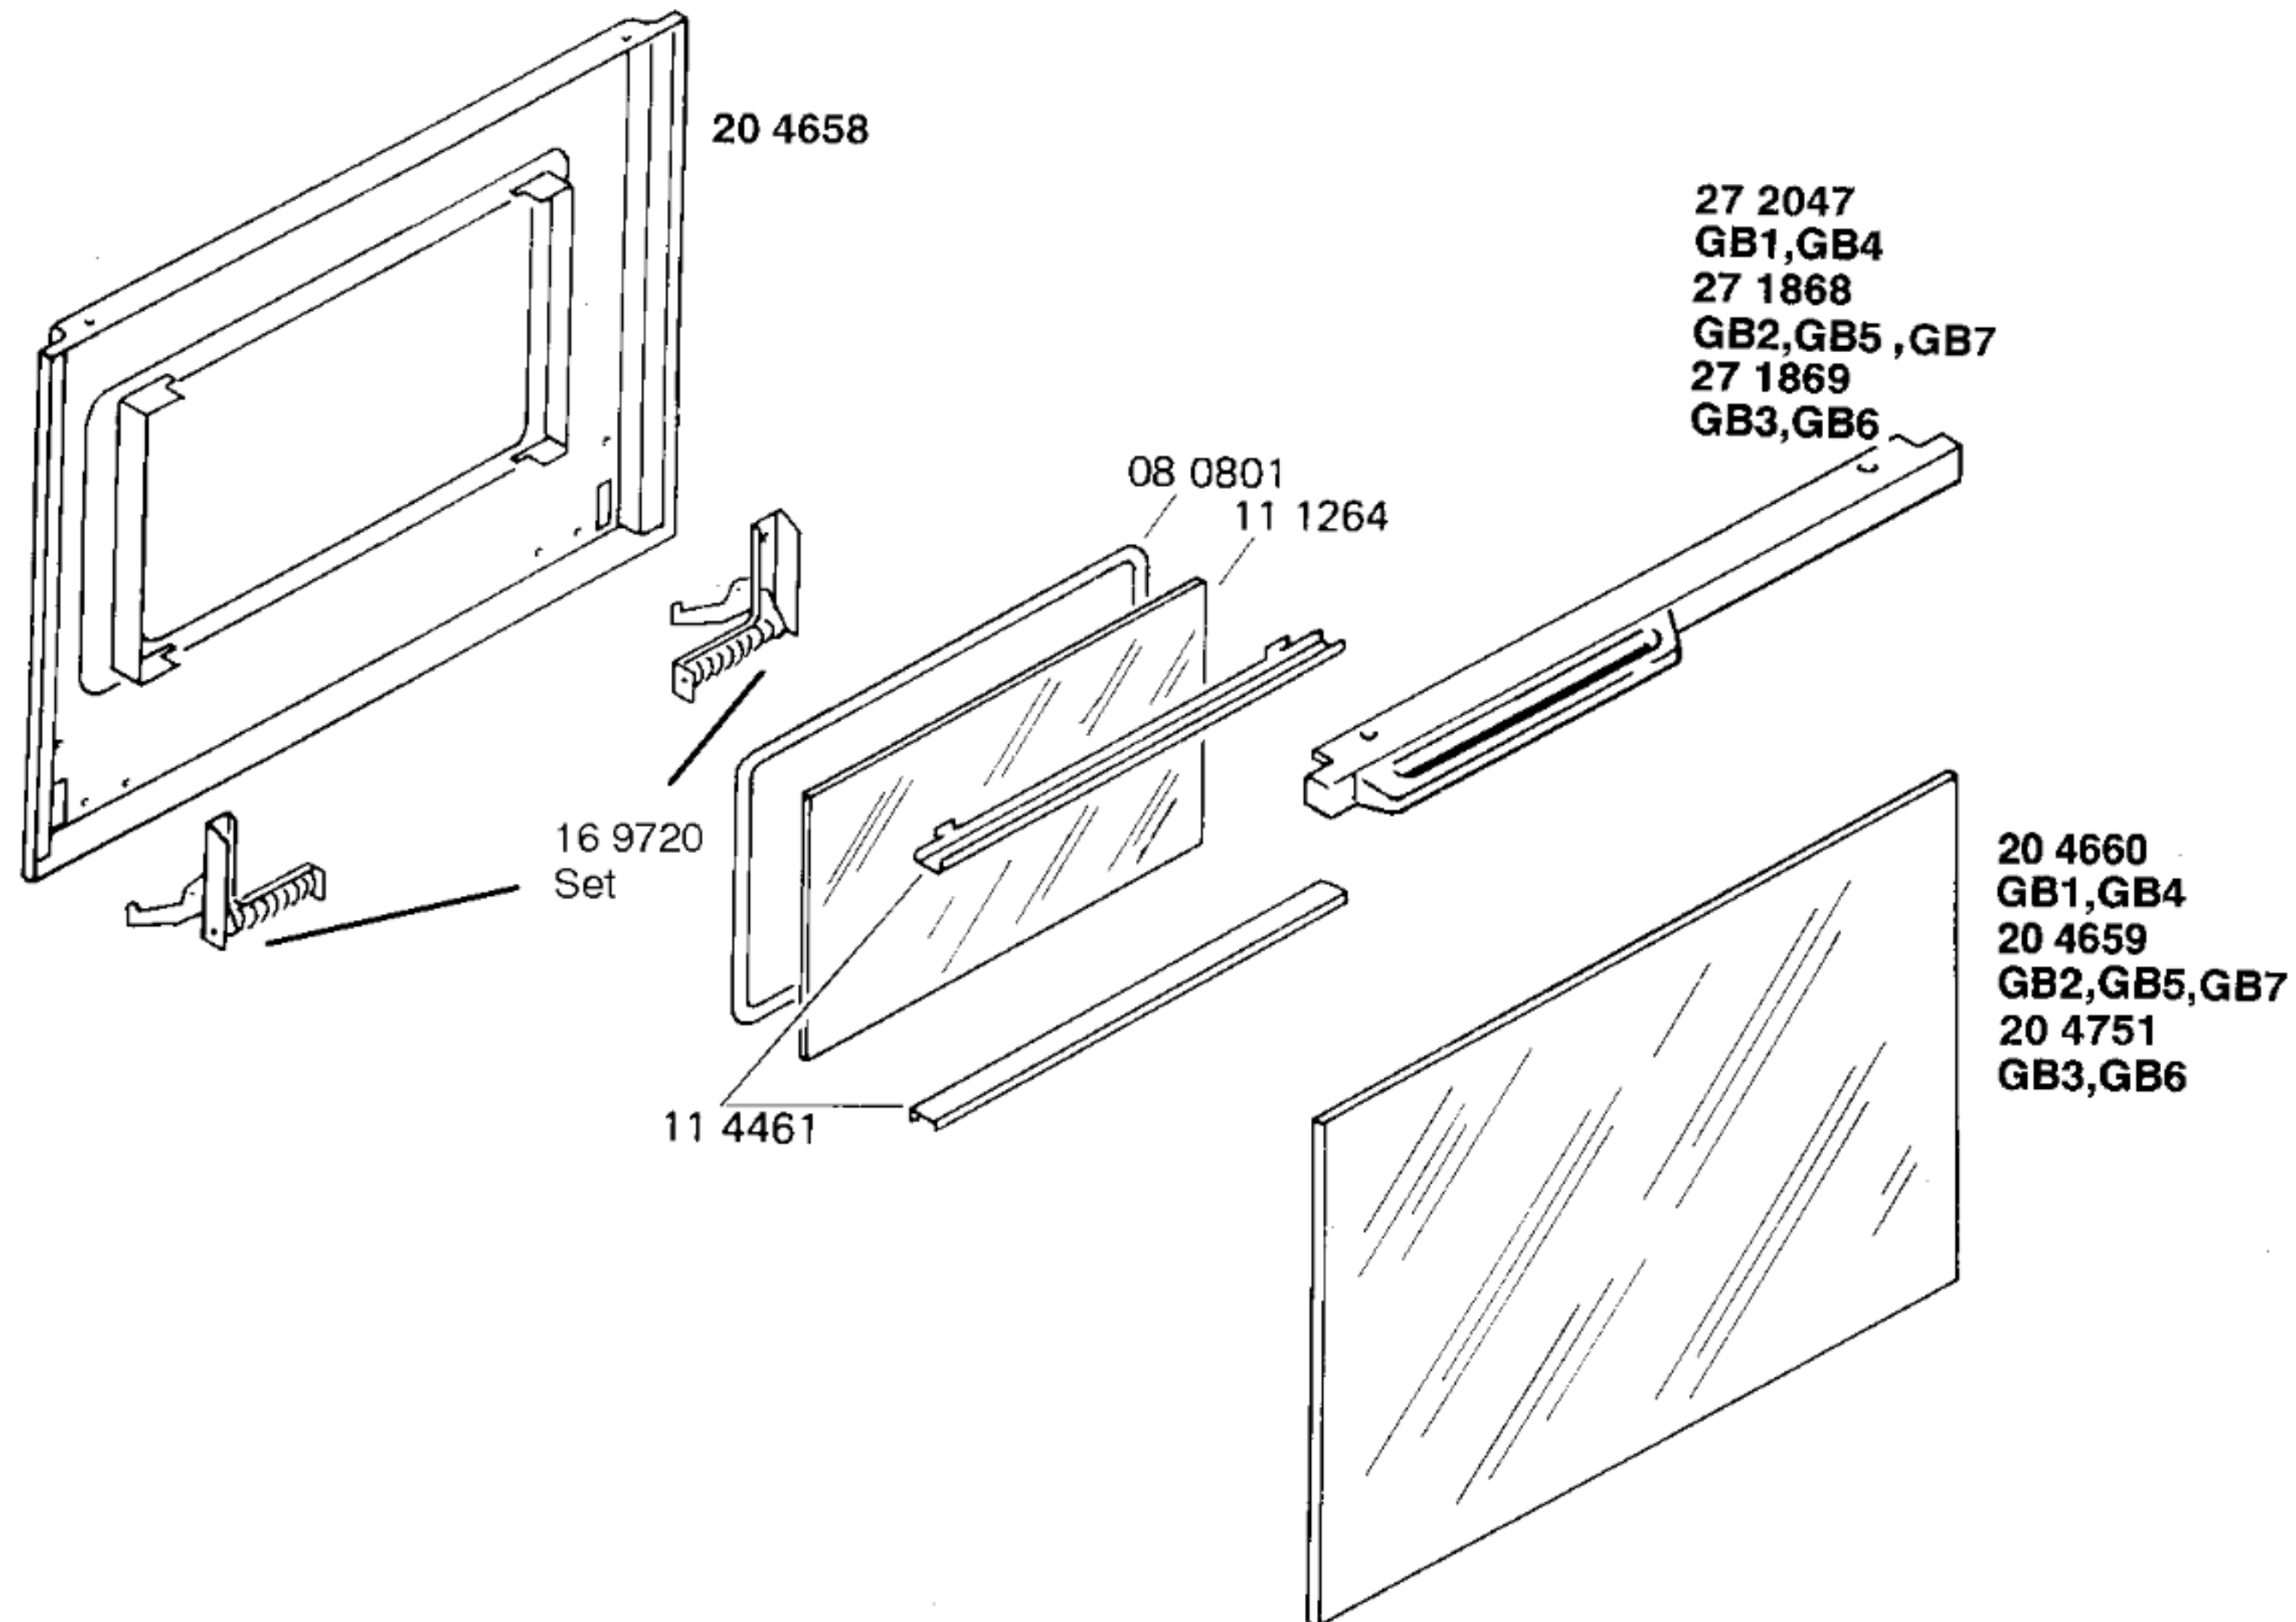



BOSCH

HBE630FGB/01-GB1, braun
HBE630FGB/02-GB4, braun
HBE632FGB/01-GB2, weiss

HBE632FGB/02-GB5, weiss
HBE636FGB/01-GB3, dunkelbraun
HBE636FGB/02-GB6, dunkelbraun

HBE632FGB/03-GB7, weiss

HERDE
Einzelbacköfen

Ident - Nummern - Konstante
3740

