 


Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		ZUBEHÖR	ACCESSORIES
		Bedienungsanleitungen Gebrauchsanweisungen	instruction manual
	53 1113	V01, V03 D/GB/E/NL	
	53 1114	V02 D/GB/GUS	
		Service Manual	service manual
	53 5591	V01, V03 GB	
	53 5586	V02 GB	
		Fernbedienungen	remote control
	75 9257	V01, V03	
	75 9258	V02	
	—	Batterieklappe	batterieflap

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		Servicemittel	service tools
	34 0120	Tentelometer/Jg100	tentelometer
	34 0307	Wickeltellerhöhen Einstellwerkzeug Jg024	reel disk height tool
	34 0105	Cassetten Einstellehre/Jg022	master tape gauge
	34 0114	Drehmomentmesser/Jg002fg	clock gauge
	34 0101	Exentrik 3mm	
	79 5084	Adapterkabel/Jg105c/106a	cable
		Testcassetten	test tape
	34 0163	Multitape/Jg001e/f	multitape
	34 0156	Bandzug 60 g links/300 g rechts	tension 60 g left/300 g right
	34 0219	Bandzug 800 g	tension 800 g
		Chassisplatten	main P.C.B
PCB010	—	V01, V03	
PCB010	—	V02	

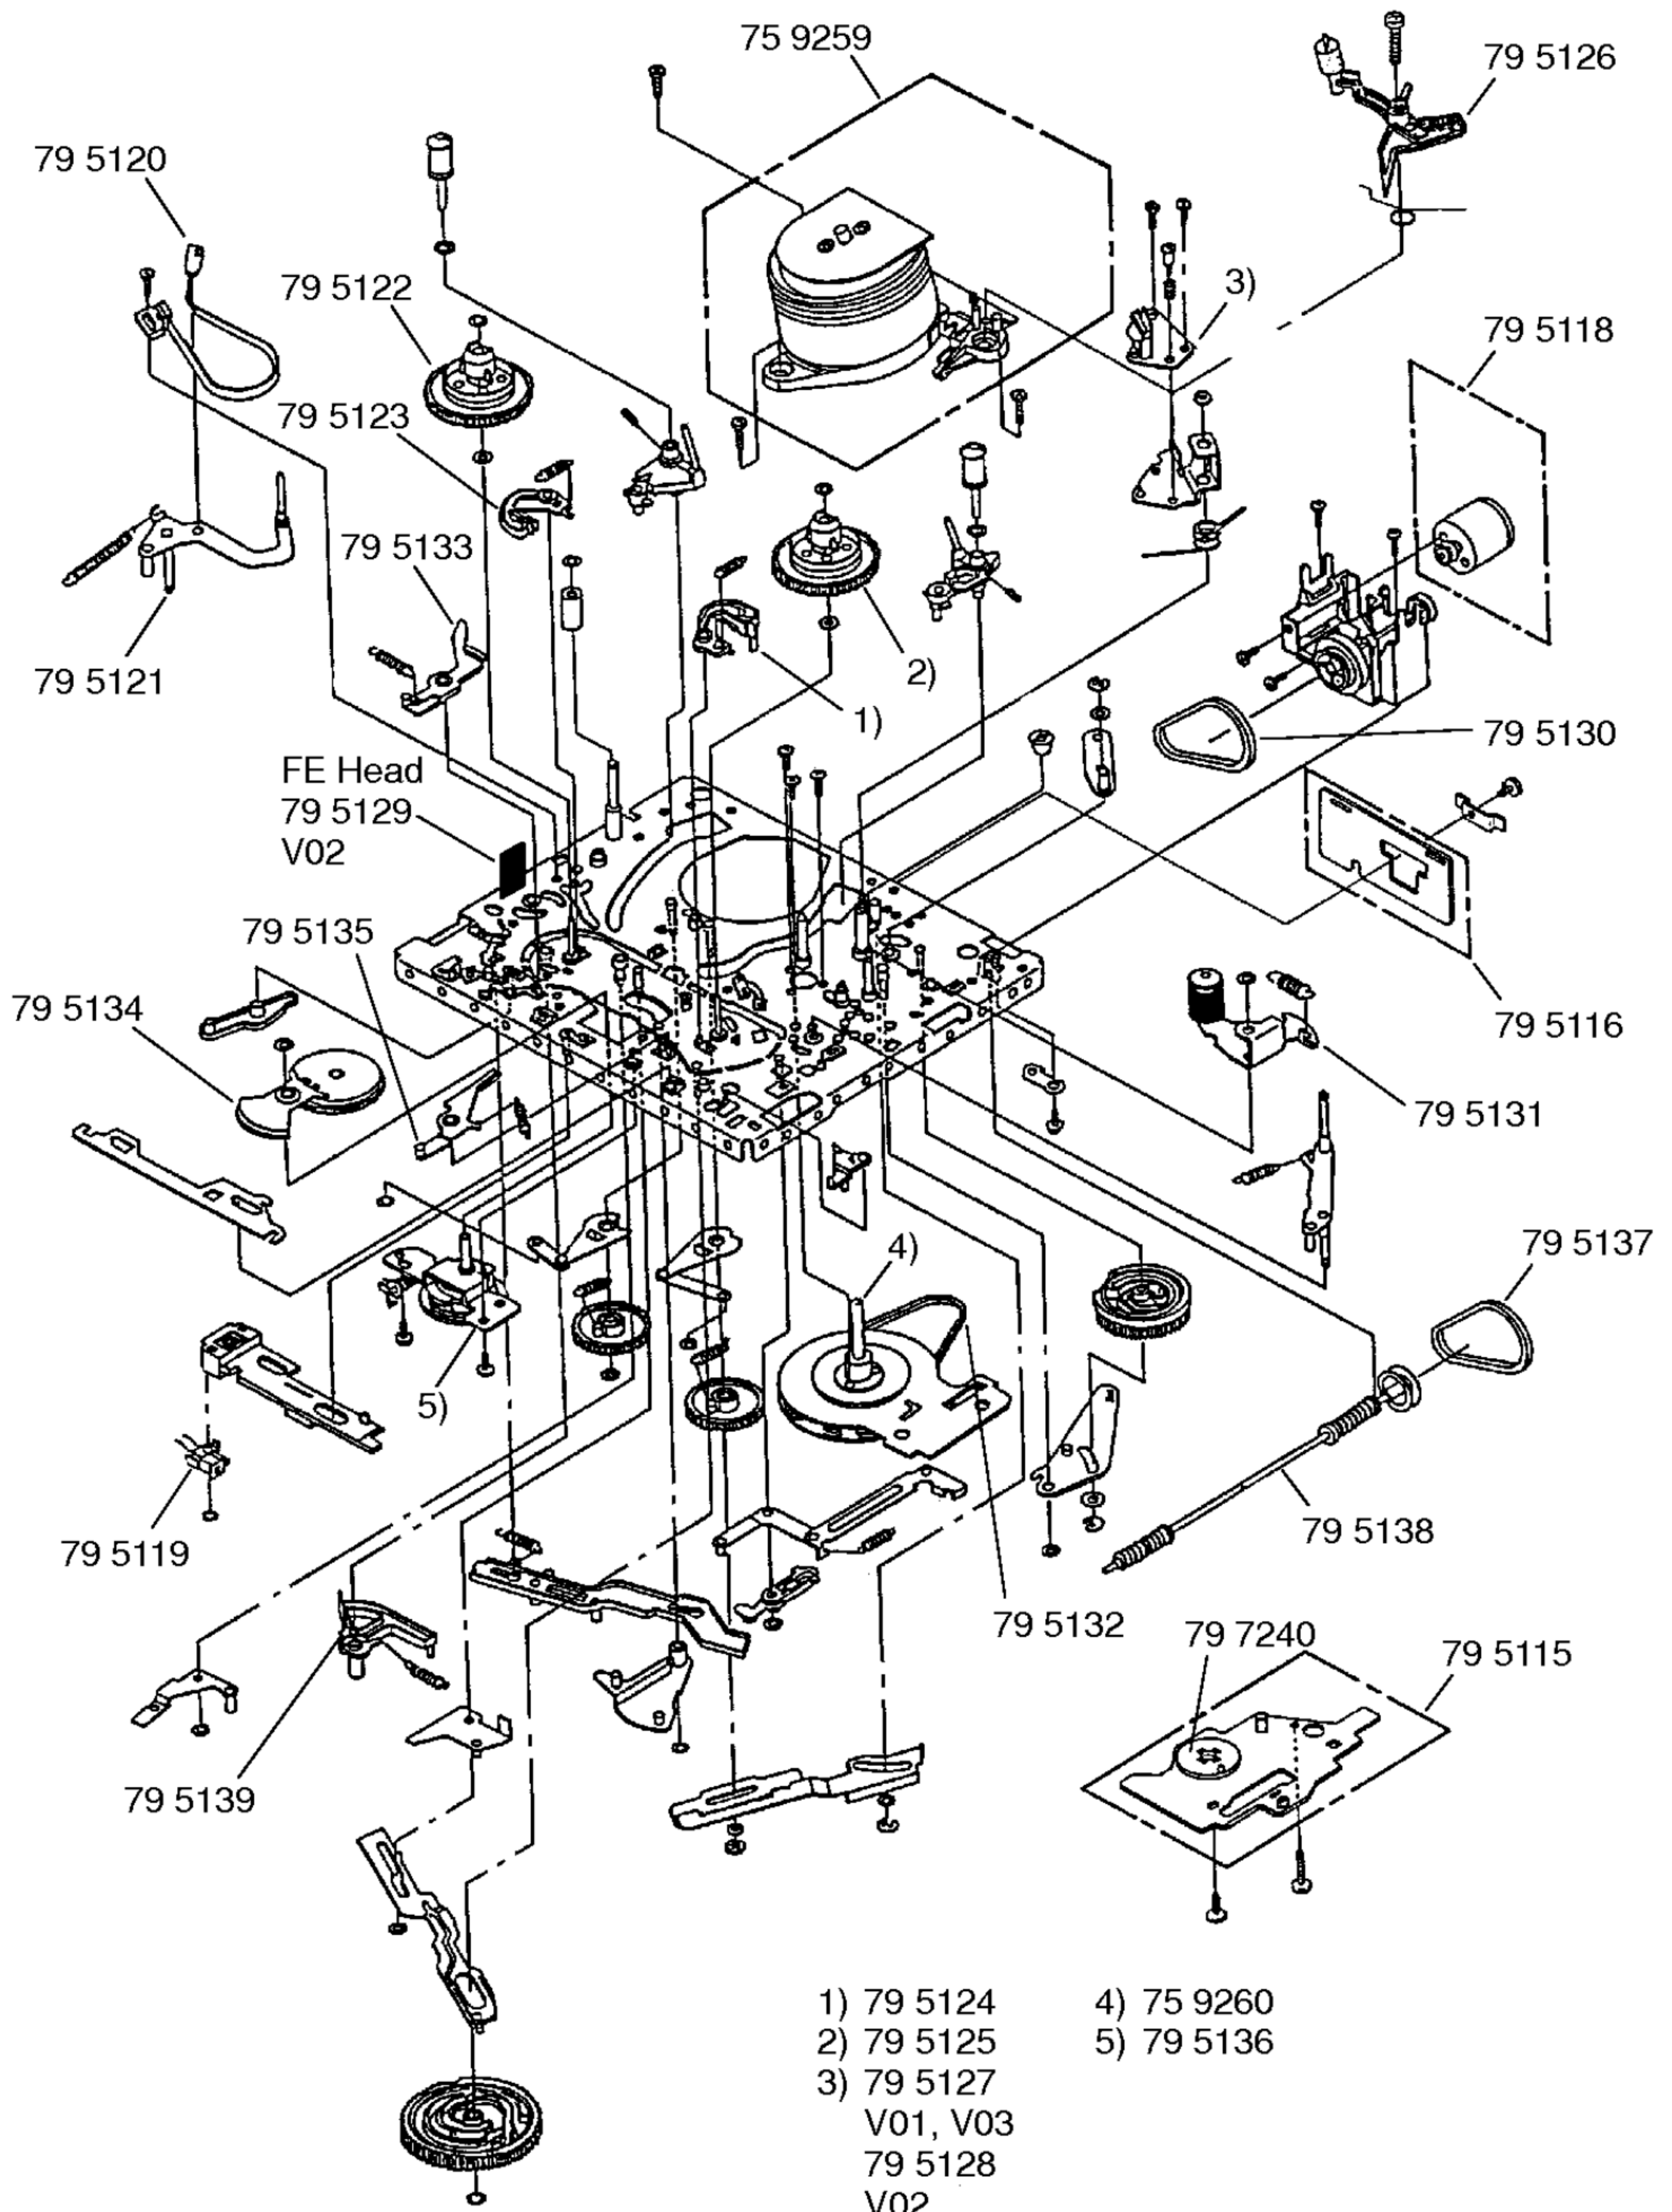

 
Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		Bedienteil	control P.C.B.
PCB030	—	V01, V03	
PCB030	—	V02	
TU4201	79 5114	HF-Modulator	Rf-convertor
PCB550	79 5115	MC-1/Deck P.C.B	deck P.C.B. assy
PCB570	79 5116	MC-2/Deckrelay P.C.B.	deck relay P.C.B. assy
			
D501	79 0235	DSF10T	
D502	79 0235	DSF10T	
D503	79 0235	DSF10T	
D504	79 0235	DSF10T	
D505	79 0235	DSF10T	
D506	79 0235	DSF10T	
D507	79 0235	DSF10T	
D508	79 0235	DFS10T	
D509	73 9136	SB10-03A3	
D510	73 9136	SB10-03A3	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
D512	73 2762	GZA15	
D1001	79 5140	LN59LMI/LED/IR	
D1002	73 8618	1SS132T	
D1003	73 8618	1SS132T	
D1004	73 8618	1SS132T	
D1005	73 8618	1SS132T	
D1006	73 8618	1SS132T	
D1007	73 8618	1SS132T	
D1008	73 4592	MTZJ10A	
D1009	79 5085	1SS198TE	
D1010	79 5085	1SS198TE	
D1011	73 7049	MTZJ7.5A	
D1012	79 5086	11ES1TA1	
D1013	79 5086	11ES1TA1	
D1501	—	LN81RCPN	
D1502	—	LN81RCPN	
D1503	—	LN81RCPN	
D1504	—	LN81RCPN	
D1505	—	LN81RCPN	
D3701	73 8618	1SS132T	
D4001	73 8618	1SS132T	
D4003	79 5087	HZS6R8JB2	
D4008	79 5085	1SS198TE	
D1002	73 8618	1SS132T	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
IC502	72 7432	NJM7805fa	
IC503	79 5098	PQO9RF1	
IC1001	79 5097	OEC8045B	
IC1002	79 5096	PST600C	
IC1003	79 5095	BA10358	
IC1004	79 5094	BA6247v1	
IC3701	73 0303	BA7025L	
IC4001	79 5093	LA7480	
IC4002	73 8224	LC89925	
IC4101	79 5092	LA7376ST	
IC5001	79 5090	BA7751LS	
IC5002	79 5089	BA7755	
			
Q501	79 1859	2SB926T-AA	
Q502	73 4847	DTC143ES	
Q503	79 5099	2SD1667RS	
Q511	79 5100	2SA1527AA	
Q512	73 2181	DTC124ESTP	
Q517	73 2181	DTC124ESTP	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
Q1001	79 5101	PT304R2L	
Q1002	79 5101	PT304R2L	
Q1003	79 5102	2SD1111AAF	
Q1004	72 1470	2SA608SPA	
Q1005	73 2181	DTC124ESTP	
Q3701	79 0229	2SC536SPA	
Q4004	79 0229	2SC536SPA	
Q4008	79 0229	2SC536SPA	
Q4010	72 1470	2SA608SPA	
Q4011	72 1470	2SA608SPA	
Q4012	73 2181	DTC124ESTP	
Q4013	79 0229	2SC536SPA	
Q4014	72 1470	2SA608SPA	
Q4018	73 5217	DTC114TSTP	
Q4020	79 0229	2SC536SPA	
Q4301	79 0229	2SC536SPA	
Q4303	79 0229	2SC536SPA	
Q4305	73 2181	DTC124ESTP	
Q4308	73 2181	DTC124ESTP	
Q5002	79 5100	2SA1527	
Q5003	73 2181	DTC124ESTP	
Q5005	73 3468	2SC1317T/QR	
QS1001	79 5111	SBX1790-72/IR	receiver ir

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
C501 C504 C4330	79 5103	 3300uF 25V \$	
	79 5103	3300uF 25V \$	
	79 5104	82pF 50V \$	
X1001 X4301	79 3594	 8 MHz	
	79 4195	4.43 MHz	
T5001 PF4001	79 5108	 70 KHz/ Bais	70 khz/ bais
	79 5141	LPF 5 MHz	
DL4302	79 5109	 Delay	delay

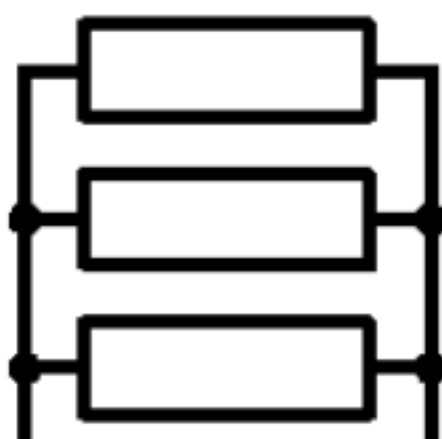Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
T501	79 5107	 Netz \$	power
F501	70 0608	 T1.6A 250V	
R509 R510	79 5105 79 5106	 0.1 Ohm 0.25W \$ 0.3 Ohm 0.25W \$	
NR1001	79 5110	 RGLD4x472J	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
SW102	79 7240	Mode switch	
SW1001	79 5112	Push	push
SW1501	79 5113	Tast Power	tact
SW1502	79 5113	Tast Play	tact
SW1503	79 5113	Tast Stop etc.	tact
SW1504	79 5113	Tast Rew etc.	tact
SW1506	79 5113	Tast FF etc.	tact
SW1507	79 5113	Tast Repart etc.	tact

