


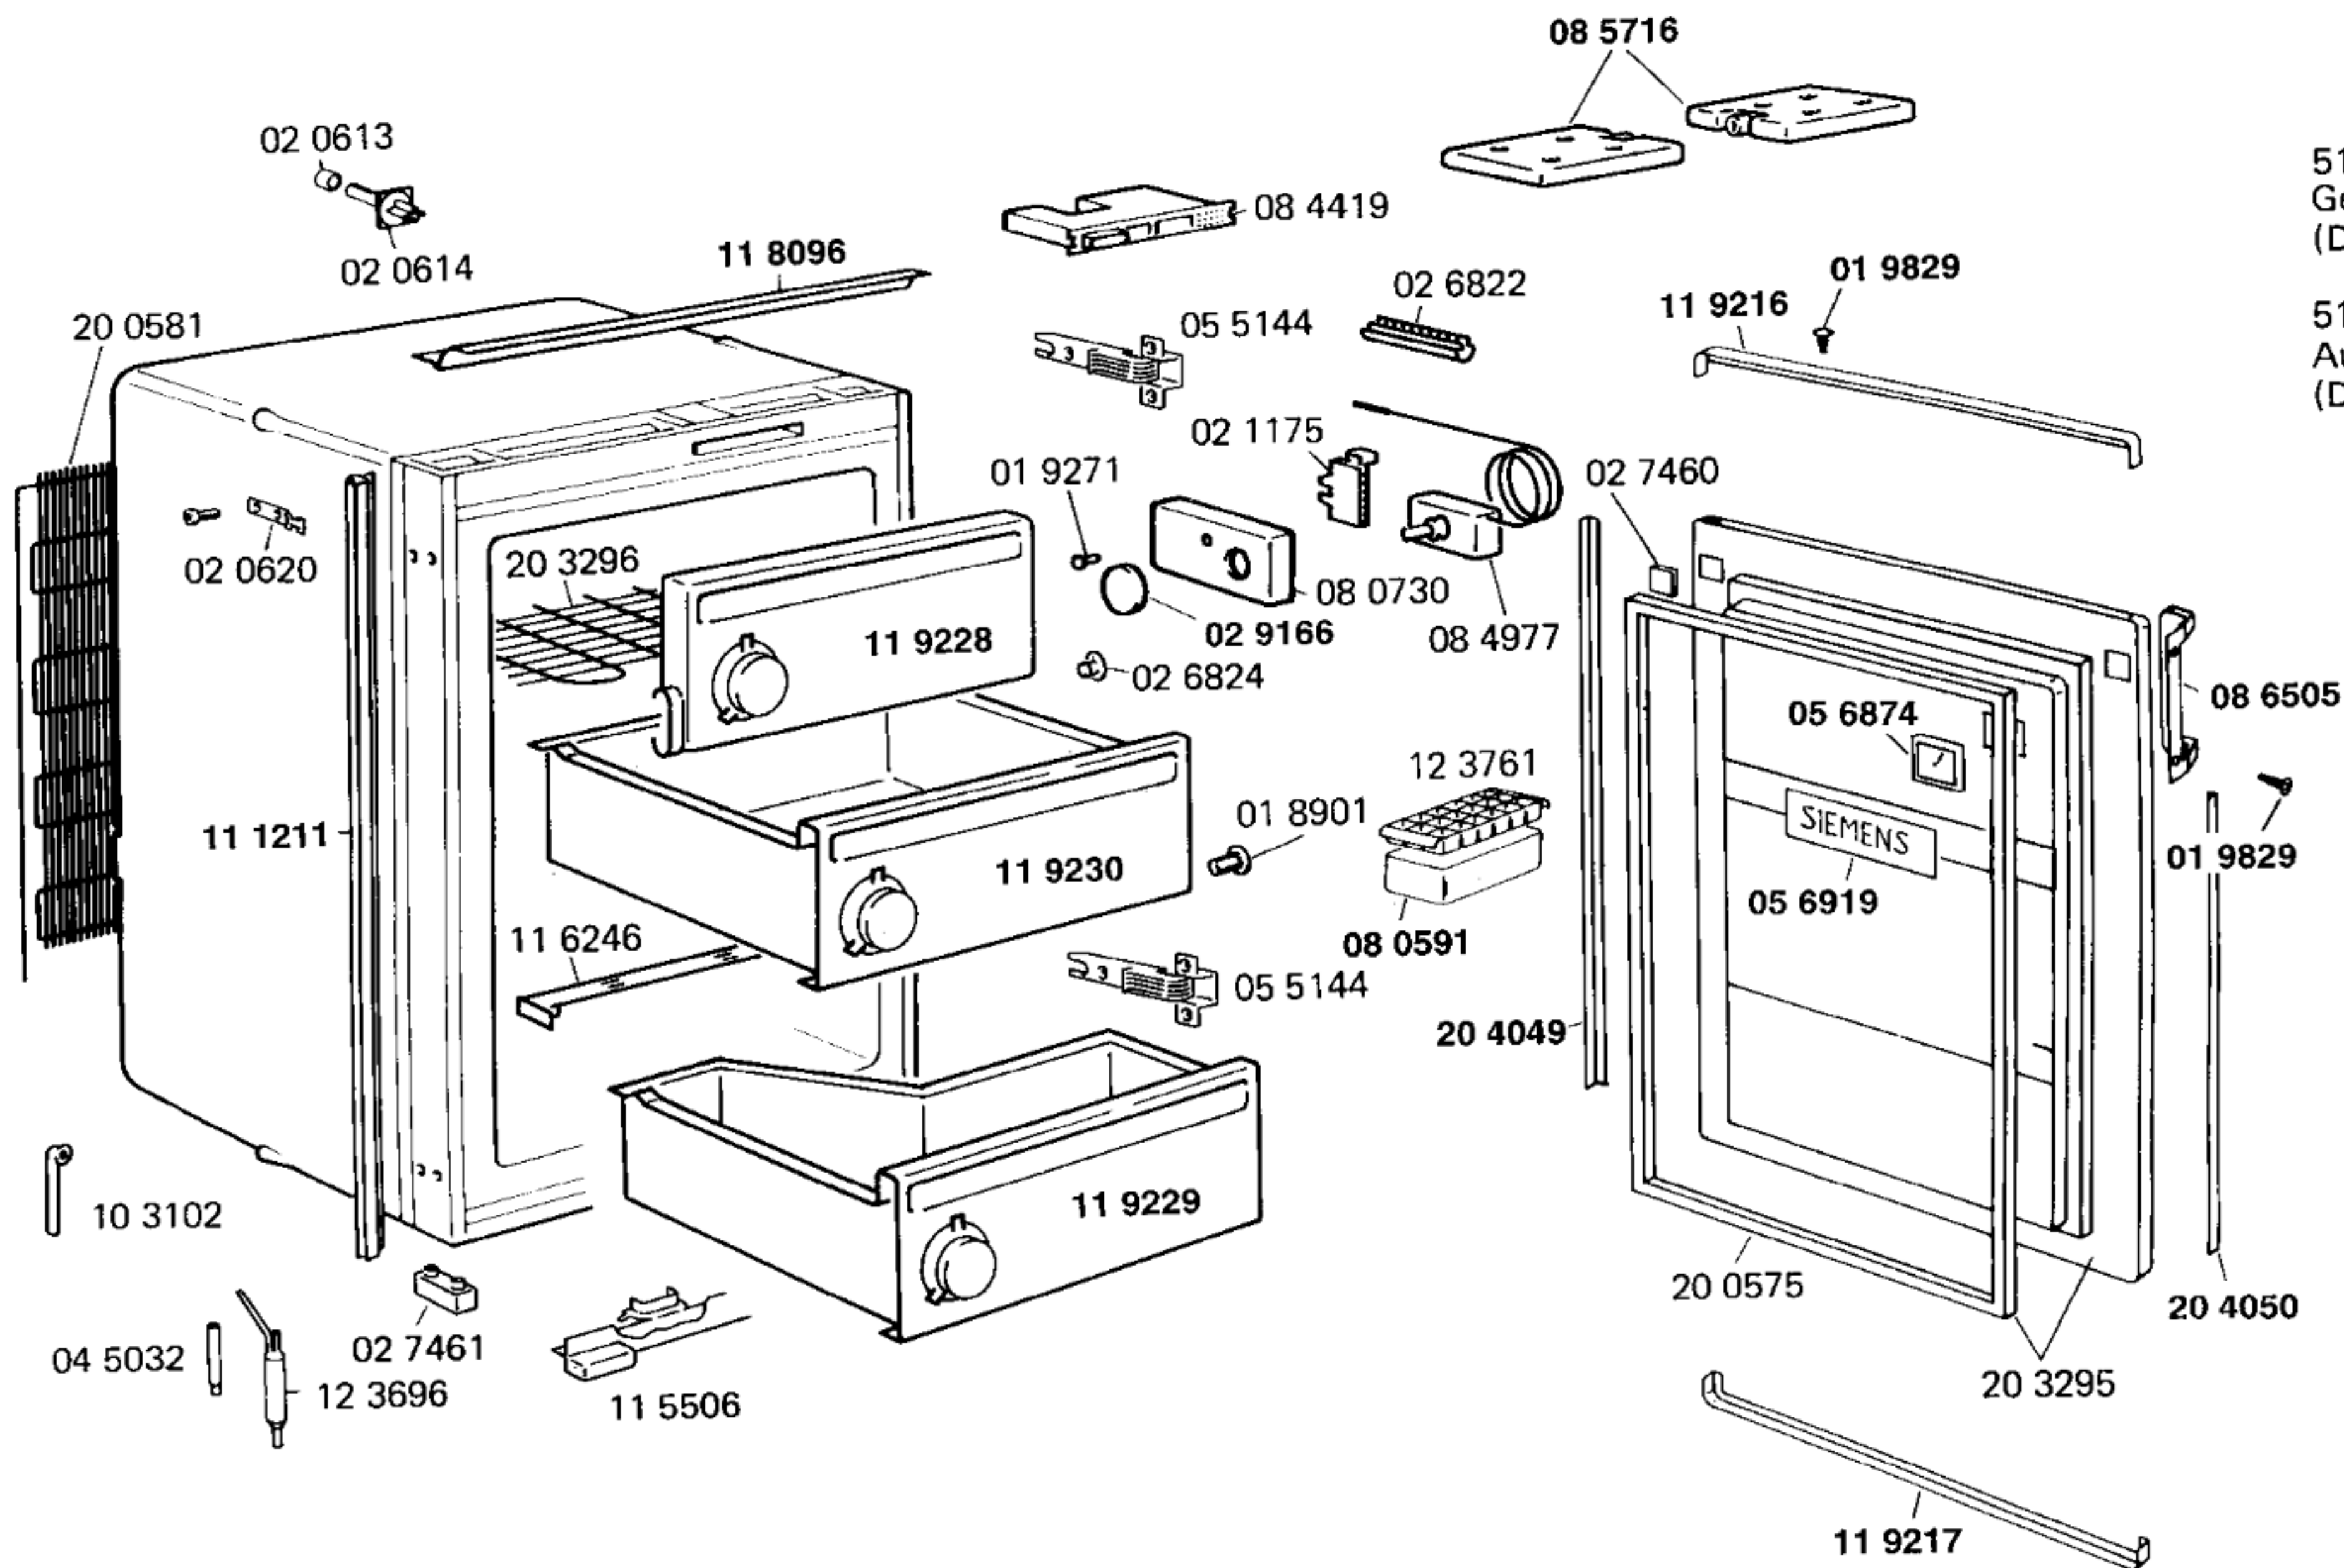

51 2635
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)


51 2304
Aufstellanweisung
(D,GB,F,E,I,NL,S,DK,

Zubehör:

Dekorrahmen
GZ10040, weiss
GZ10050, braun

Ausgleichs-
blenden
braun:
KZ12080, 37mm
KZ12090, 41mm
KZ12100, 56mm

Alu:
KZ12110, 37mm
KZ12120, 41mm
KZ12130, 56mm

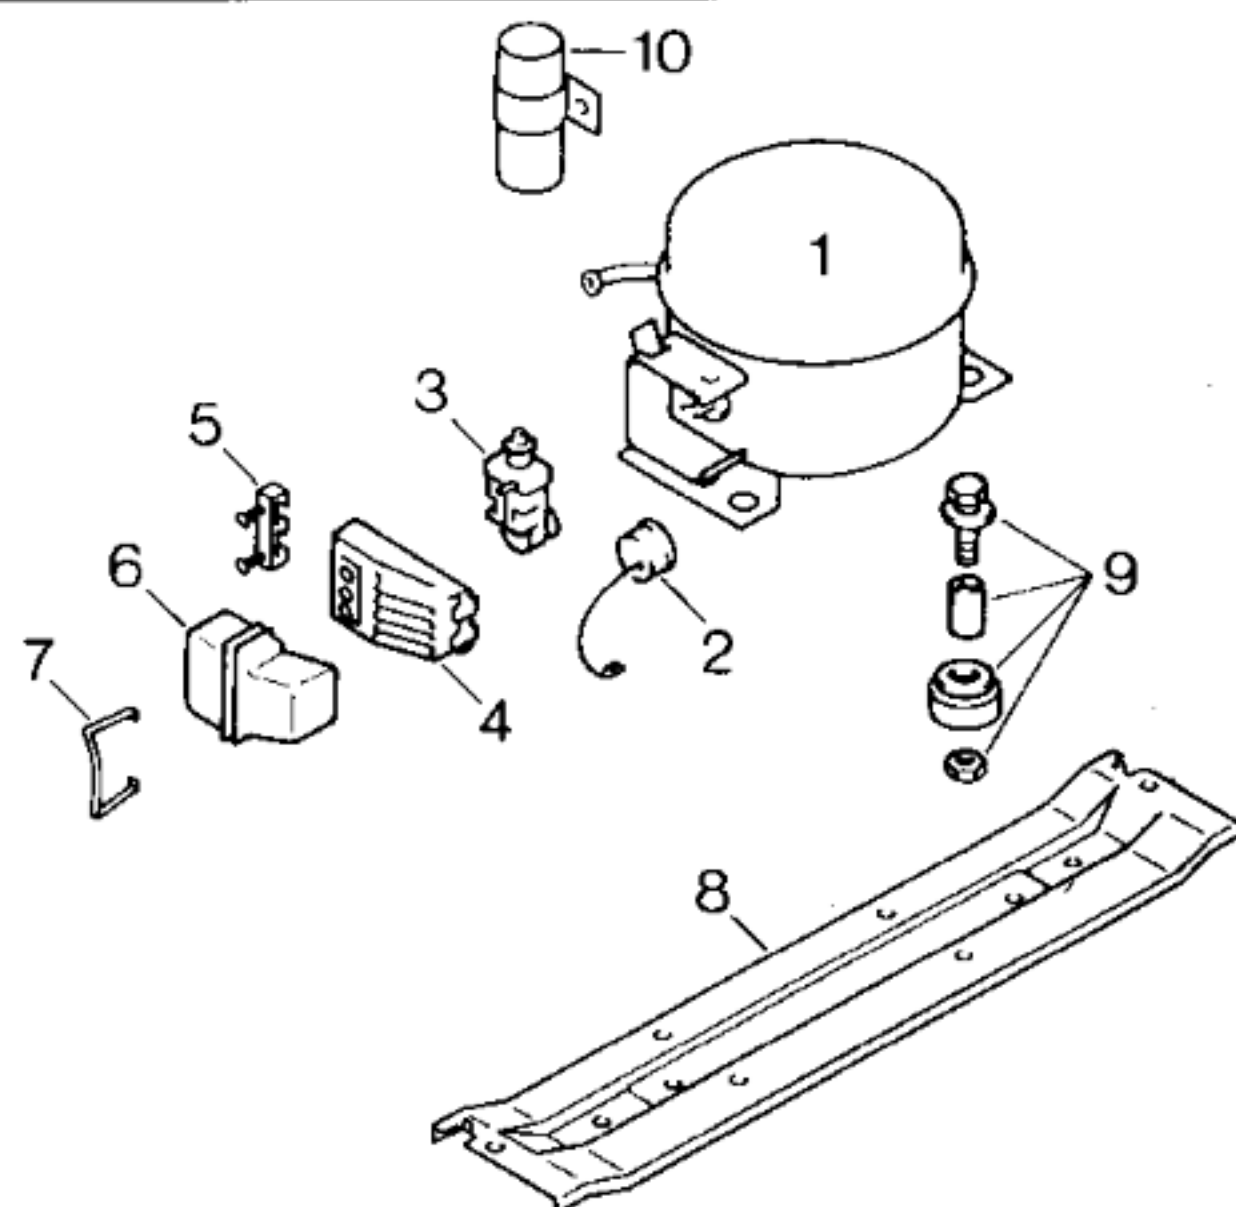

Pos.	EU1,F1	E1		
	Danfoss	Danfoss		
	TL 4 A	TL 5 A		
1	13 1064	140065		
2				
3	02 0108	02 0108		
4				
5				
6	05 1413	05 1413		
7				
8	11 0437	11 0437		
9	05 0166	05 0166		
10				
11				
12				
13				
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 4 A		
Förderleistung/Delivery/Débit		V 702		
Anlaufstrom/Starting current/Cour. de démarrage		A 7,8		
Widerstand/Resistance/Résistance		Ω 23,8		
		Hi/aux	Ω 19,7	
Temp.-Regler/Thermostat		M & J		
Typ/Type		TF 57 SF 2		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“ °C - 24 - 16		
Valeurs de commutation		„aus“ - 34 - 24		
		(„abtauen“ od.) „alarm“ - 19 - 12		
Füllmenge/Fill.quantity/Charge		R12 g 150		
Anschlußwert/Conn.load/Puiss. connectée		W 110		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		