 


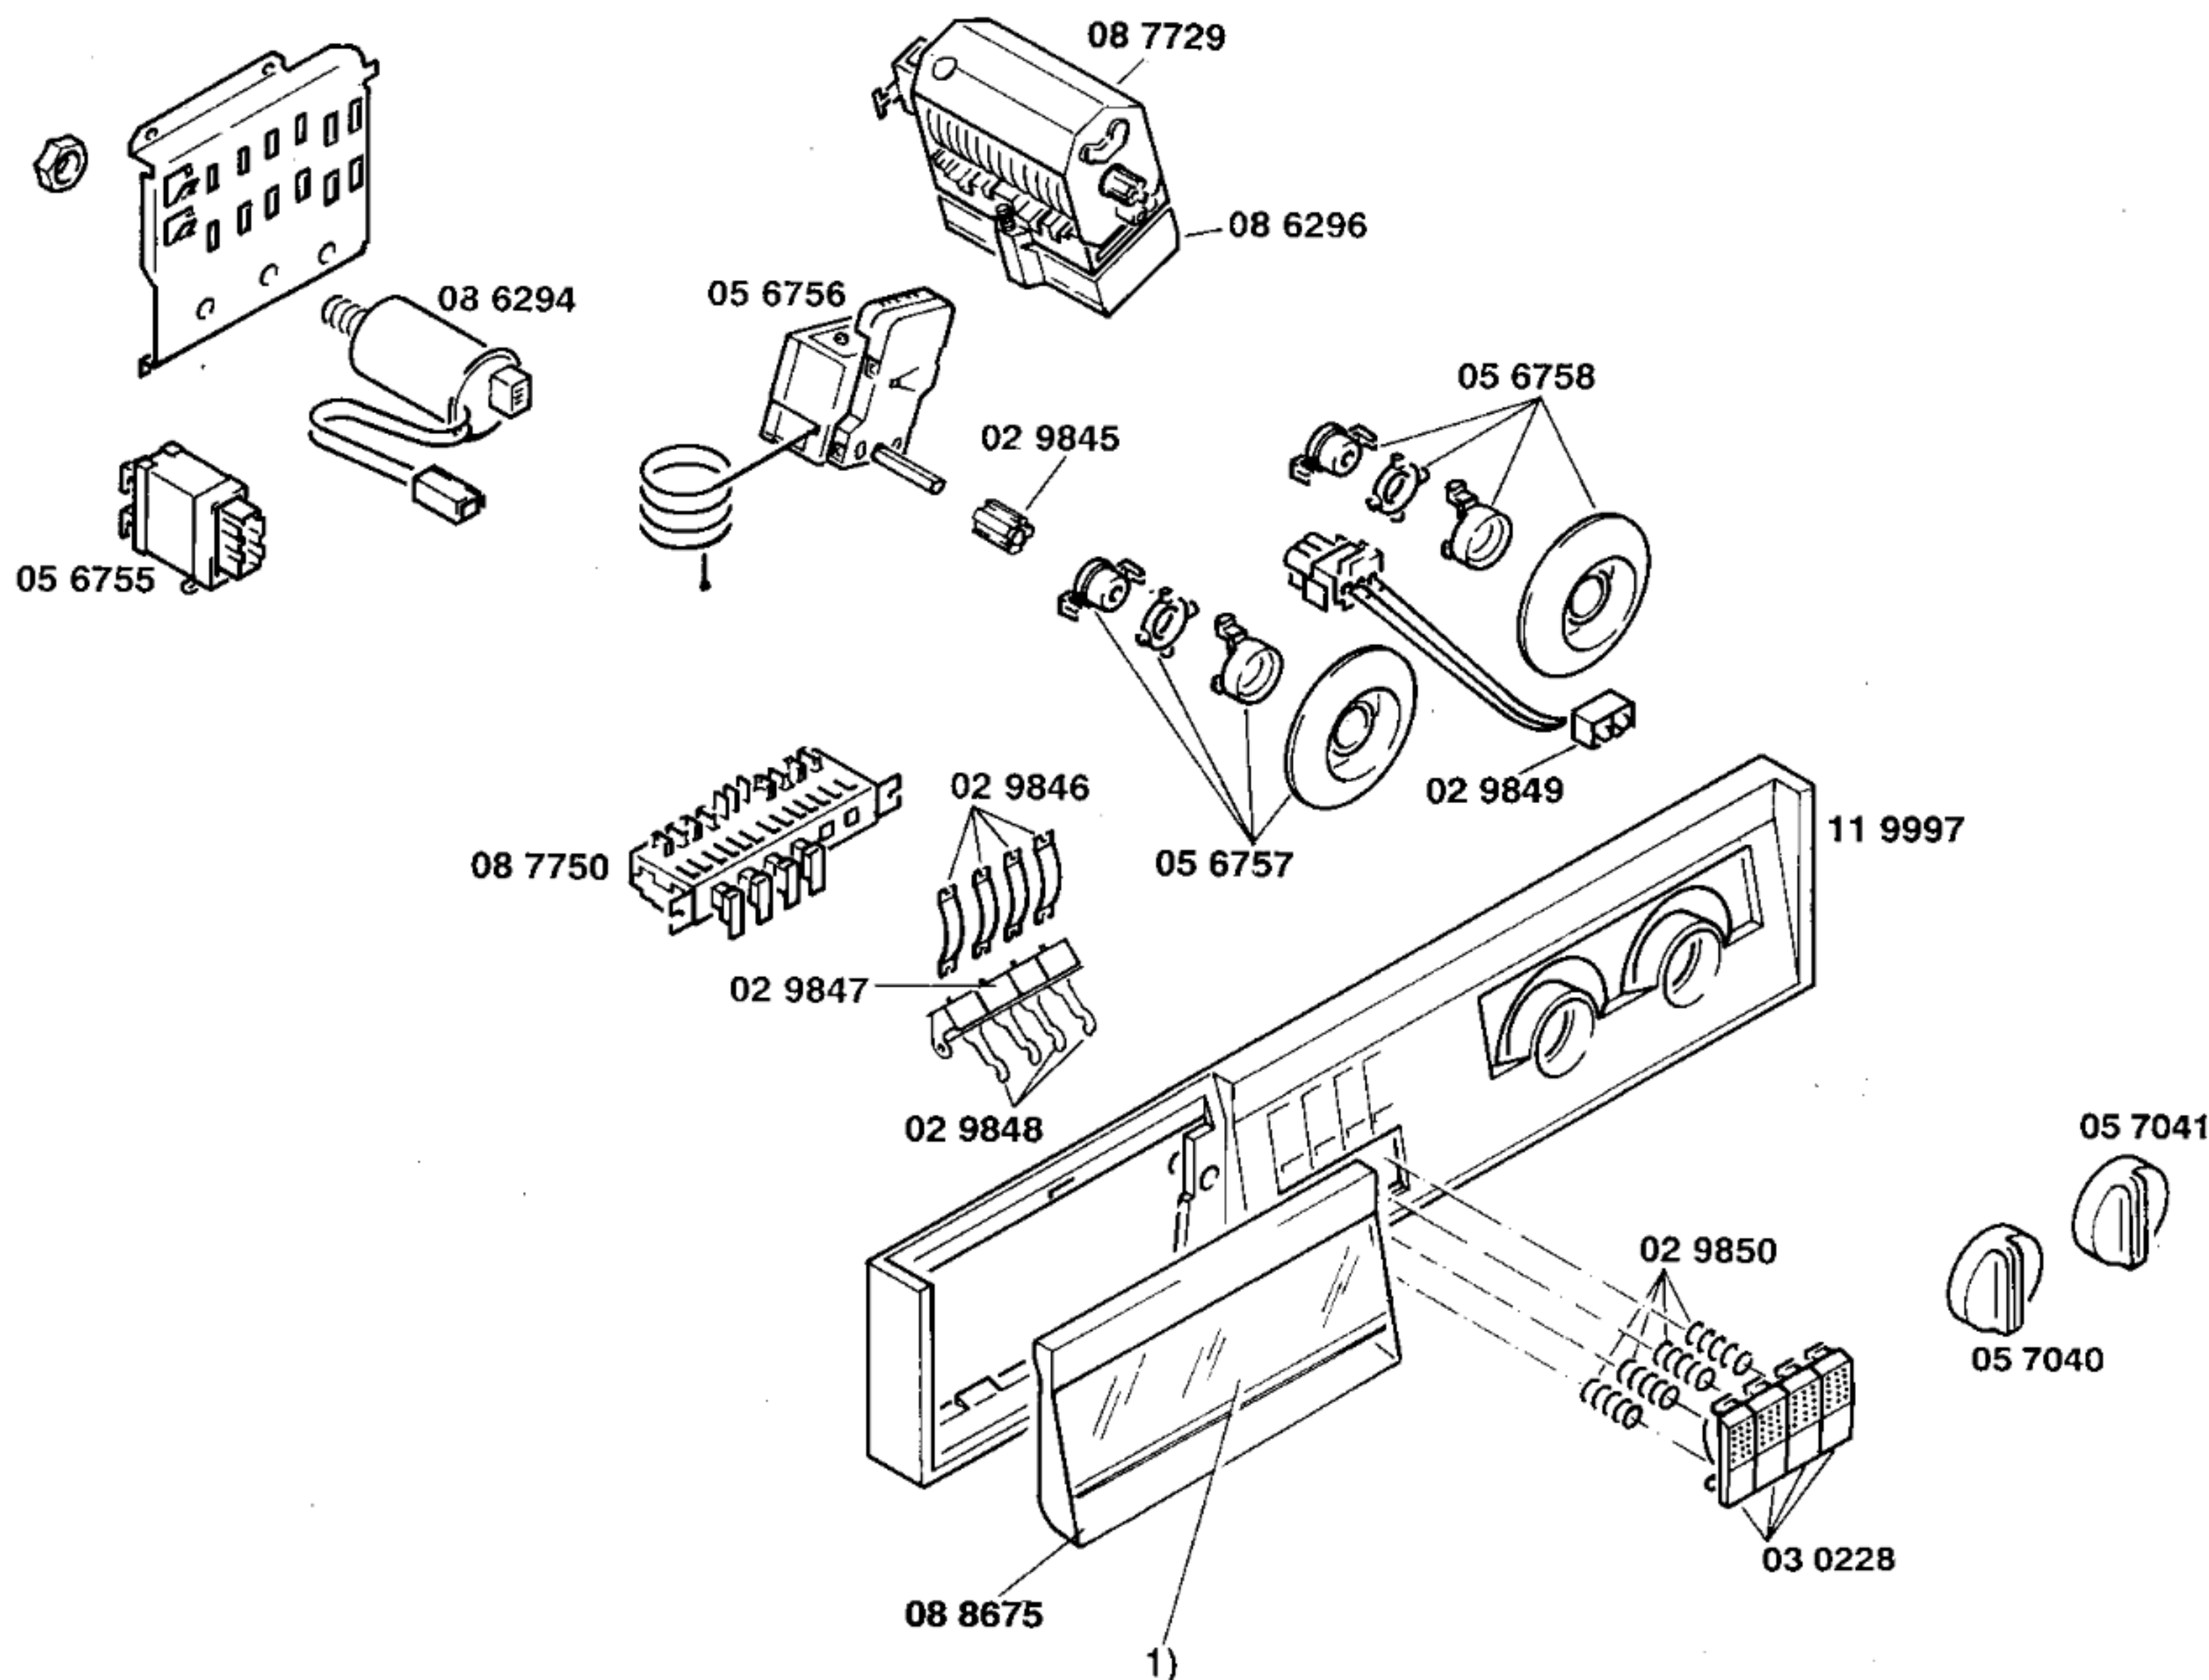

- 1) 08 8174
(D,I)
08 8716
(GB)
08 8717
N,SF
08 8718
(S,DK)
08 8719
(NL,F)
08 8720
(YU,TR)
08 8721
(E,GB)

Gebrauchsanweisungen:

- 51 3549
(D,I,S,N,SF)
51 3550
(S,DK)
51 3551
(NL,F,E,GB)

 
Programmtabellen:

 
- 51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)

Aufstellanweisungen:

- 51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

20 4245 Unterbauabdeckung

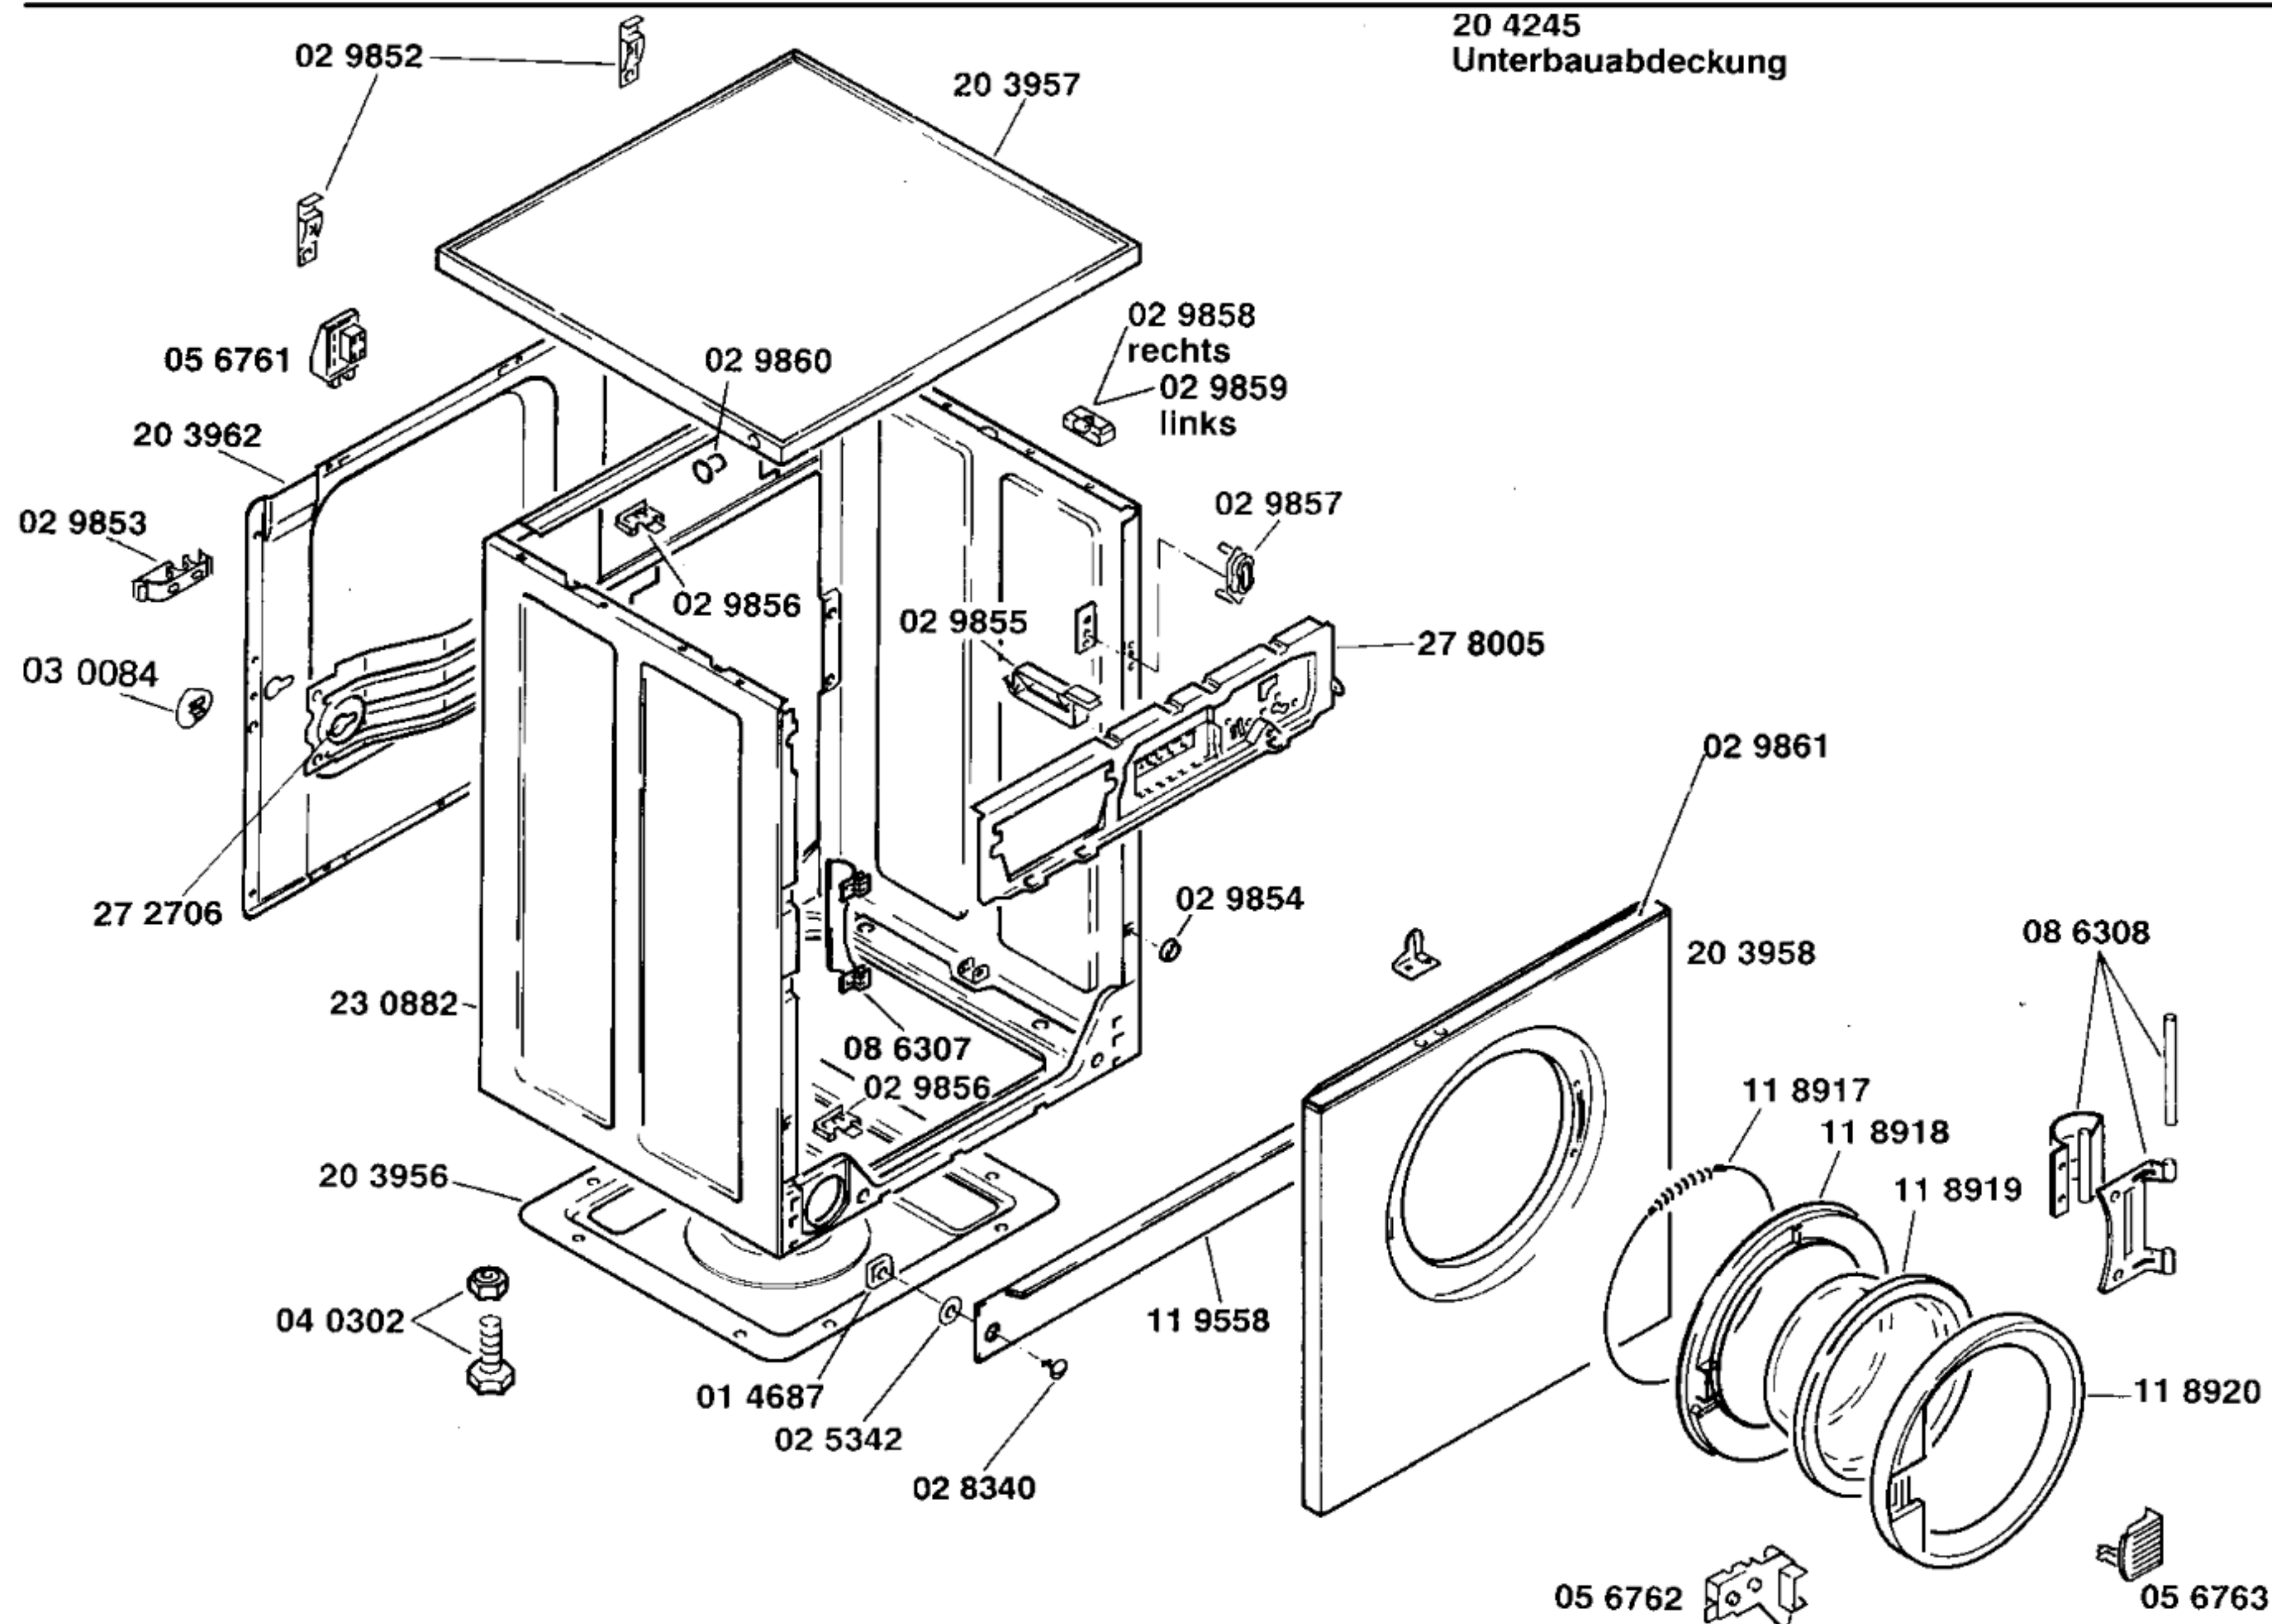

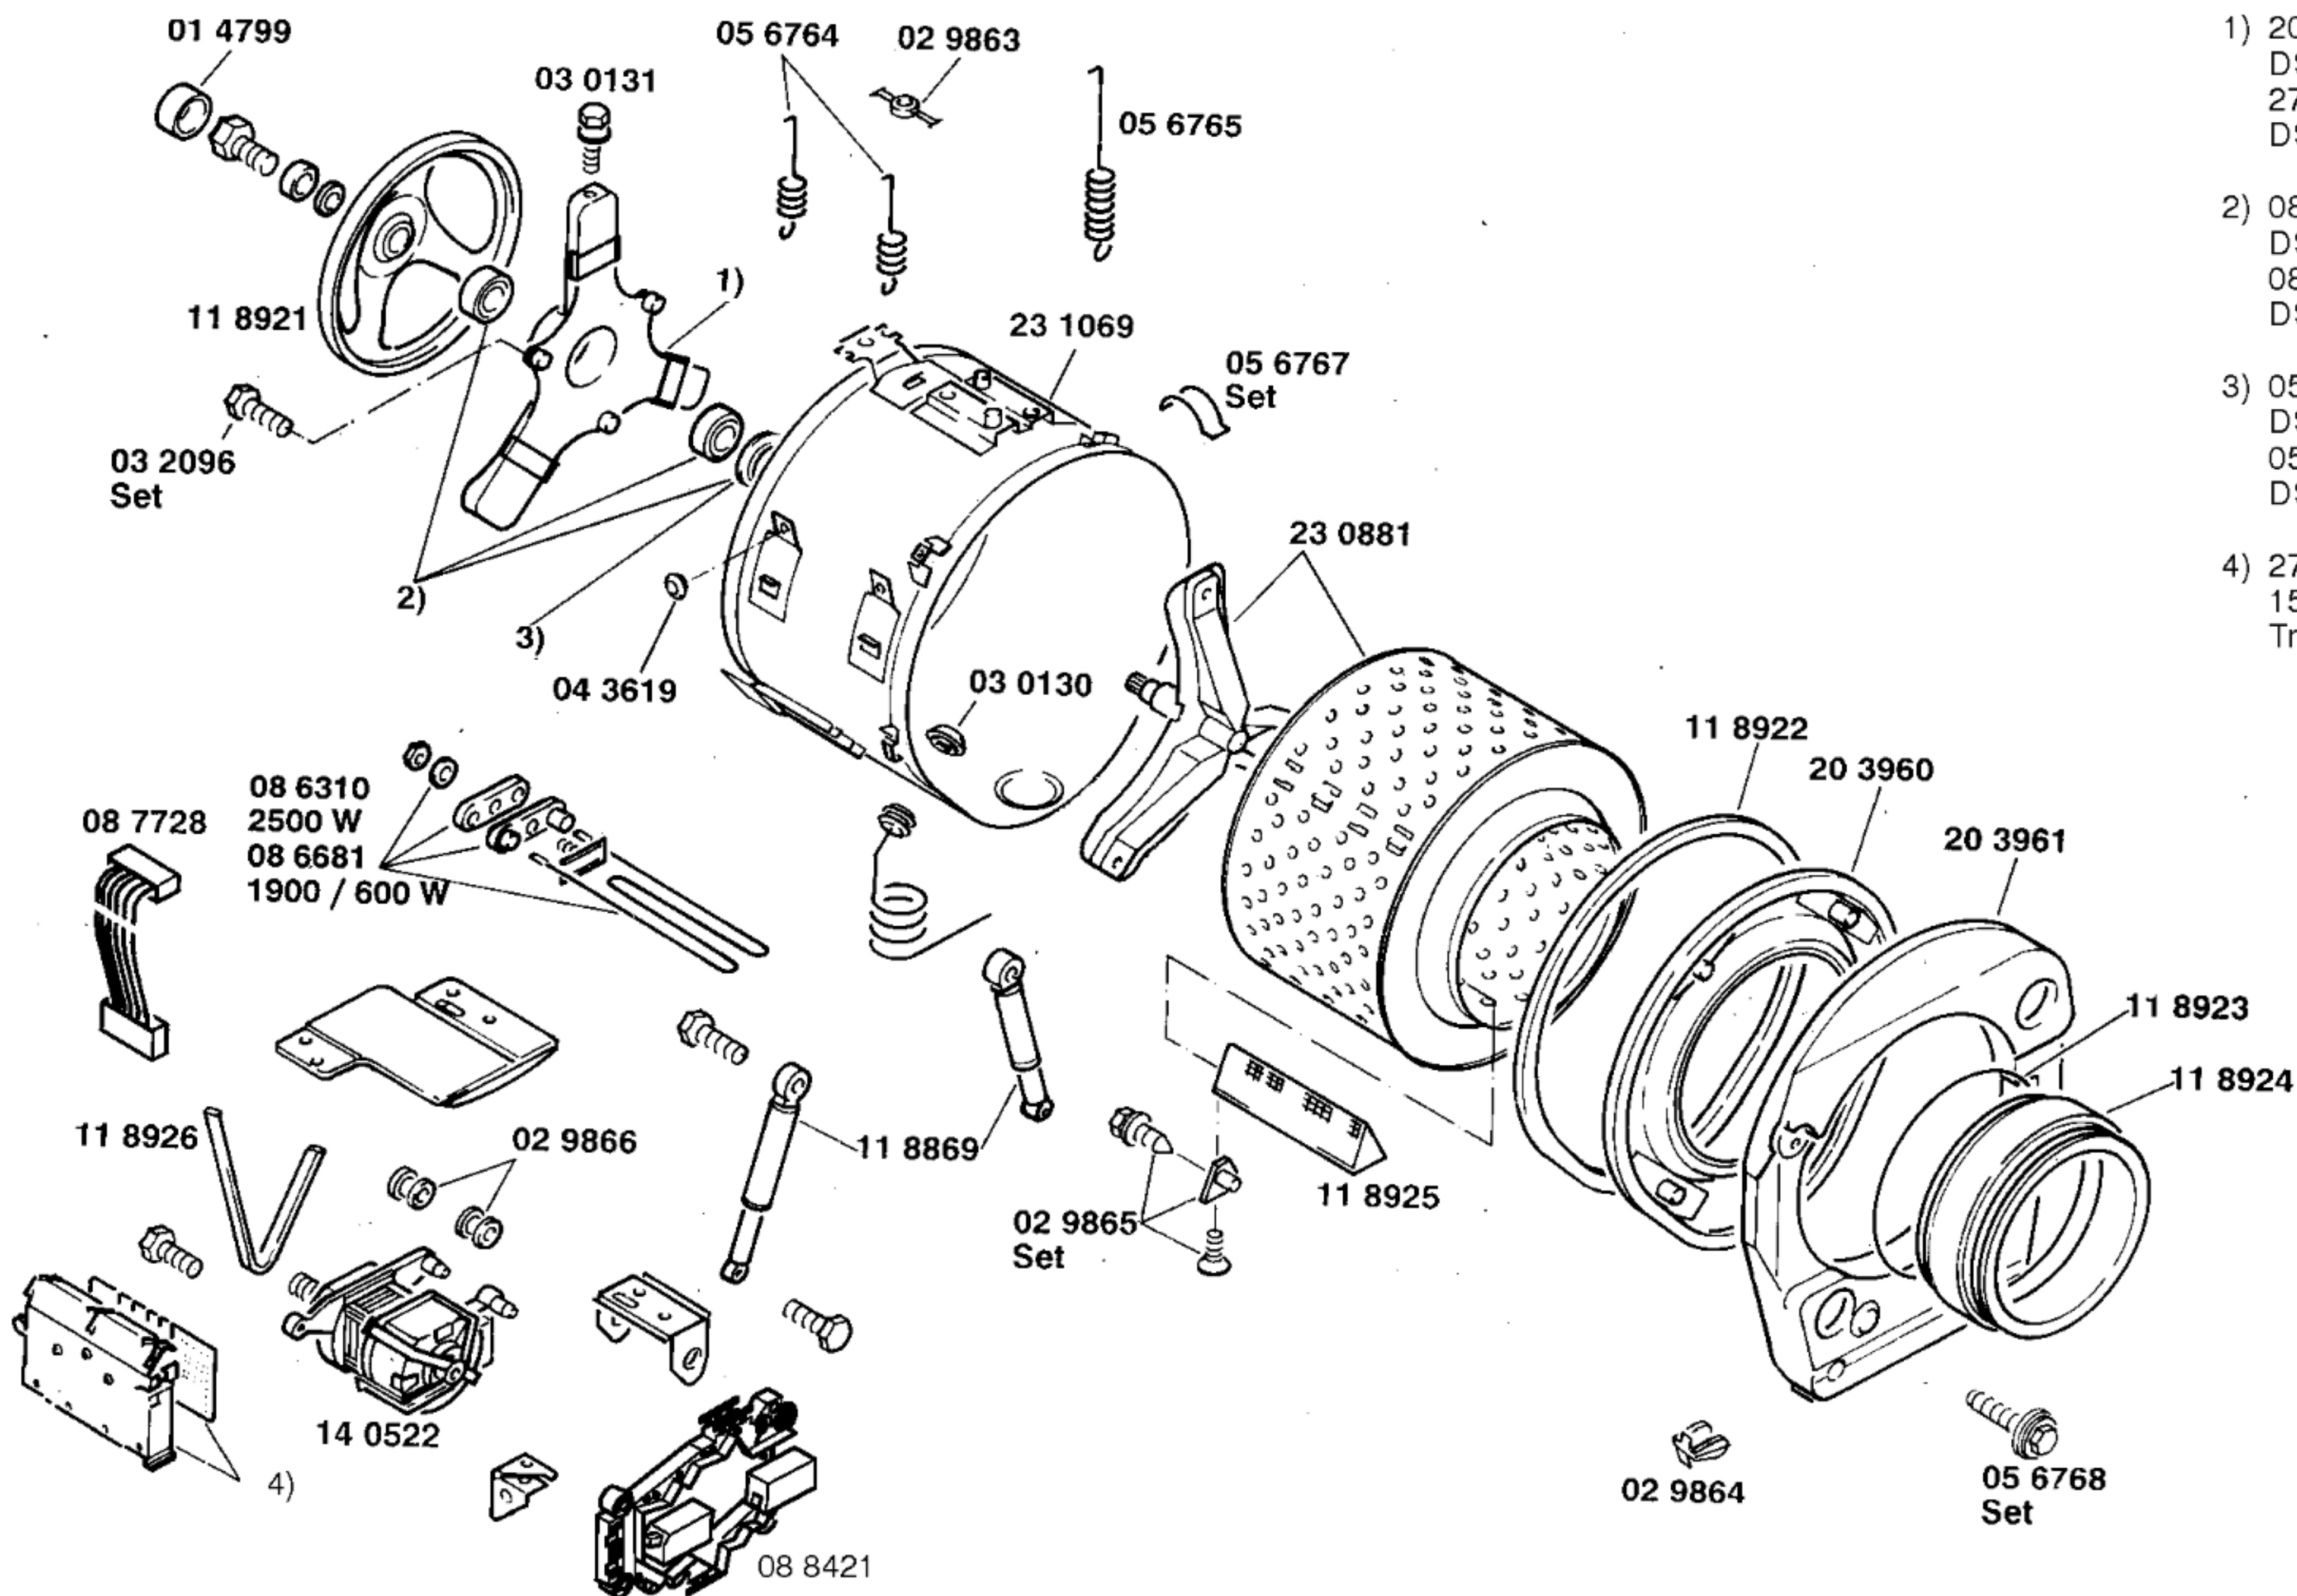

- 1) 20 3959
DS1,FG1,SI1
27 2656
DS2,FG2,SI2,D1
- 2) 086309
DS1,FG1,SI1
08 7278
DS2,FG2,SI2,D1
- 3) 05 6766
DS1,FG1,SI1
05 8436
DS2,FG2,SI2,D1
- 4) 27 1717
15 5272
Triac-Motorleistung

