



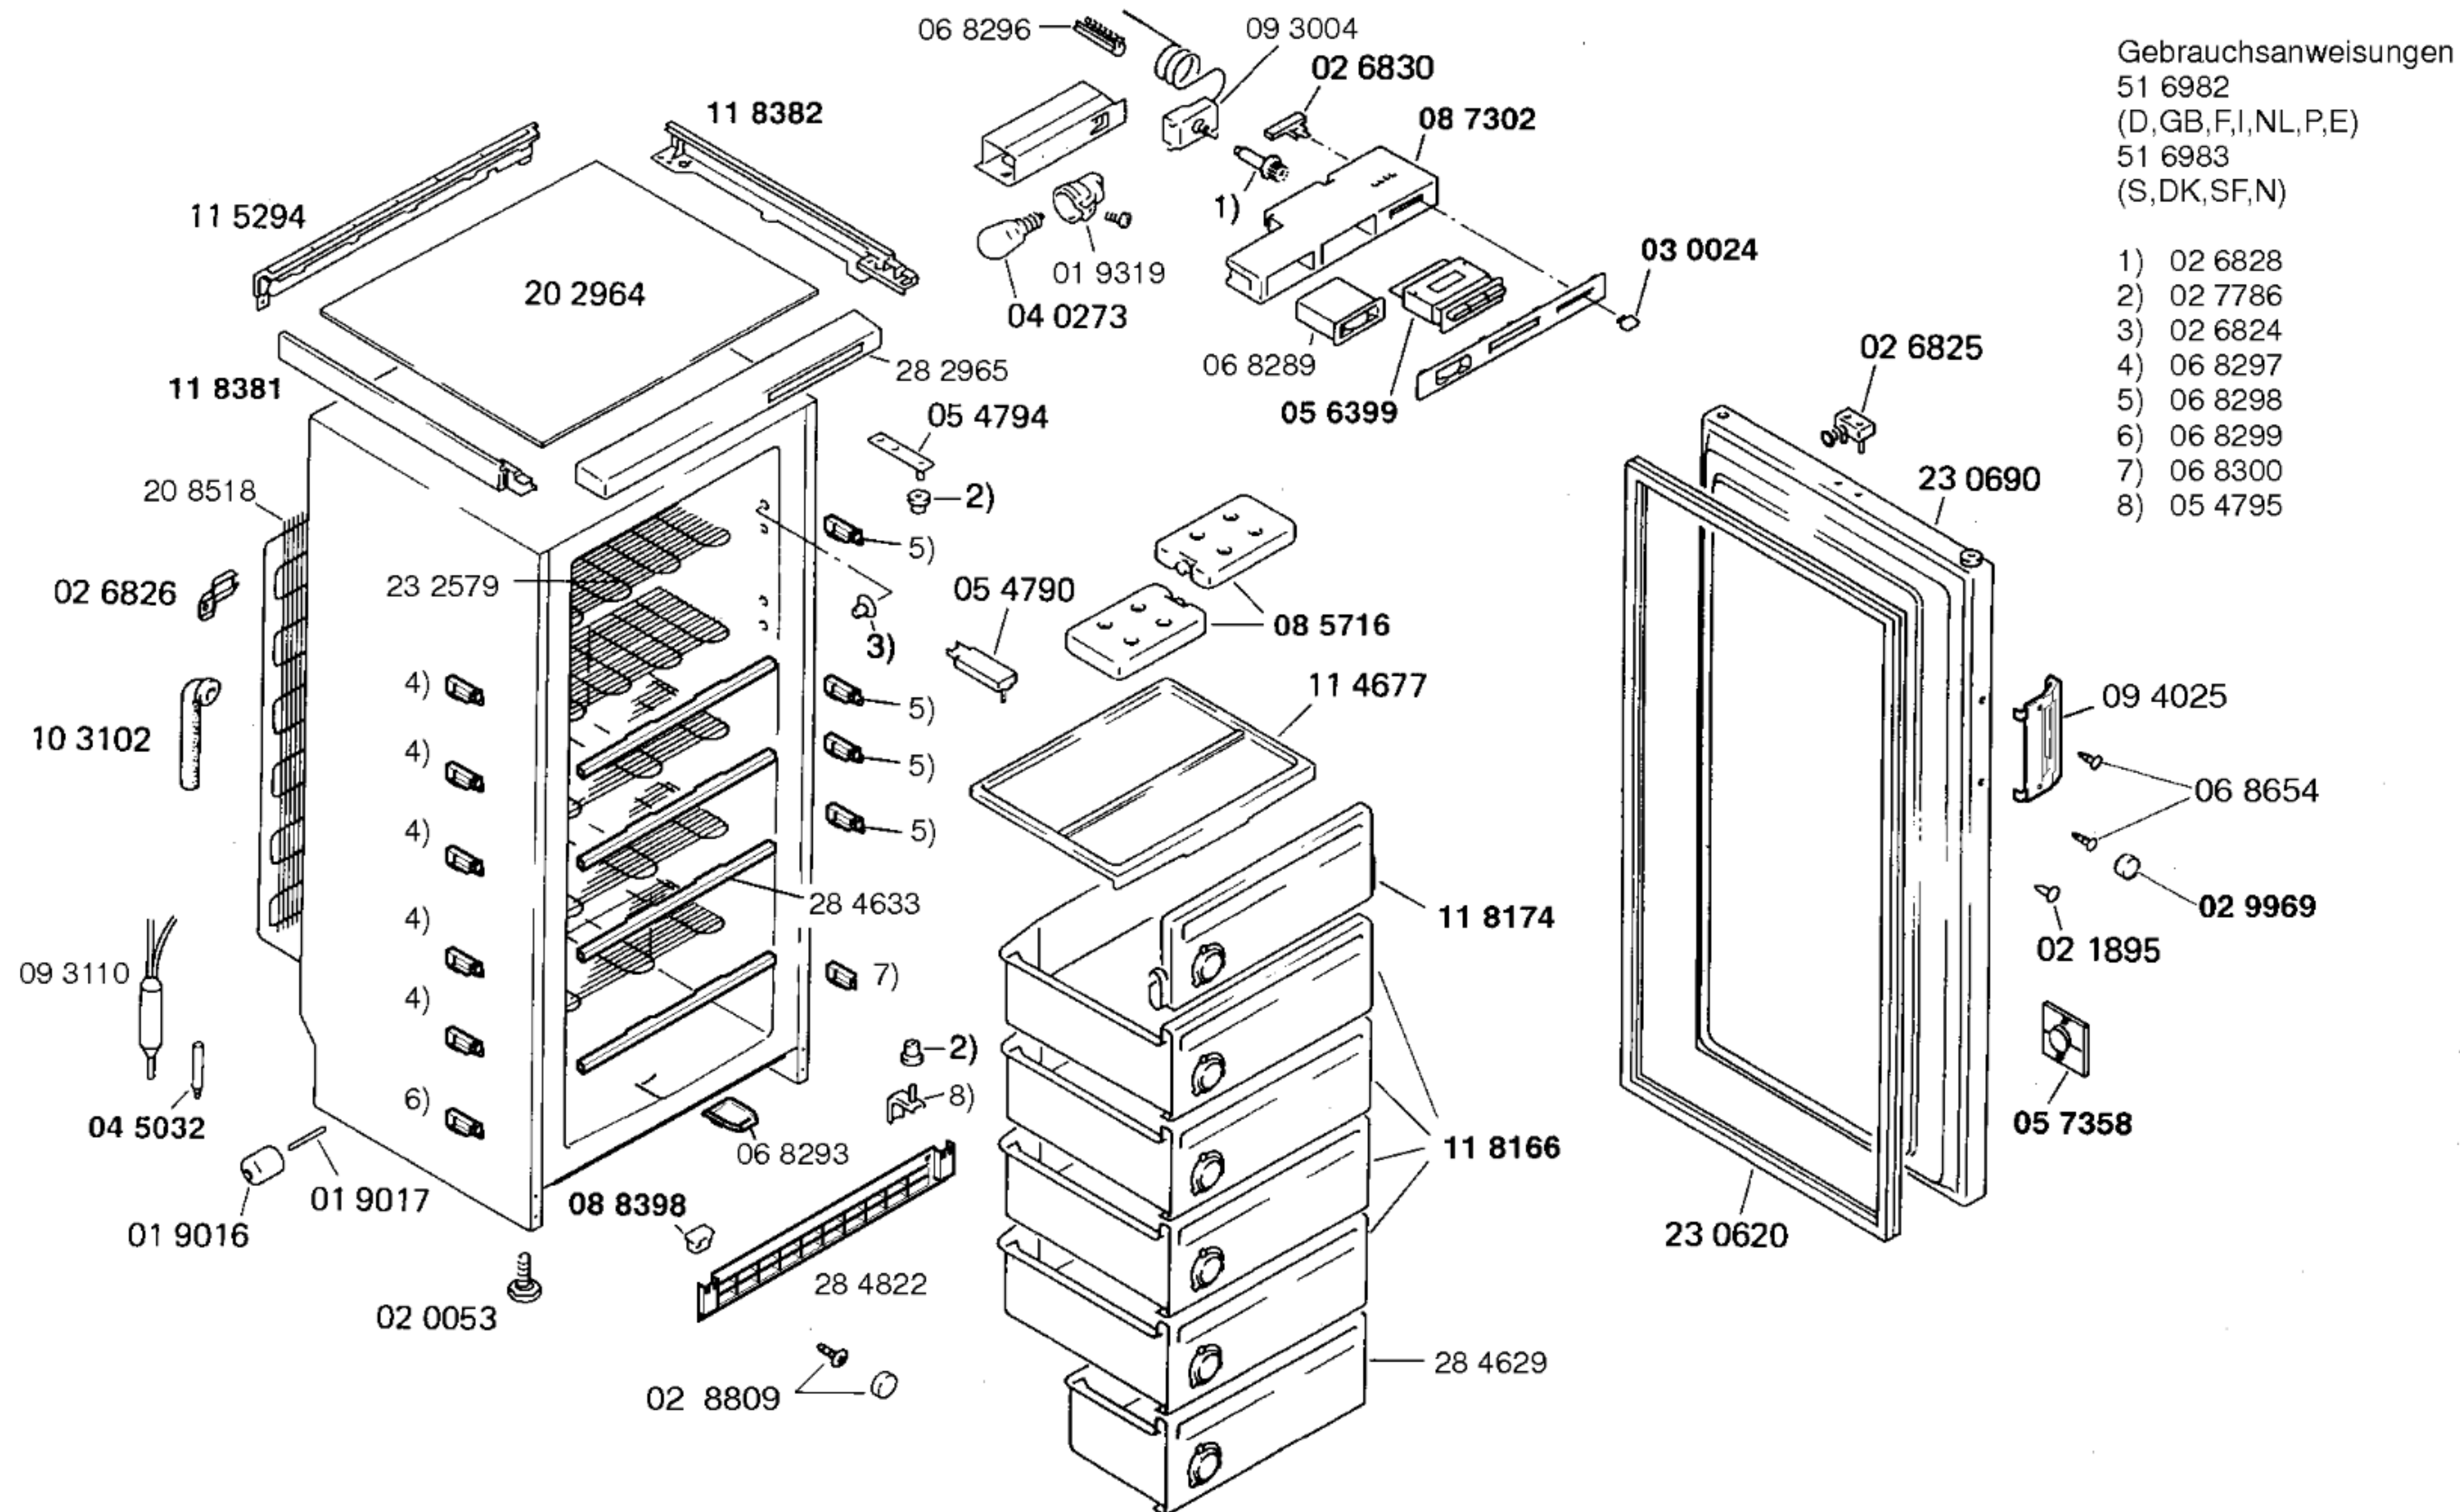

Gebrauchsanweisungen
51 6982
(D,GB,F,I,NL,P,E)
51 6983
(S,DK,SF,N)

- 1) 02 6828
- 2) 02 7786
- 3) 02 6824
- 4) 06 8297
- 5) 06 8298
- 6) 06 8299
- 7) 06 8300
- 8) 05 4795

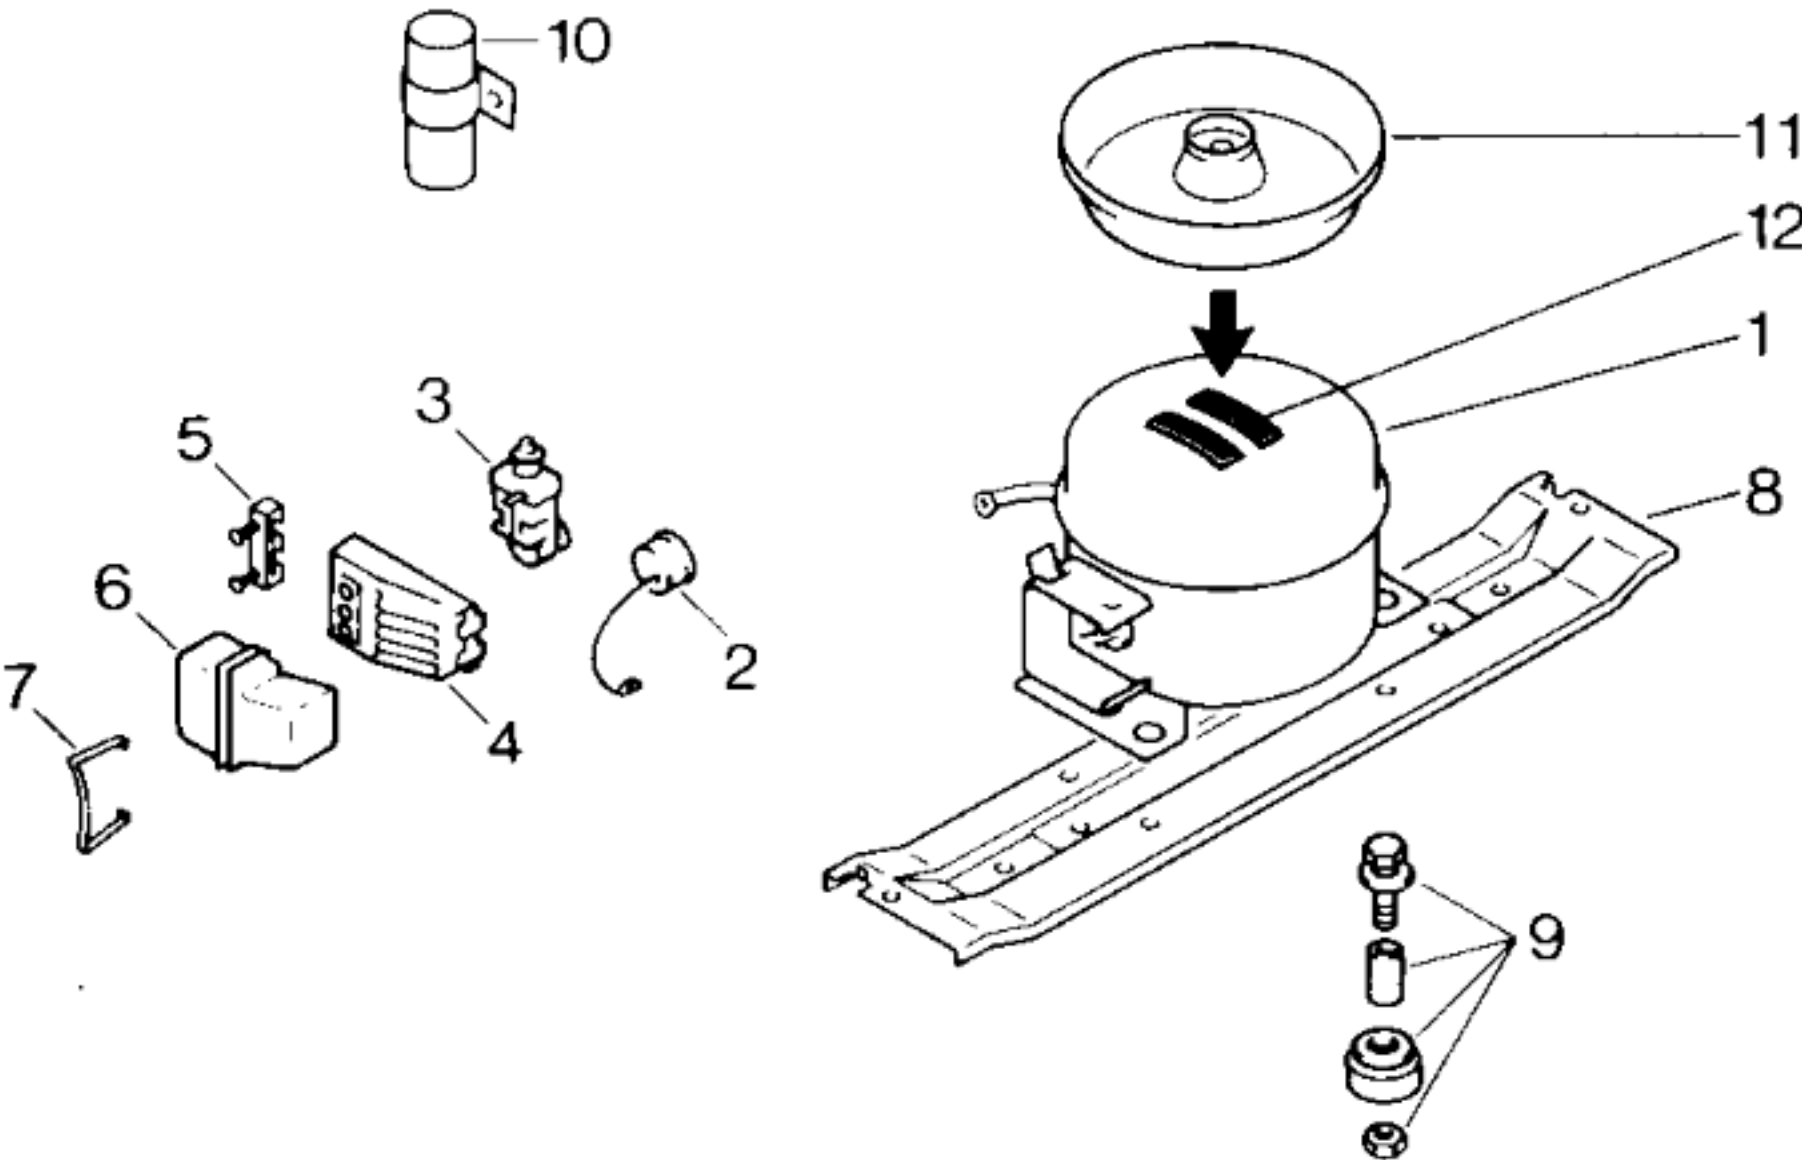

Pos.			
	Matsushita		
	D116LRAA		
1	14 0563		
2			
3	05 8506		
4			
5			
6	05 8458		
7	02 6731		
8	11 9114		
9	05 0166		
10	05 9467		
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Matsushita		
Typ/Type	D116LRAA		
Förderleistung/Delivery/Débit	l/h 1184		
Anlaufstrom/Starting current/Cour de démarrage	A 8,75		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω 12,0		
	Hi/aux Ω 28,7		
Temp.-Regler/Thermostat	Danfoss		
Typ/Type	077B2157		
Reglerstellung/Position	kalt warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$ -22 -14		
Valeurs de commutation	„aus“ -32 -22		
(„abtauen“ od.)	„alarm“ -17,5 -10		
Füllmenge/Fill.quantity/Charge	R12 g 185		
Anschlußwert/Conn.load/Puiss. connectée	W 120		
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		