


**BOSCH**

WFK5010-WFK5010/05-D1
 WFK5010-WFK5010CH/05CH1
 WFK5010-WFK5010FG/05-FG1
 WFK5010-WFK5010SI/05-SI1

WFK5010-WFK5010DS/05-DS1

WASCHGERÄTE
 Waschvollautomaten

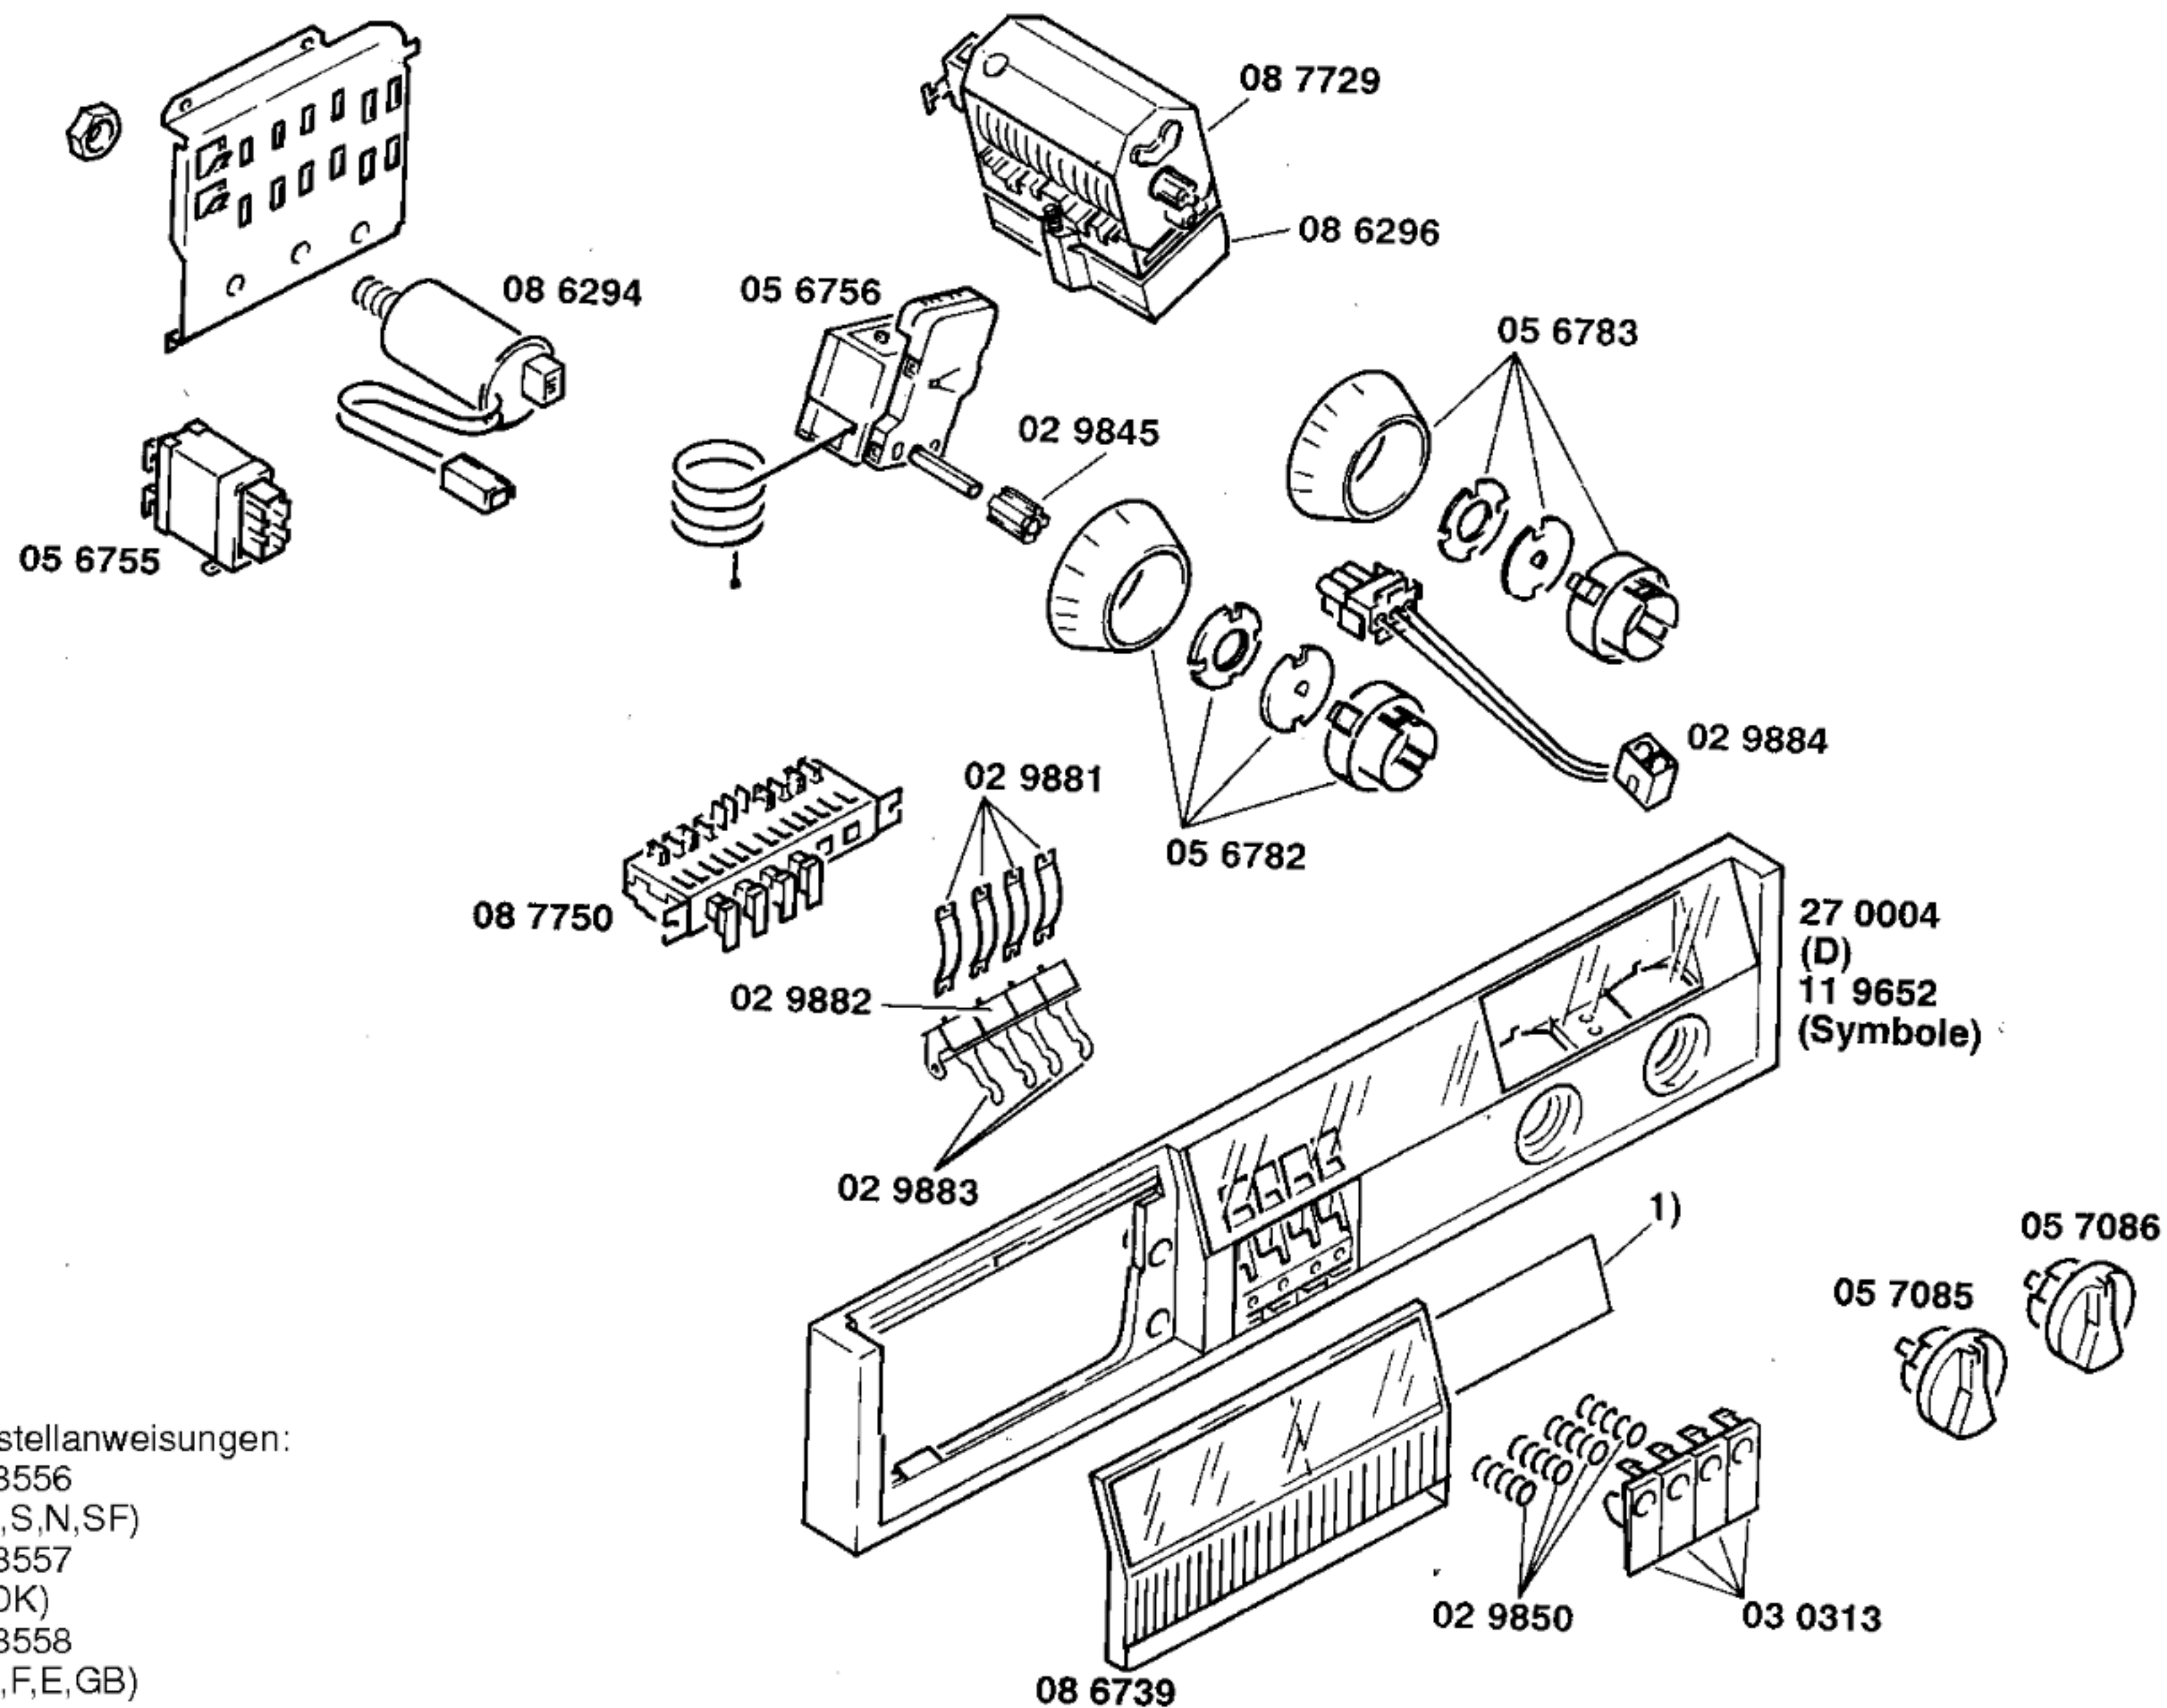

Aufstellanweisungen:

51 3556
 (D,I,S,N,SF)
 51 3557
 (S,DK)
 51 3558
 (NL,F,E,GB)

Ident - Nummern - Konstante
 3740


1) 08 6336
 (D)
 08 6337
 (NL)
 08 6338
 (N)
 08 6339
 (SF)
 08 6340
 (S)
 08 6341
 (E)
 08 6342
 (F)
 08 6343
 (DK)
 08 6344
 (I)
 08 6686
 (TR,YU,E,GB)
 08 6690
 (GB)

Gebrauchsanweisungen:

51 3566
 (D,I,S,N,SF)
 51 3567
 (S,DK)
 51 3568
 (NL,F,E,GB)

Programmtabellen:

51 3552
 (D)
 51 3553
 (I,S,N,SF)
 51 3554
 (S,DK)
 51 3555
 (NL,F,E,GB)

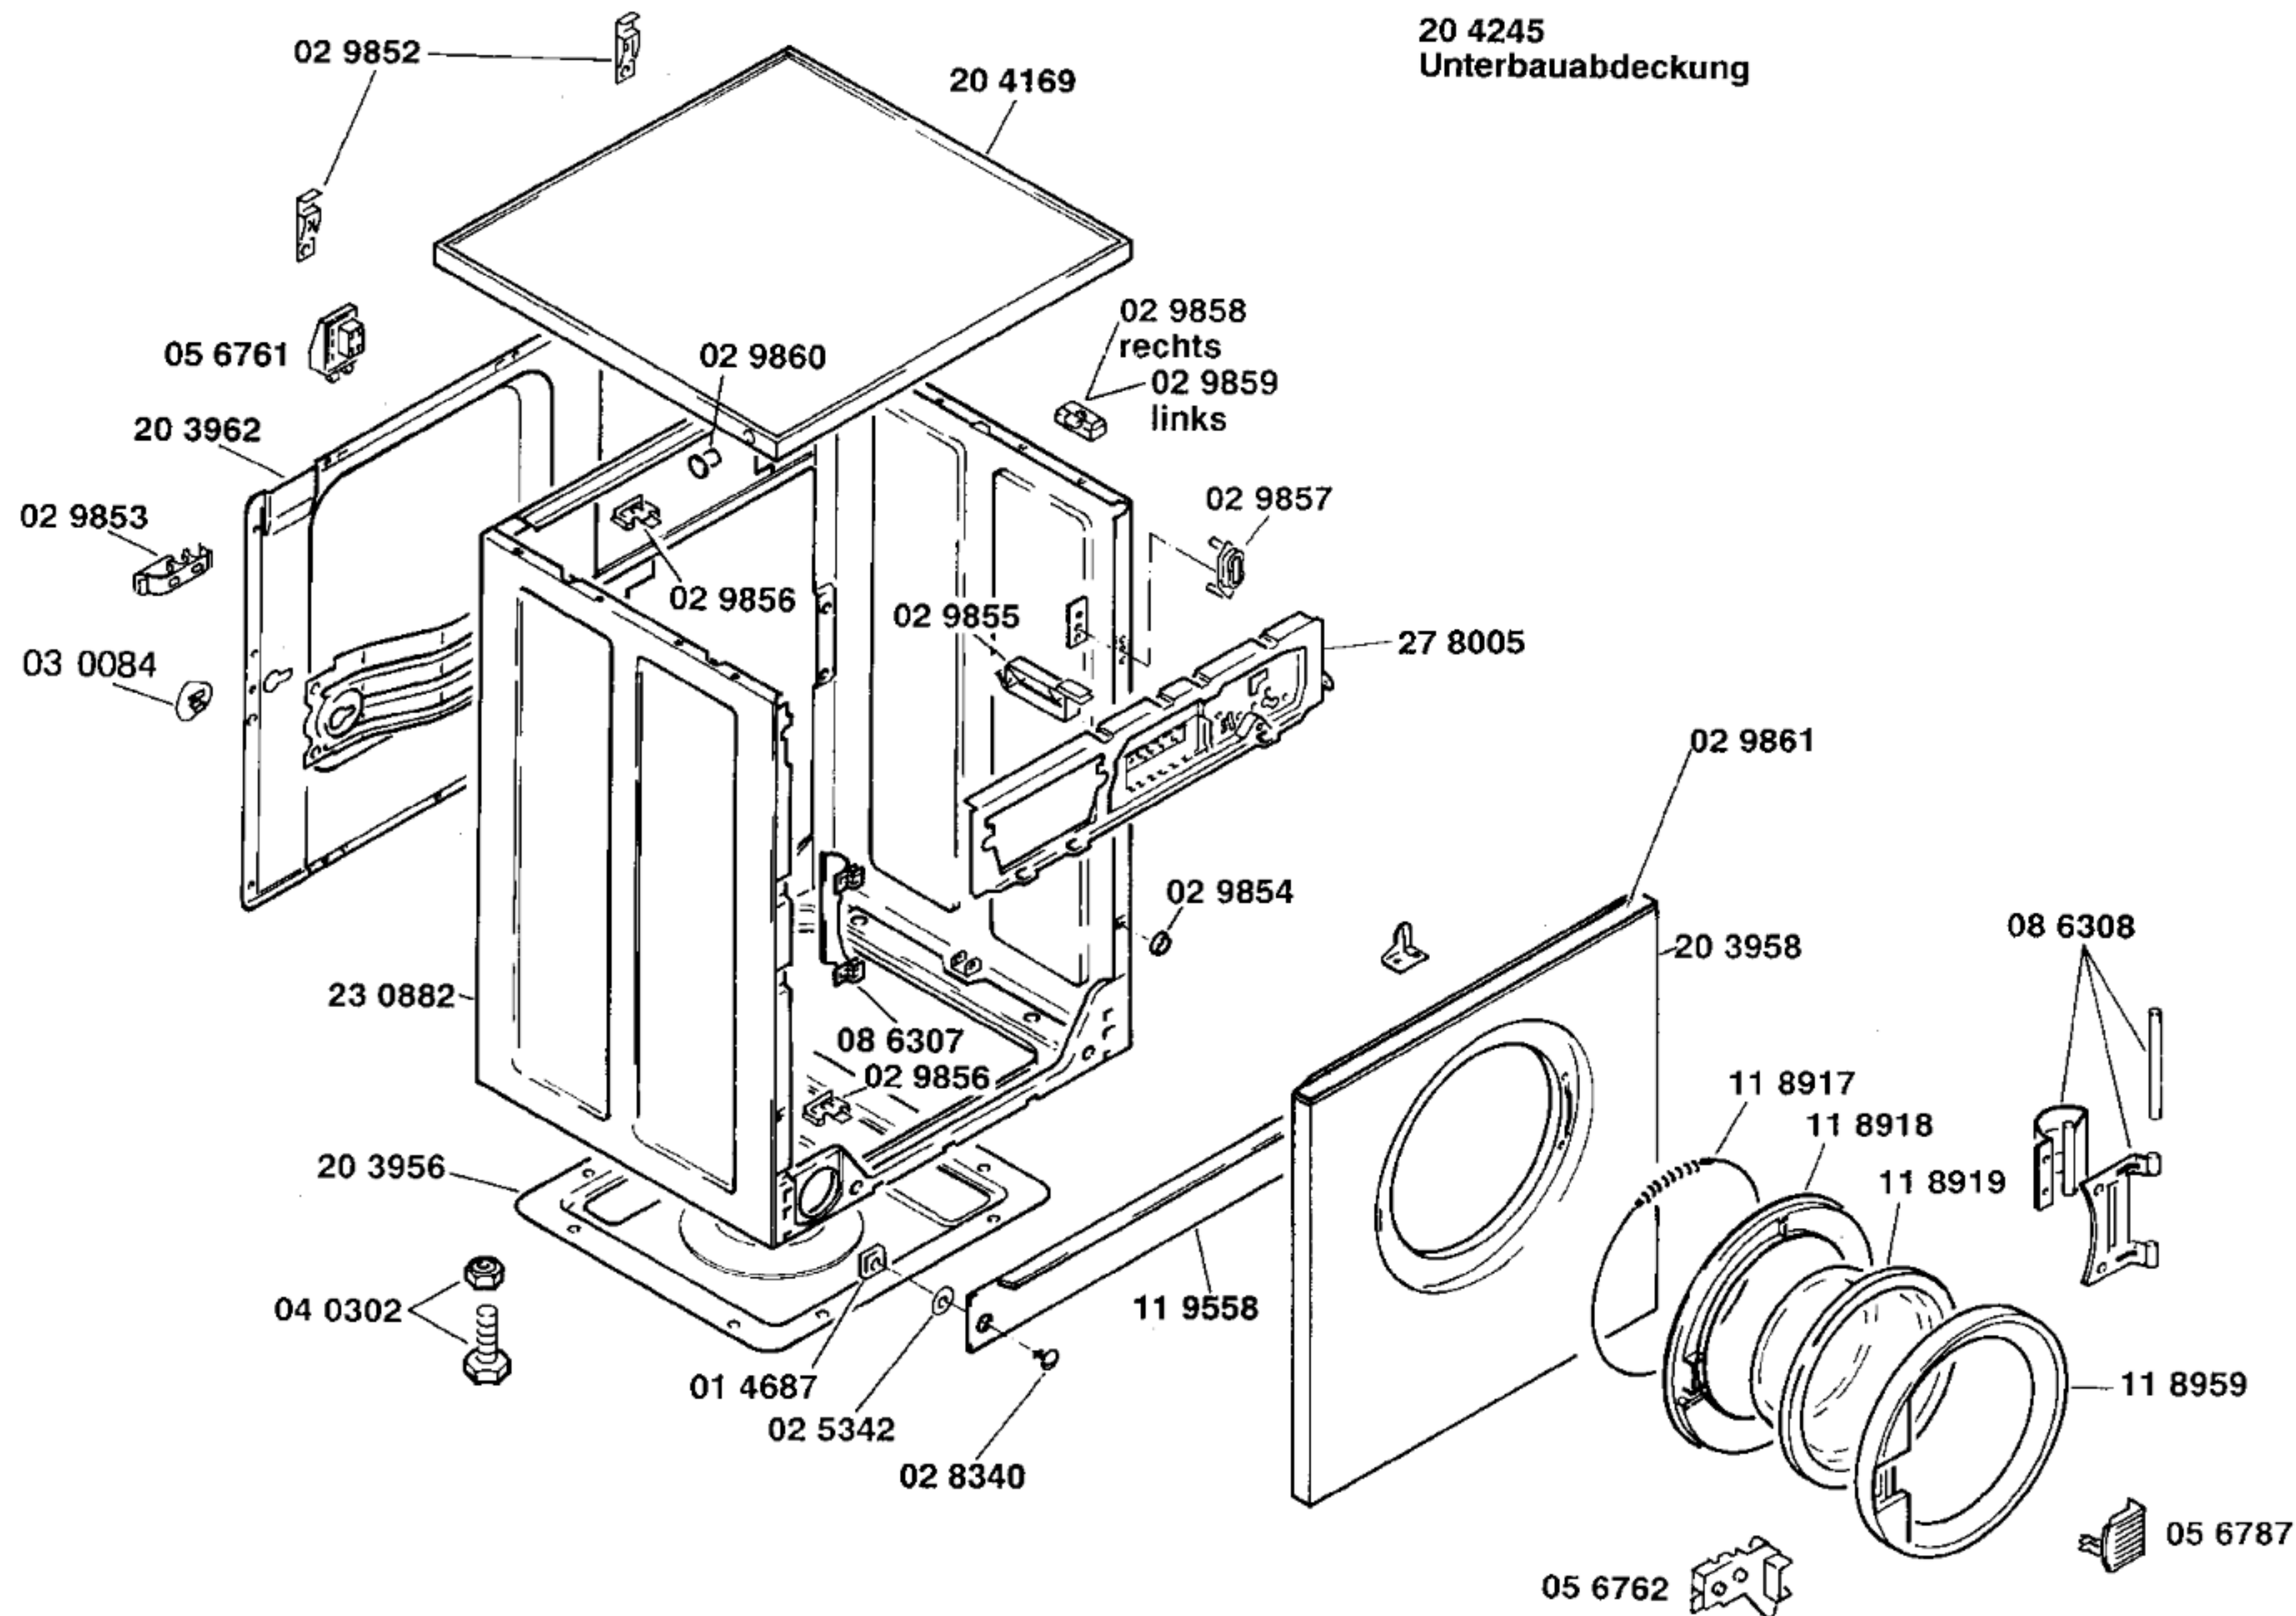

**BOSCH**


WFK5010-WFK5010/05-D1
 WFK5010-WFK5010CH/05CH1
 WFK5010-WFK5010FG/05-FG1
 WFK5010-WFK5010SI/05-SI1

WFK5010-WFK5010DS/05-DS1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

1) 27 1715
 15 5272
 Triac-Motorleistung

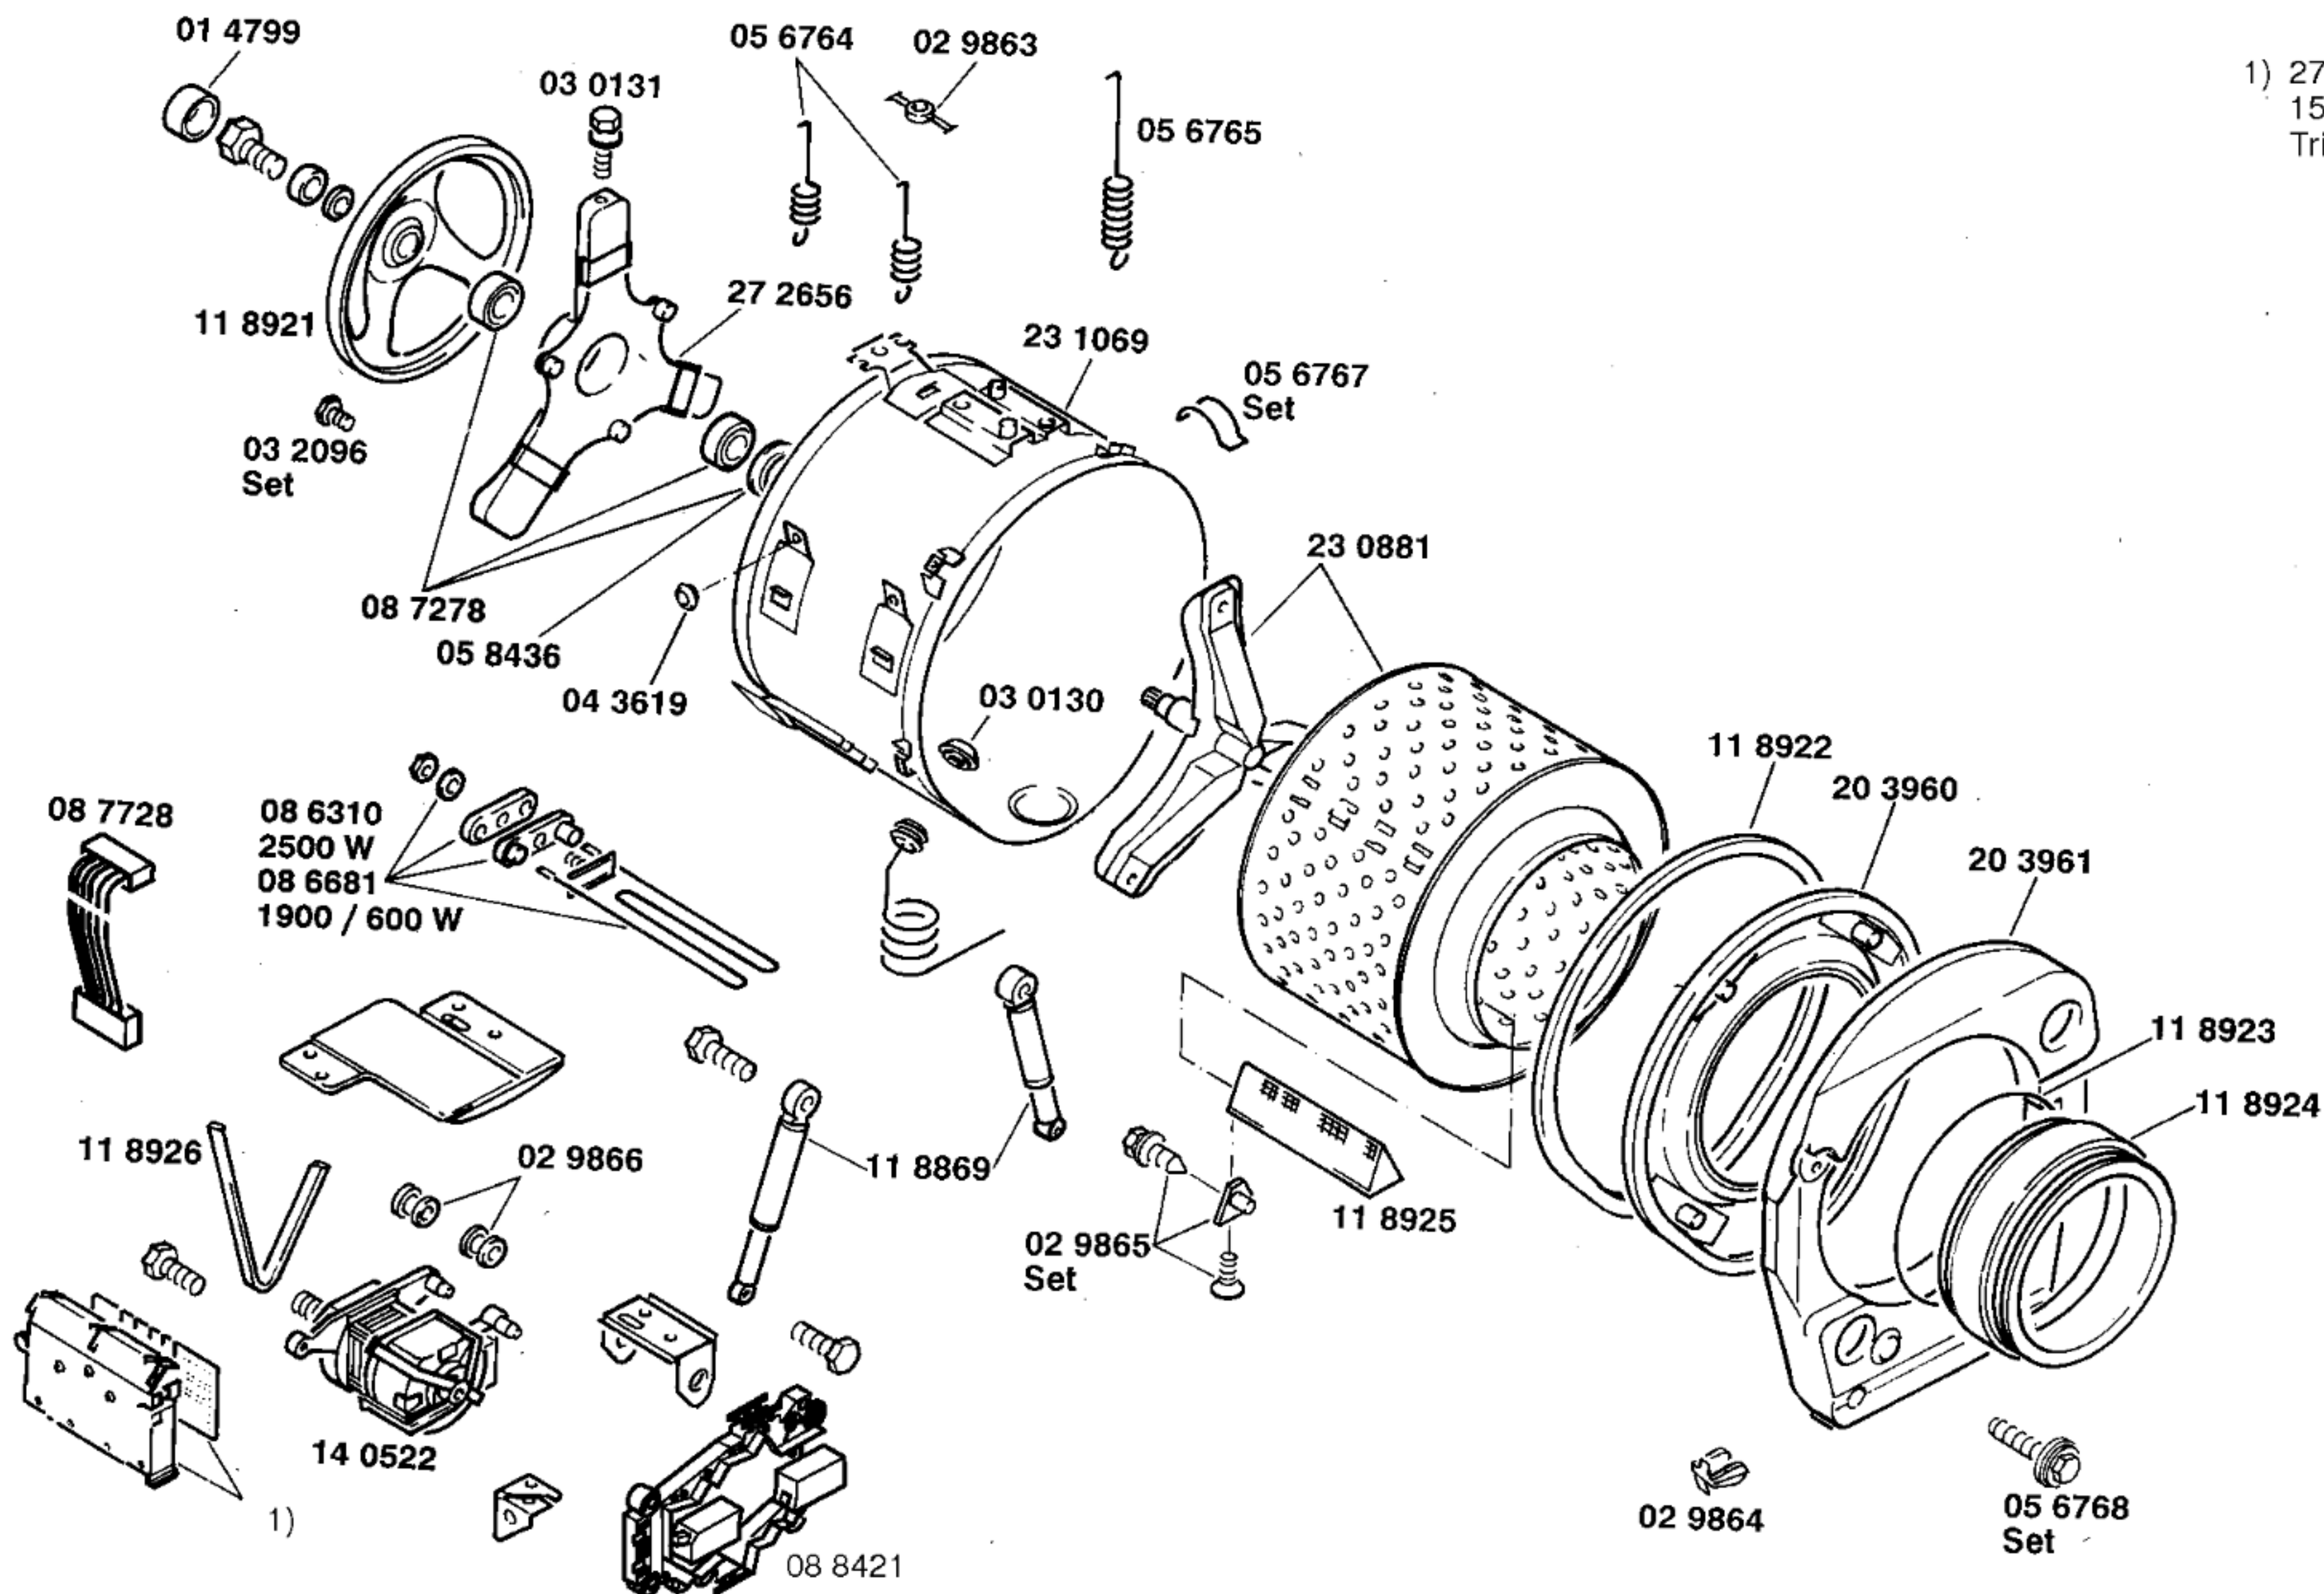

**BOSCH**

WFK5010-WFK5010/05-D1
WFK5010-WFK5010CH/05CH1
WFK5010-WFK5010FG/05-FG1
WFK5010-WFK5010SI/05-SI1

WFK5010-WFK5010DS/05-DS1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

