 
 


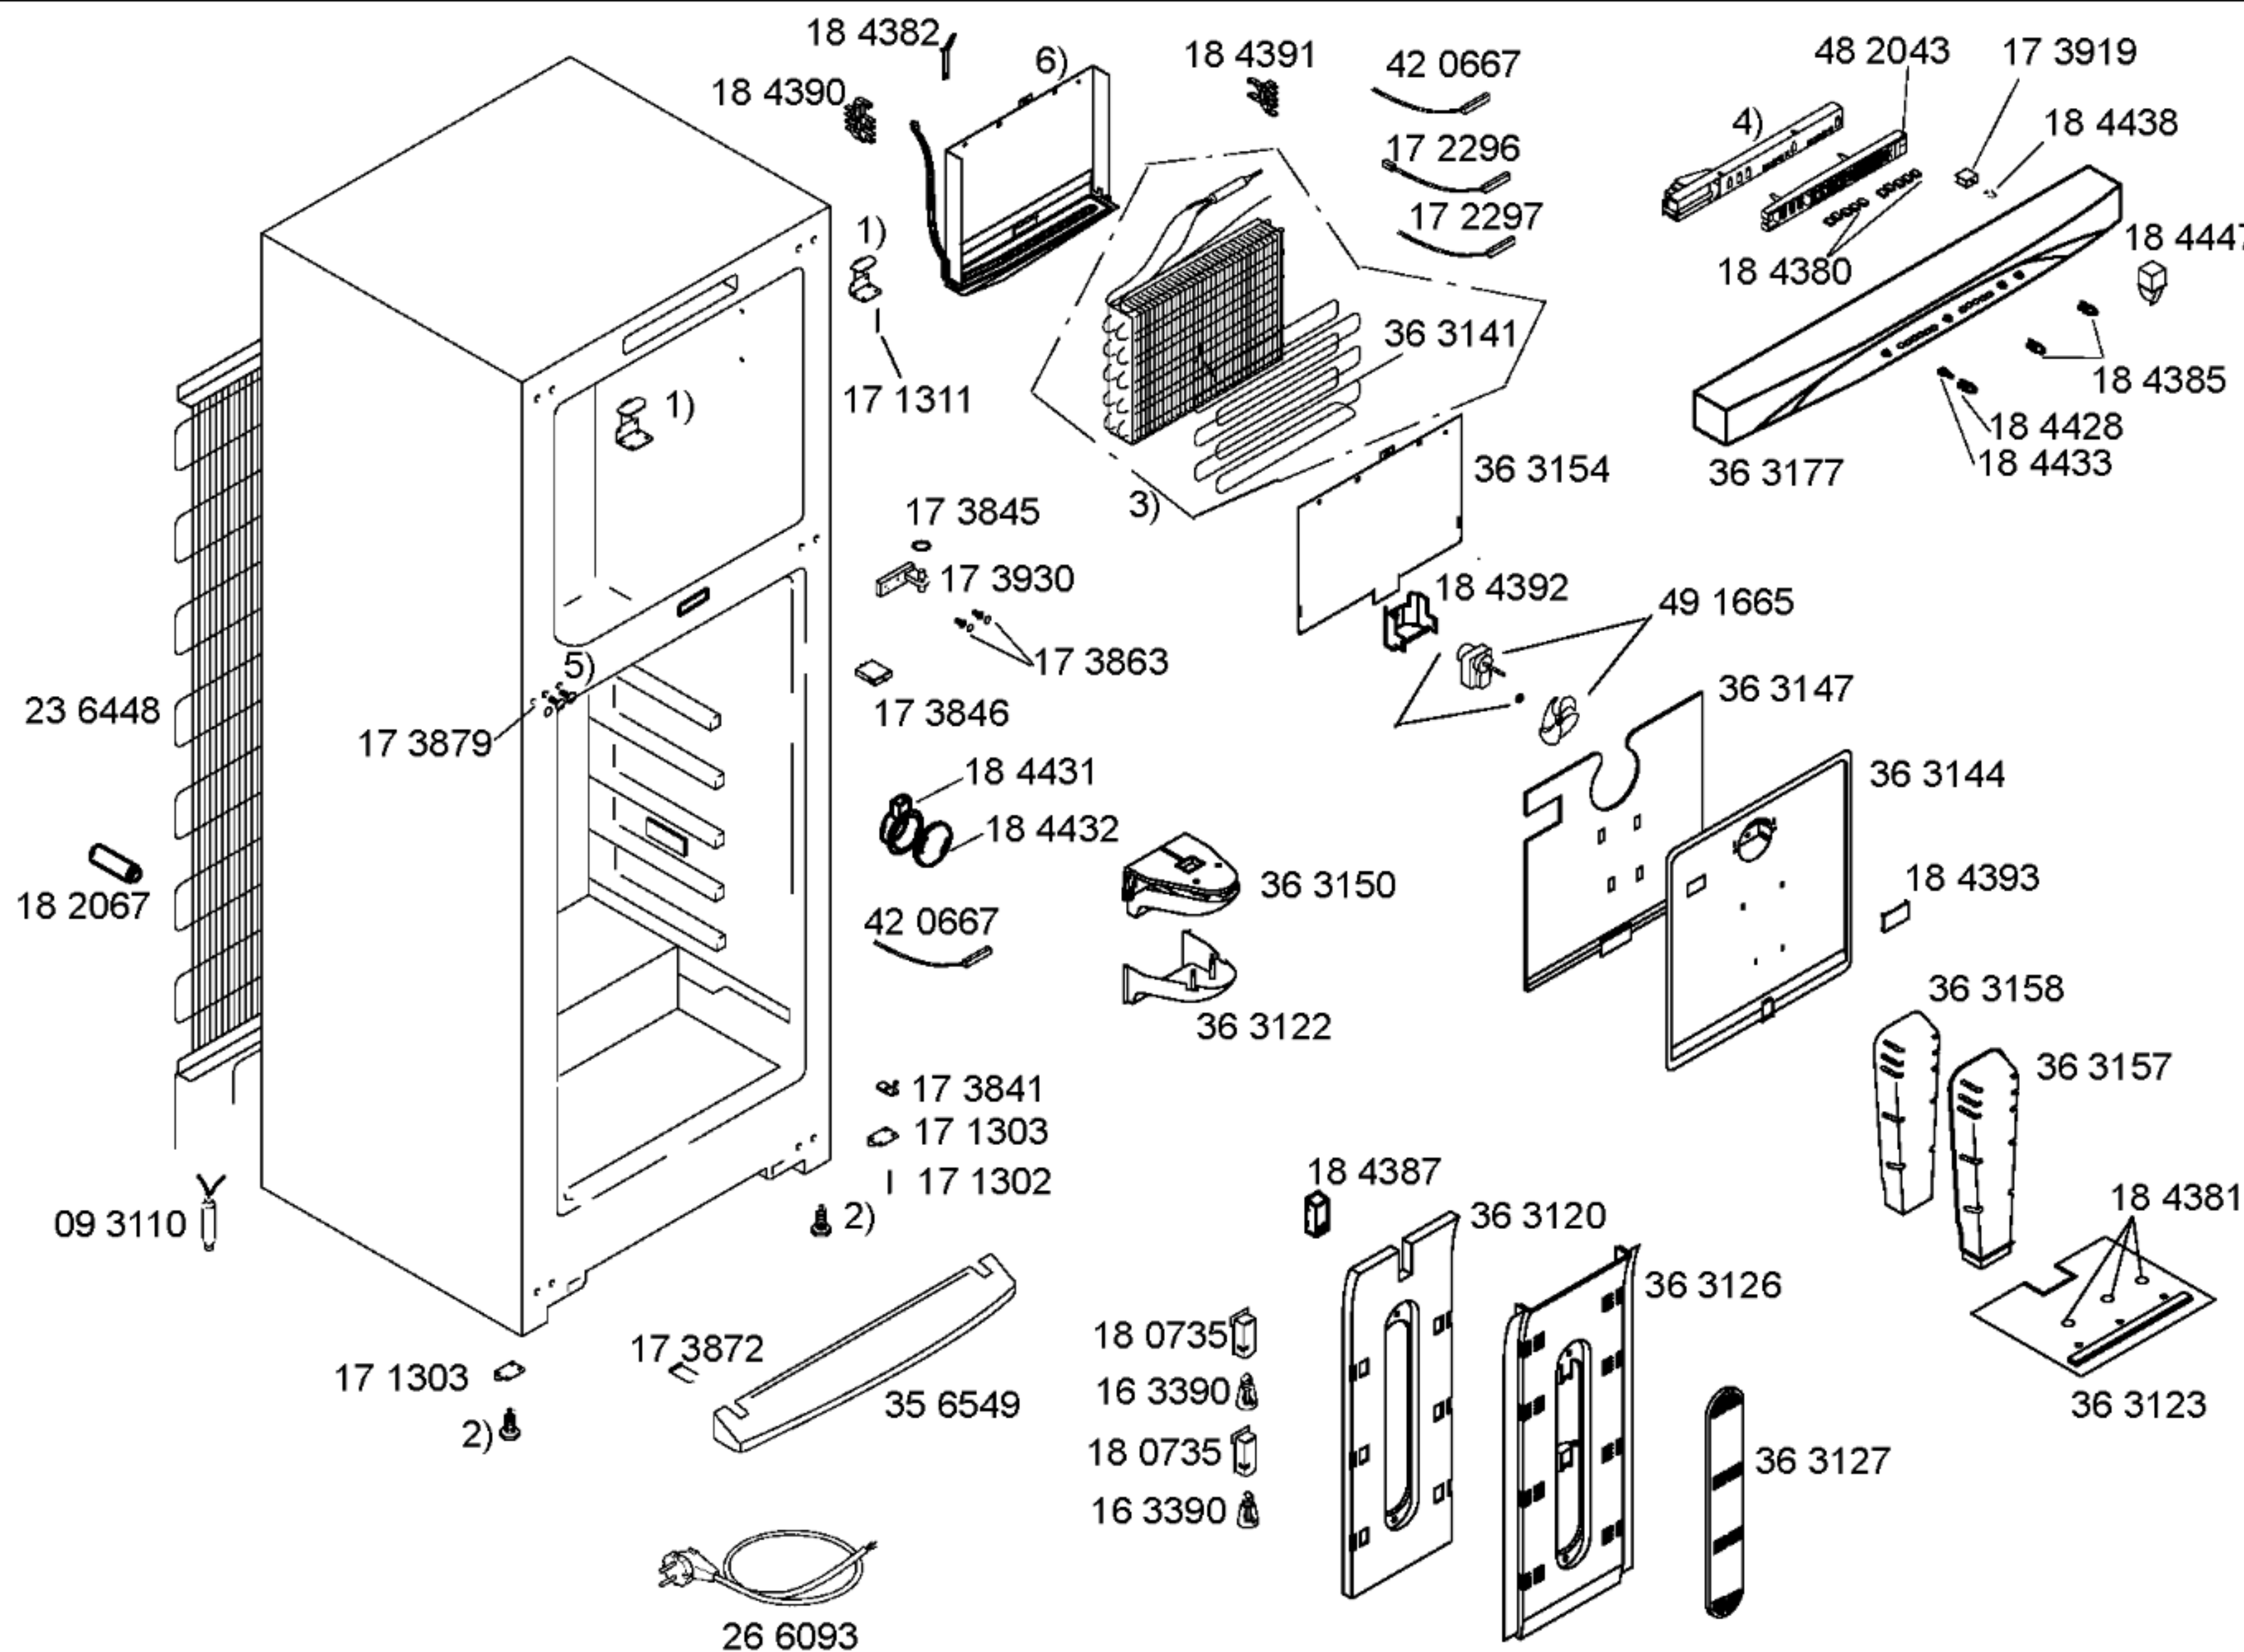

Mat. - Nr. - Konstante
3740

 
Gebrauchsanweisung
52 9447

- 1) 17 1312
- 2) 17 1304
- 3) 36 3137
- 4) 48 2032
- 5) 17 3866
- 6) 36 3135

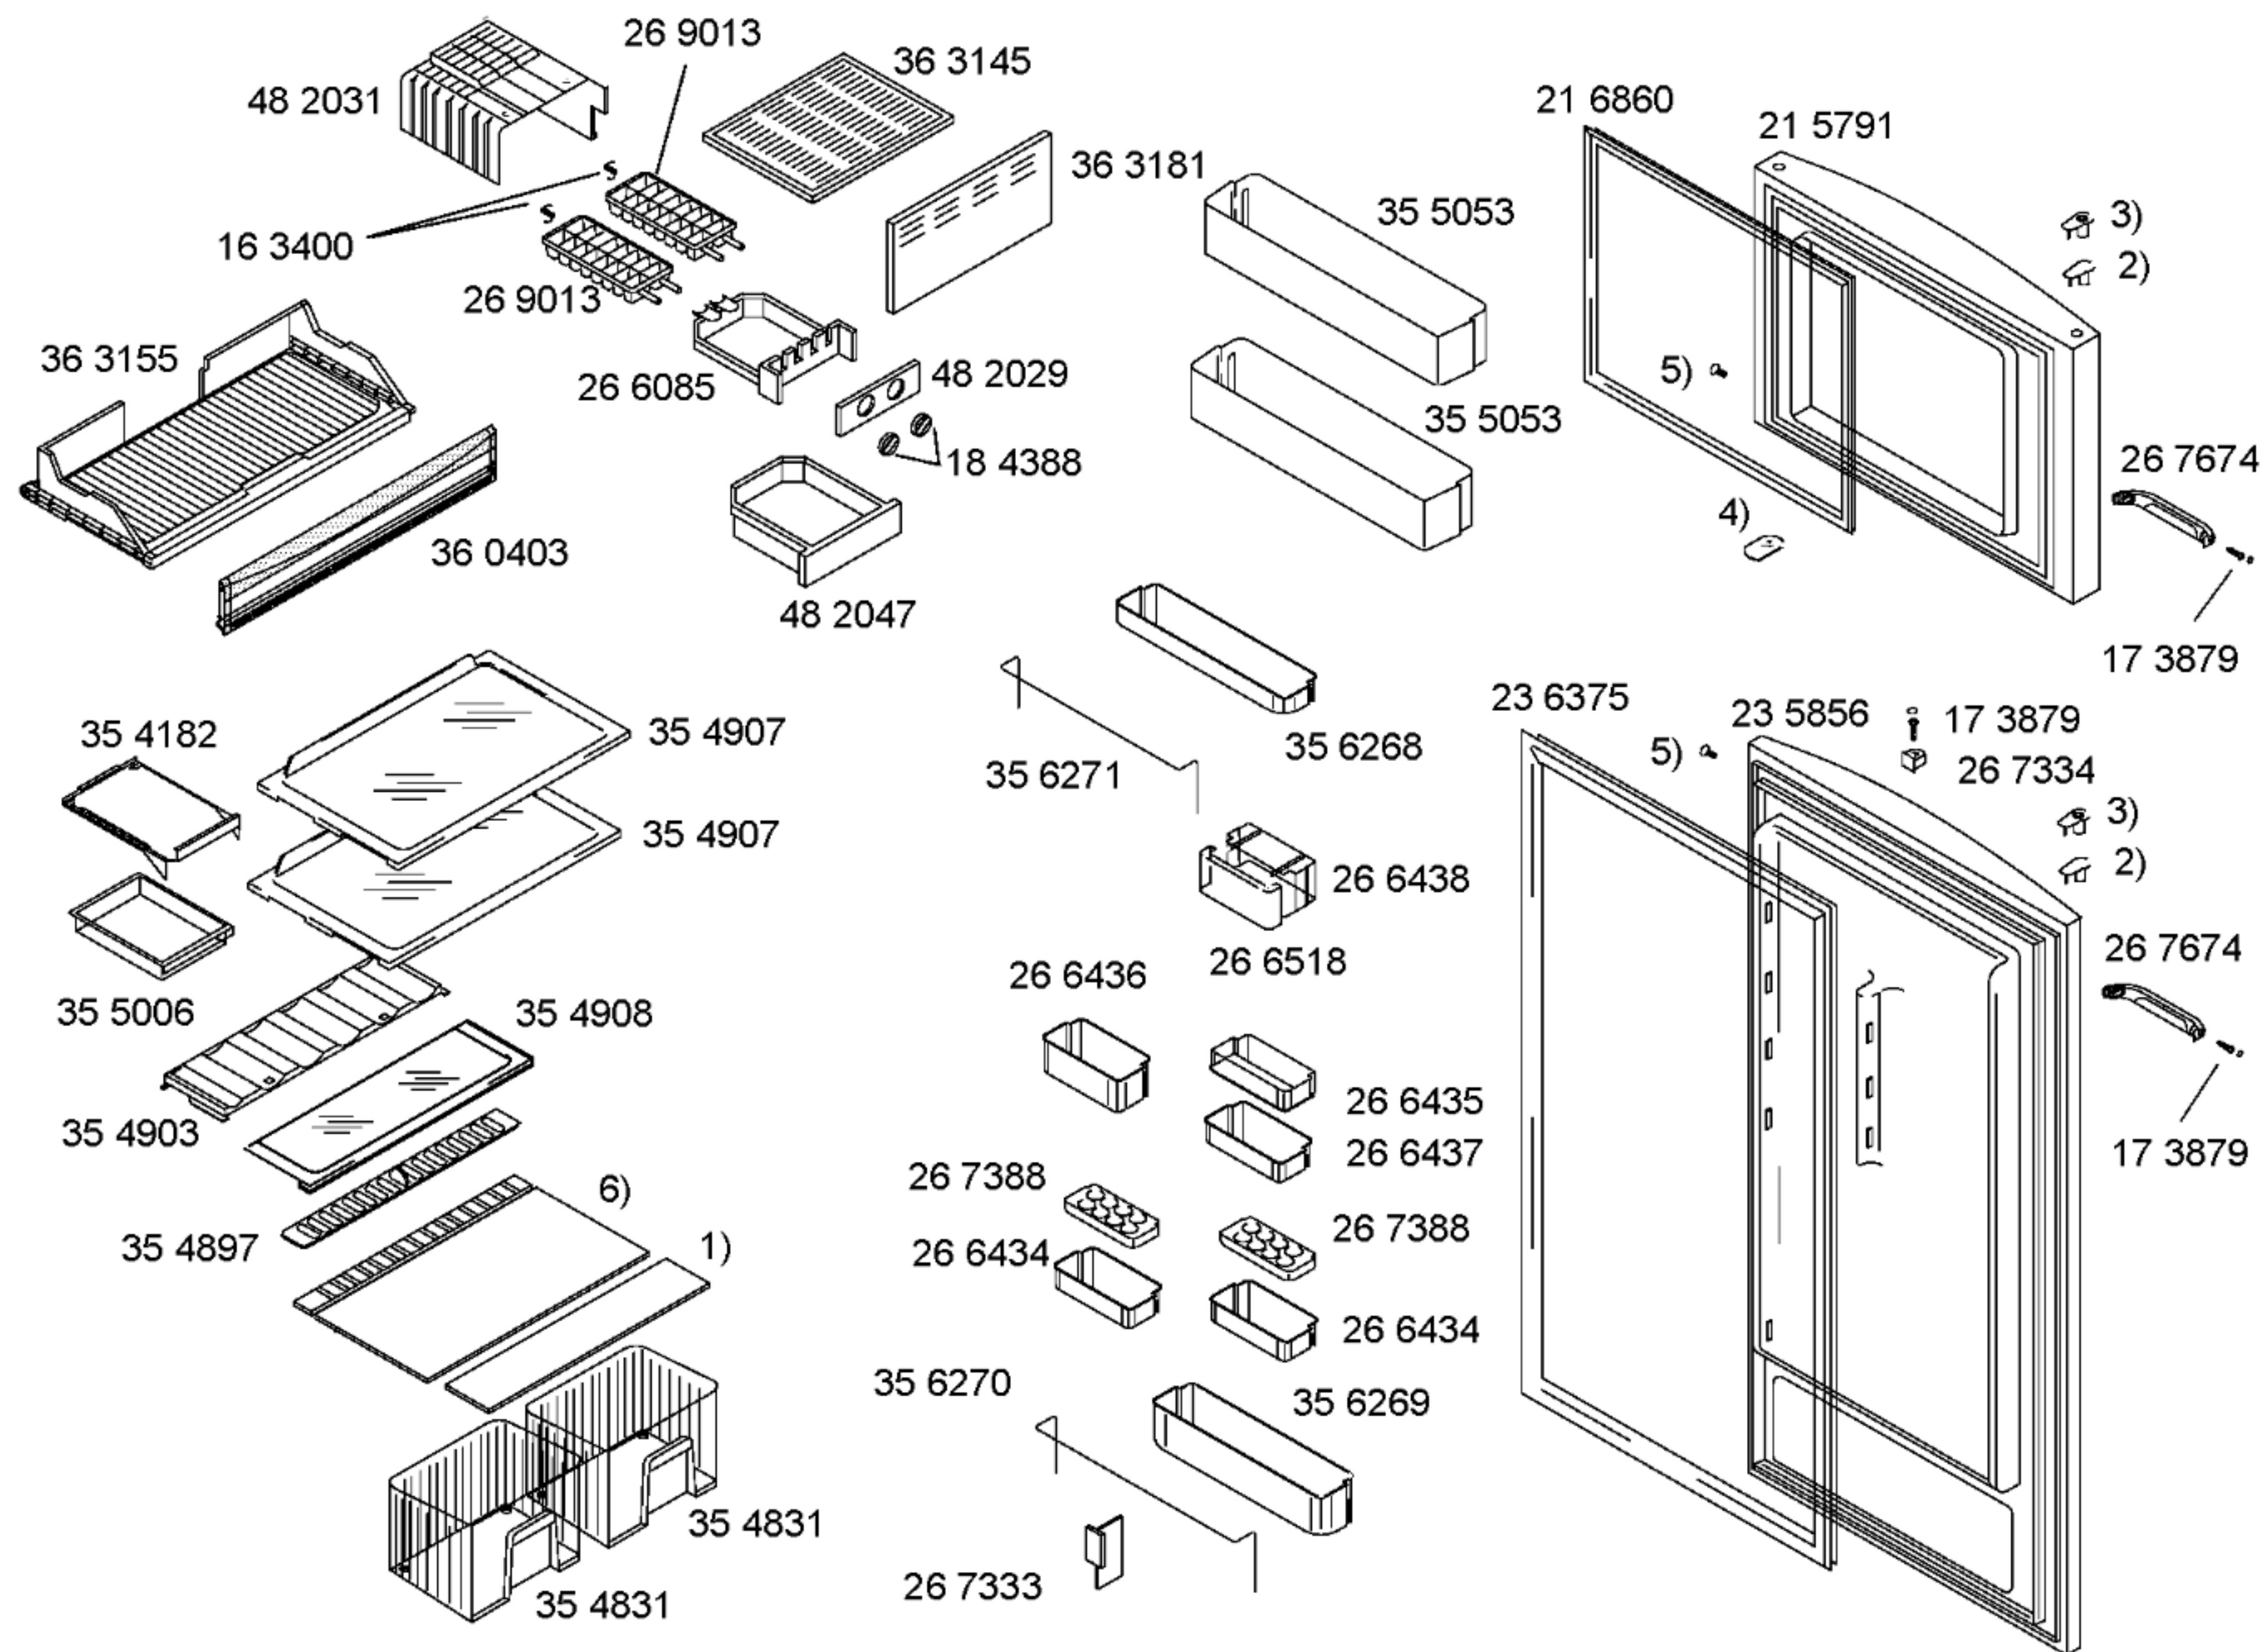

Mat. - Nr. - Konstante
3740

- 1) 35 8822
- 2) 17 3857
- 3) 17 3851
- 4) 17 4593
- 5) 17 3862
- 6) 36 1076

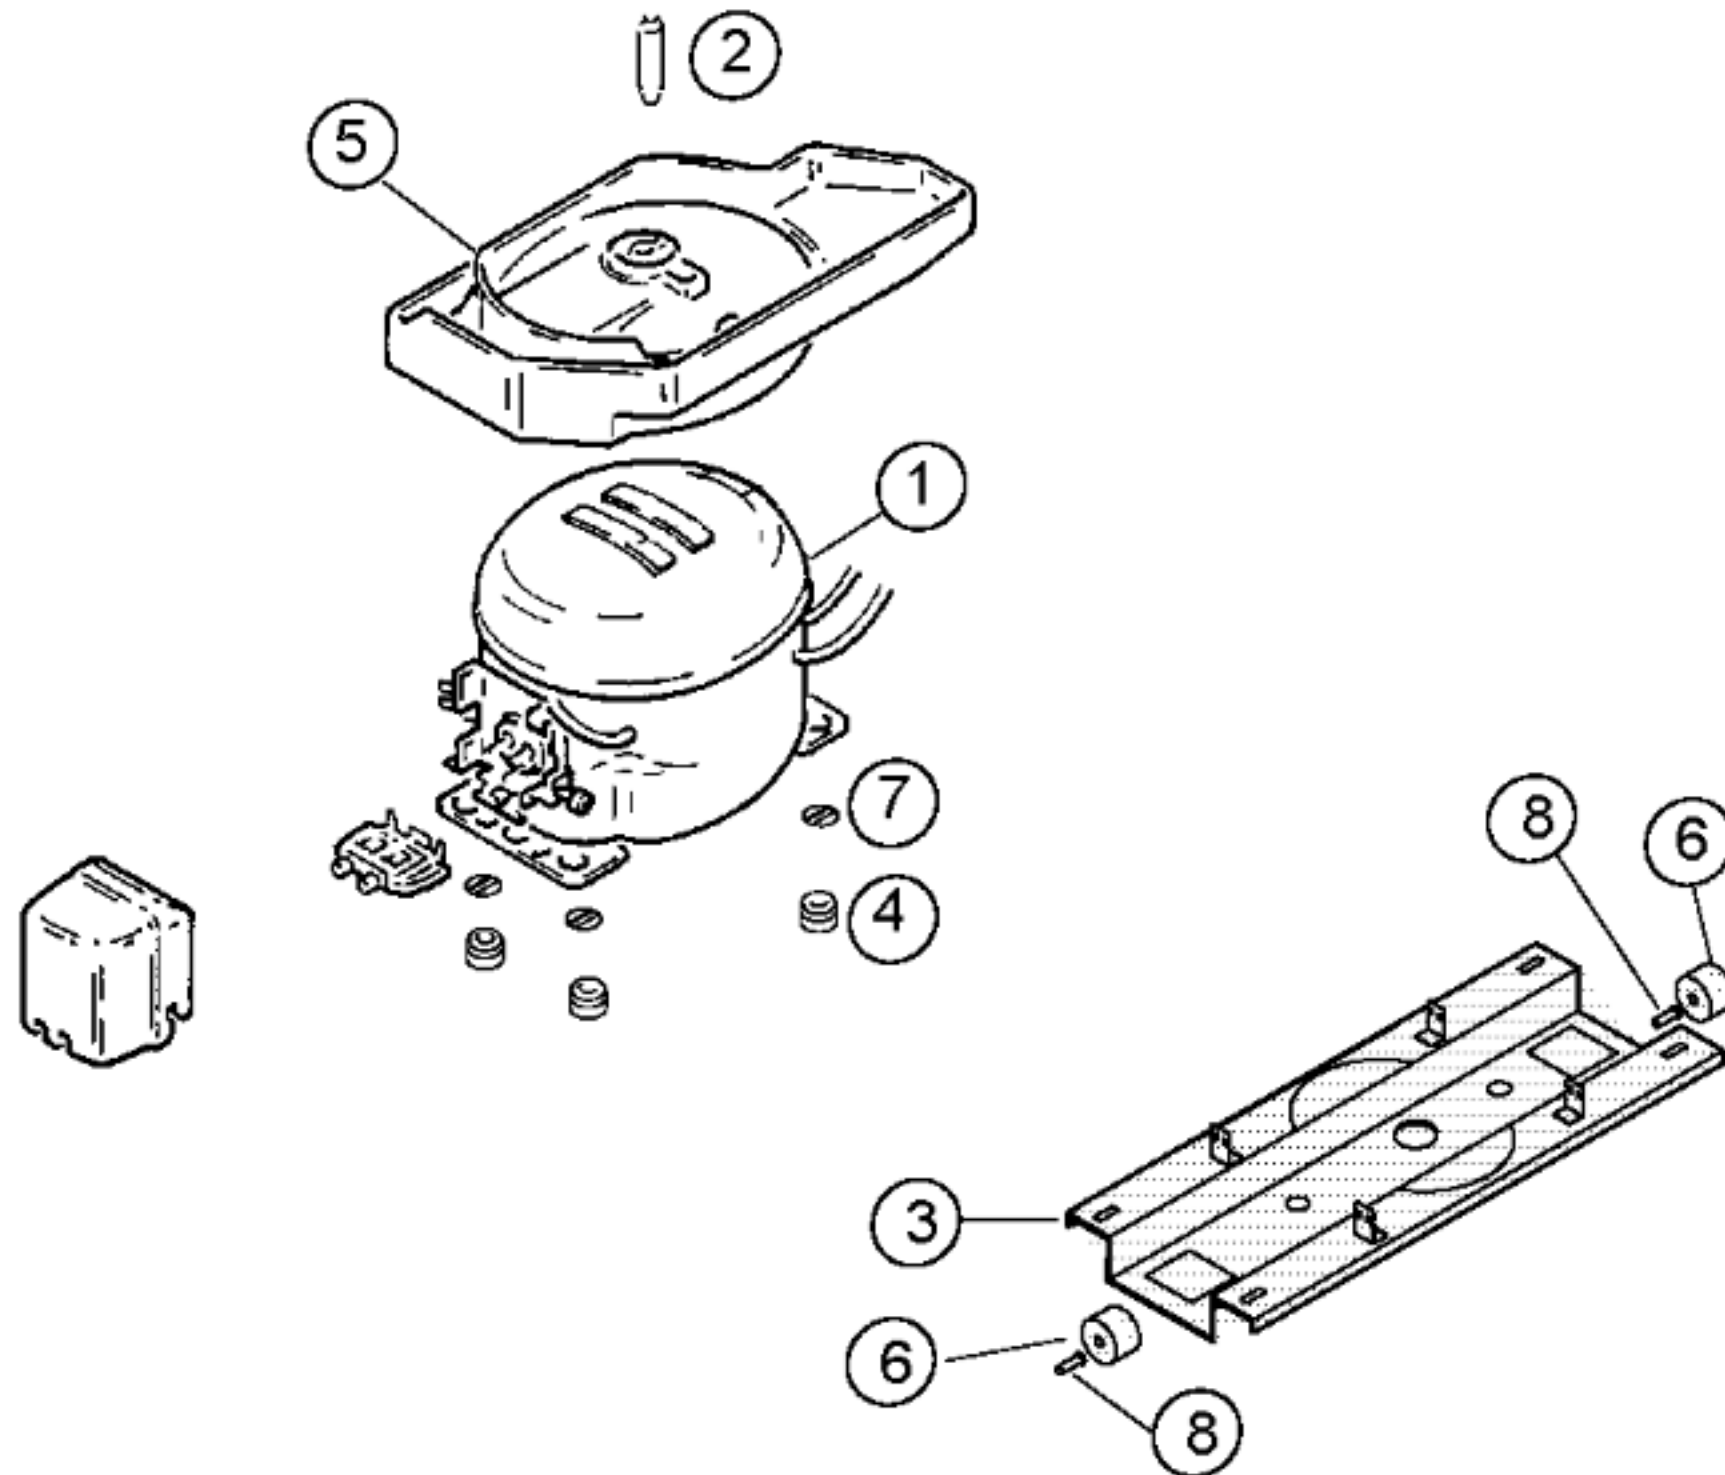

Pos.	Aspera		
	NBT 1118Y		
1	14 2194		
2	18 4389		
3	35 4583		
4	16 3427		
5	36 3166		
6	17 1318		
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Aspera NBT 1118Y 7 11 16.4		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Elektronisch ..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	60
Anschlusswert/Comm. load/Giris gucu	W	200	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Verdampfer 267	Ablaufrinne 81	Klappe 4
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Verdampfer		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız