


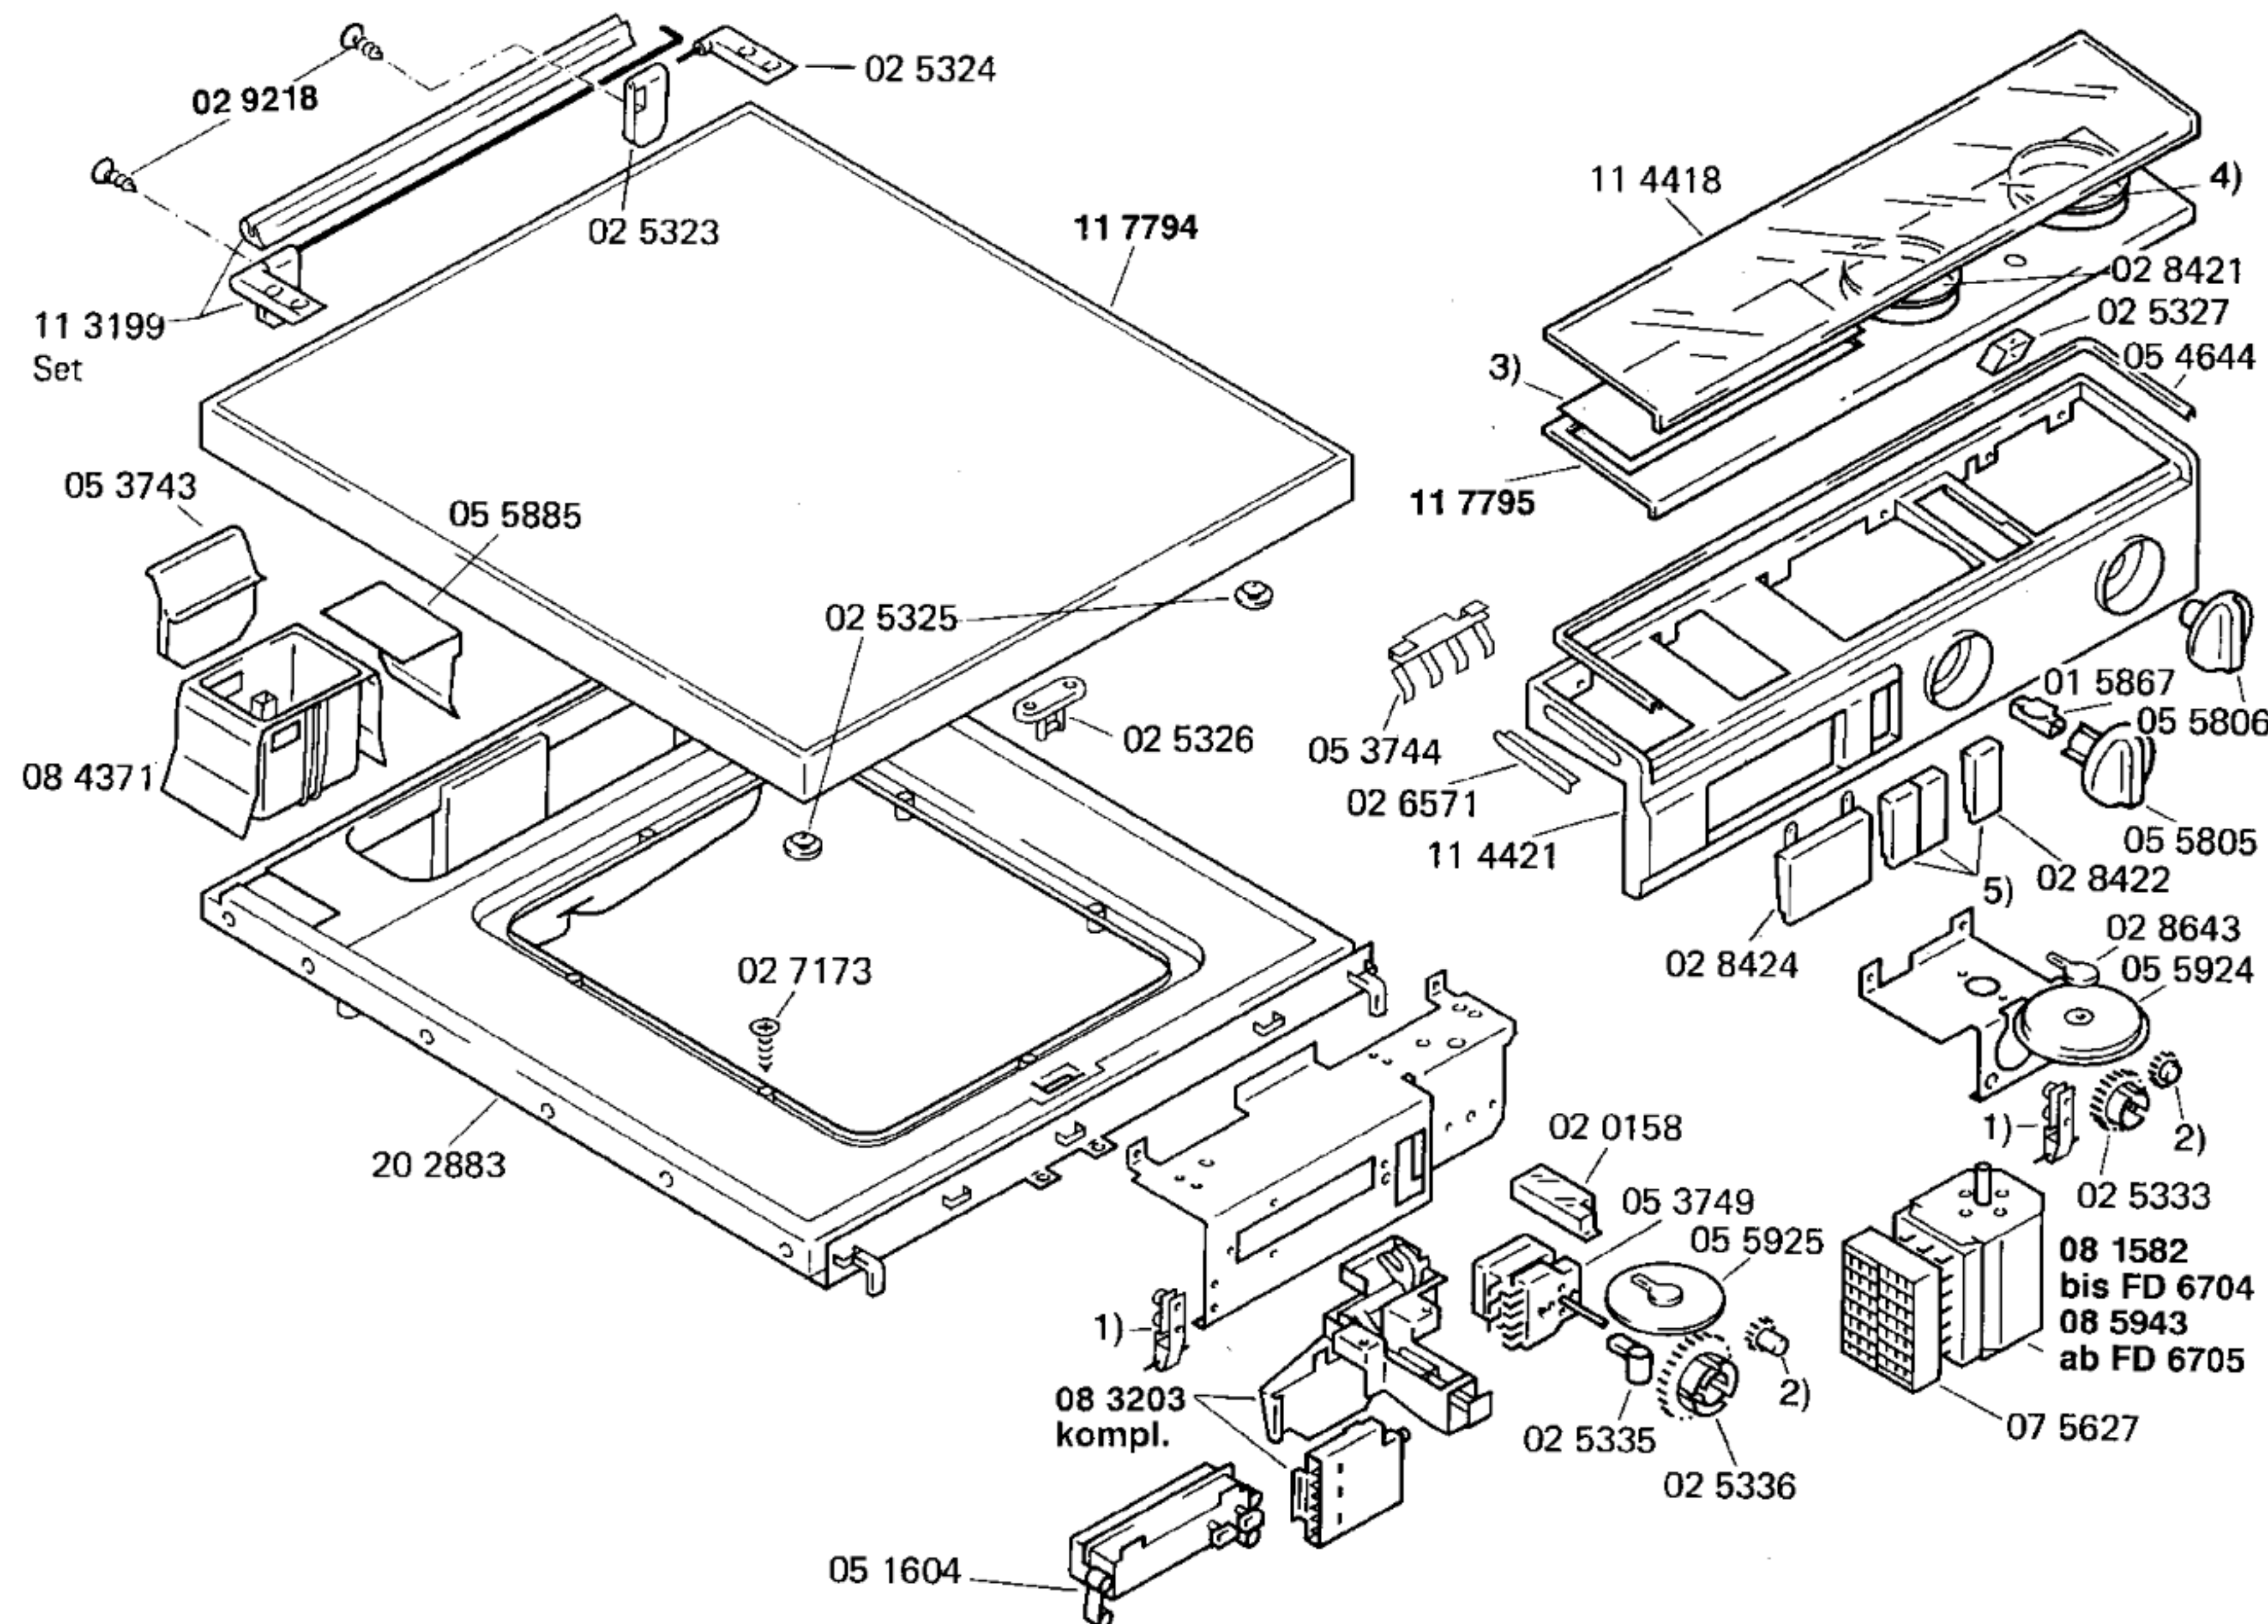

Aufstellanweisungen:

51 3182
(D,GB,F,I,NL,E)

51 1674
(D,I,S,DK,N,SF)

Gebrauchsanweisungen:

51 3180
(D,I,S,DK,N,SF)

51 3181
(F)

Programmtabellen:

51 3178
(D,GB,F,I,NL,E)

51 3177
(D,I,S,DK,N,SF)

51 3163
(TR,YU,GR,E)

1) 02 5334

2) 02 5332

3) 08 5638
(D,Symbole)

08 5639
(F,NL)

08 5640
(I,GB)

08 5641
(S,N)


08 5642
(SF,DK)

08 5643
(TR,YU)


08 5644
(GR,E)


4) 02 8641

5) 02 8639
Set

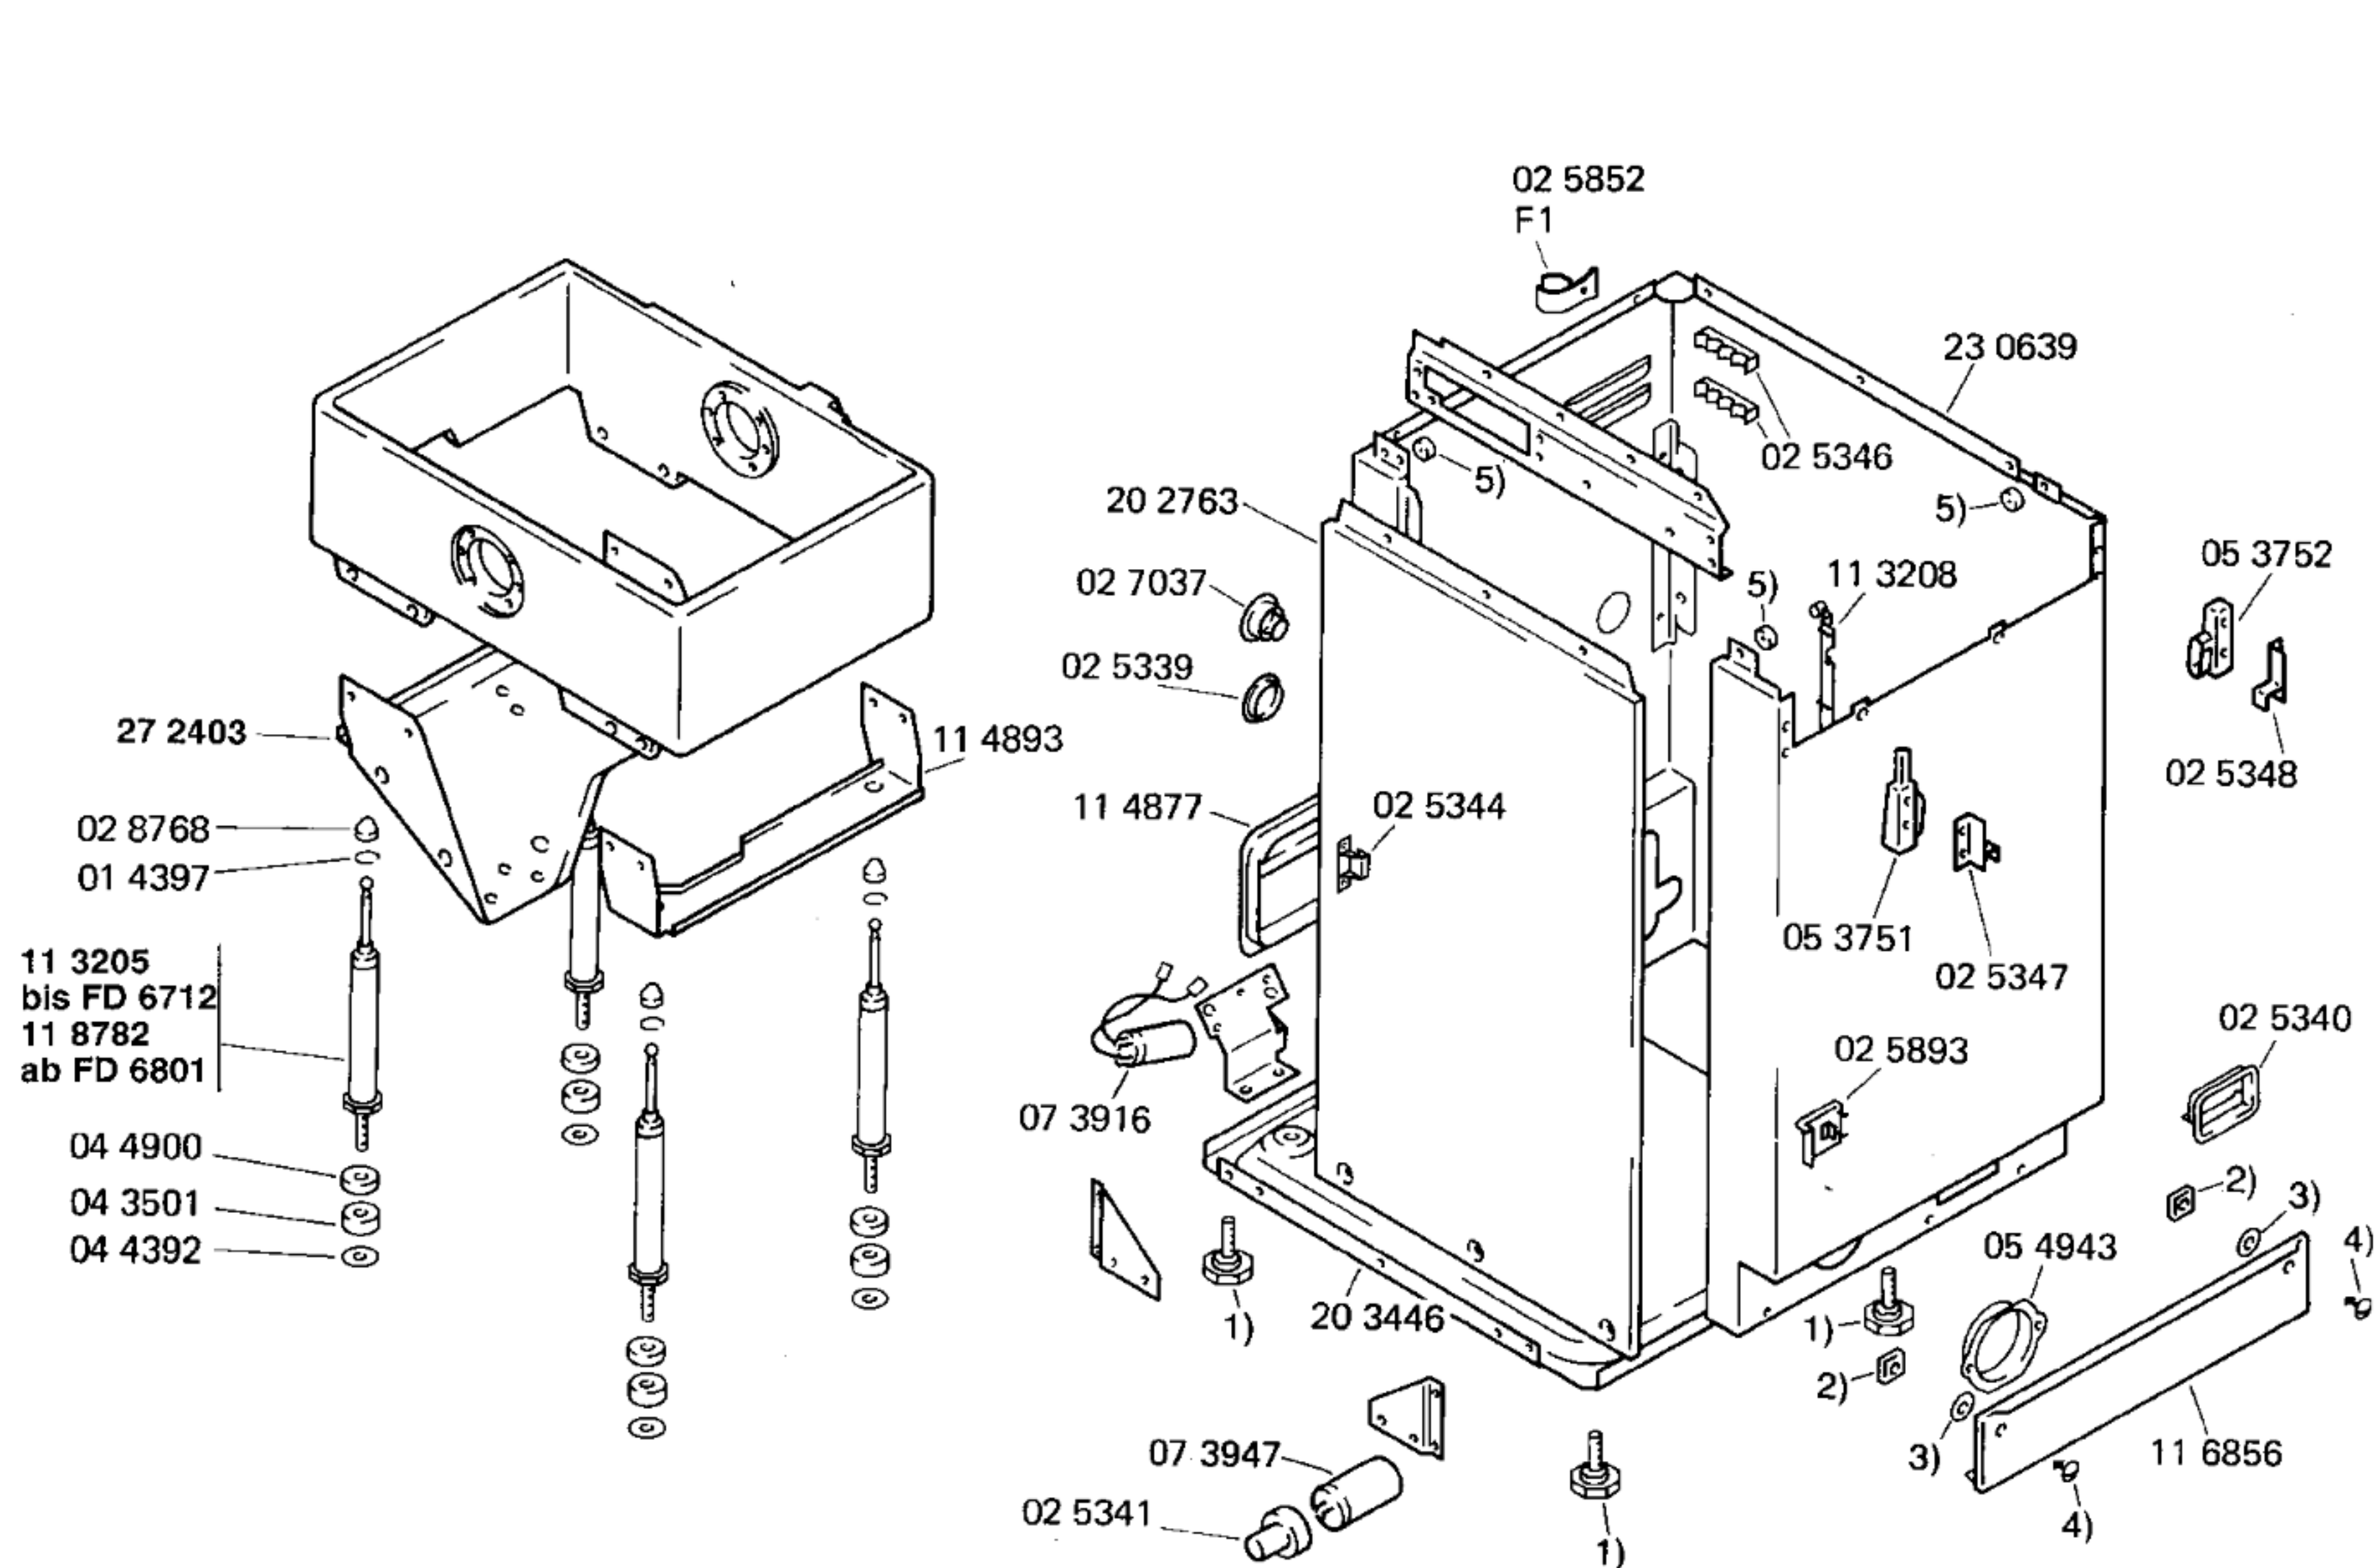

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8437
- 5) 02 5345

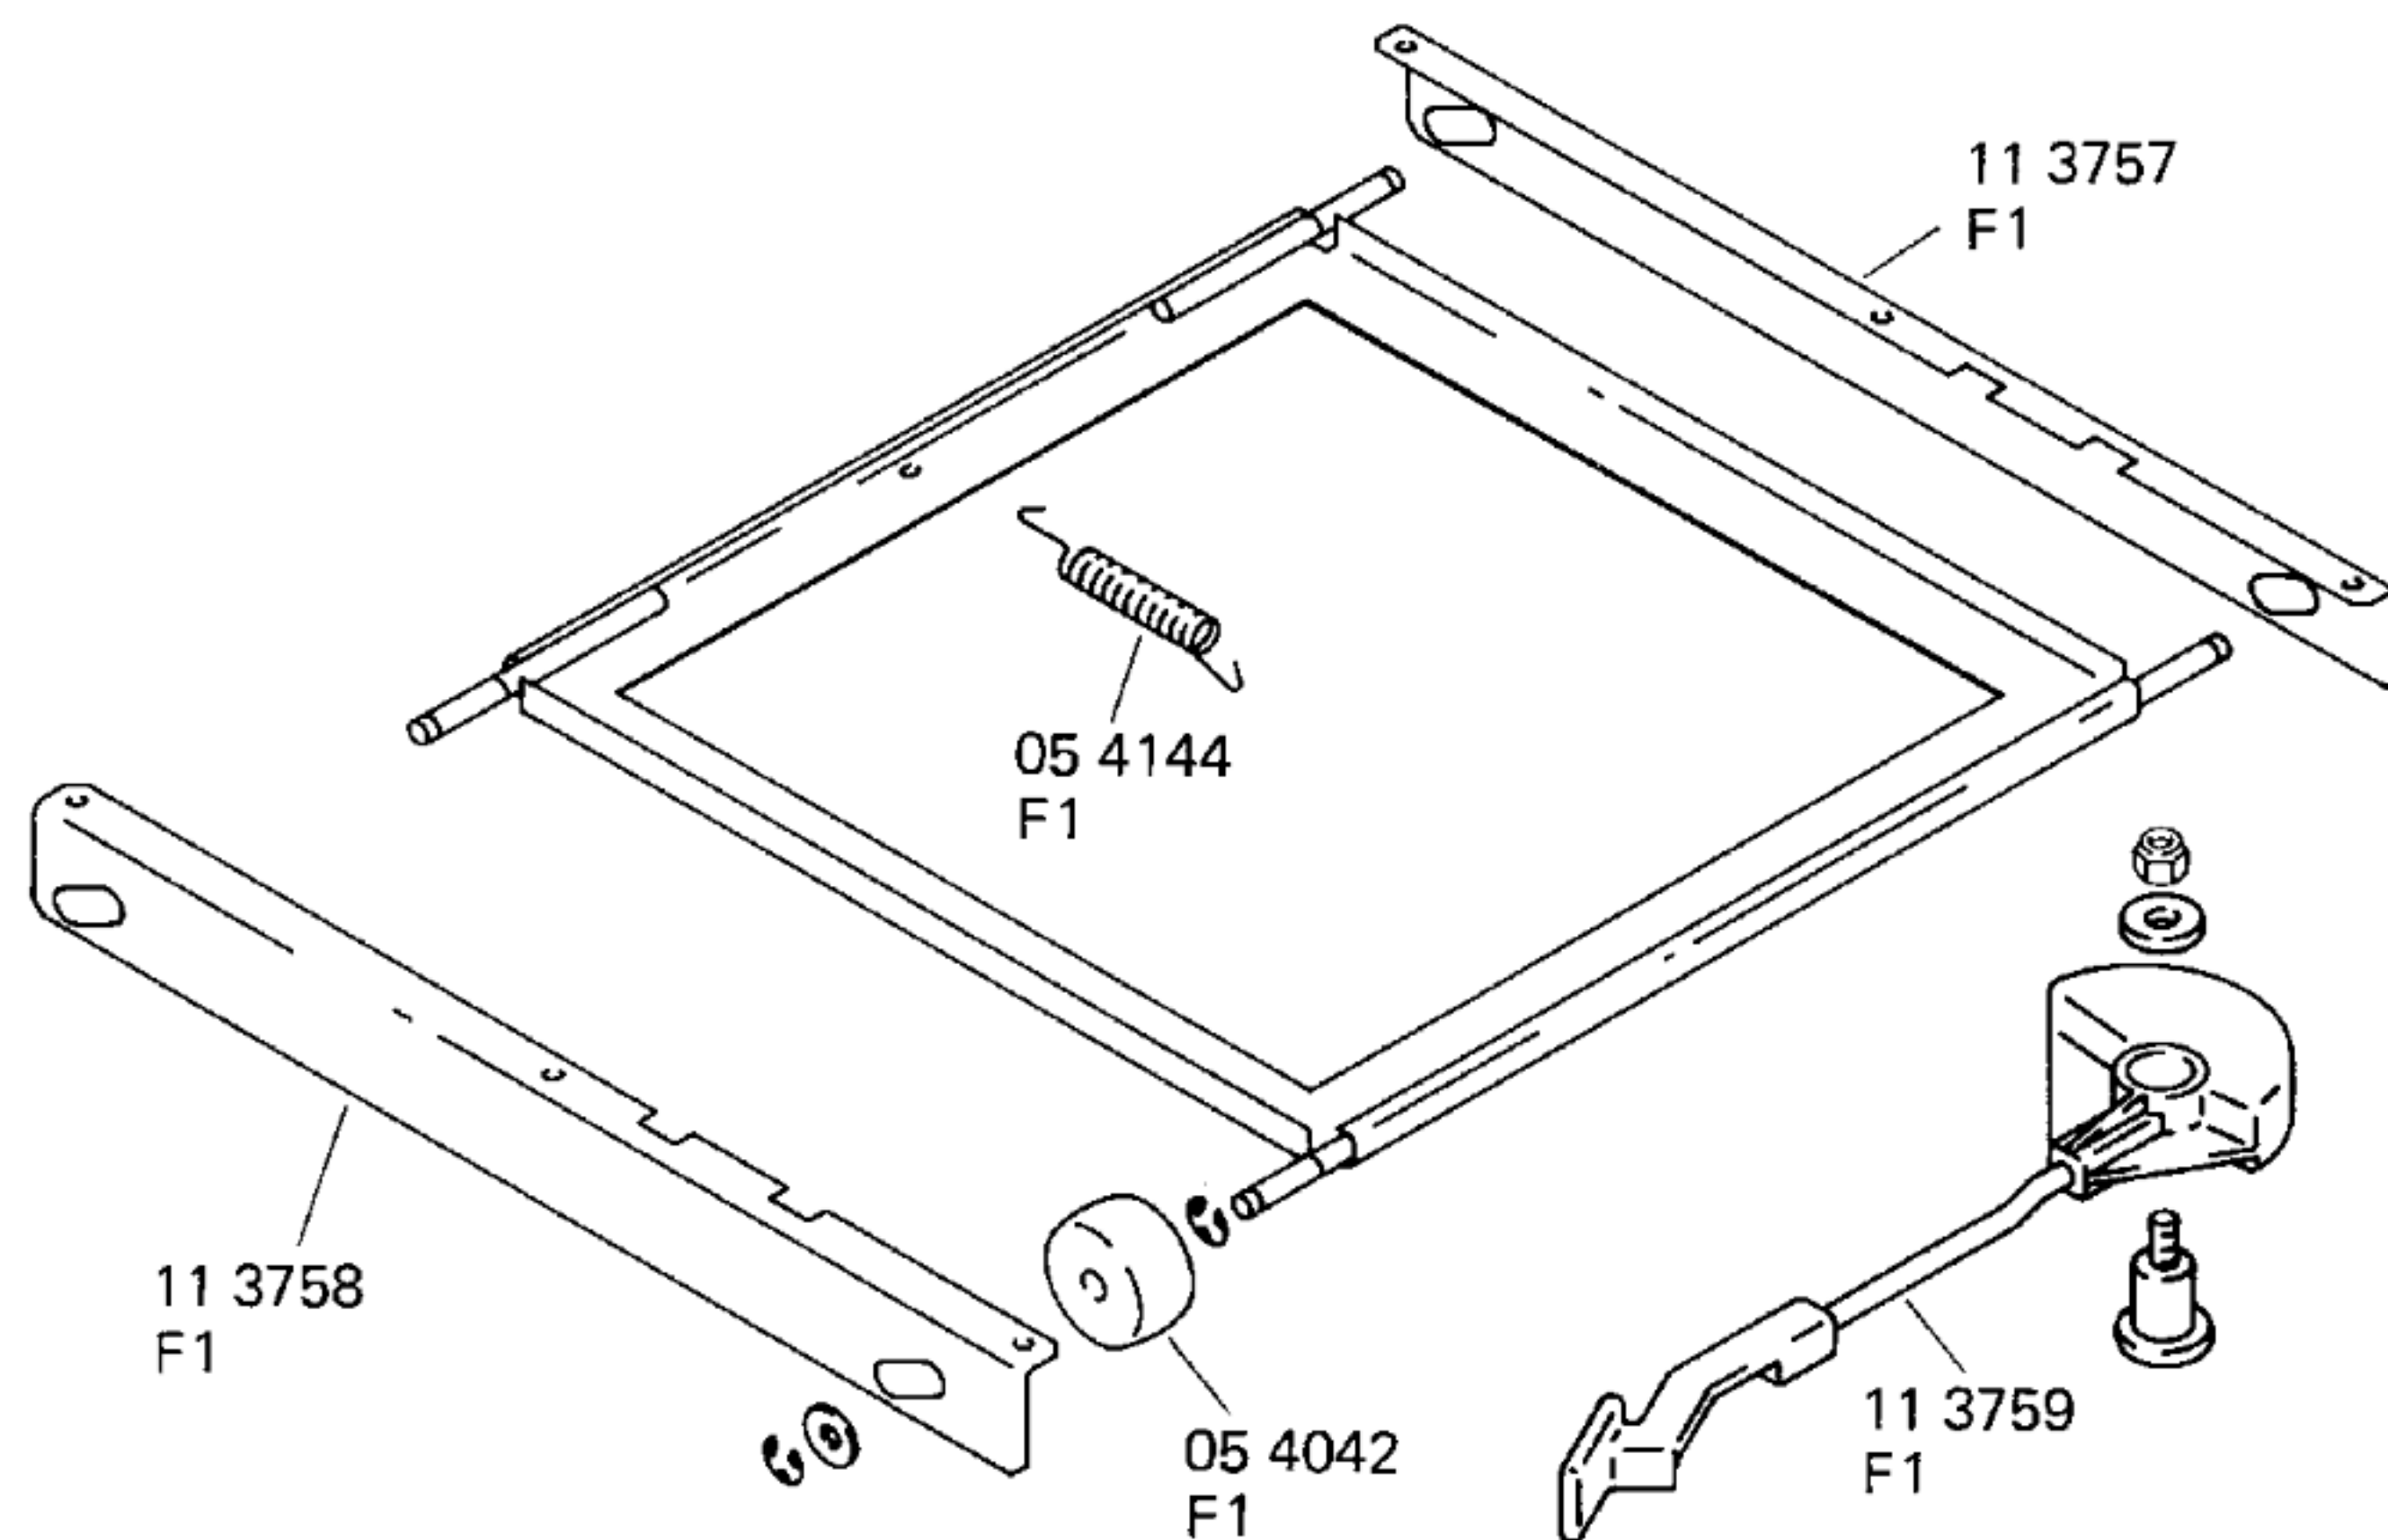

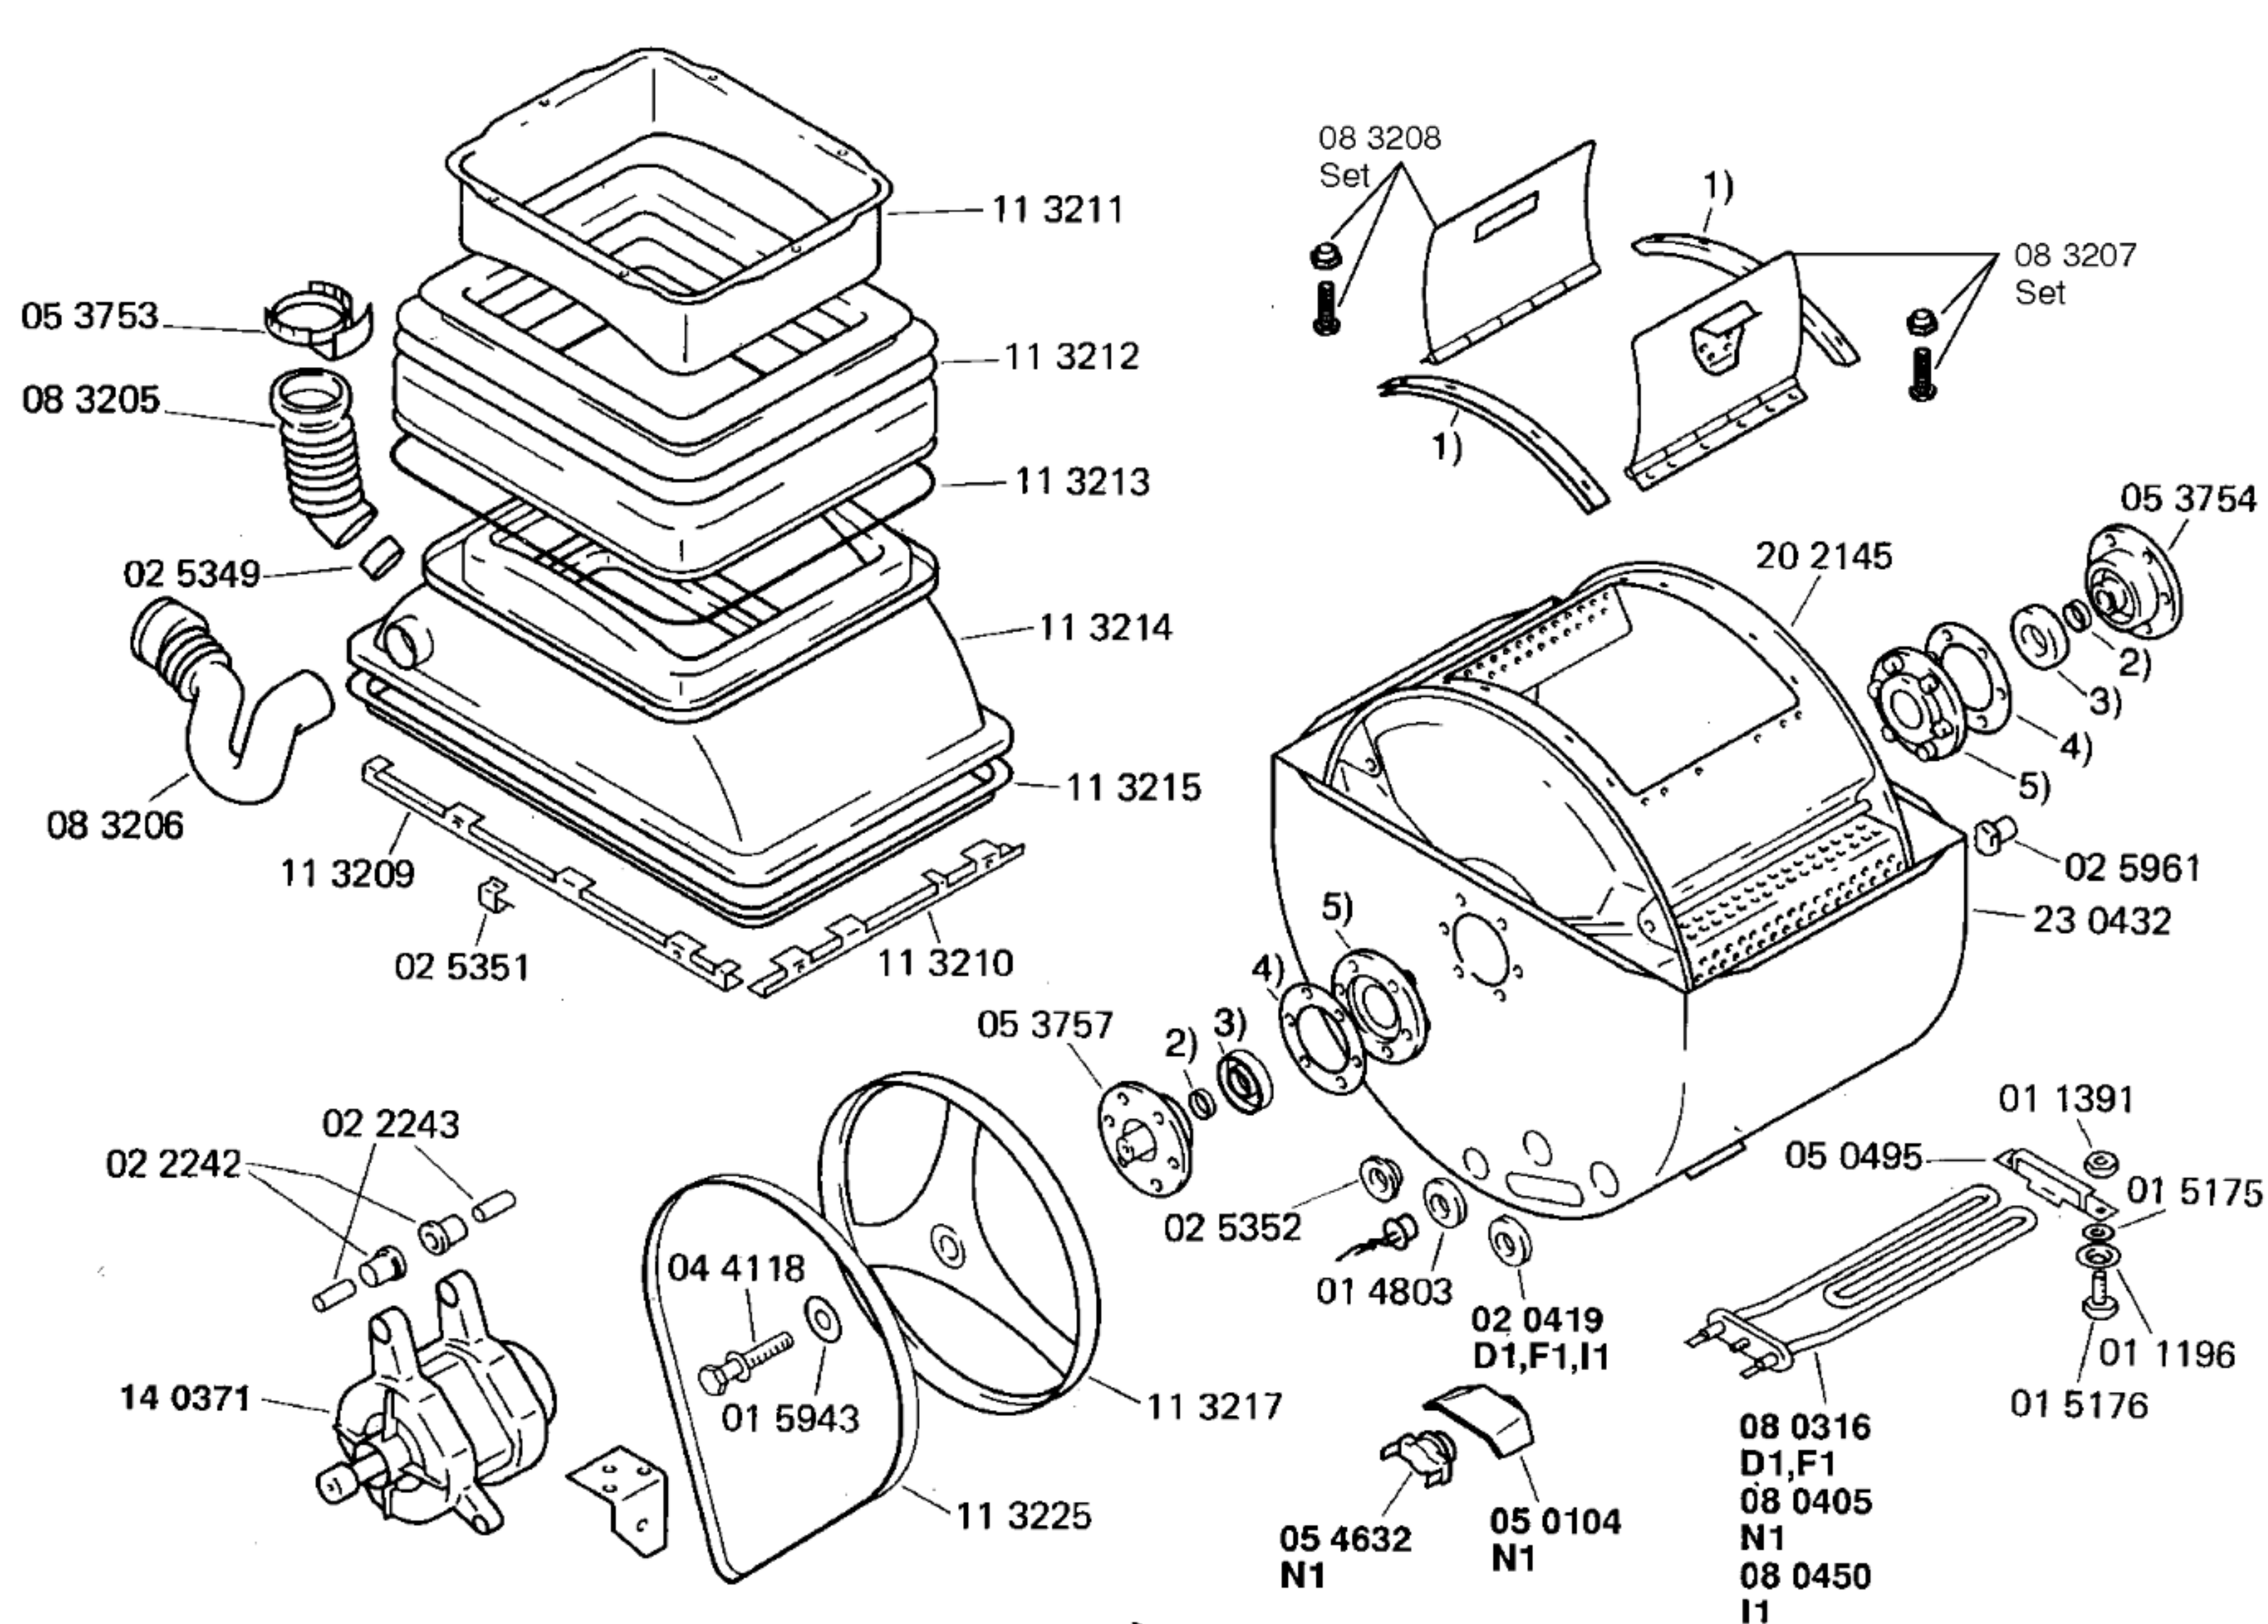

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 3755
- 5) 05 3756

