



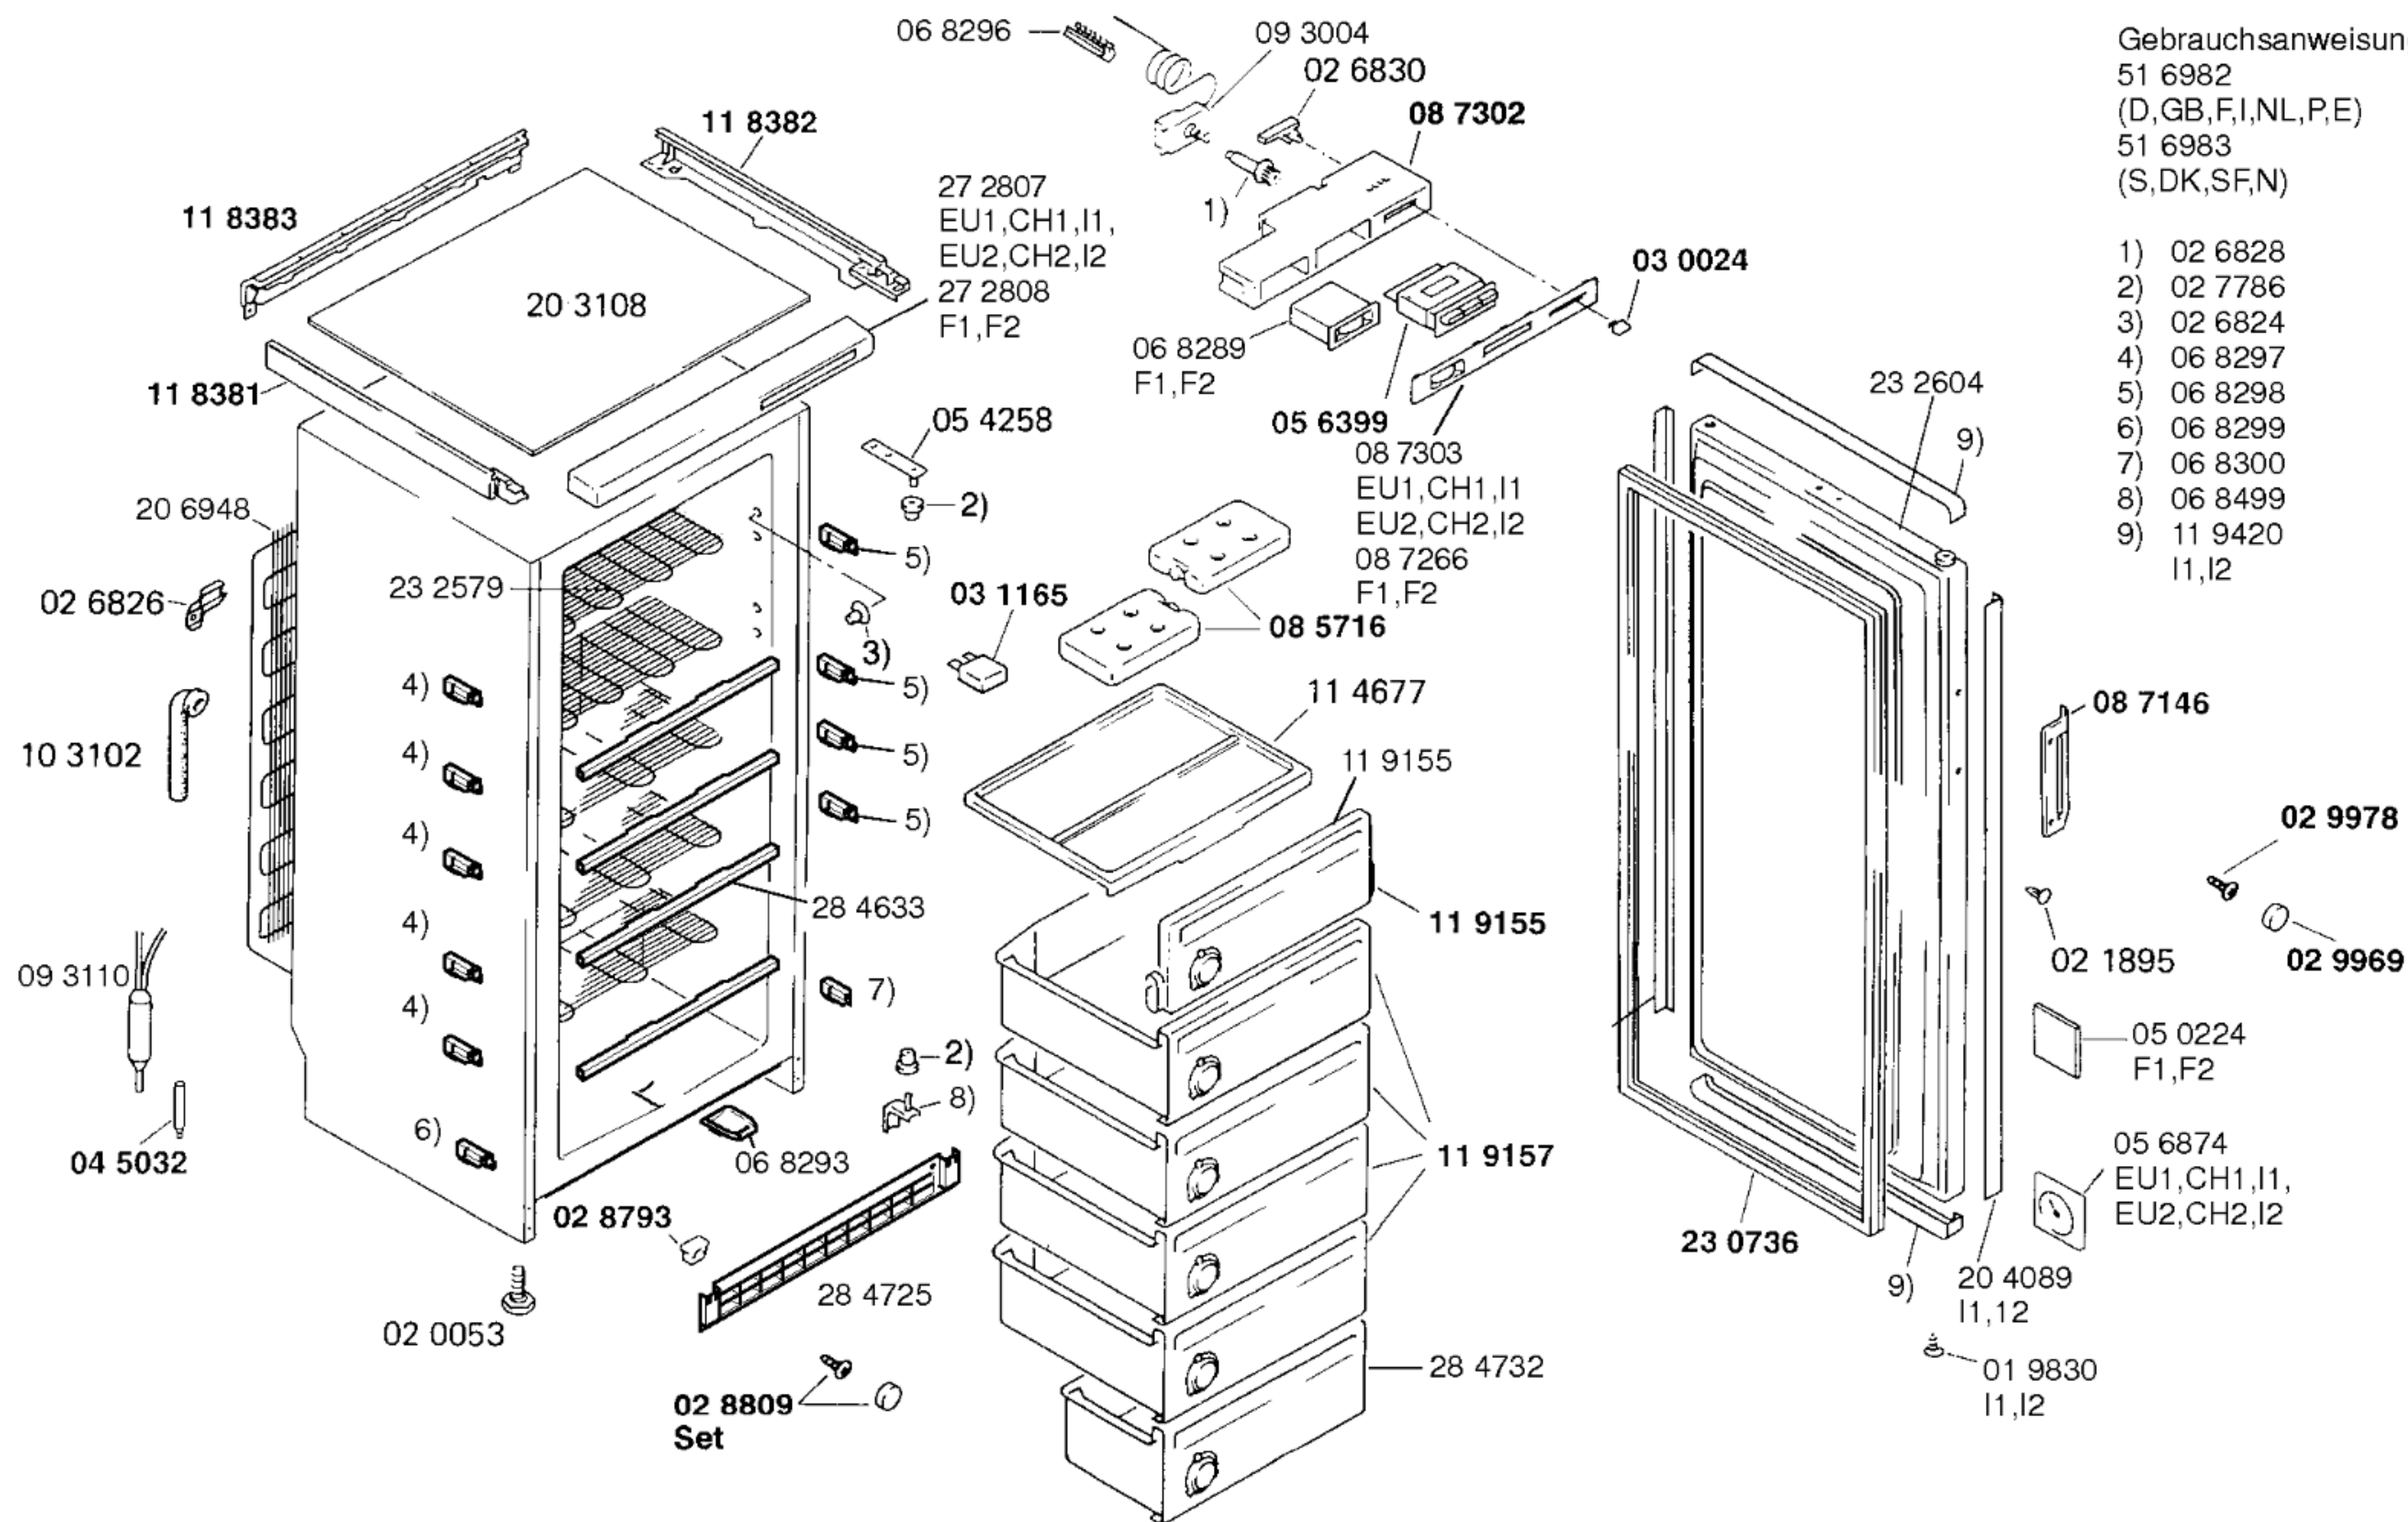

Gebrauchsanweisungen
51 6982
(D,GB,F,I,NL,P,E)
51 6983
(S,DK,SE,N)

- 1) 02 6828
- 2) 02 7786
- 3) 02 6824
- 4) 06 8297
- 5) 06 8298
- 6) 06 8299
- 7) 06 8300
- 8) 06 8499
- 9) 11 9420
I1,I2

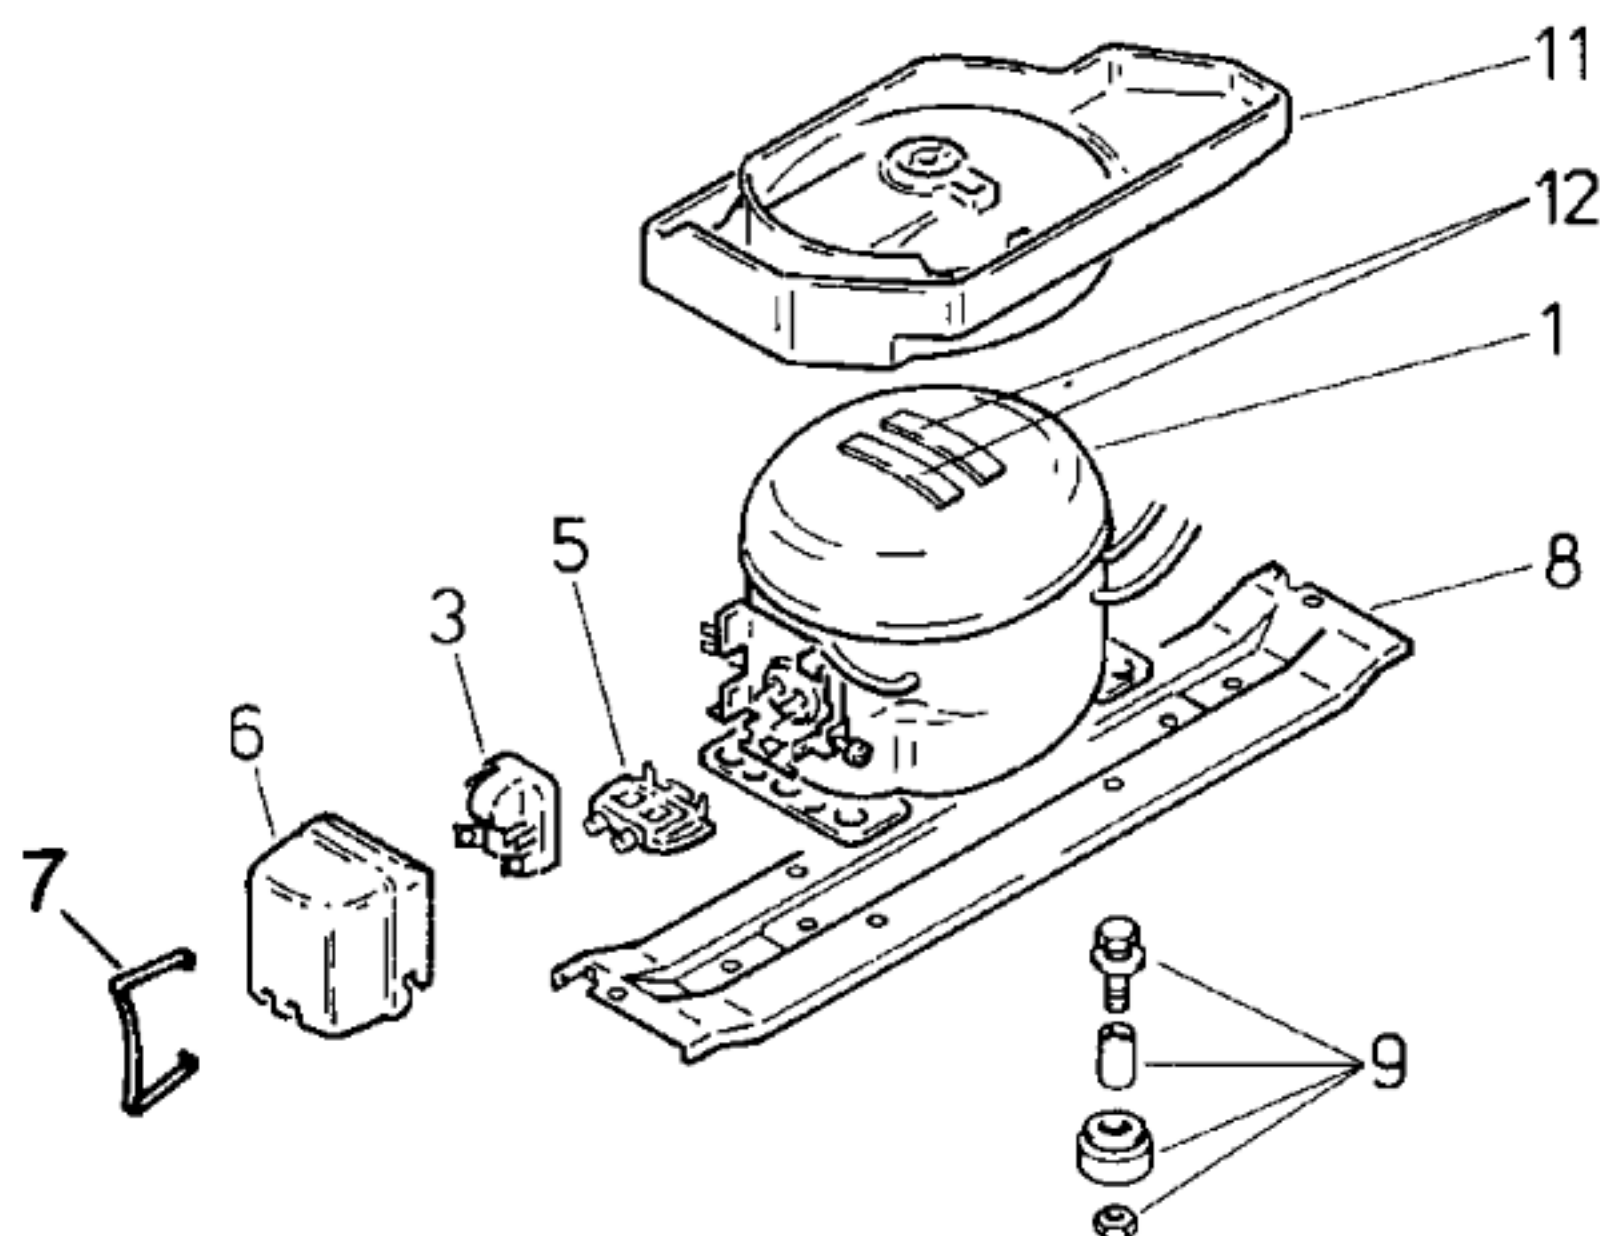

	EU1,CH1,F1,I1	EU2,CH2,F2,I2	
Pos.	Matsushita	Danfoss	
	D116LRAA	NL6A	
1	14 0563	14 1147	
2			
3	05 8506	06 8290	
4			
5		06 8292	
6	05 8458	06 8291	
7	02 6731		
8	11 1567	11 1567	
9	05 0166	05 0166	
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita	Danfoss	
Typ/Type		D116LRAA	NL6A	
Förderleistung/Delivery/Débit		l/h	1184	1098
Anlaufstrom/Starting current/Cour. de démarrage		A	8,75	5,1
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	12,0
		Hi/aux	Ω	28,7
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		077B2157		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		„ein“	°C	-22
Valeurs de commutation		„aus“		-14
		(„abtauen“ od.)	„alarm“	-32
				-22
				-17,5
Füllmenge/Fill.quantity/Charge		R12	g	185
Anschlußwert/Conn.load/Puiss. connectée		W	150	140
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		