


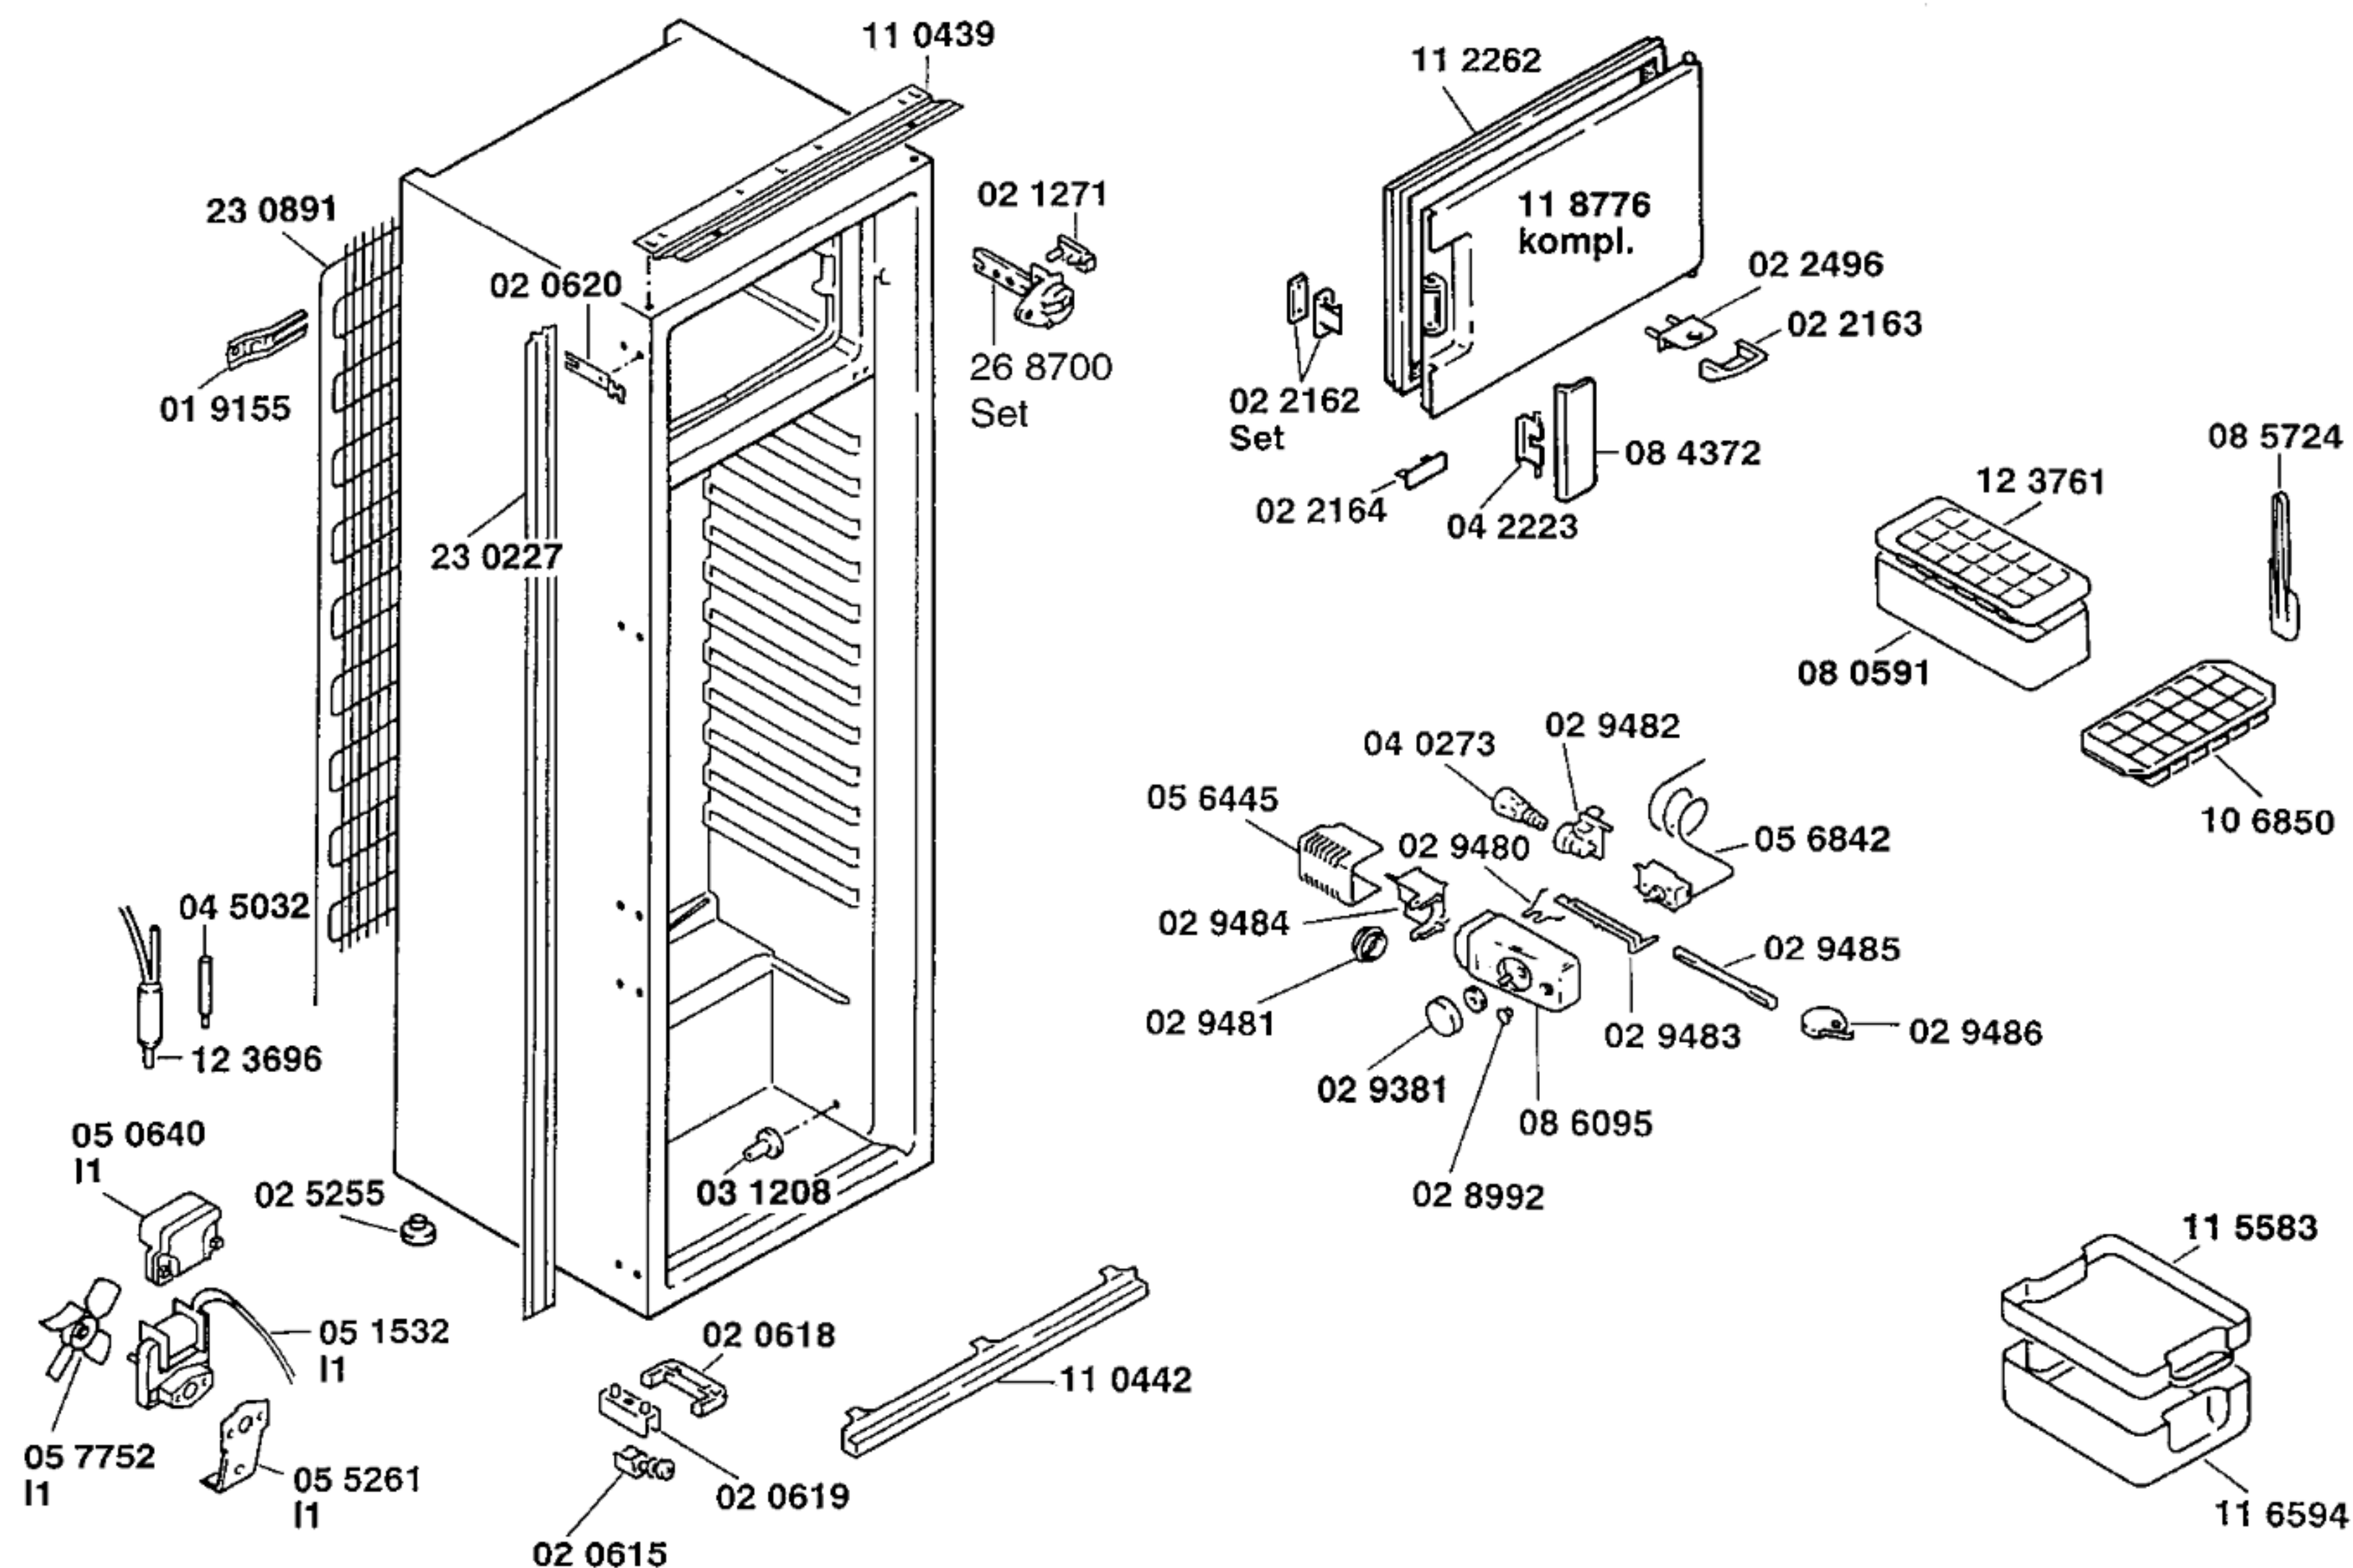



51 2721
 Gebrauchsanweisung
 (D,GB,F,I,NL,E)

51 2329
 Montageanleitung
 (D,GB,F,I,NL,N,S,E)

08 4136
 Schraubensatz

08 5059
 Befestigungssatz

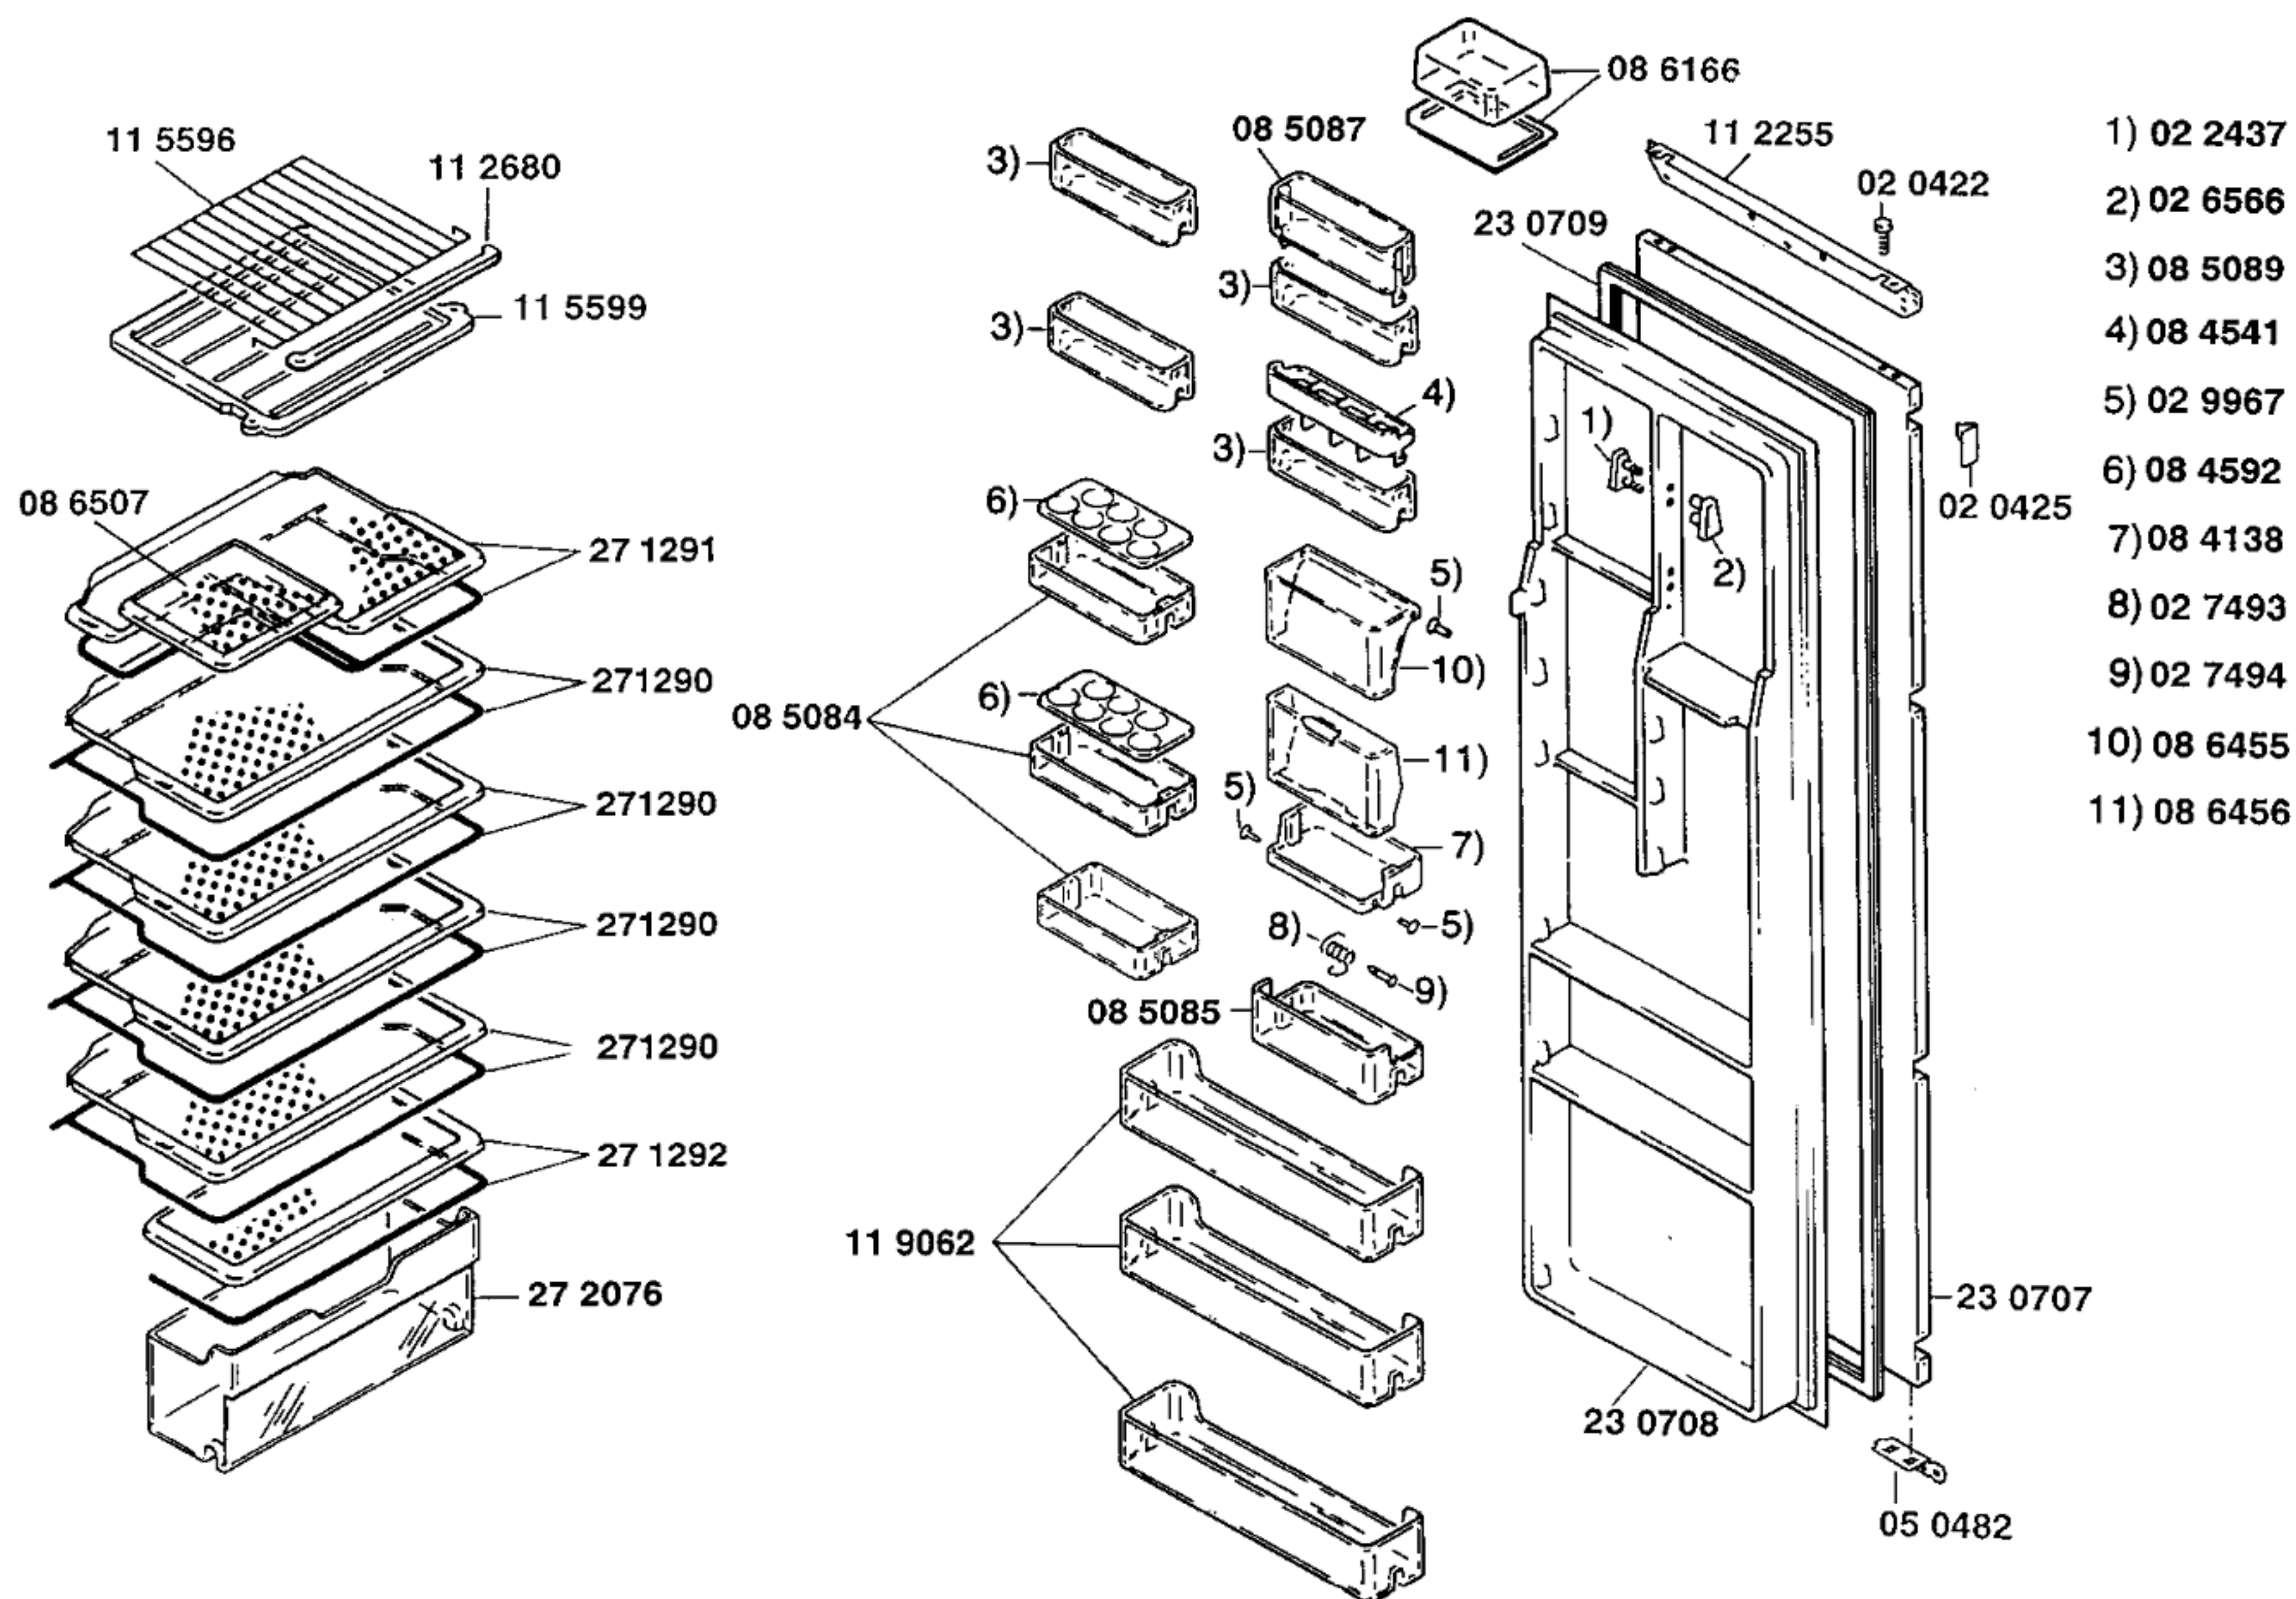

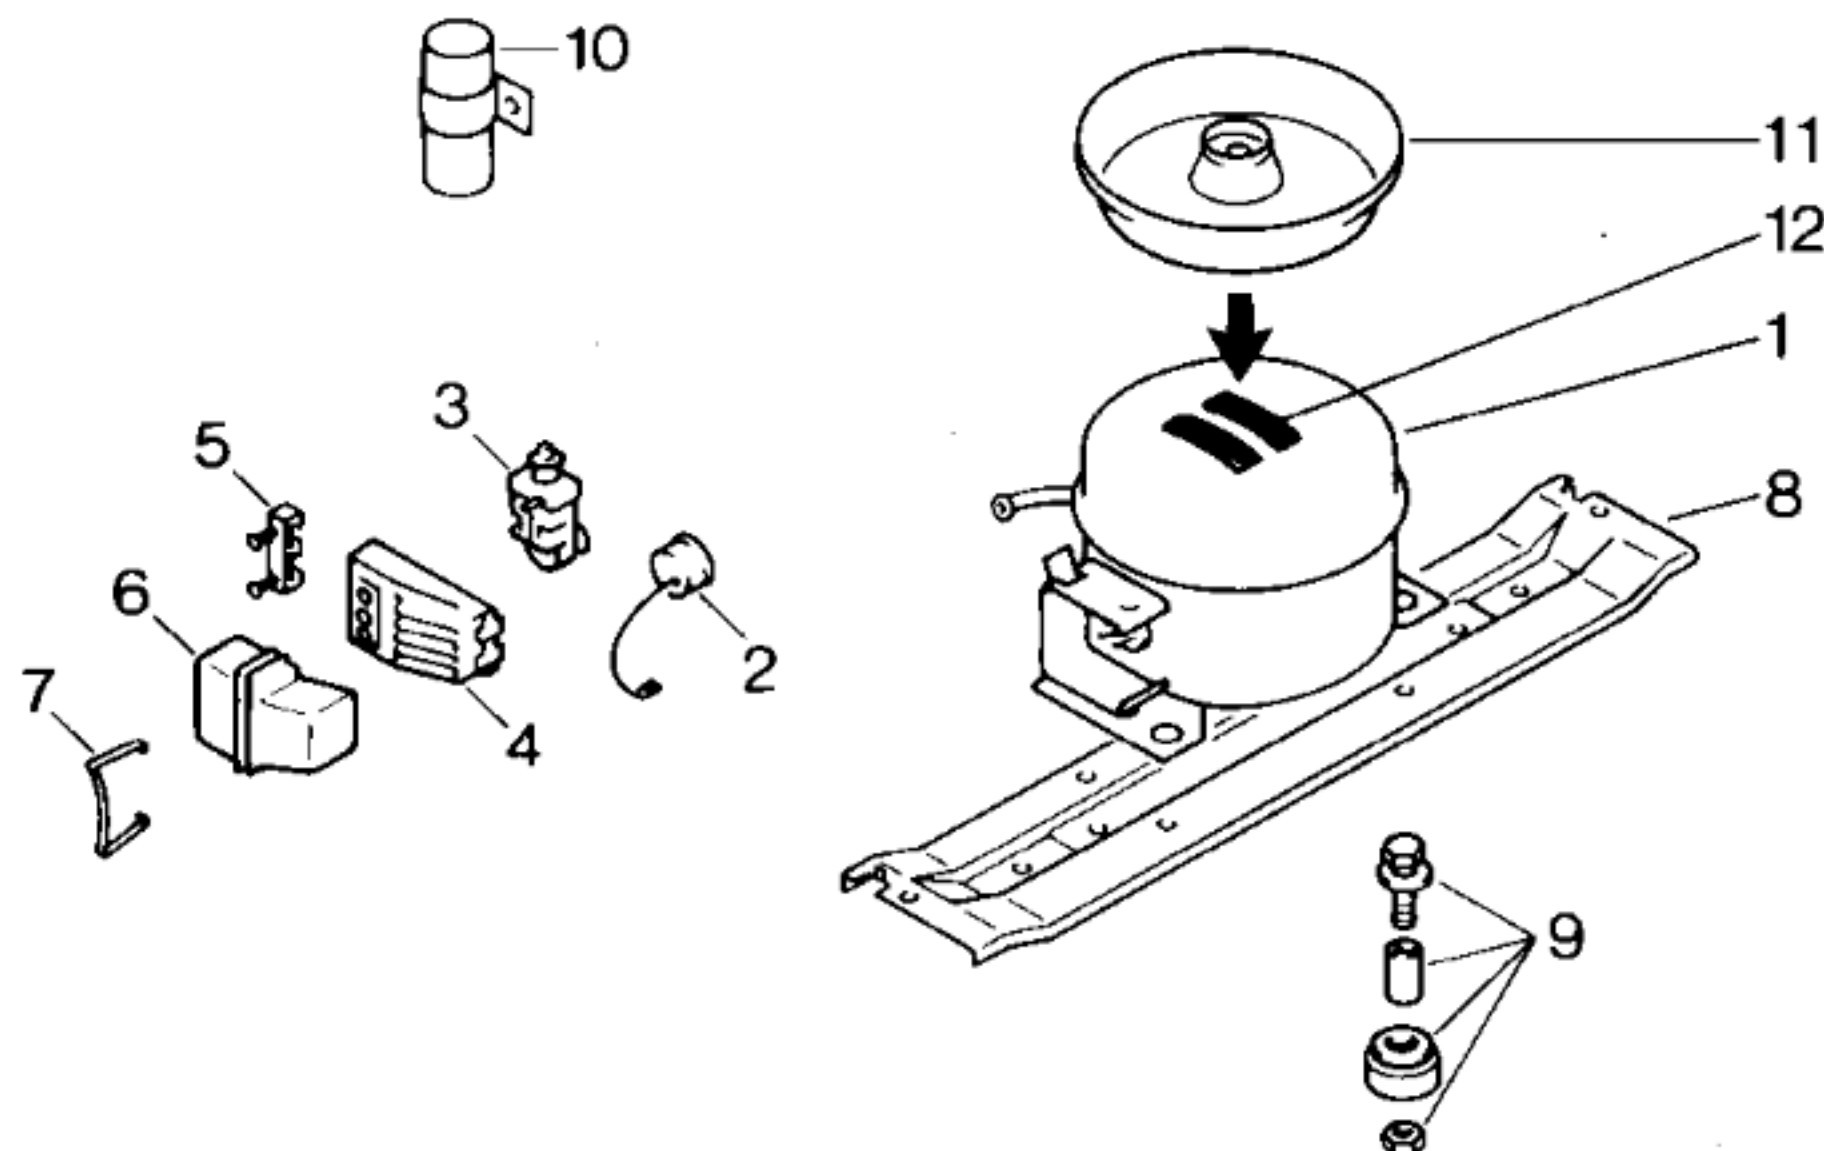

Pos.	EU1,CH1,F1,I1	EU2,CH2,F2	
	Aspera BY 1116 A	Matsushita D116LRAA	
1	14 0405	14 0563	
2	02 6559	05 8506	
3	02 2342		
4	05 1748		
5			
6	05 1746	05 8458	
7	02 2339	02 6731	
8	11 1838	11 1838	
9	05 0166	05 0166	
10			
11	08 5091	08 5182	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Aspera	Matsushita	
Typ/Type		BY 1116 A	D116LRAA	
Förderleistung/Delivery/Débit		l/h	1450	1184
Anlaufstrom/Starting current/Cour. de démarrage		A	9,9	8,75
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	11,7	12,0
		Hi/aux Ω	37,7	28,7
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K 59		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		+ 4,5	+ 4,5	
Valeurs de commutation		- 31,0	- 13,5	
		(„abtauen“ od.)	„alarm“	
Füllmenge/Fill.quantity/Charge		R12	g	180
Anschlußwert/Conn.load/Puiss. connectée		W	150	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω	430 $\pm$ 10%	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		