



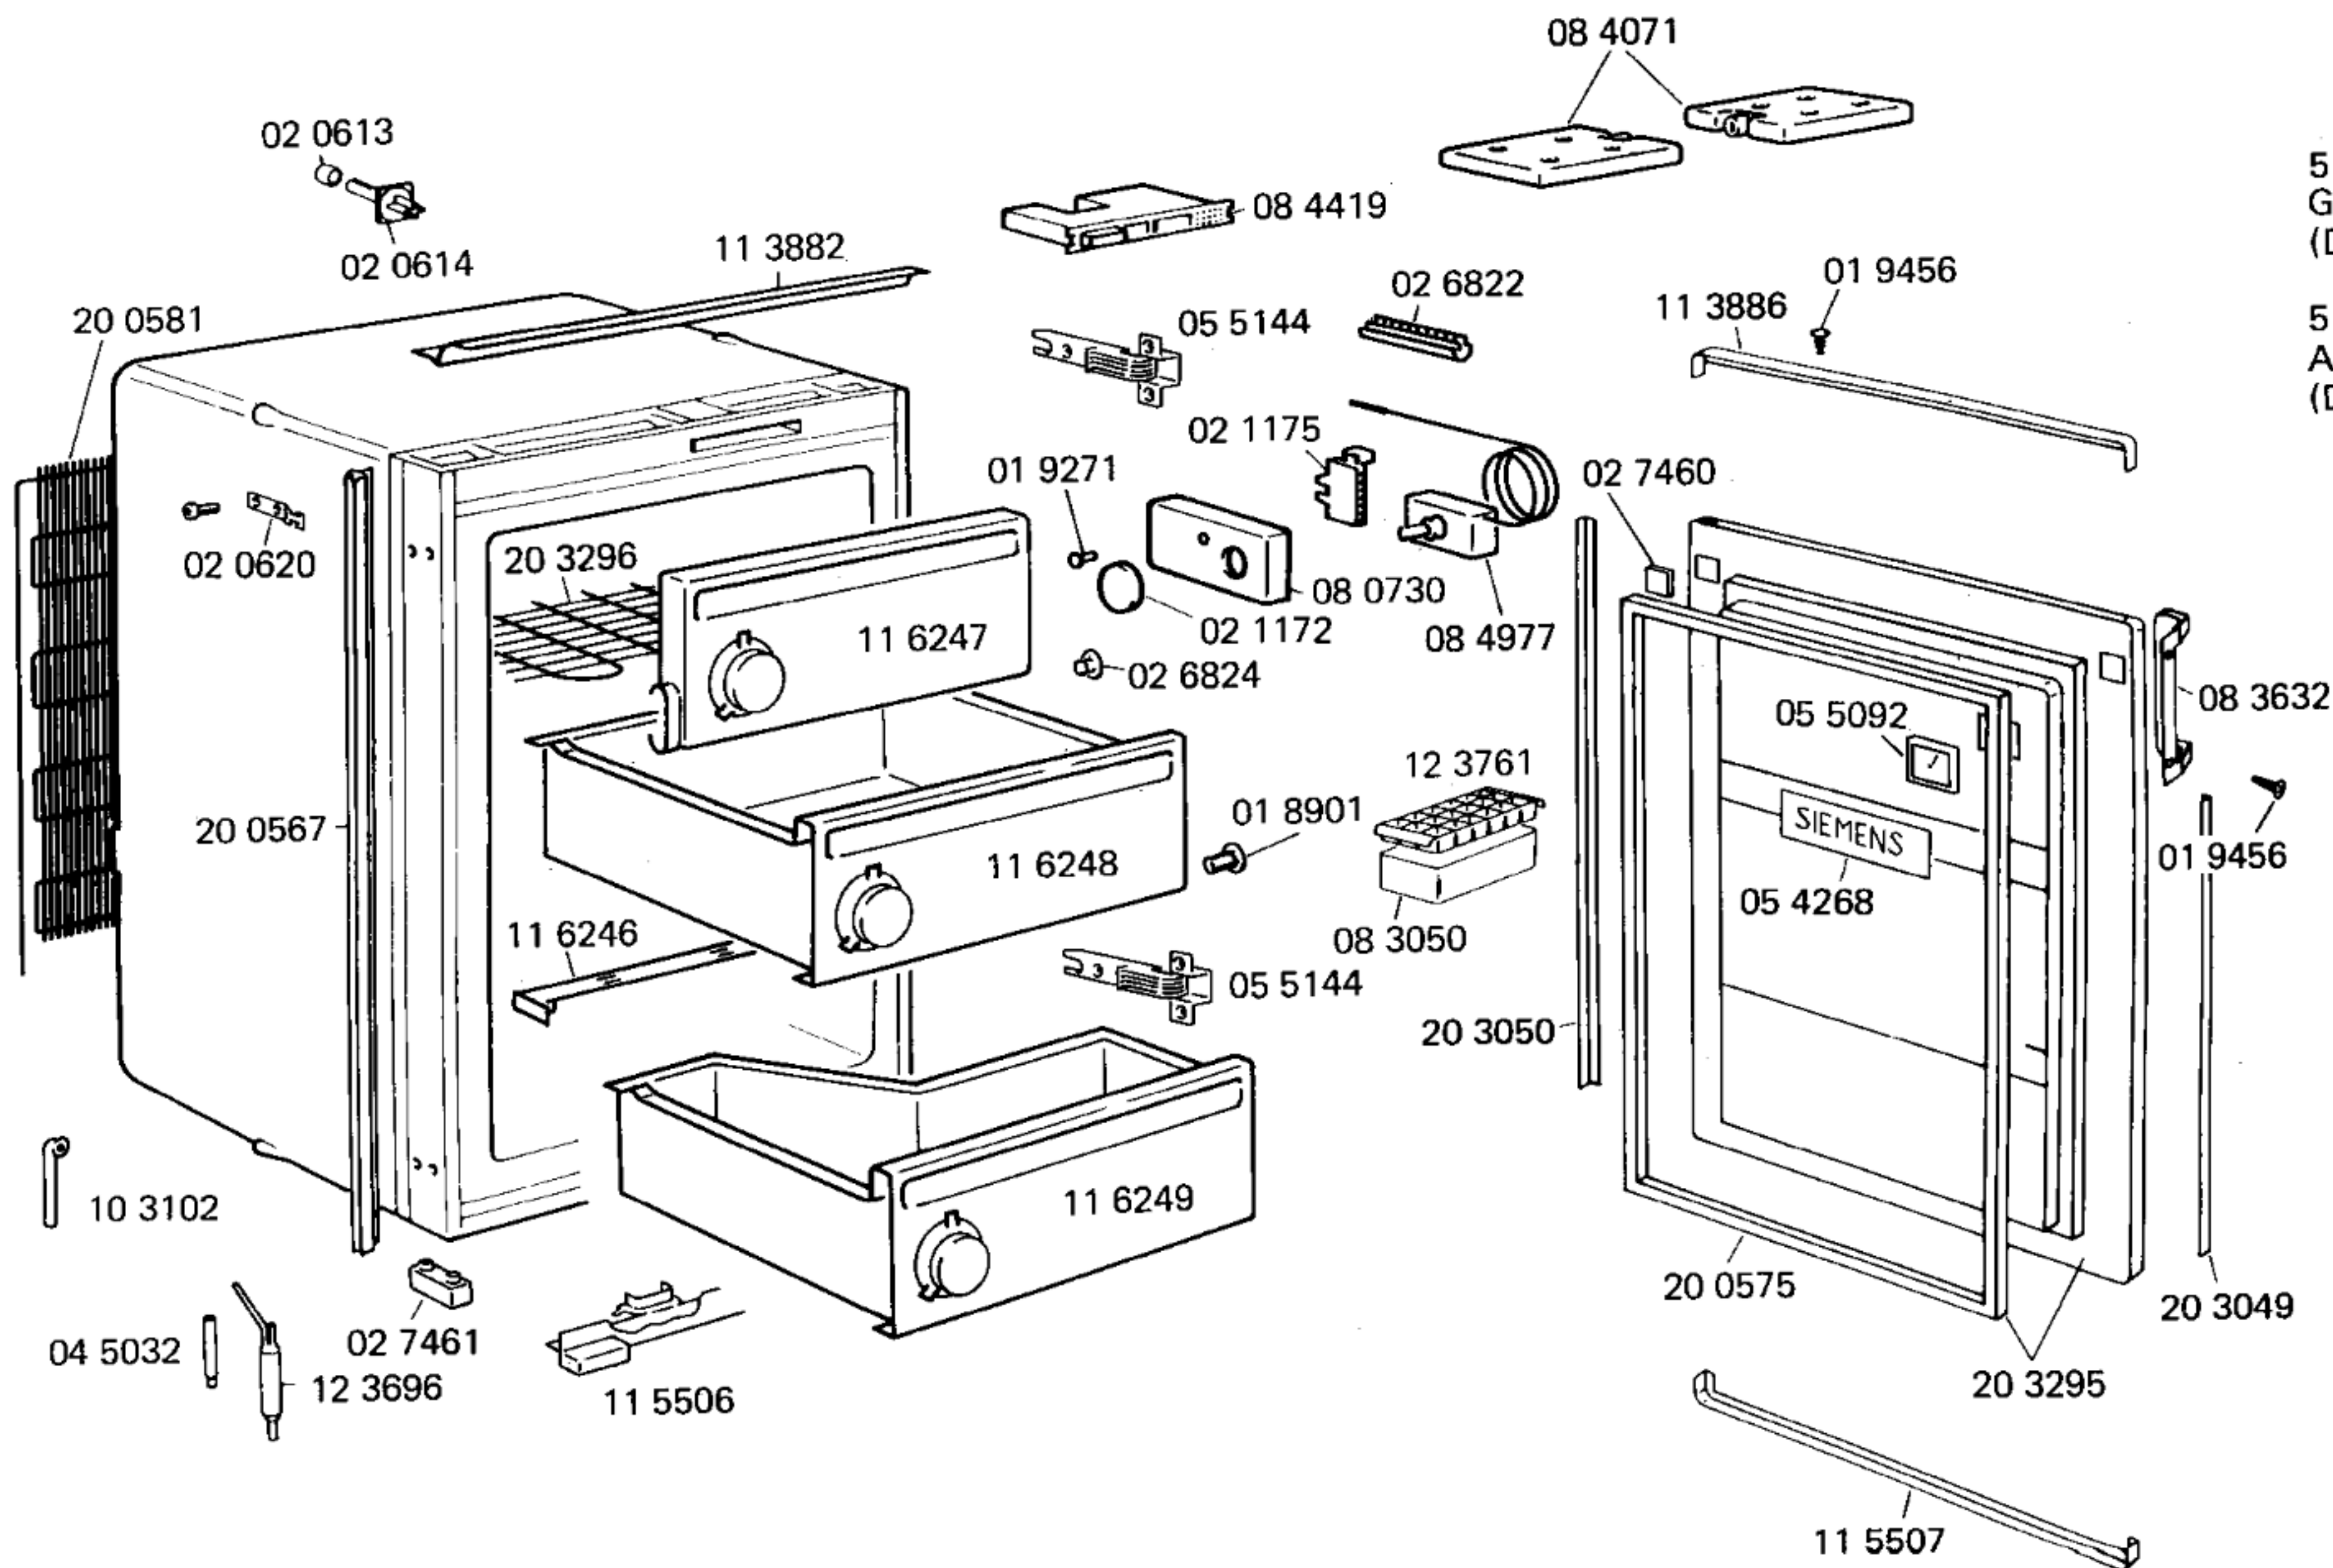

51 2635
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)

51 2304
Aufstellanweisung
(D,GB,F,E,I,NL,S,DK,

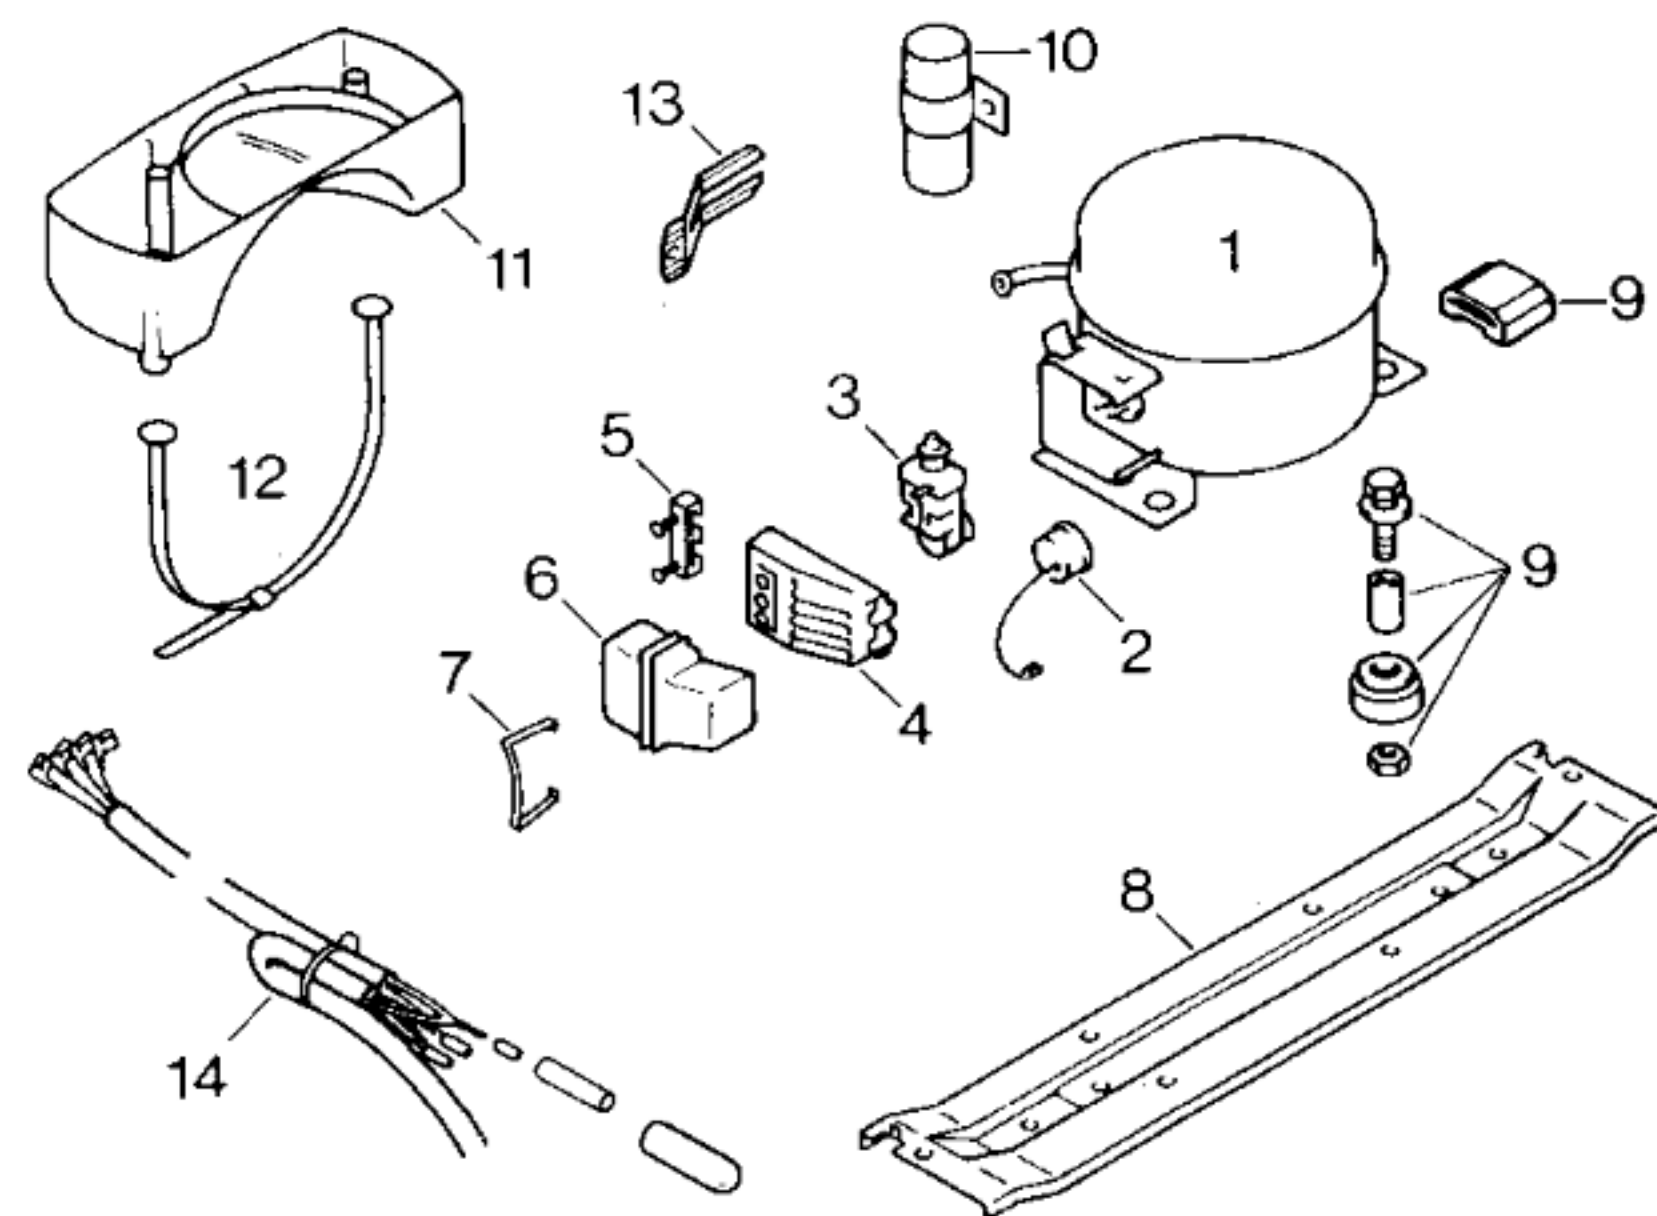

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss	Danfoss		
Typ/Type		TL 4 A	TL 5		
Förderleistung/Delivery/Débit		V 702	V 920		
Anlaufstrom/Starting current/Cour. de démarrage		A 7,8	9,0		
Widerstand/Resistance/Résistance		Ω 23,8	15,7		
		Hi/aux	19,7	18,8	
Temp.-Regler/Thermostat		M & J			
Typ/Type		TF 57 SF 2			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/		„ein“ °C	- 24	- 16	
Valeurs de commutation		„aus“	- 34	- 24	
		(„abtauen“ od.)	„alarm“	- 19	- 12
Füllmenge/Fill.quantity/Charge		R12	g	150	
Anschlußwert/Conn.load/Puiss. connectée		W	110		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

Pos.	D1,F1	E1		
	Danfoss	Danfoss		
1	13 1064	140065		
2				
3	02 0108			
4				
5				
6	05 1413			
7				
8	11 0437			
9	05 0166			
10				
11				
12				
13				
14				