


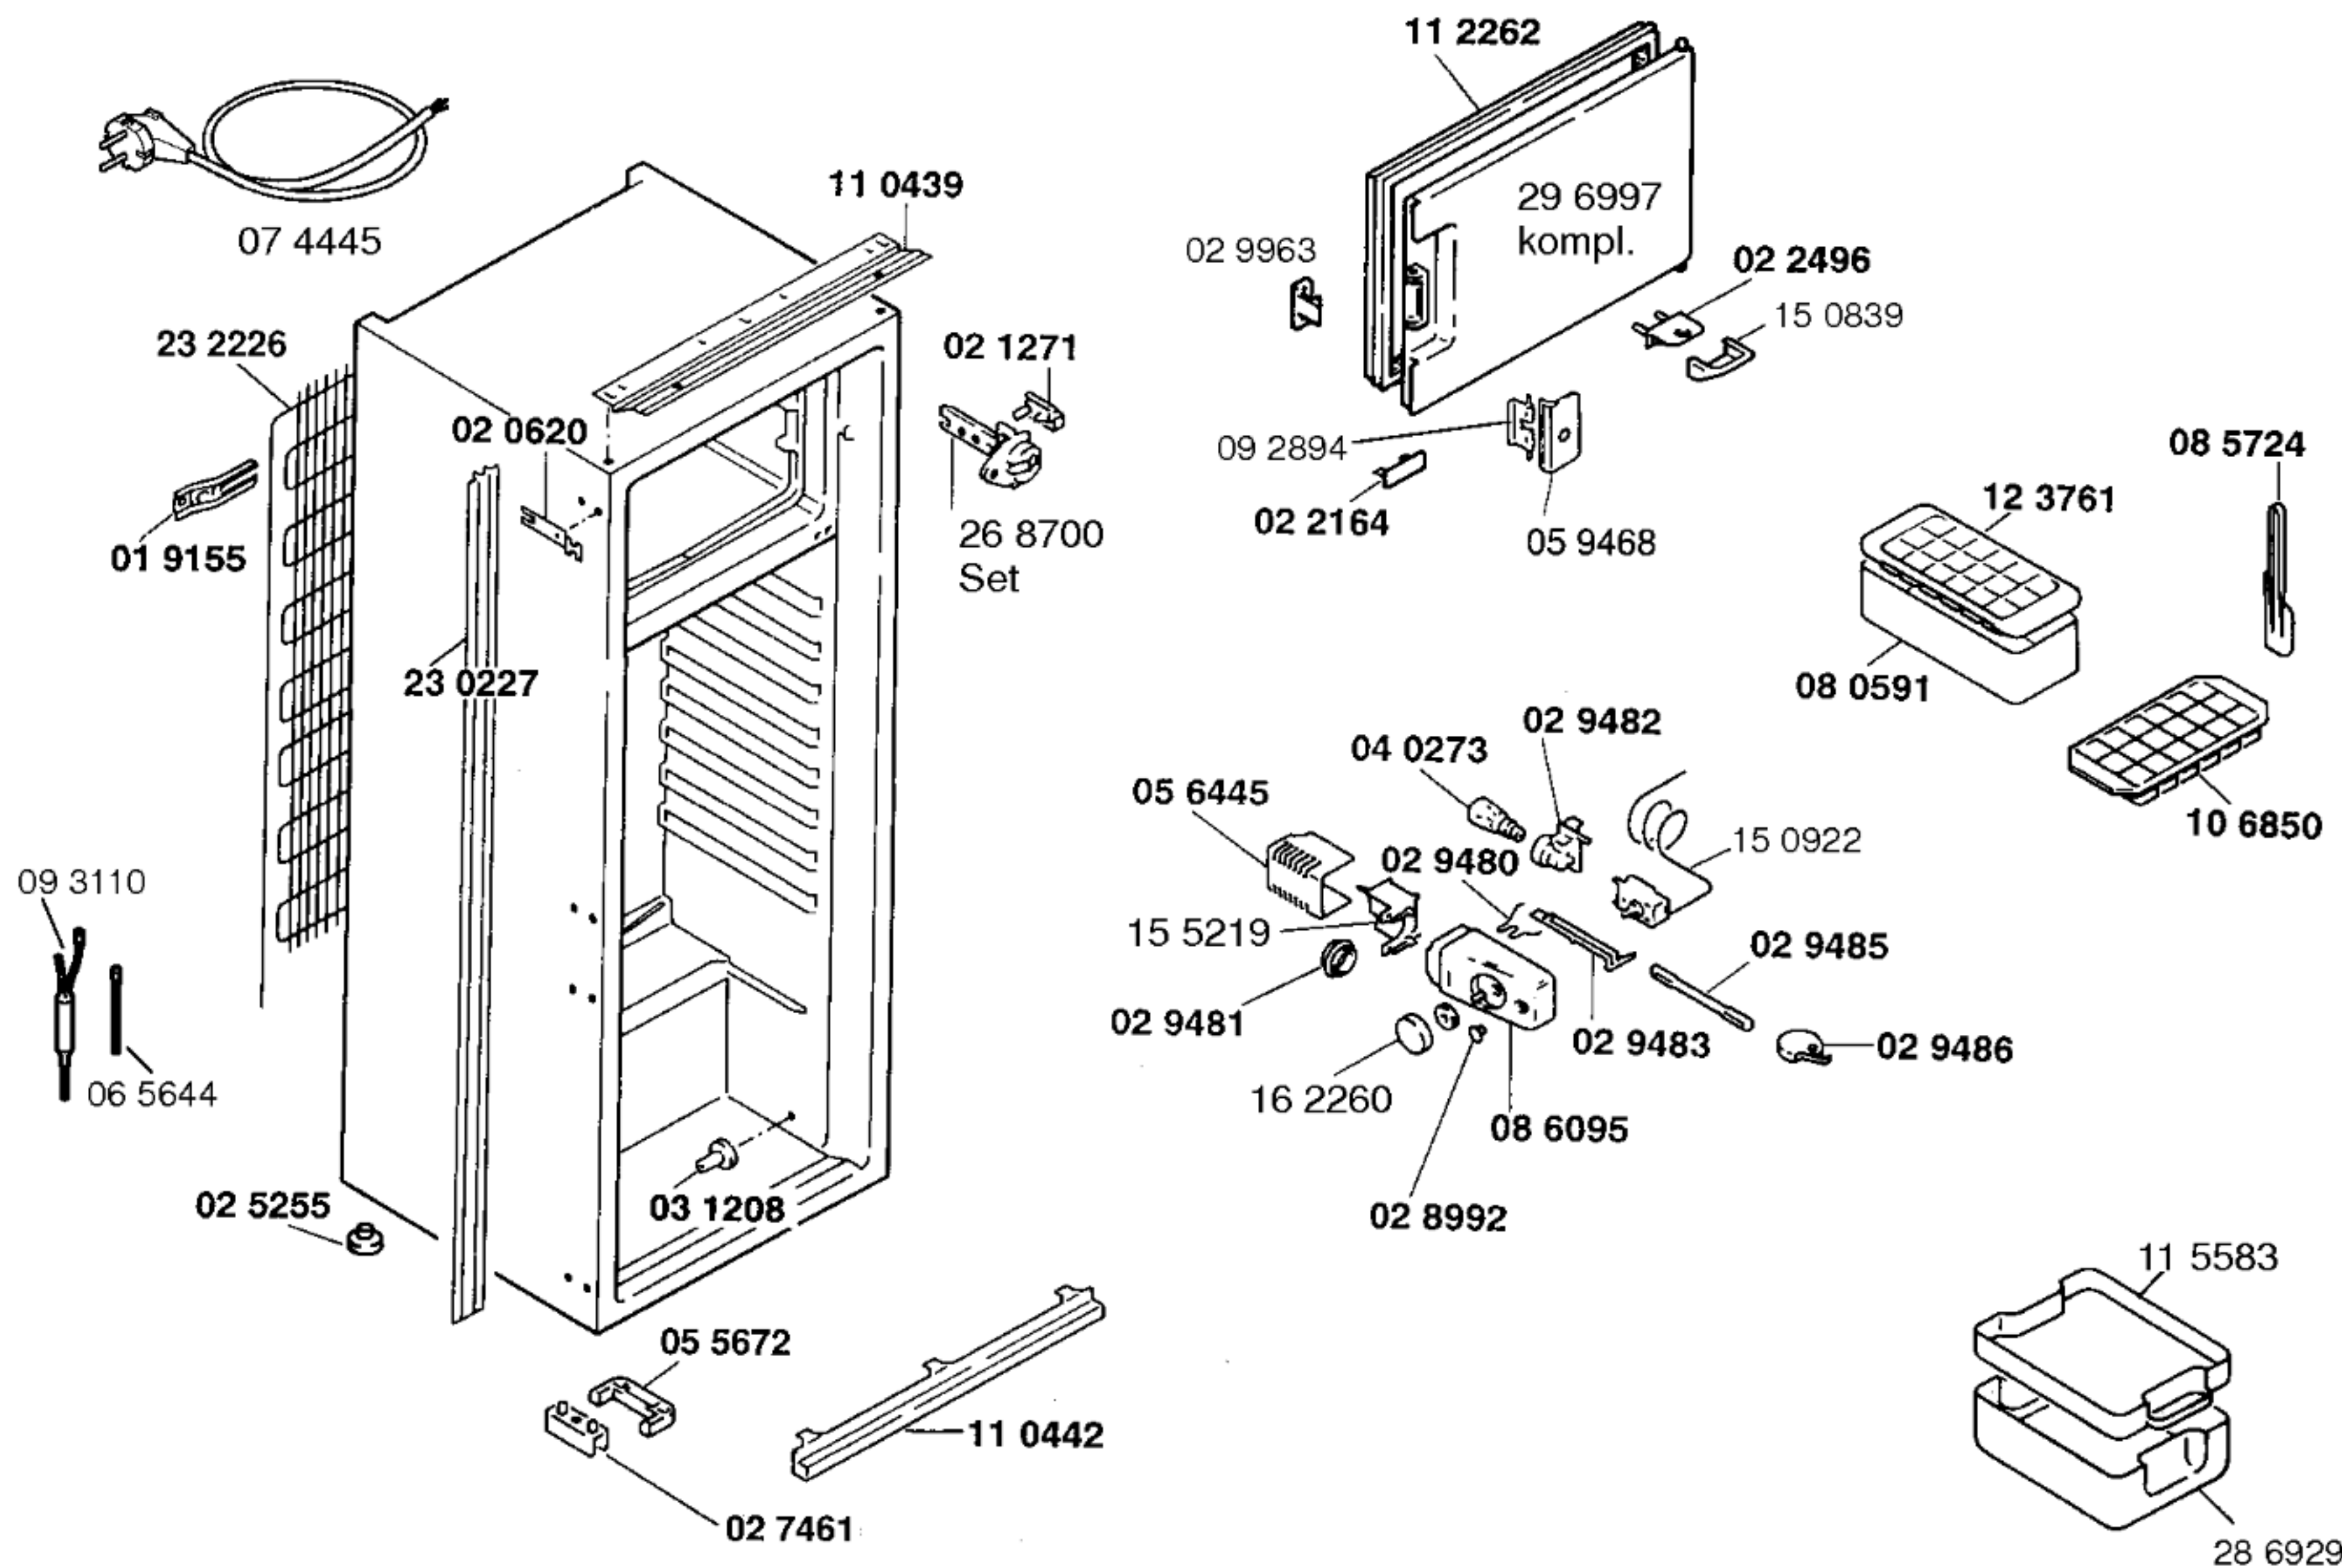


Gebrauchsanweisung
 52 0033
 (D,GB,F,I,NL,E)


Montageanleitung
 51 5436
 (D,GB,F,I,NL,S,E,N)

Befestigungssatz
 08 4136

Schraubensatz
 08 8957

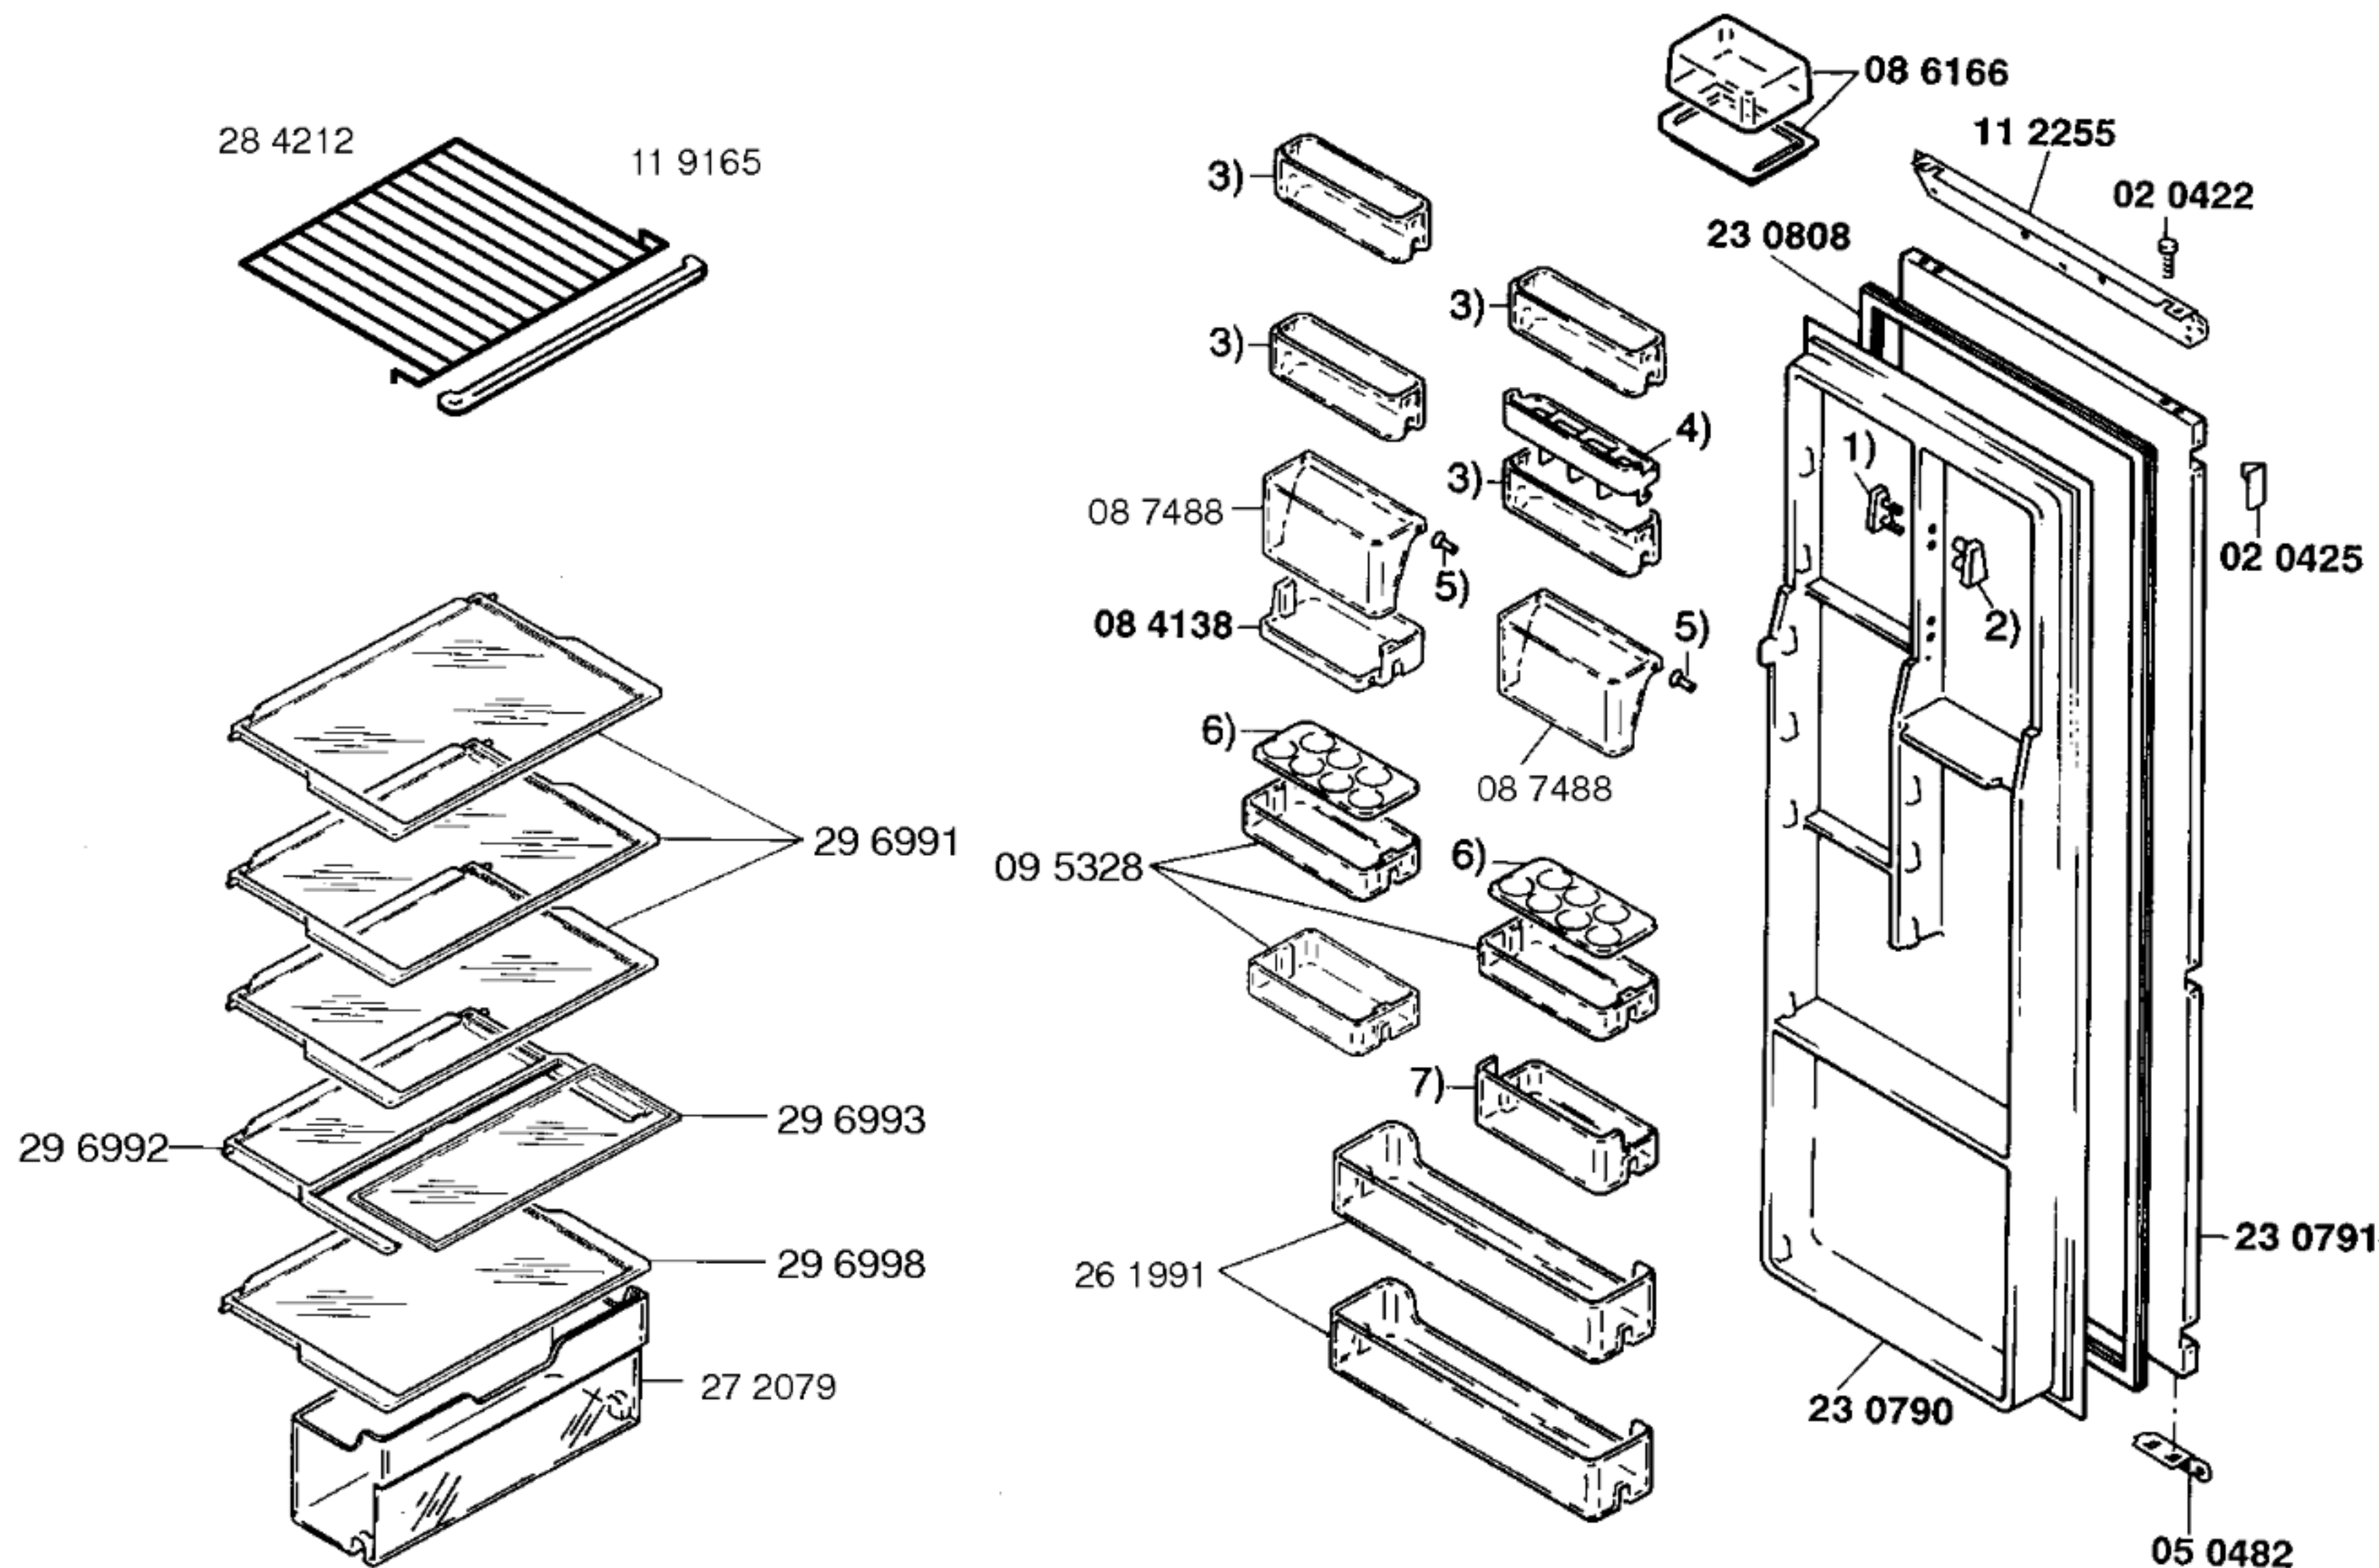

- 1) 02 2437
- 2) 02 6566
- 3) 08 8967
- 4) 08 4541
- 5) 02 9967
- 6) 08 4592
- 7) 26 1992

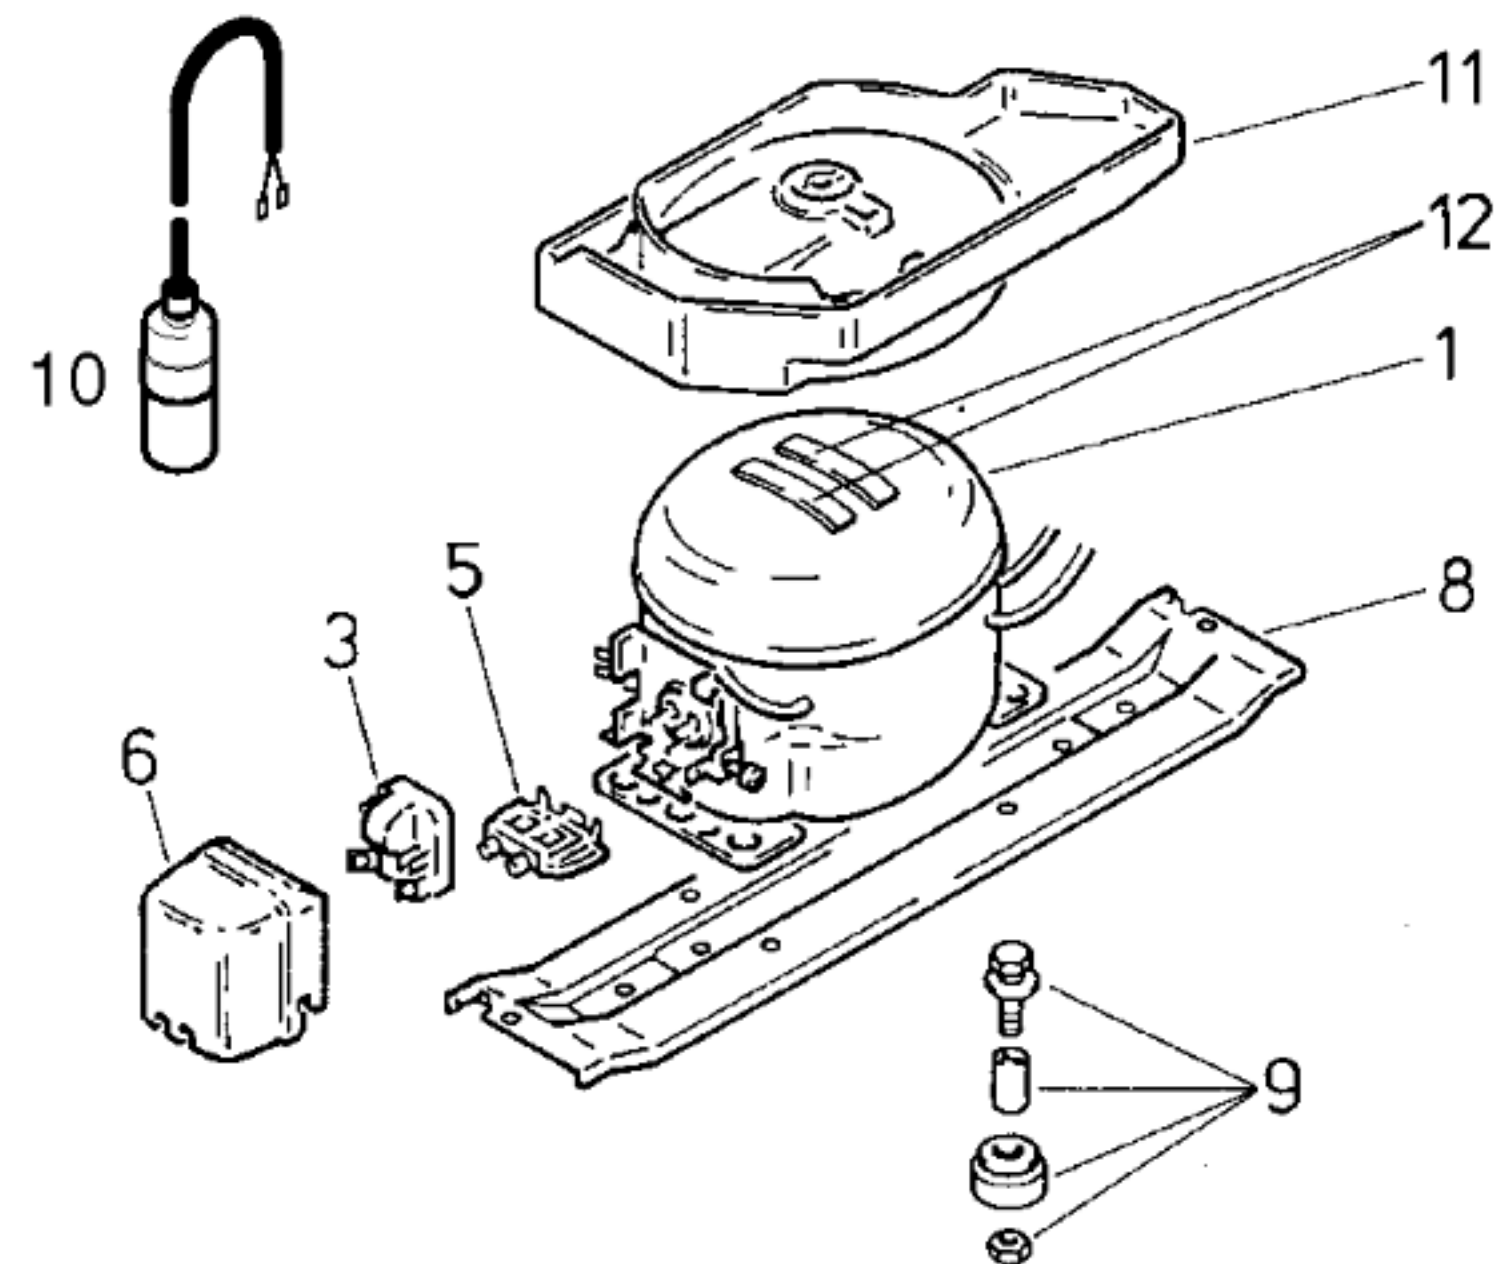

Pos.	V01	V02	
	Danfoss	Danfoss	
	NLE 15 K	NLE 15 K	
1	14 1311	14 1752	
2			
3	15 1055	15 1055	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7			
8	28 1825	28 1825	
9	05 0166	05 0166	
10	05 9467	05 9467	
11	08 4744	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NLE 15 K			
Förderleistung/Delivery/Débit		2637			
Anlaufstrom/Starting current/Cour. de démarrage		A			
Widerstand/Resistance/Résistance		Ha/main/prin.			
		Hi/aux			
		Ω			
		Ω			
Temp.-Regler/Thermostat		Ranco			
Typ/Type		K59			
Reglerstellung/Position		warm			
Schaltwerte/Switching values/		°C			
Valeurs de commutation		+4,5			
		-31,0			
		13,5			
Füllmenge/Fill.quantity/Charge		R600a			
		g			
		50			
Anschlußwert/Conn.toad/Puiss. connectée		W			
		150			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Resistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			