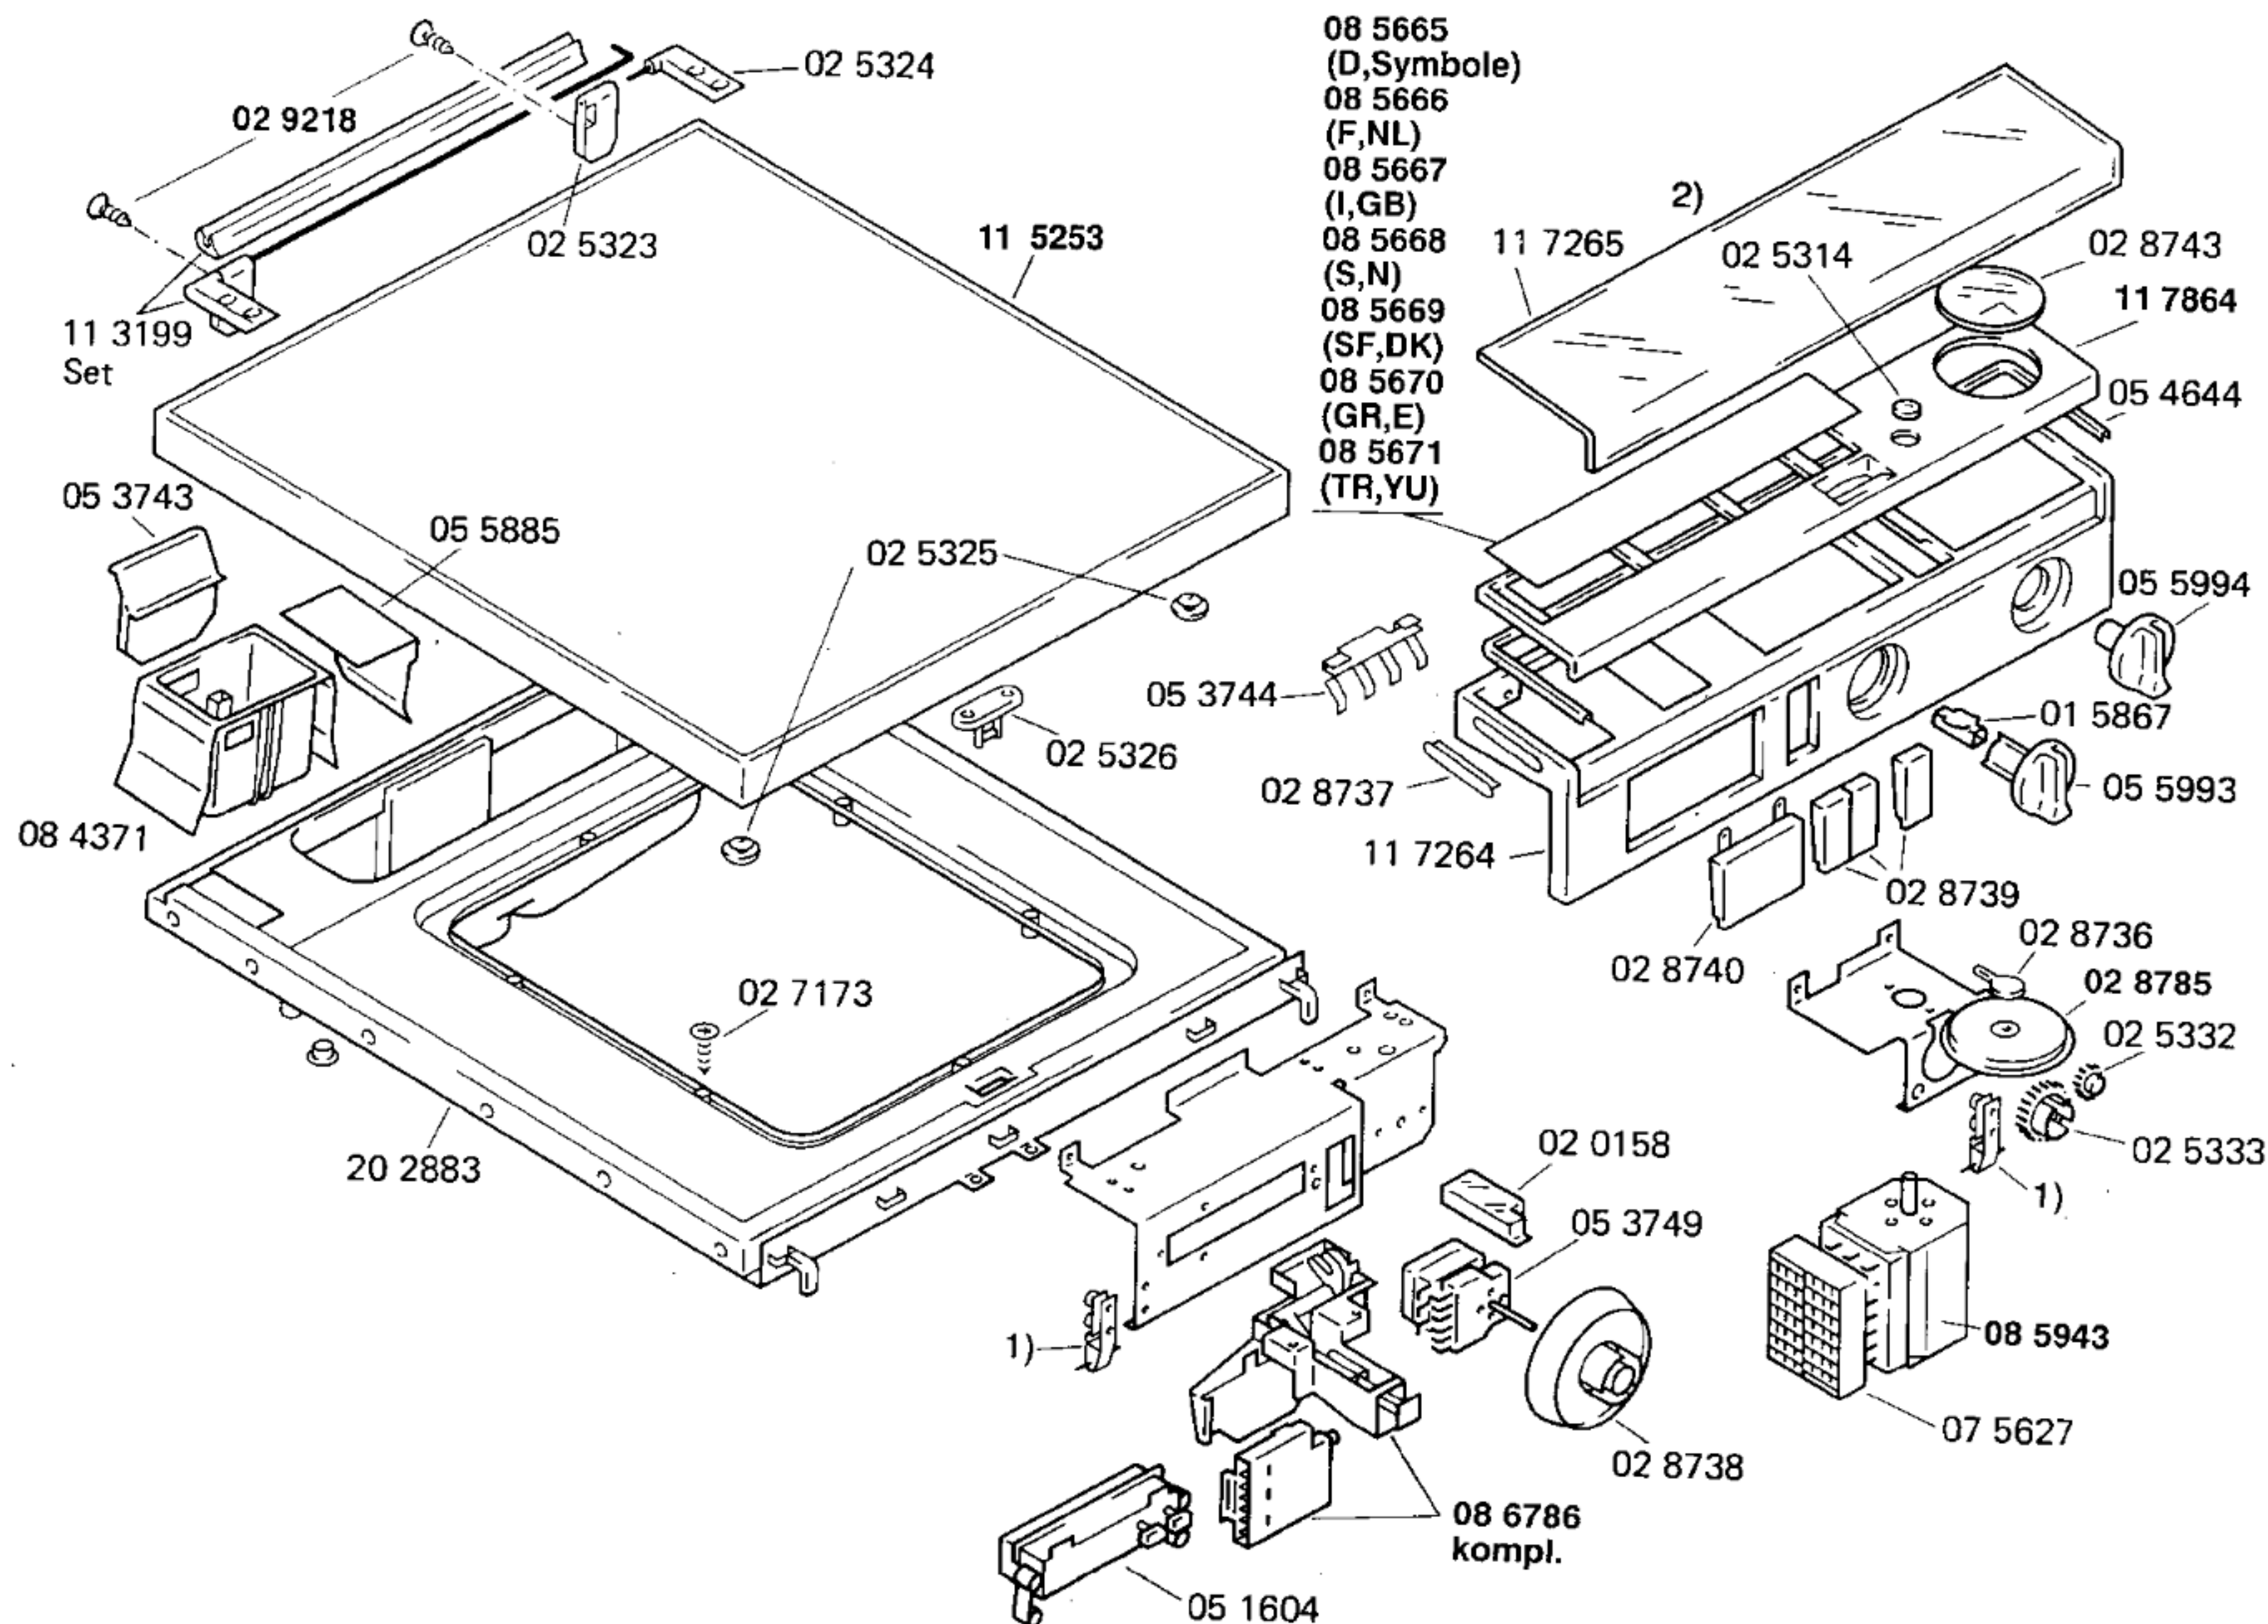


**BOSCH**

V341-WMV3410/01-D1
 V341-WMV341026/02-I1
 V341-WMV341034/01-Exp.1
 V341-WMV341325/01-F1

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

**Aufstellanweisungen:**

51 3182
 (D, GB, F, I, NL, E)
 51 1674
 (D, I, S, DK, N, SF)

Gebrauchsanweisungen:

51 3216
 (D, GB, F, I, NL, E)
 51 3217
 (D, I, S, DK, N, SF)

Programmtabellen:

51 3178
 (D, GB, F, I, NL, E)
 51 3177
 (D, I, S, DK, N, SF)

1) 02 5334


2) einschl. 05 4644

**BOSCH**

V341-WMV3410/01-D1
 V341-WMV341026/02-I1
 V341-WMV341034/01-Exp.1
 V341-WMV341325/01-F1

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

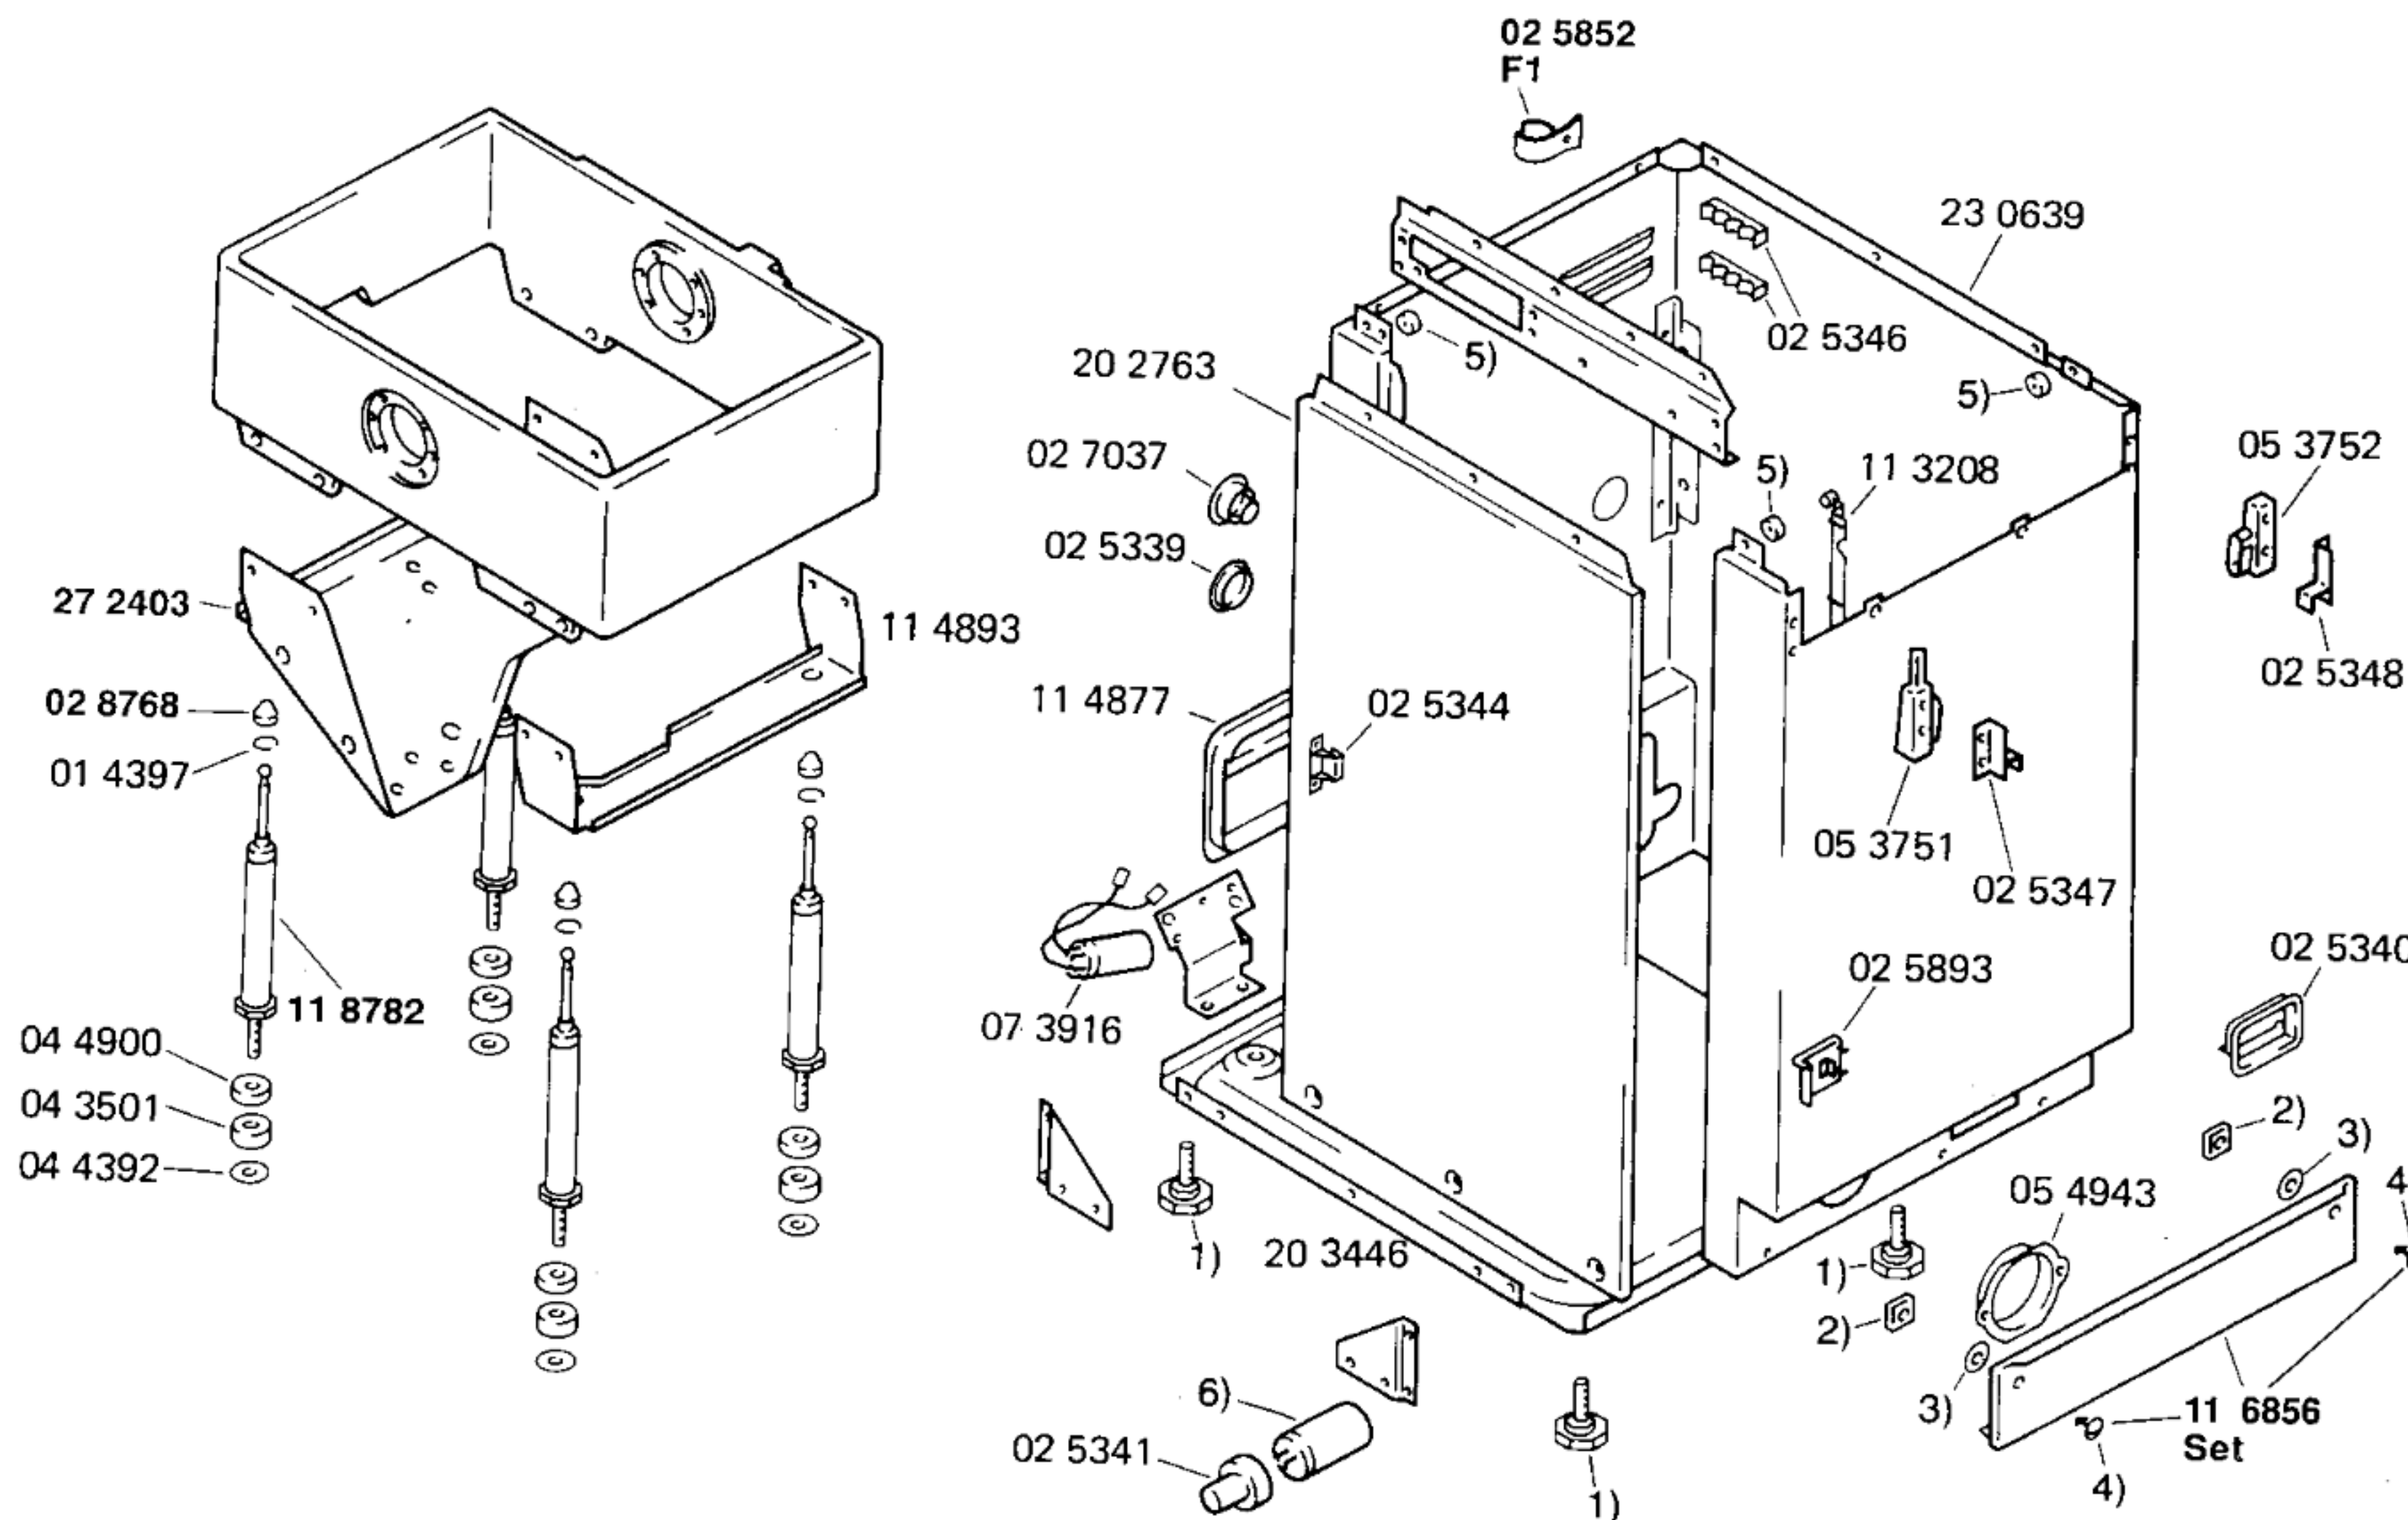

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8437
- 5) 02 5345
- 6) 07 3947




BOSCH

V341-WMV3410/01-D1
V341-WMV341026/02-I1
V341-WMV341034/01-Exp.1
V341-WMV341325/01-F1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

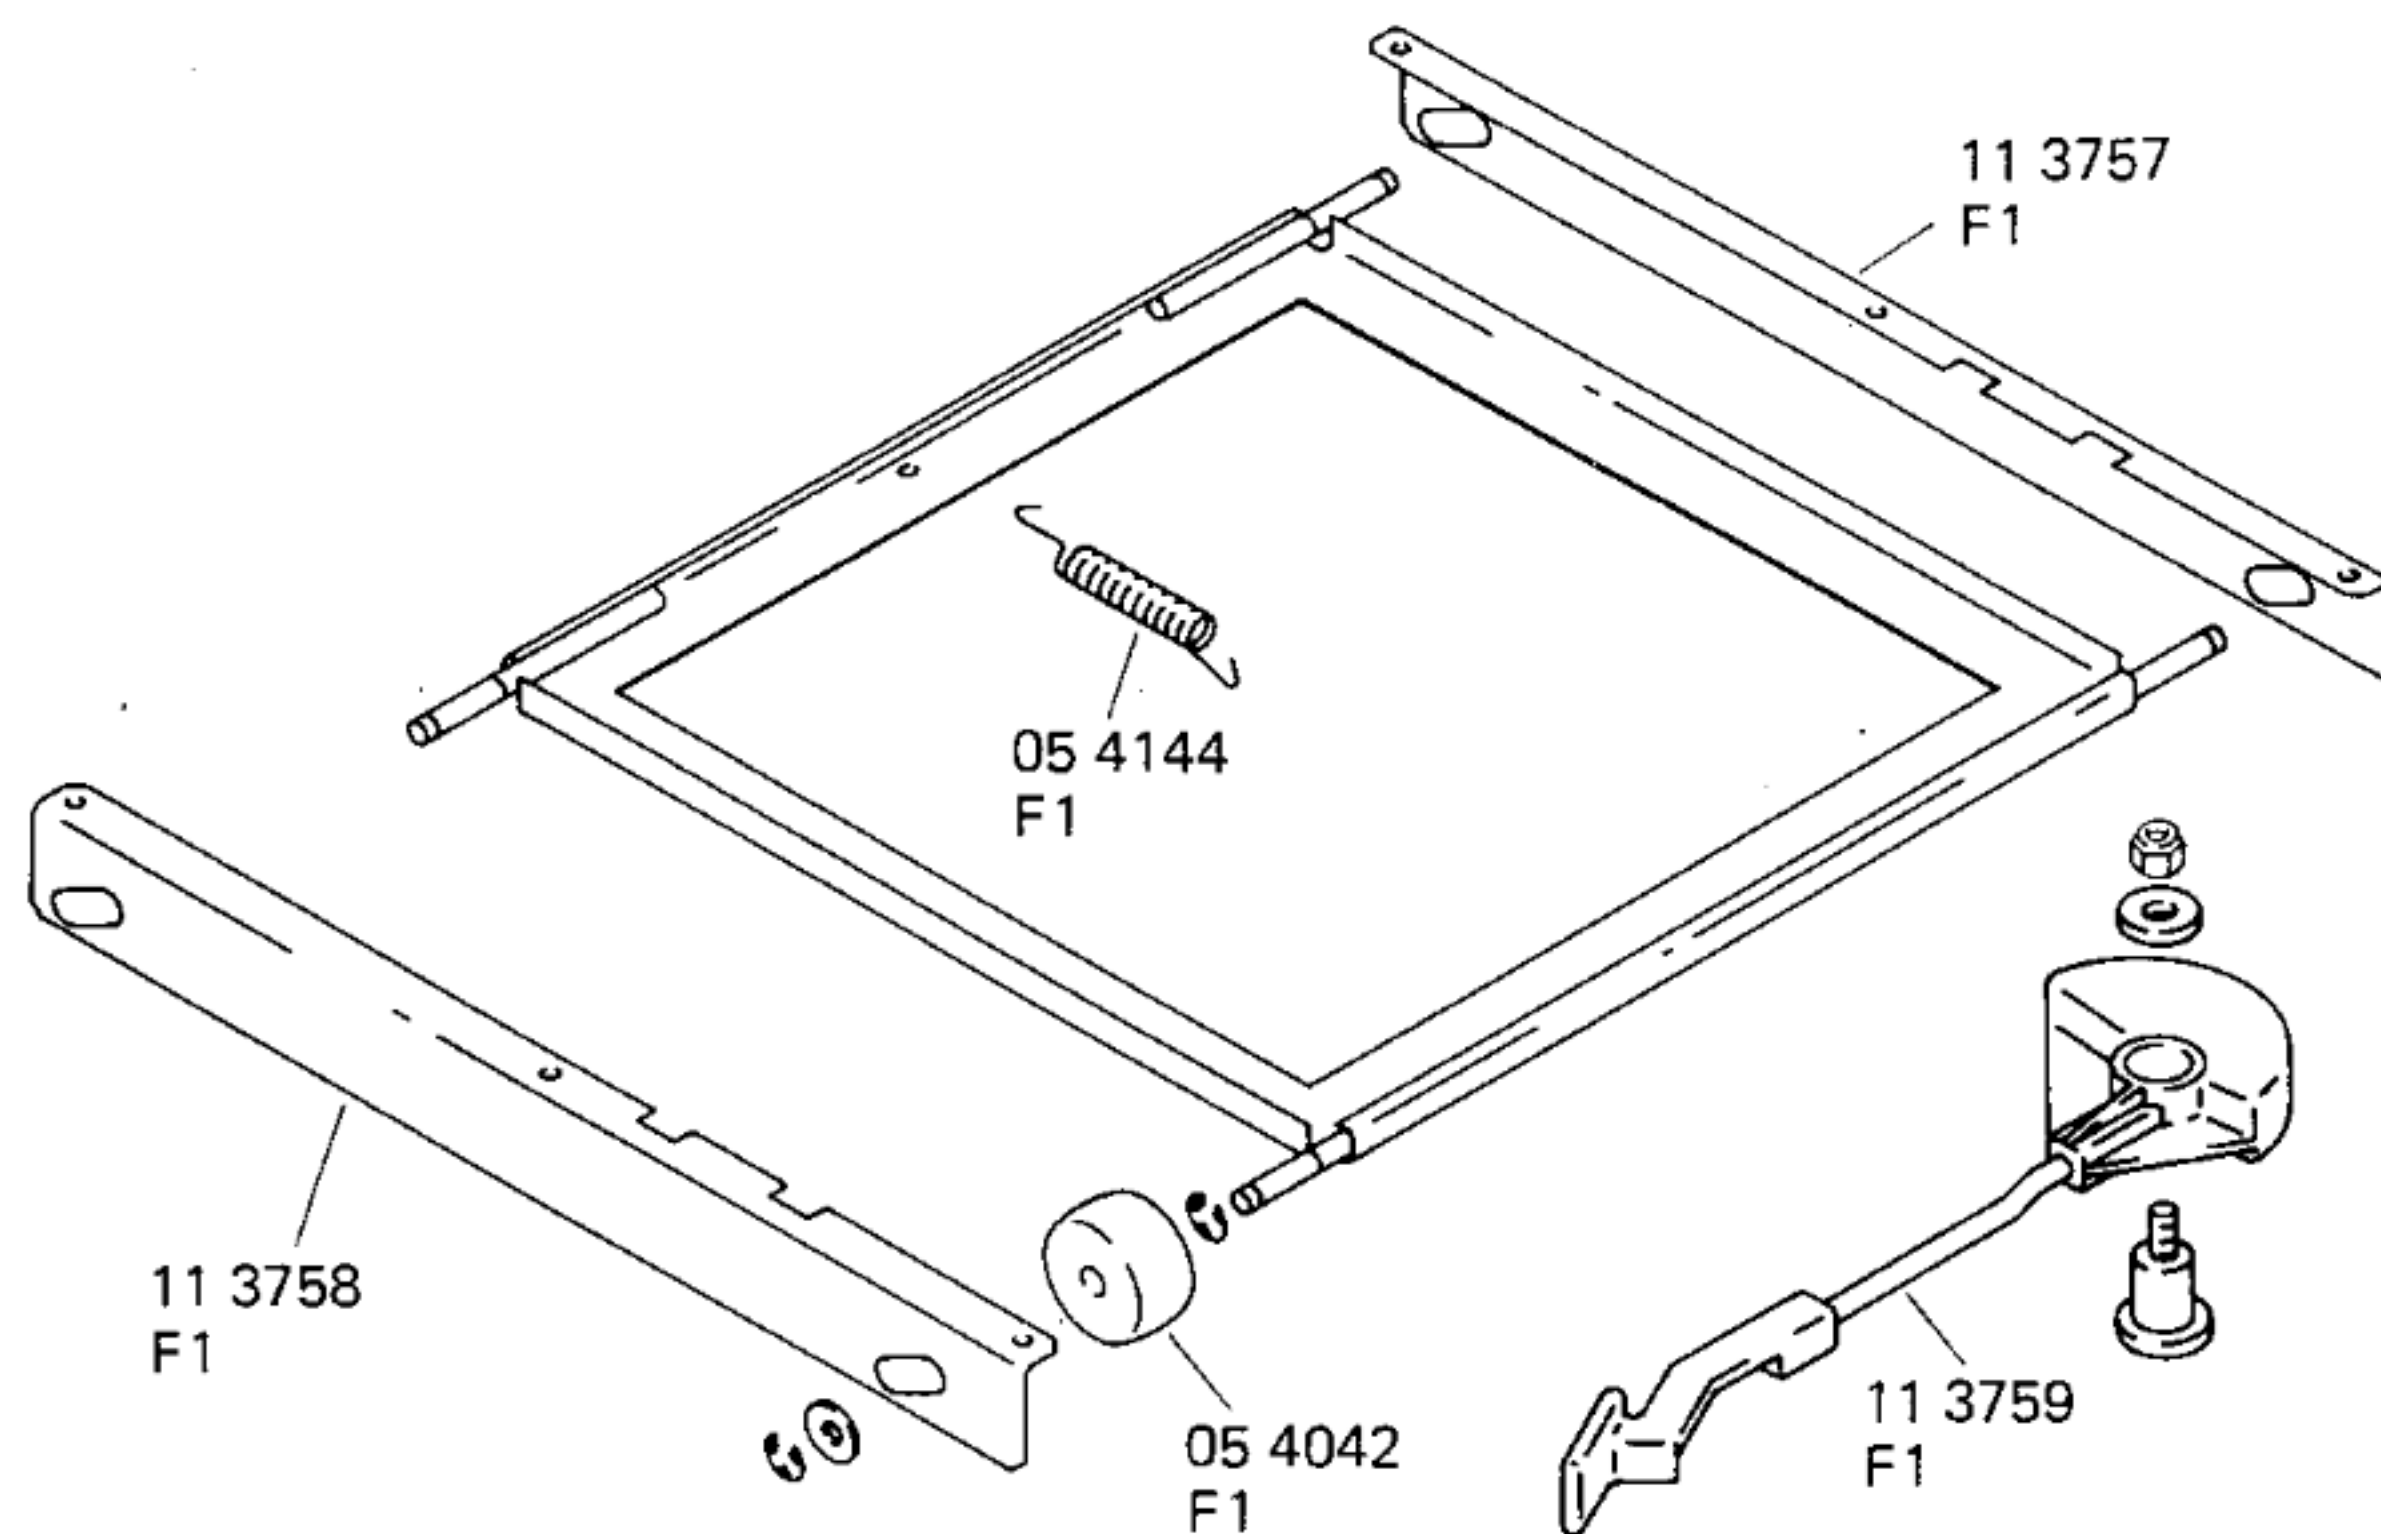


**BOSCH**

V341-WMV3410/01-D1
 V341-WMV341026/02-I1
 V341-WMV341034/01-Exp.1
 V341-WMV341325/01-F1

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

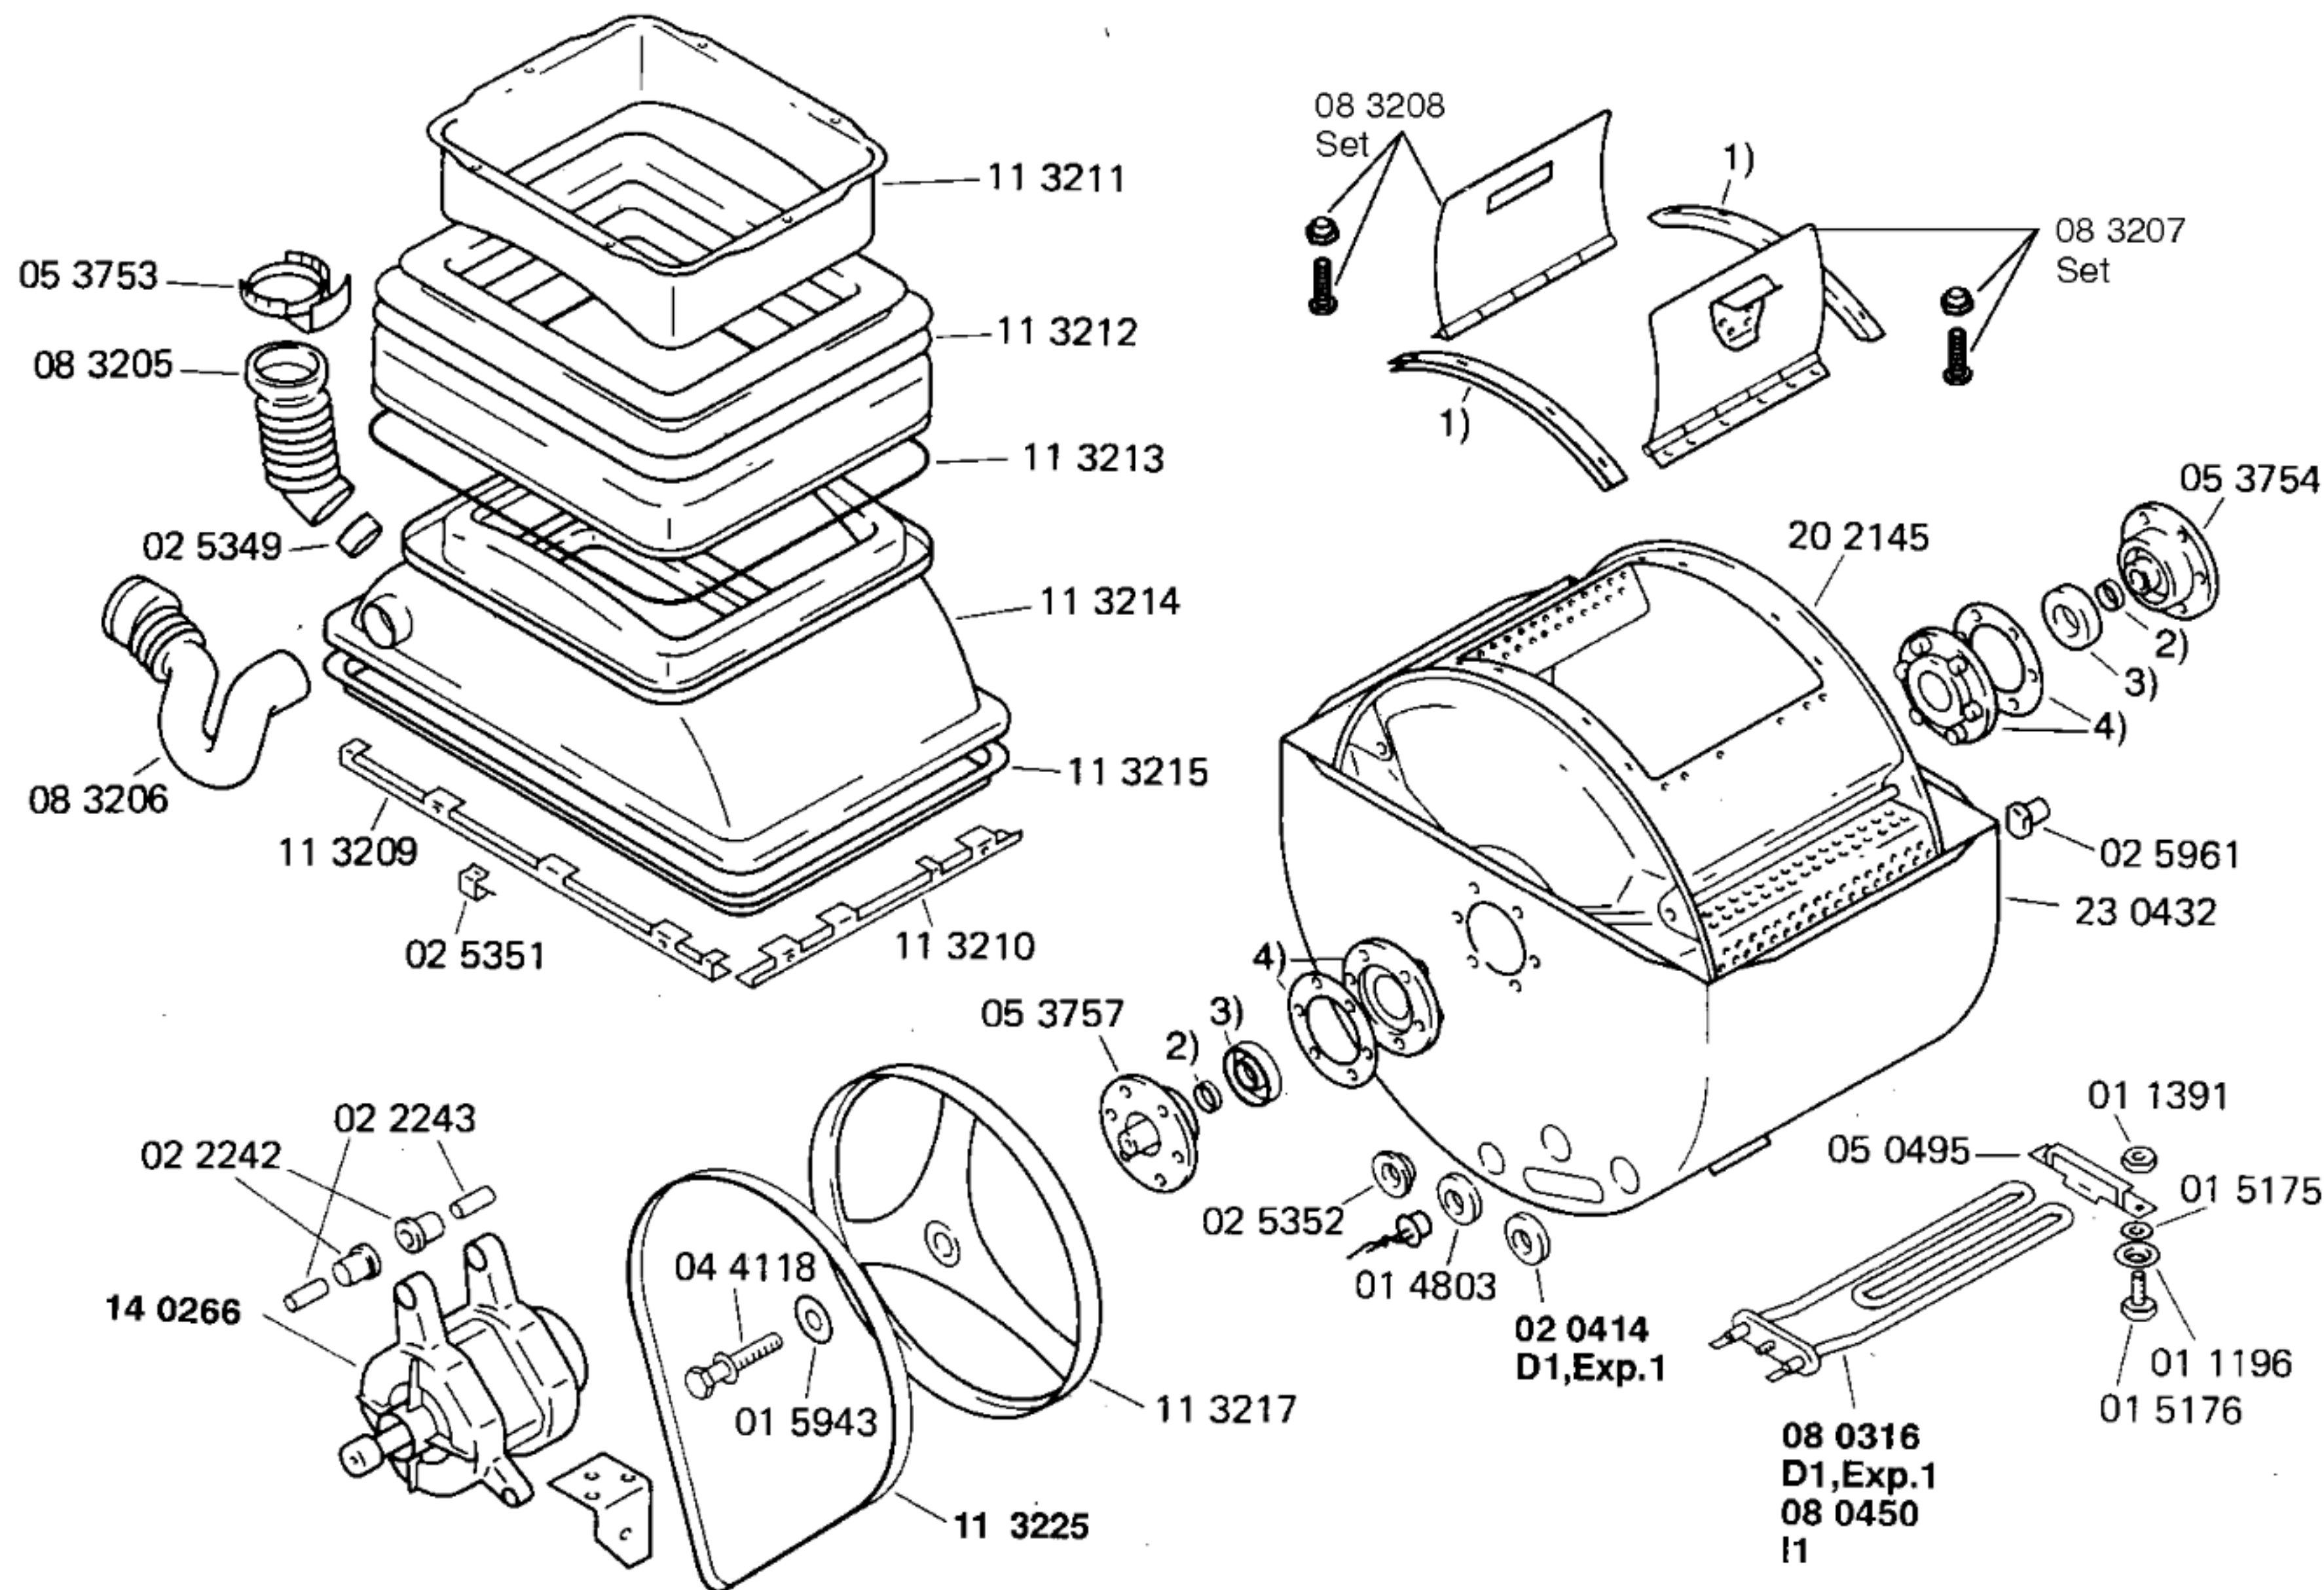

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 7022

**BOSCH**

V341-WMV3410/01-D1
V341-WMV341026/02-I1
V341-WMV341034/01-Exp.1
V341-WMV341325/01-F1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

