




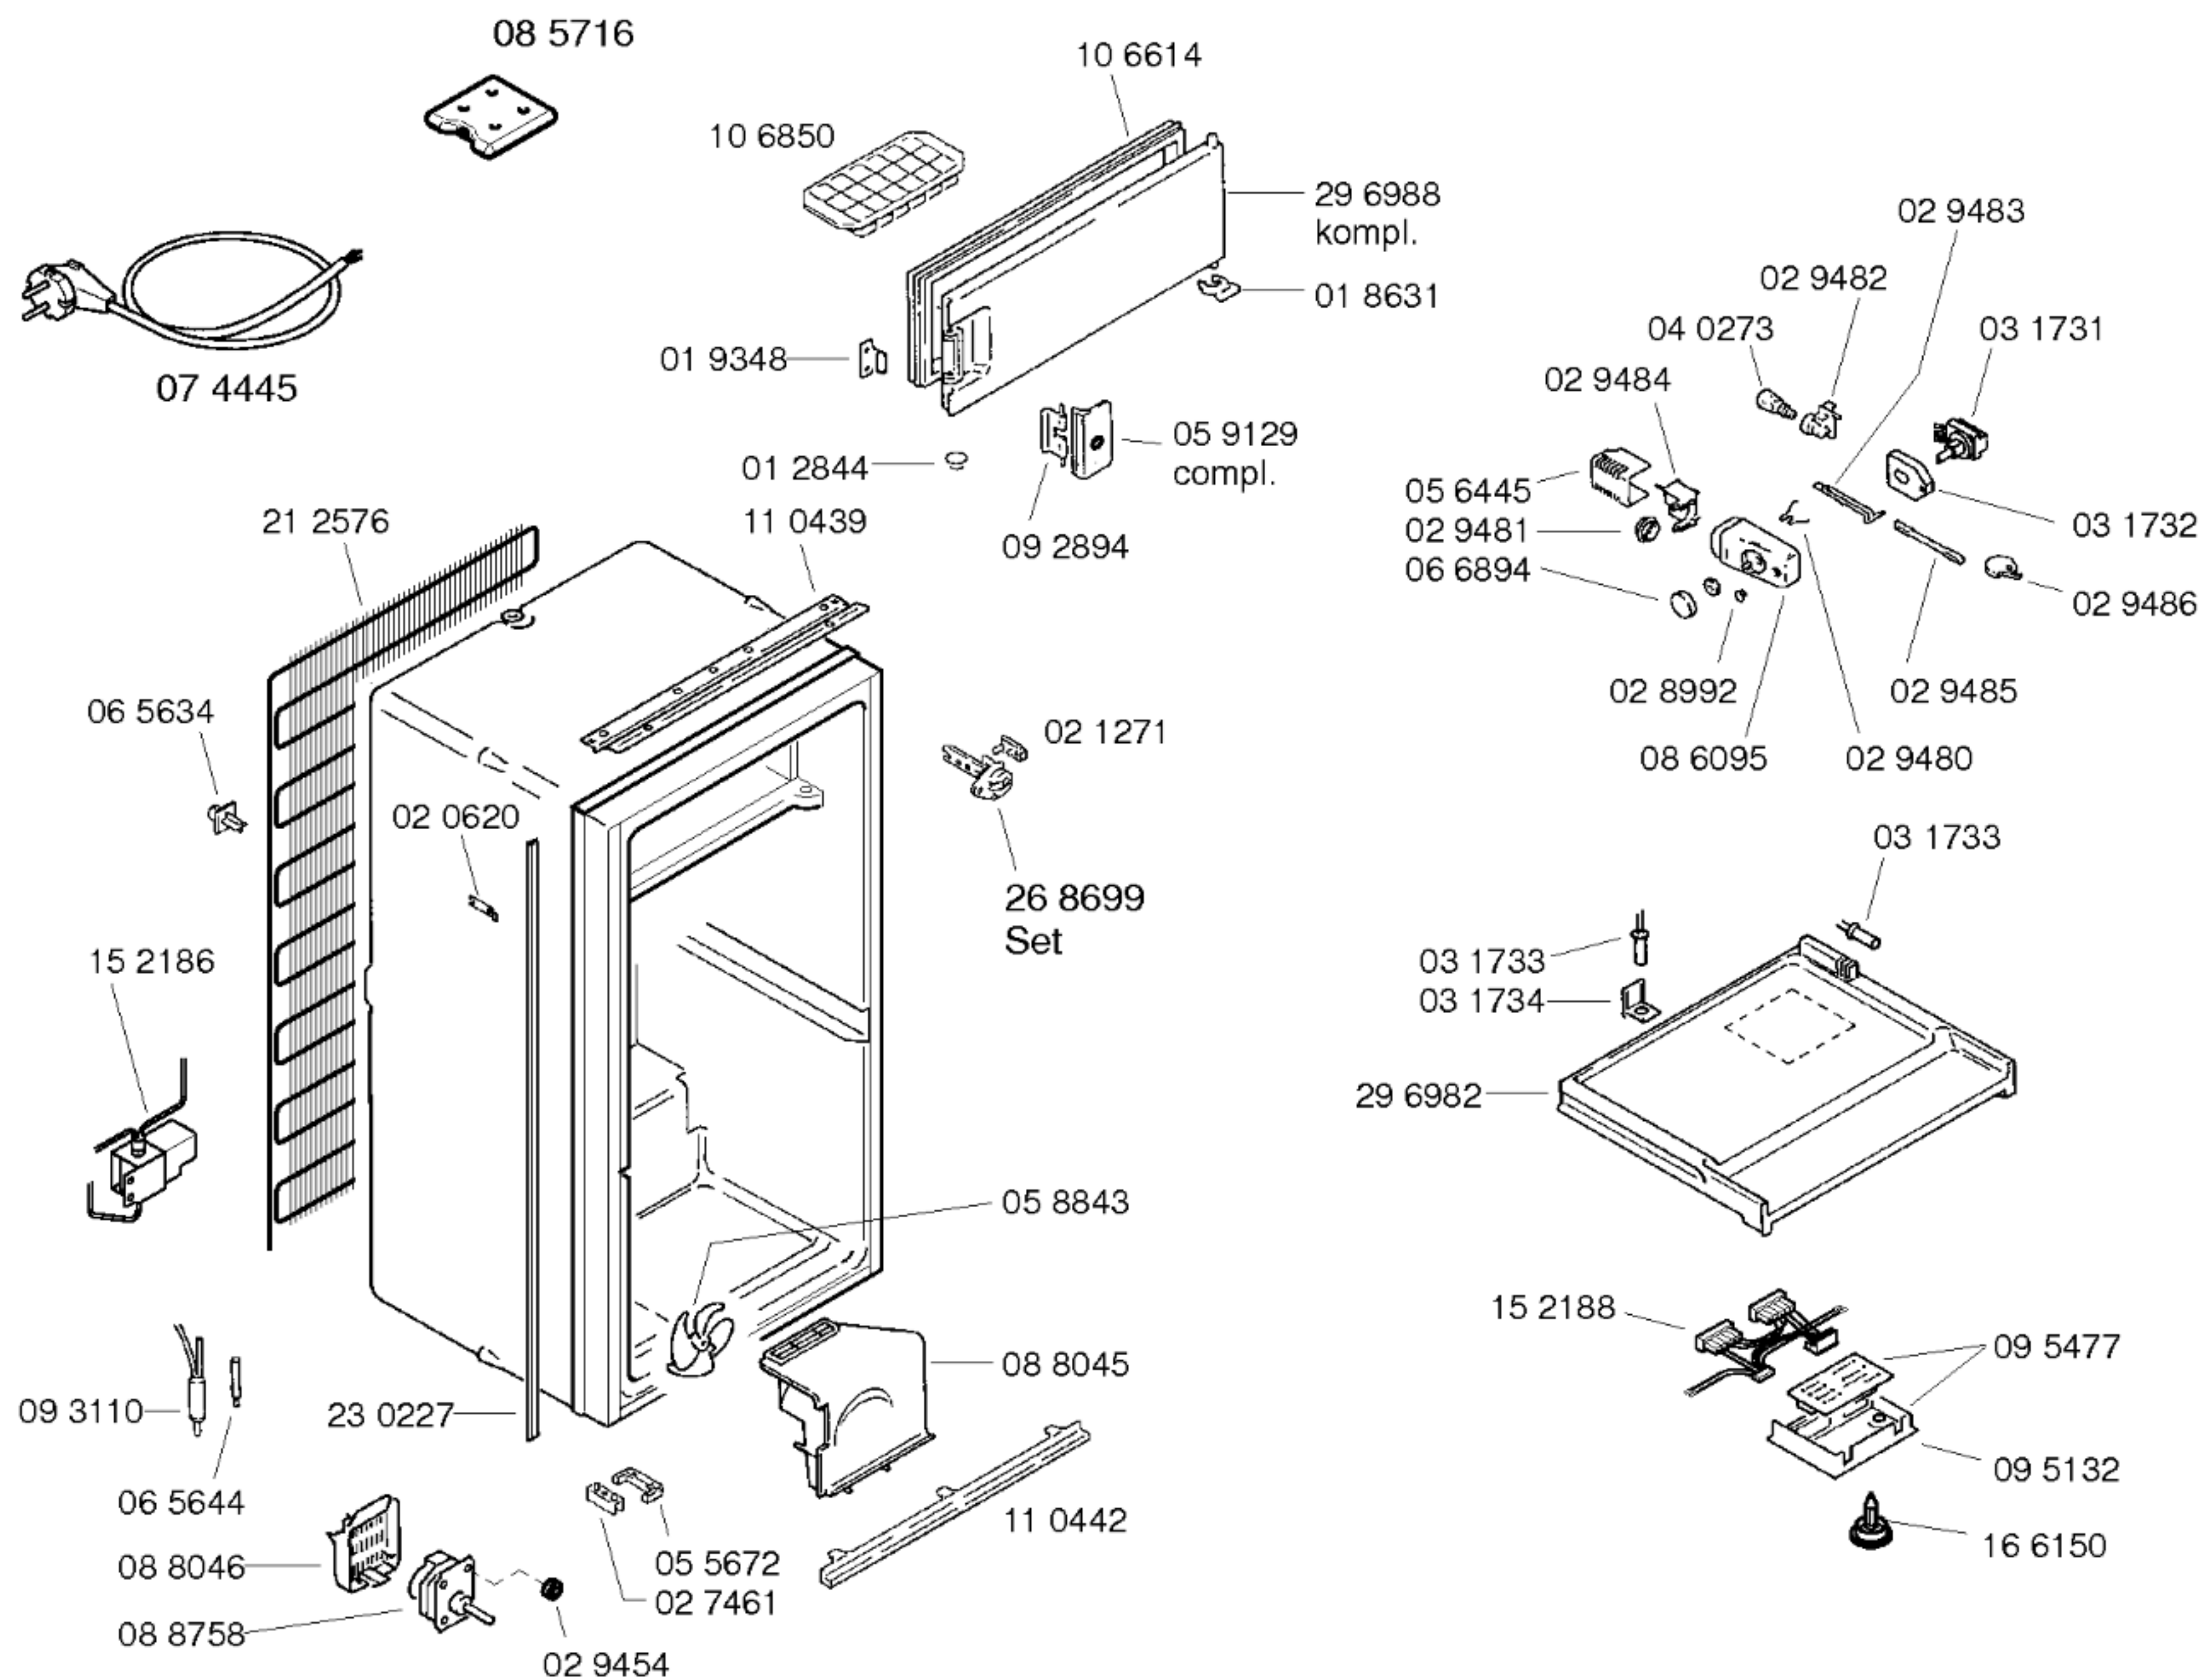

Gebrauchsanweisung
51 5111
(D,GB,F,I,NL)
Montageanweisung
52 0037
(D,GB,F,I,NL,DK,N,S,SF,E)
08 4136
Schraubensatz
08 6512
Befestigungssatz

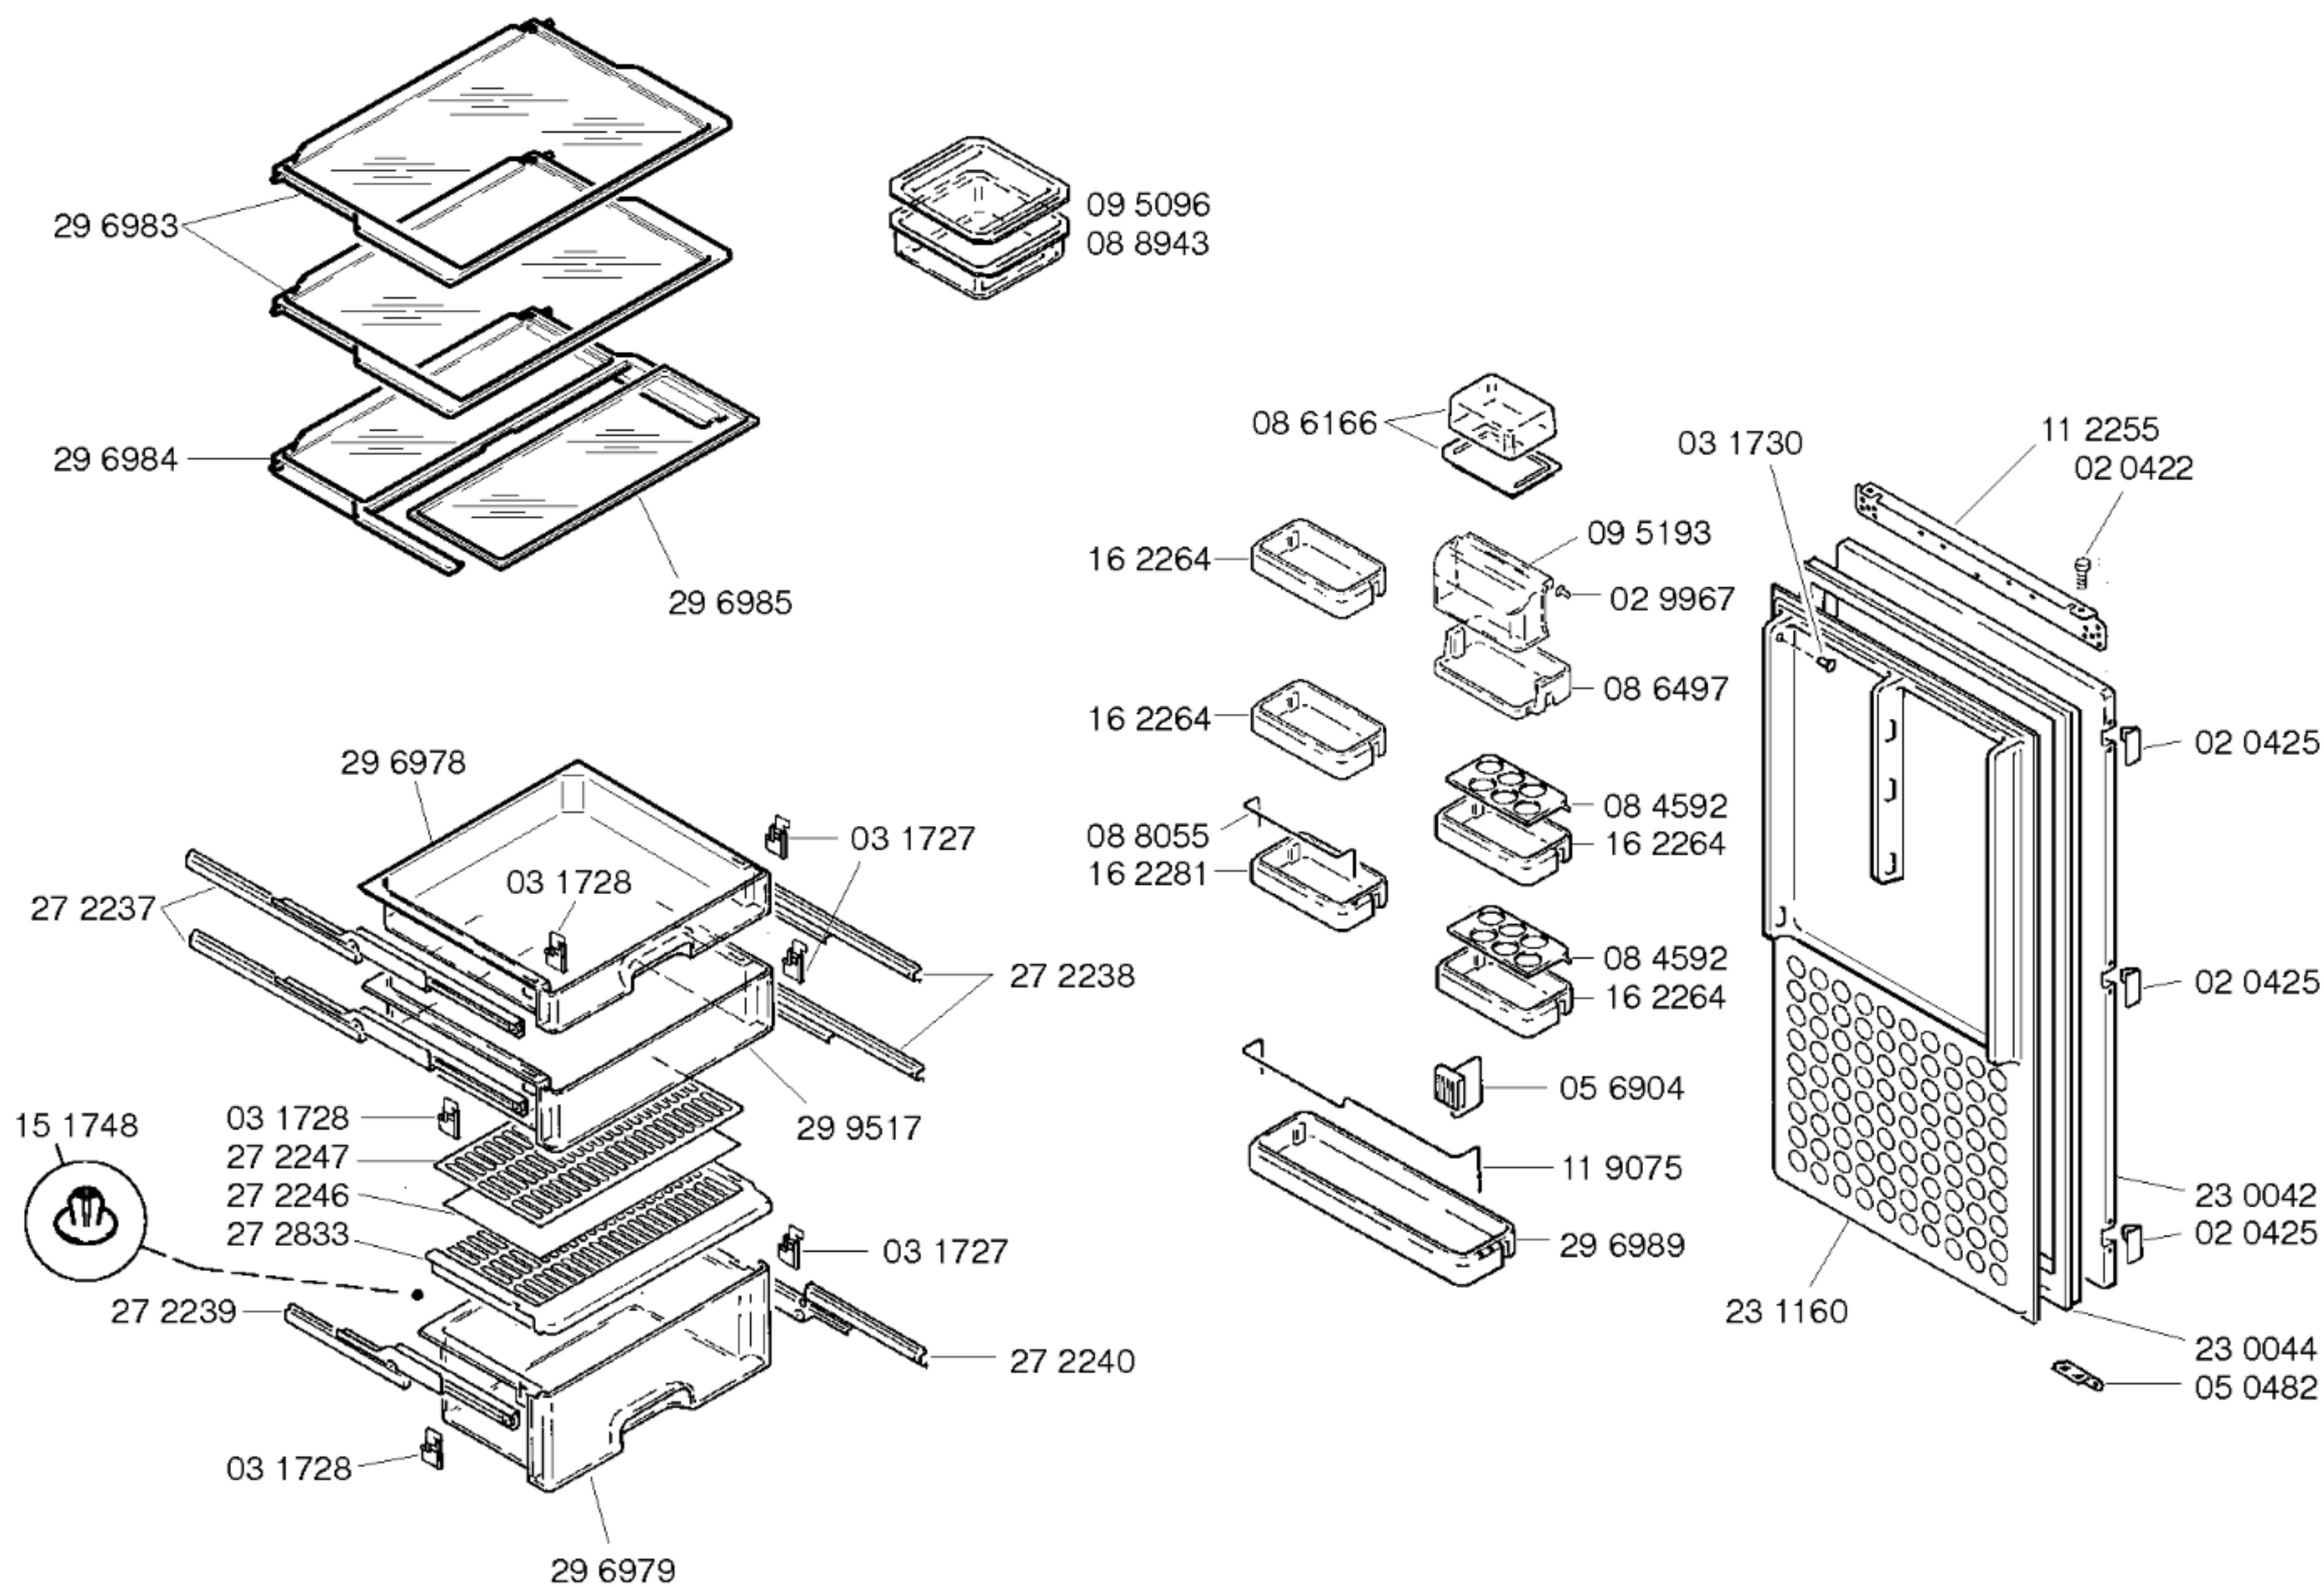

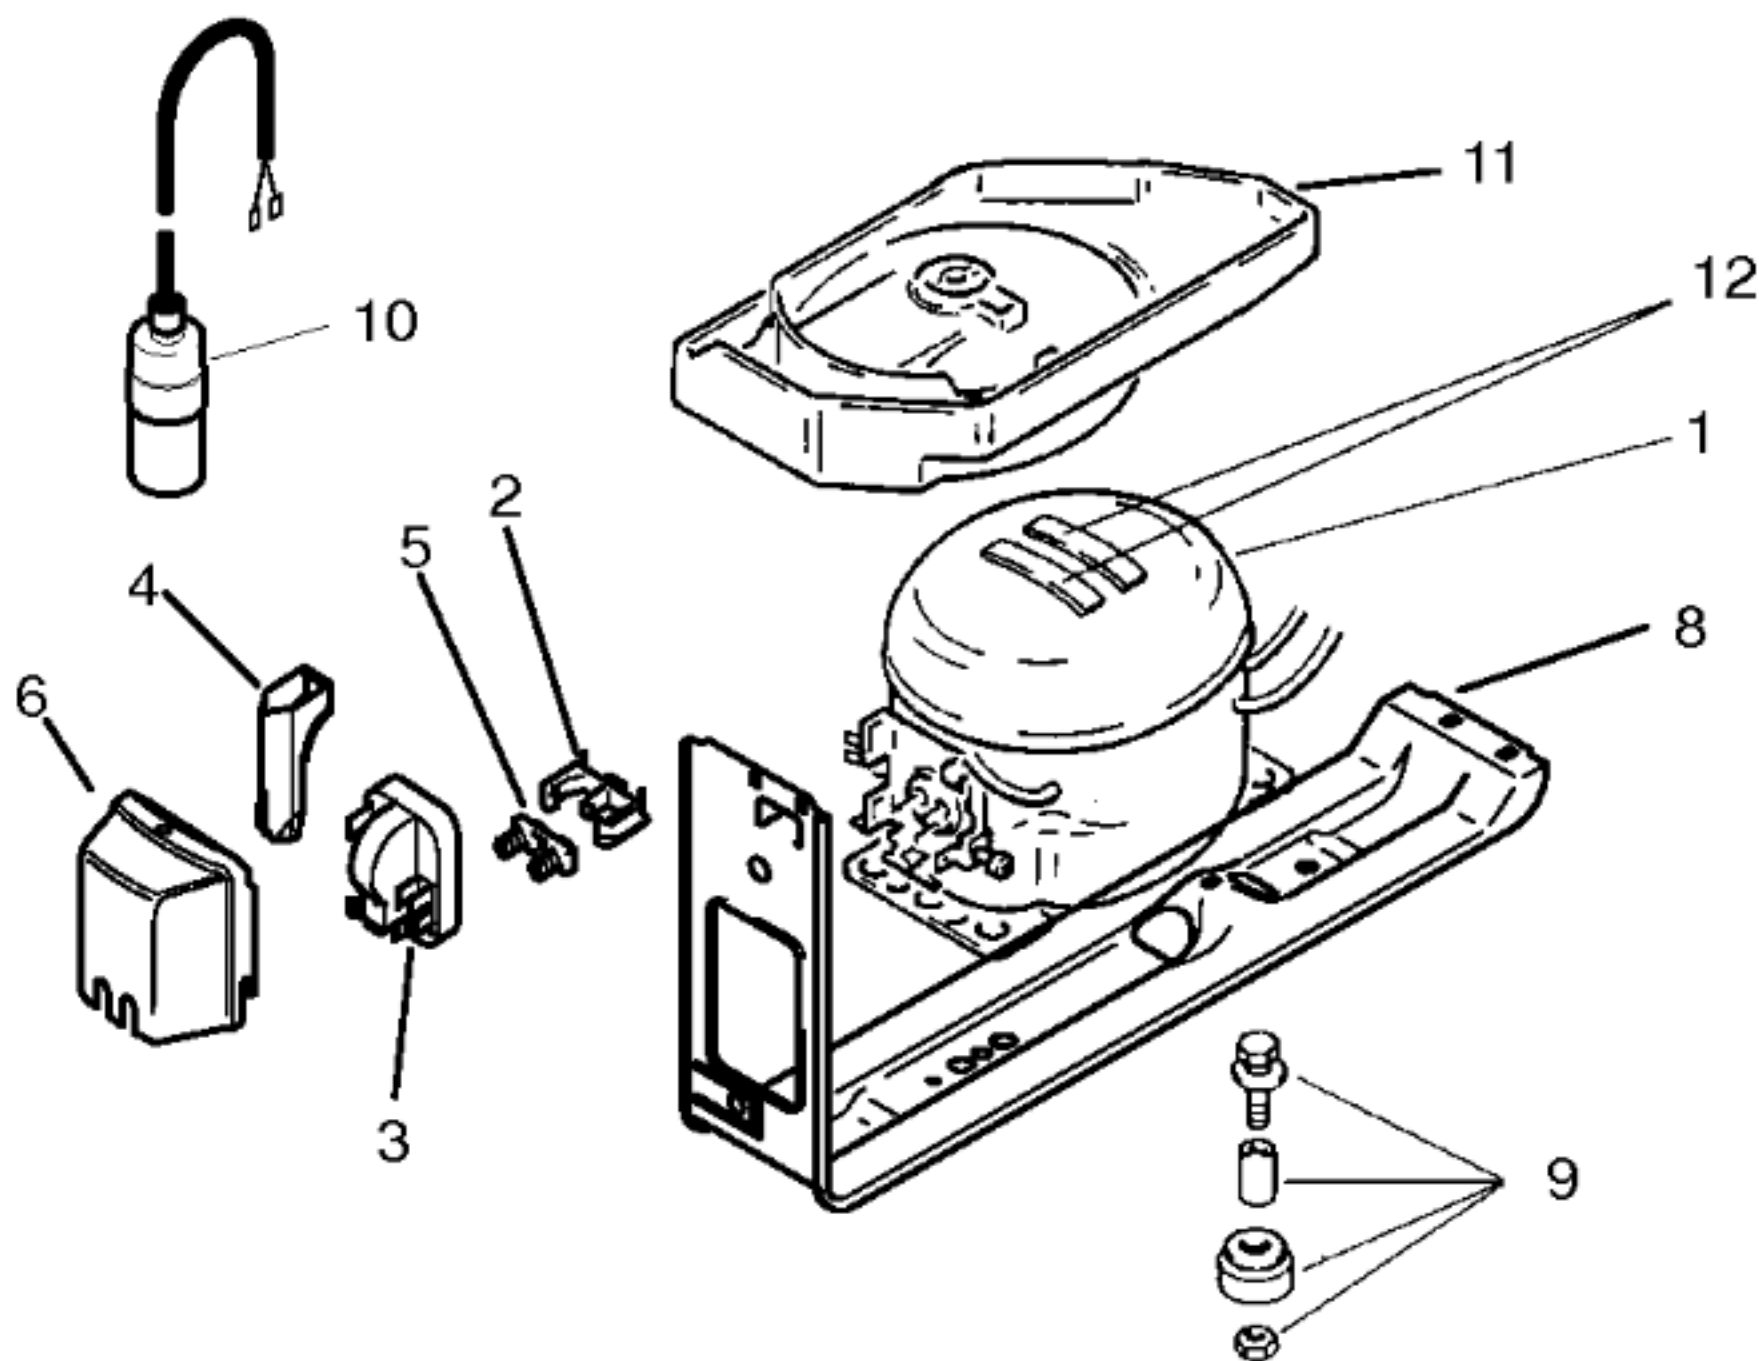

Pos.	V01	V02	
	Danfoss	Danfoss	
	TLES 9 K	TLY 8 K	
1	14 1308	14 1657	
2		15 1053	
3	15 1055	96 0676	
4		96 0680	
5	15 0760	15 0760	
6	15 1072	96 0677	
7			
8	27 8207	35 0764	
9	05 0166	05 0166	
10	05 9467	15 2222	
11	08 4744	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 9 K		
Förderleistung/Delivery/Débit		1589		
Anlaufstrom/Starting current/Cour de démarrage		A		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω		
		Hi/aux Ω		
Temp.-Regler/Thermostat		Elektronisch		
Typ/Type		siehe Rep.-Anleitung		
Reglerstellung/Position				
Schaltwerte/Switching values/Valeurs de commutation		„ein“ $^{\circ}\text{C}$		
		„aus“		
		(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R600a	g	41
				42
Anschlußwert/Conn.load/Puiss. connectée		W	120	104
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω	5378 $\pm$ 5%	
Leistung/Power/Puissance		W	10,7	
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω	420 $\pm$ 10%	
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω	11000 $\pm$ 5%	
Spannung/Voltage/Tension		V	267V $\pm$ 10%	

* siehe Typenschild