




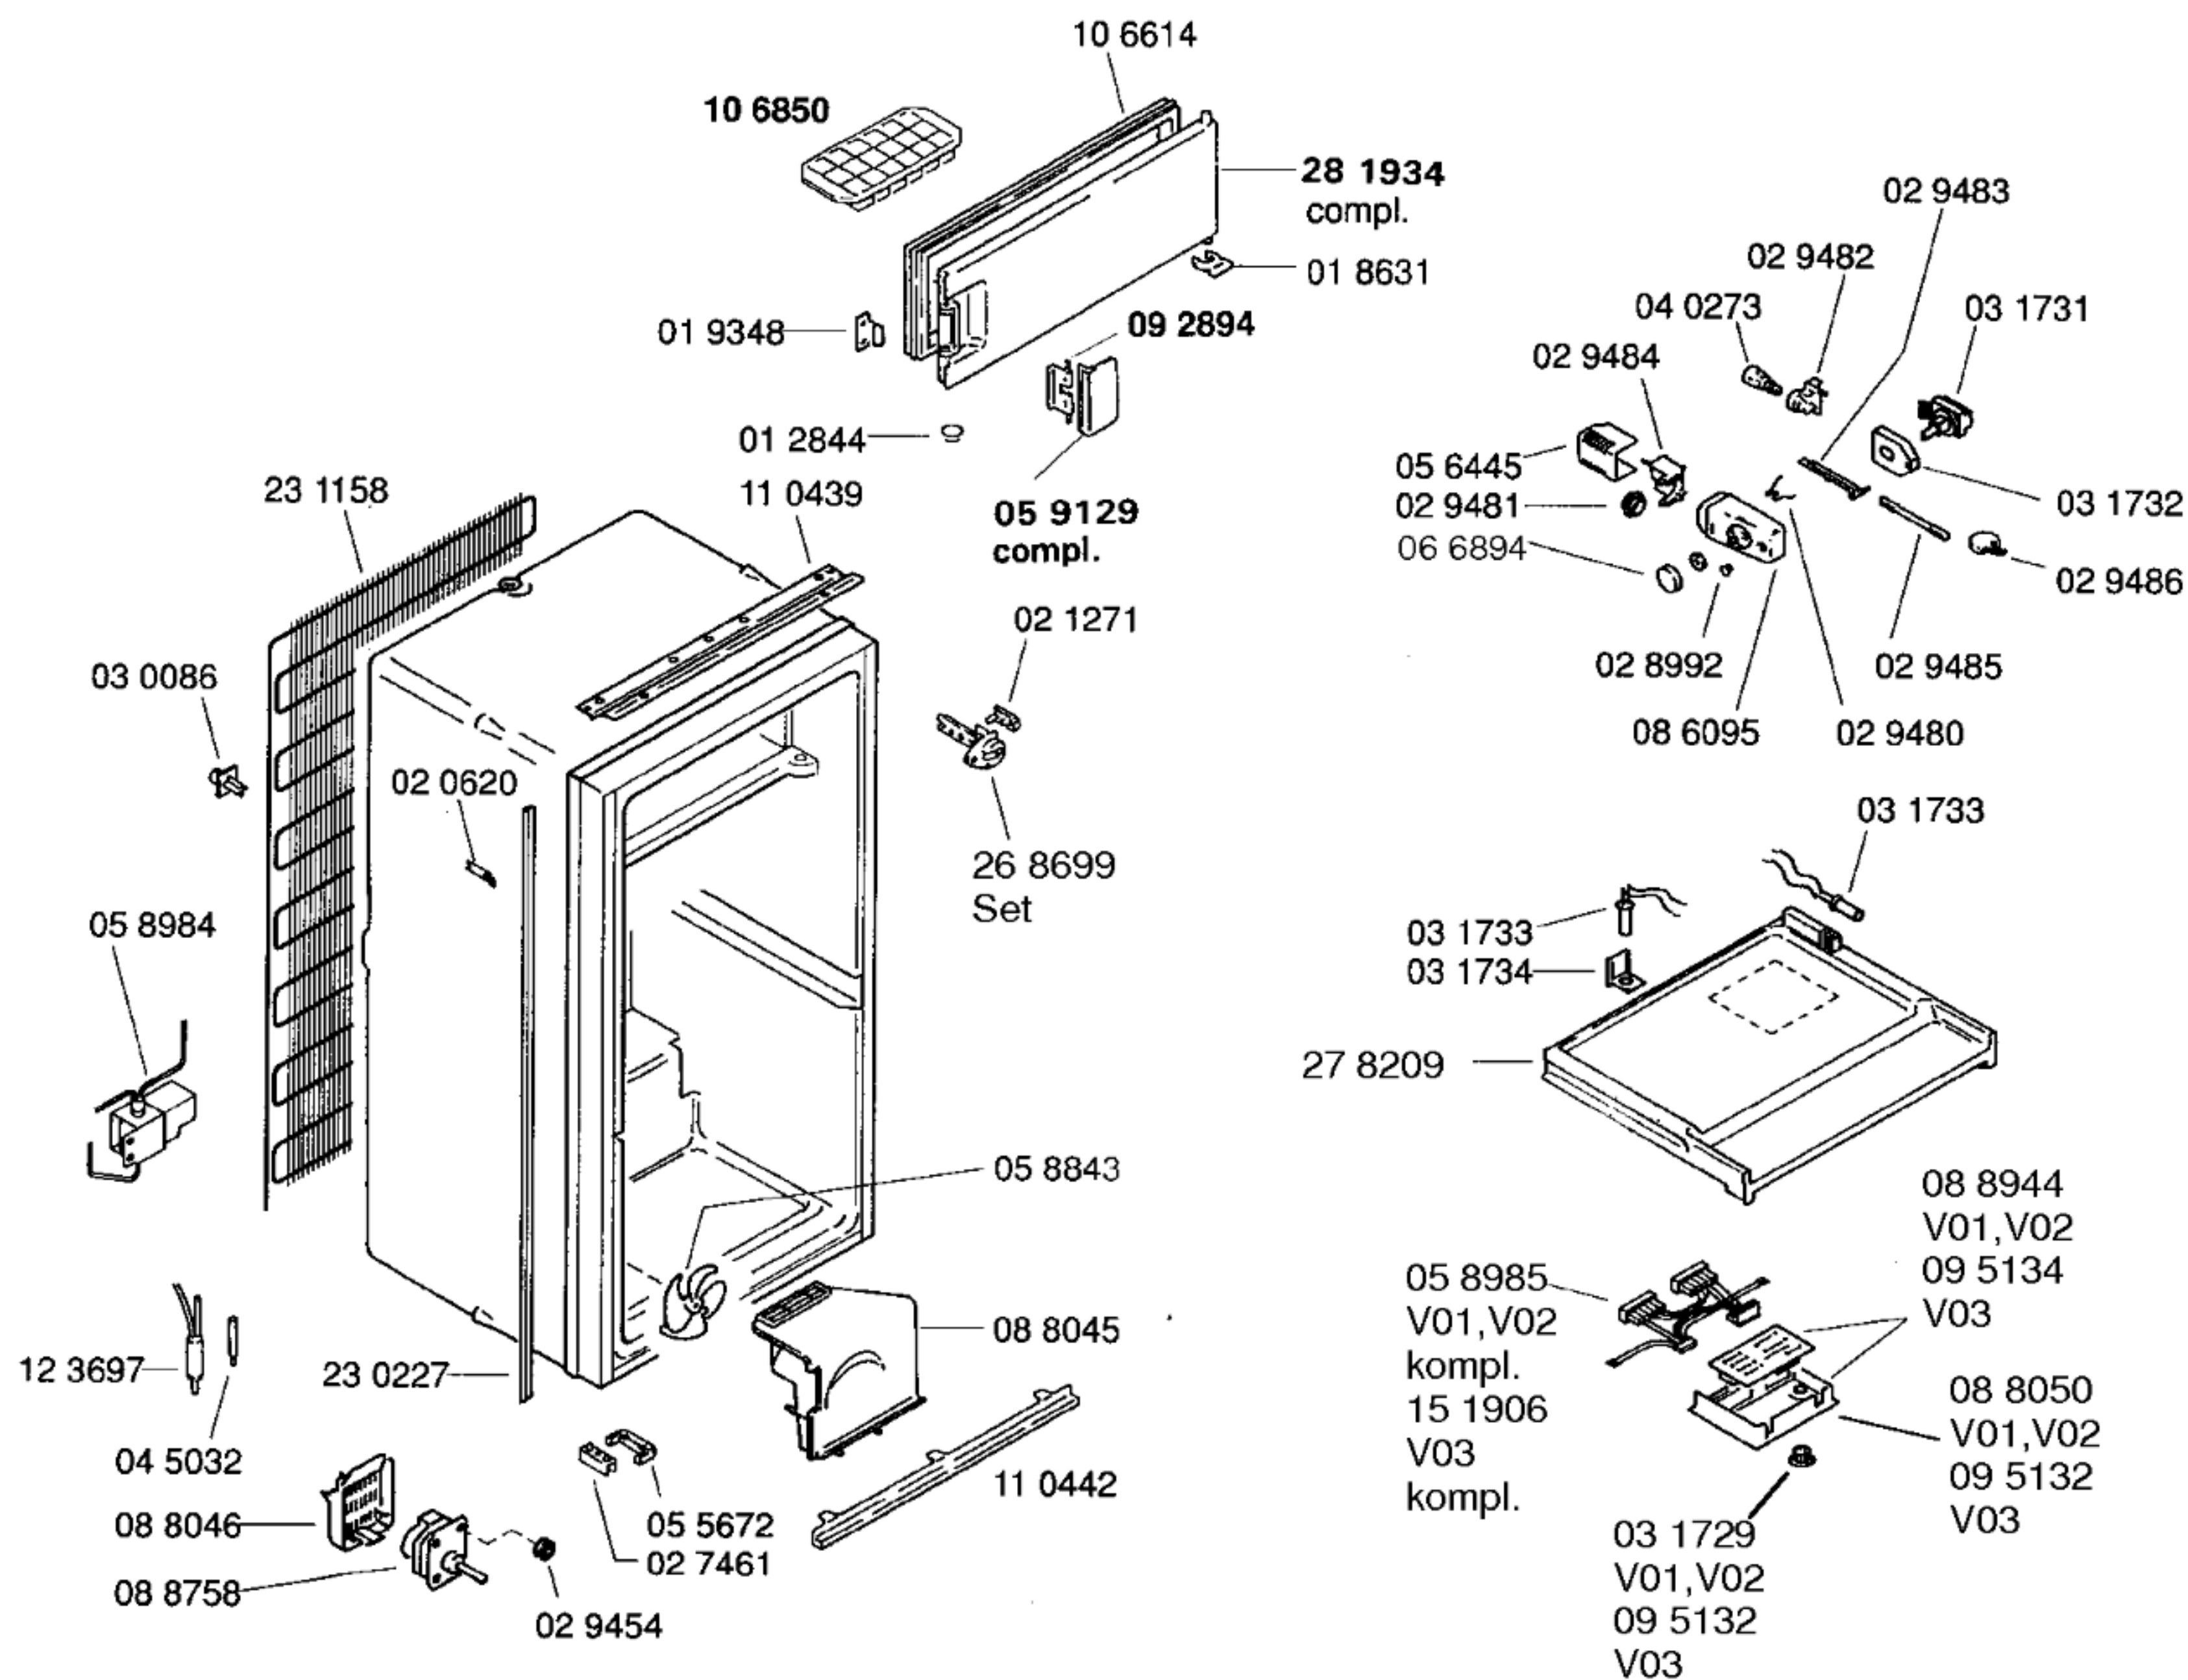

51 5114
Gebrauchsanweisung
(D,GB,F,I,NL)
51 2737
Montageanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)
08 4136
Schraubensatz
08 6512
Befestigungssatz

1) 15 0071

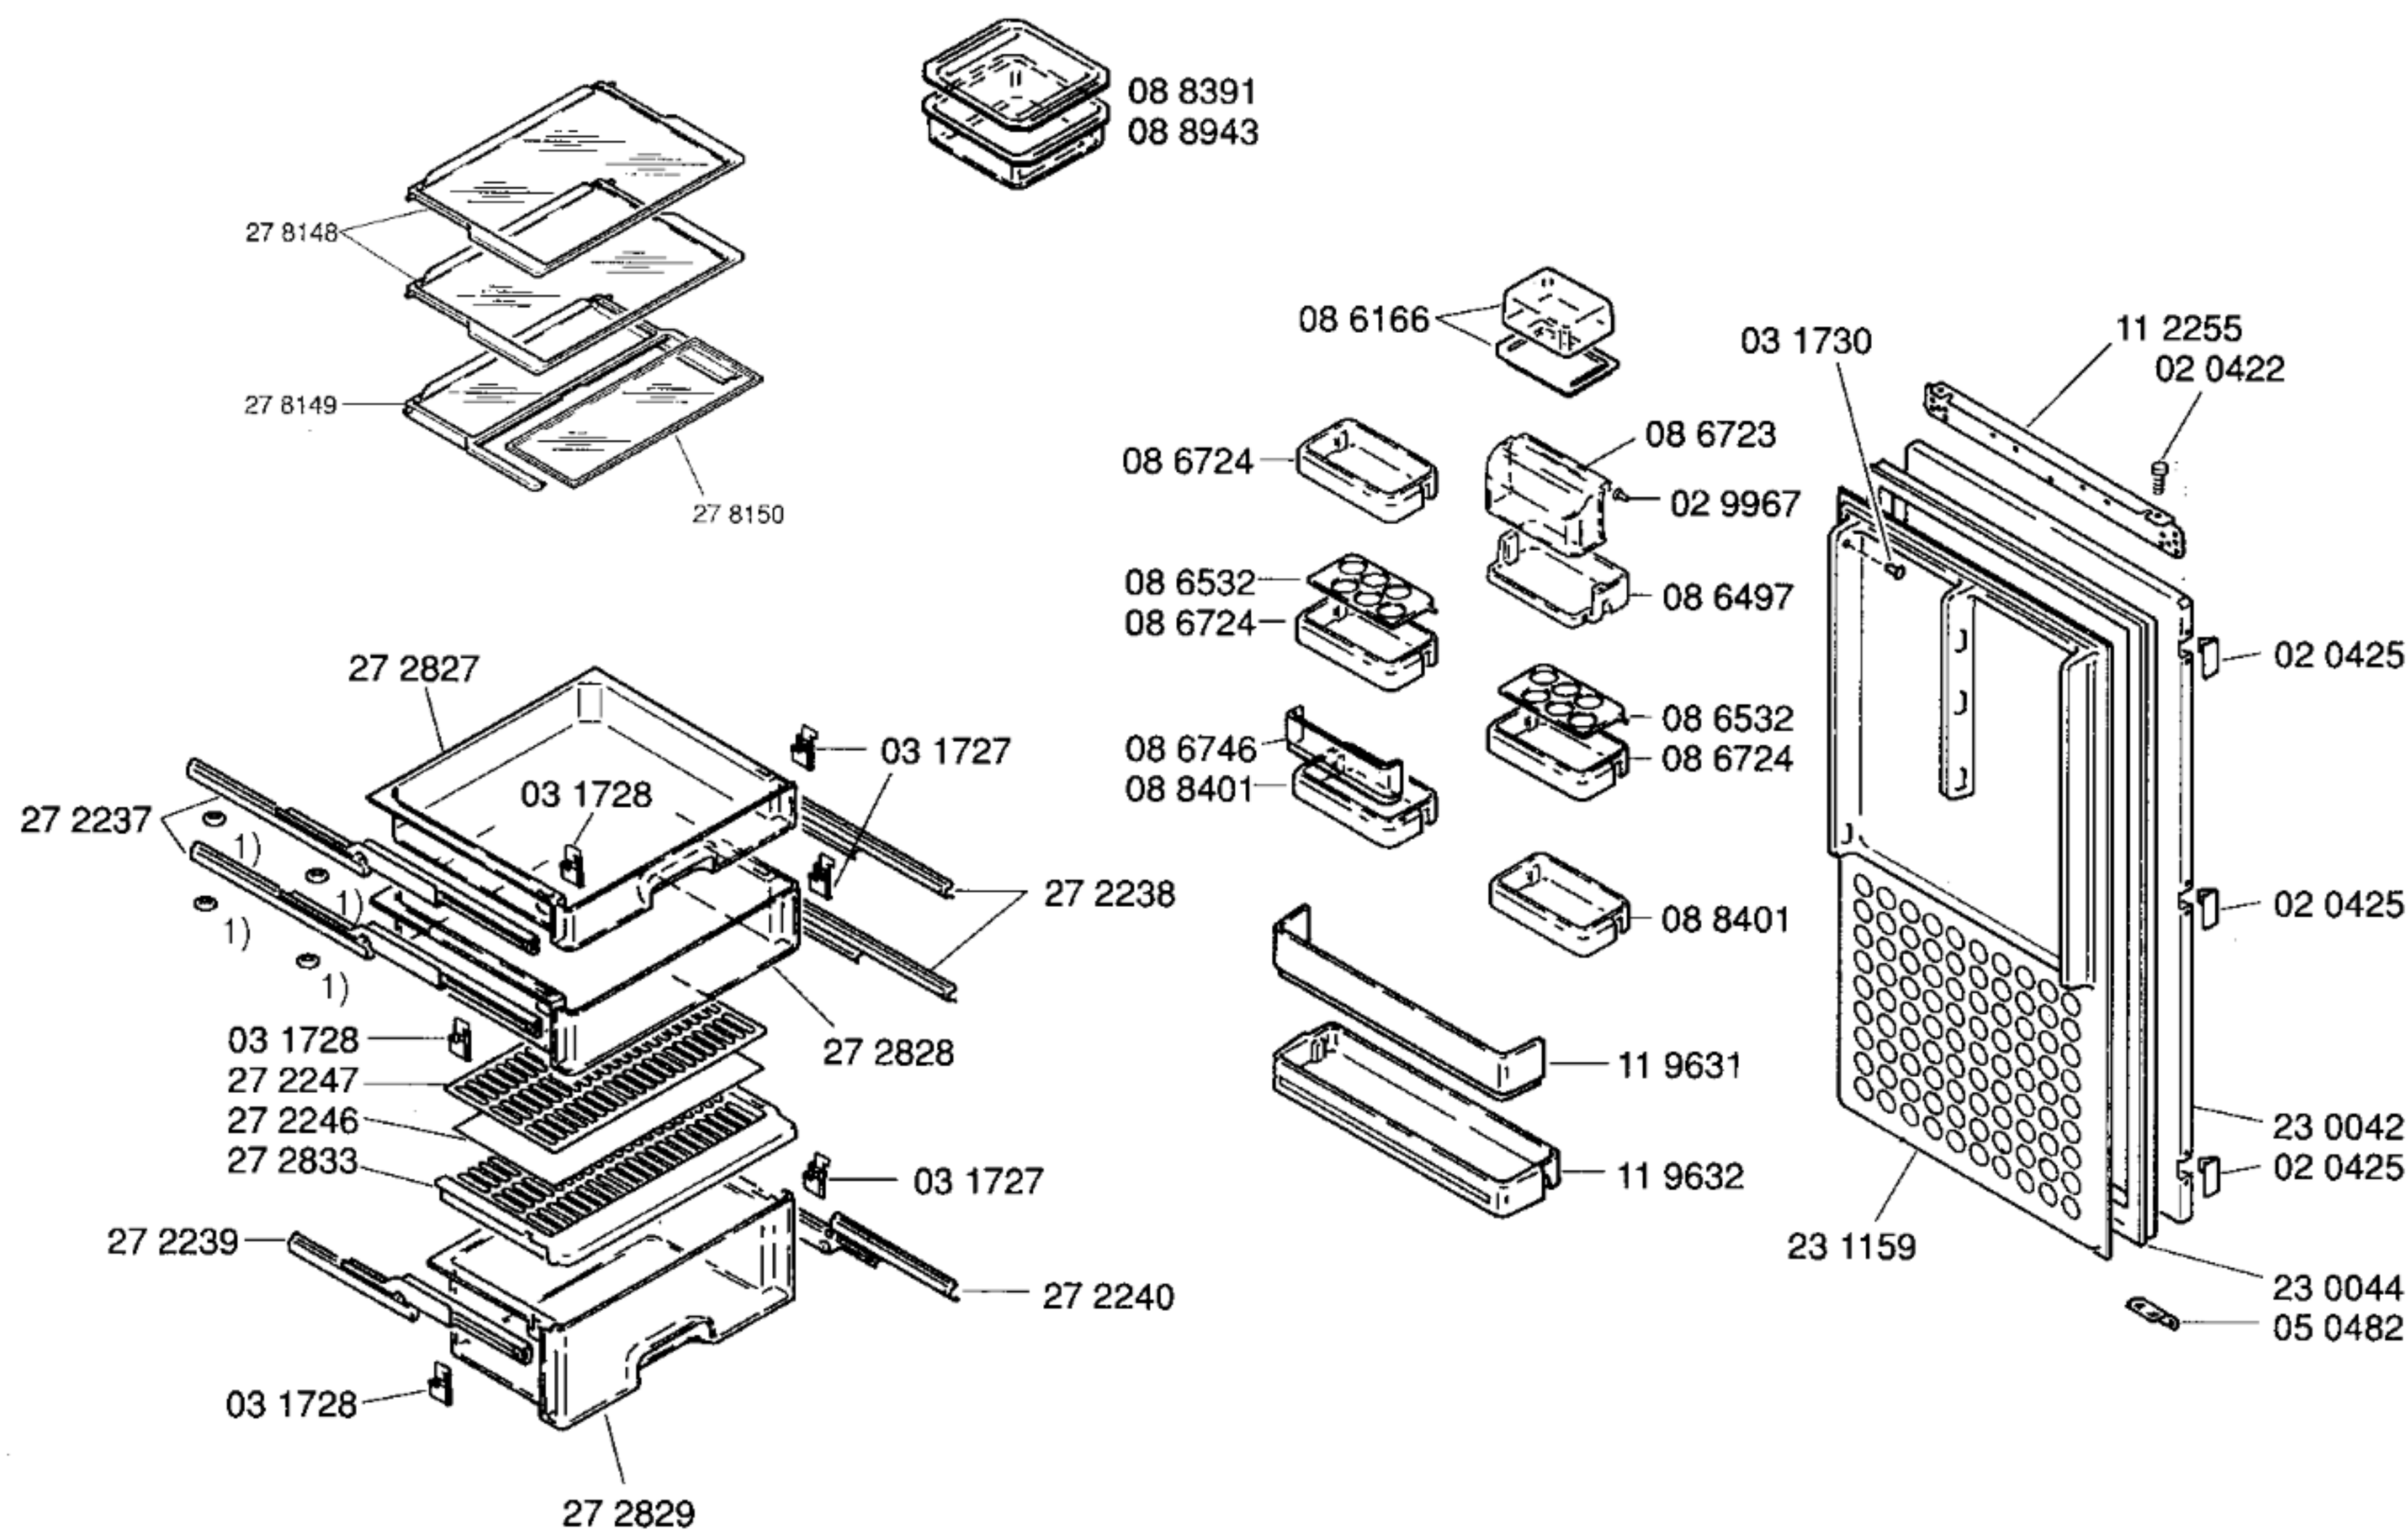

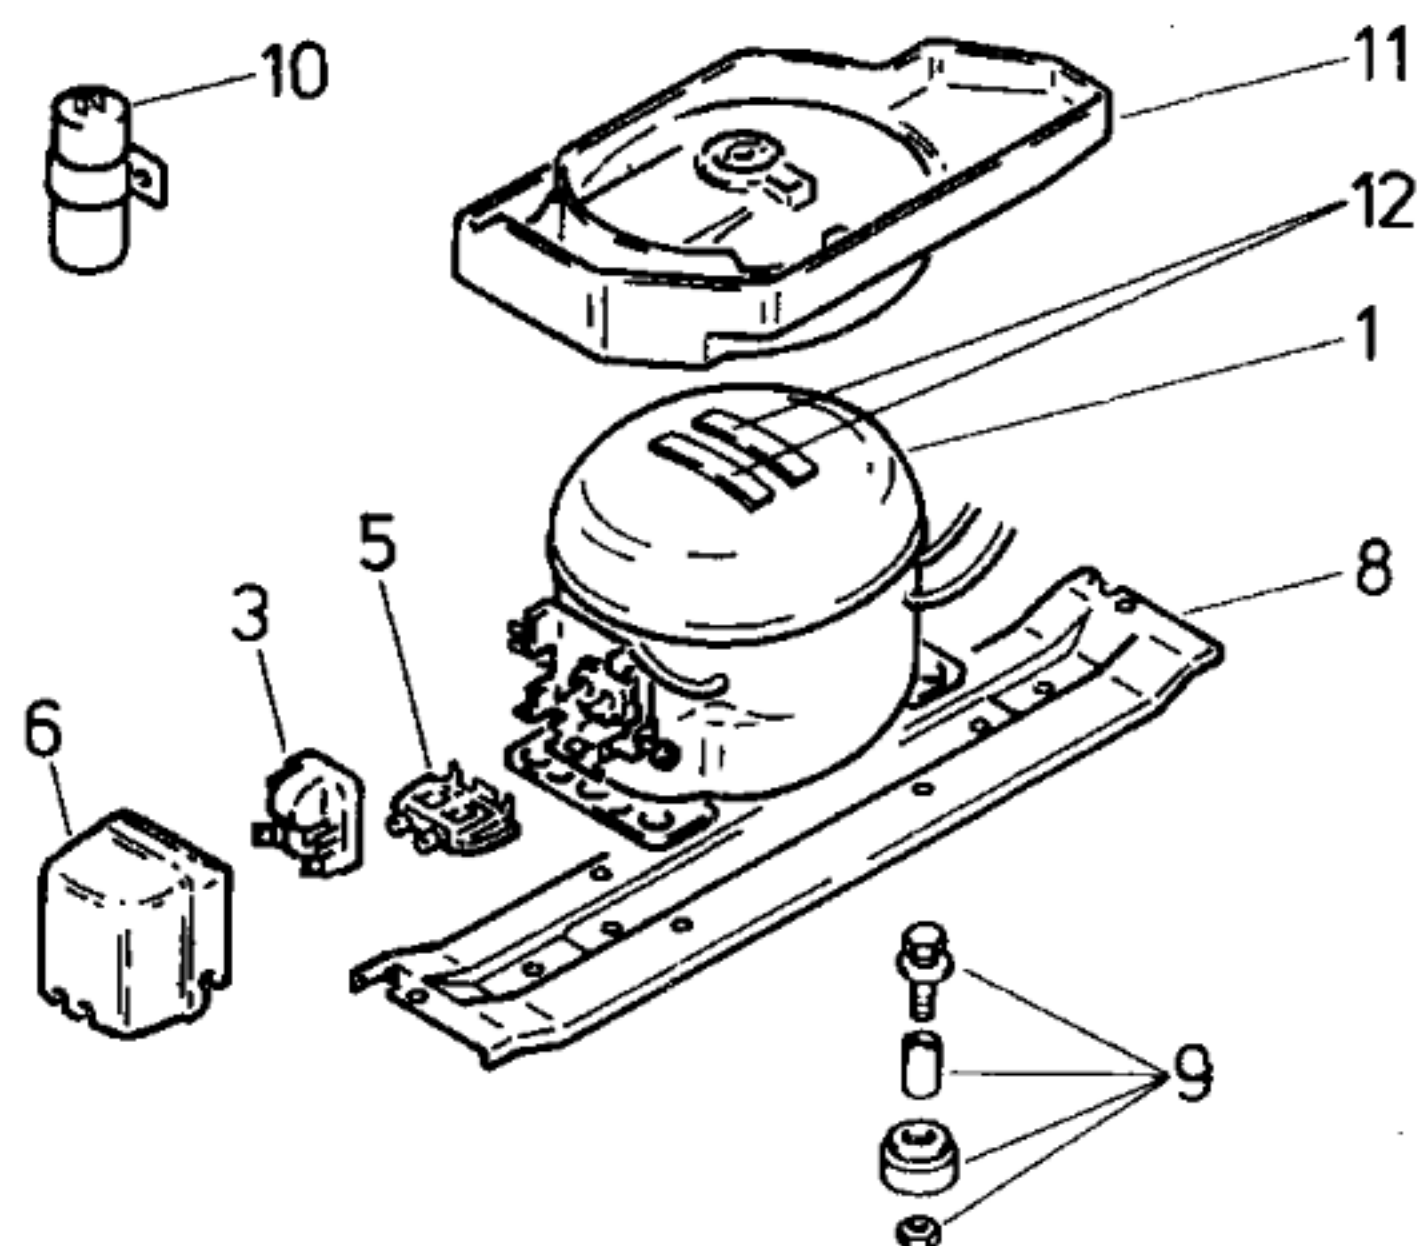

Pos.	Danfoss		
	TL 5 A		
1	14 0065		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	27 8207		
9	05 0166		
10	05 9128		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL 5 A			
Förderleistung/Delivery/Débit	l/h	914			
Anlaufstrom/Starting current/Cour. de démarrage	A	9,0			
Widerstand/Resistance/Résistance	Ha/main/prin.	15,5			
	Hi/aux	16,8			
Temp.-Regler/Thermostat		Elektronisch			
Typ/Type		siehe Rep.-			
Reglerstellung/Position		Anleitung			
Schaltwerte/Switching values/	„ein“ °C				
Valeurs de commutation	„aus“				
(„abtauen“ od.)	„alarm“				
Füllmenge/Fill.quantity/Charge	R12	g	90		
Anschlußwert/Conn.load/Puiss. connectée	W	120			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Resistance	Ω	5378 ± 5%			
	W	10,7			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω	420 ± 10%		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω	110000 ± 5%			
	V	267V= ± 10			