

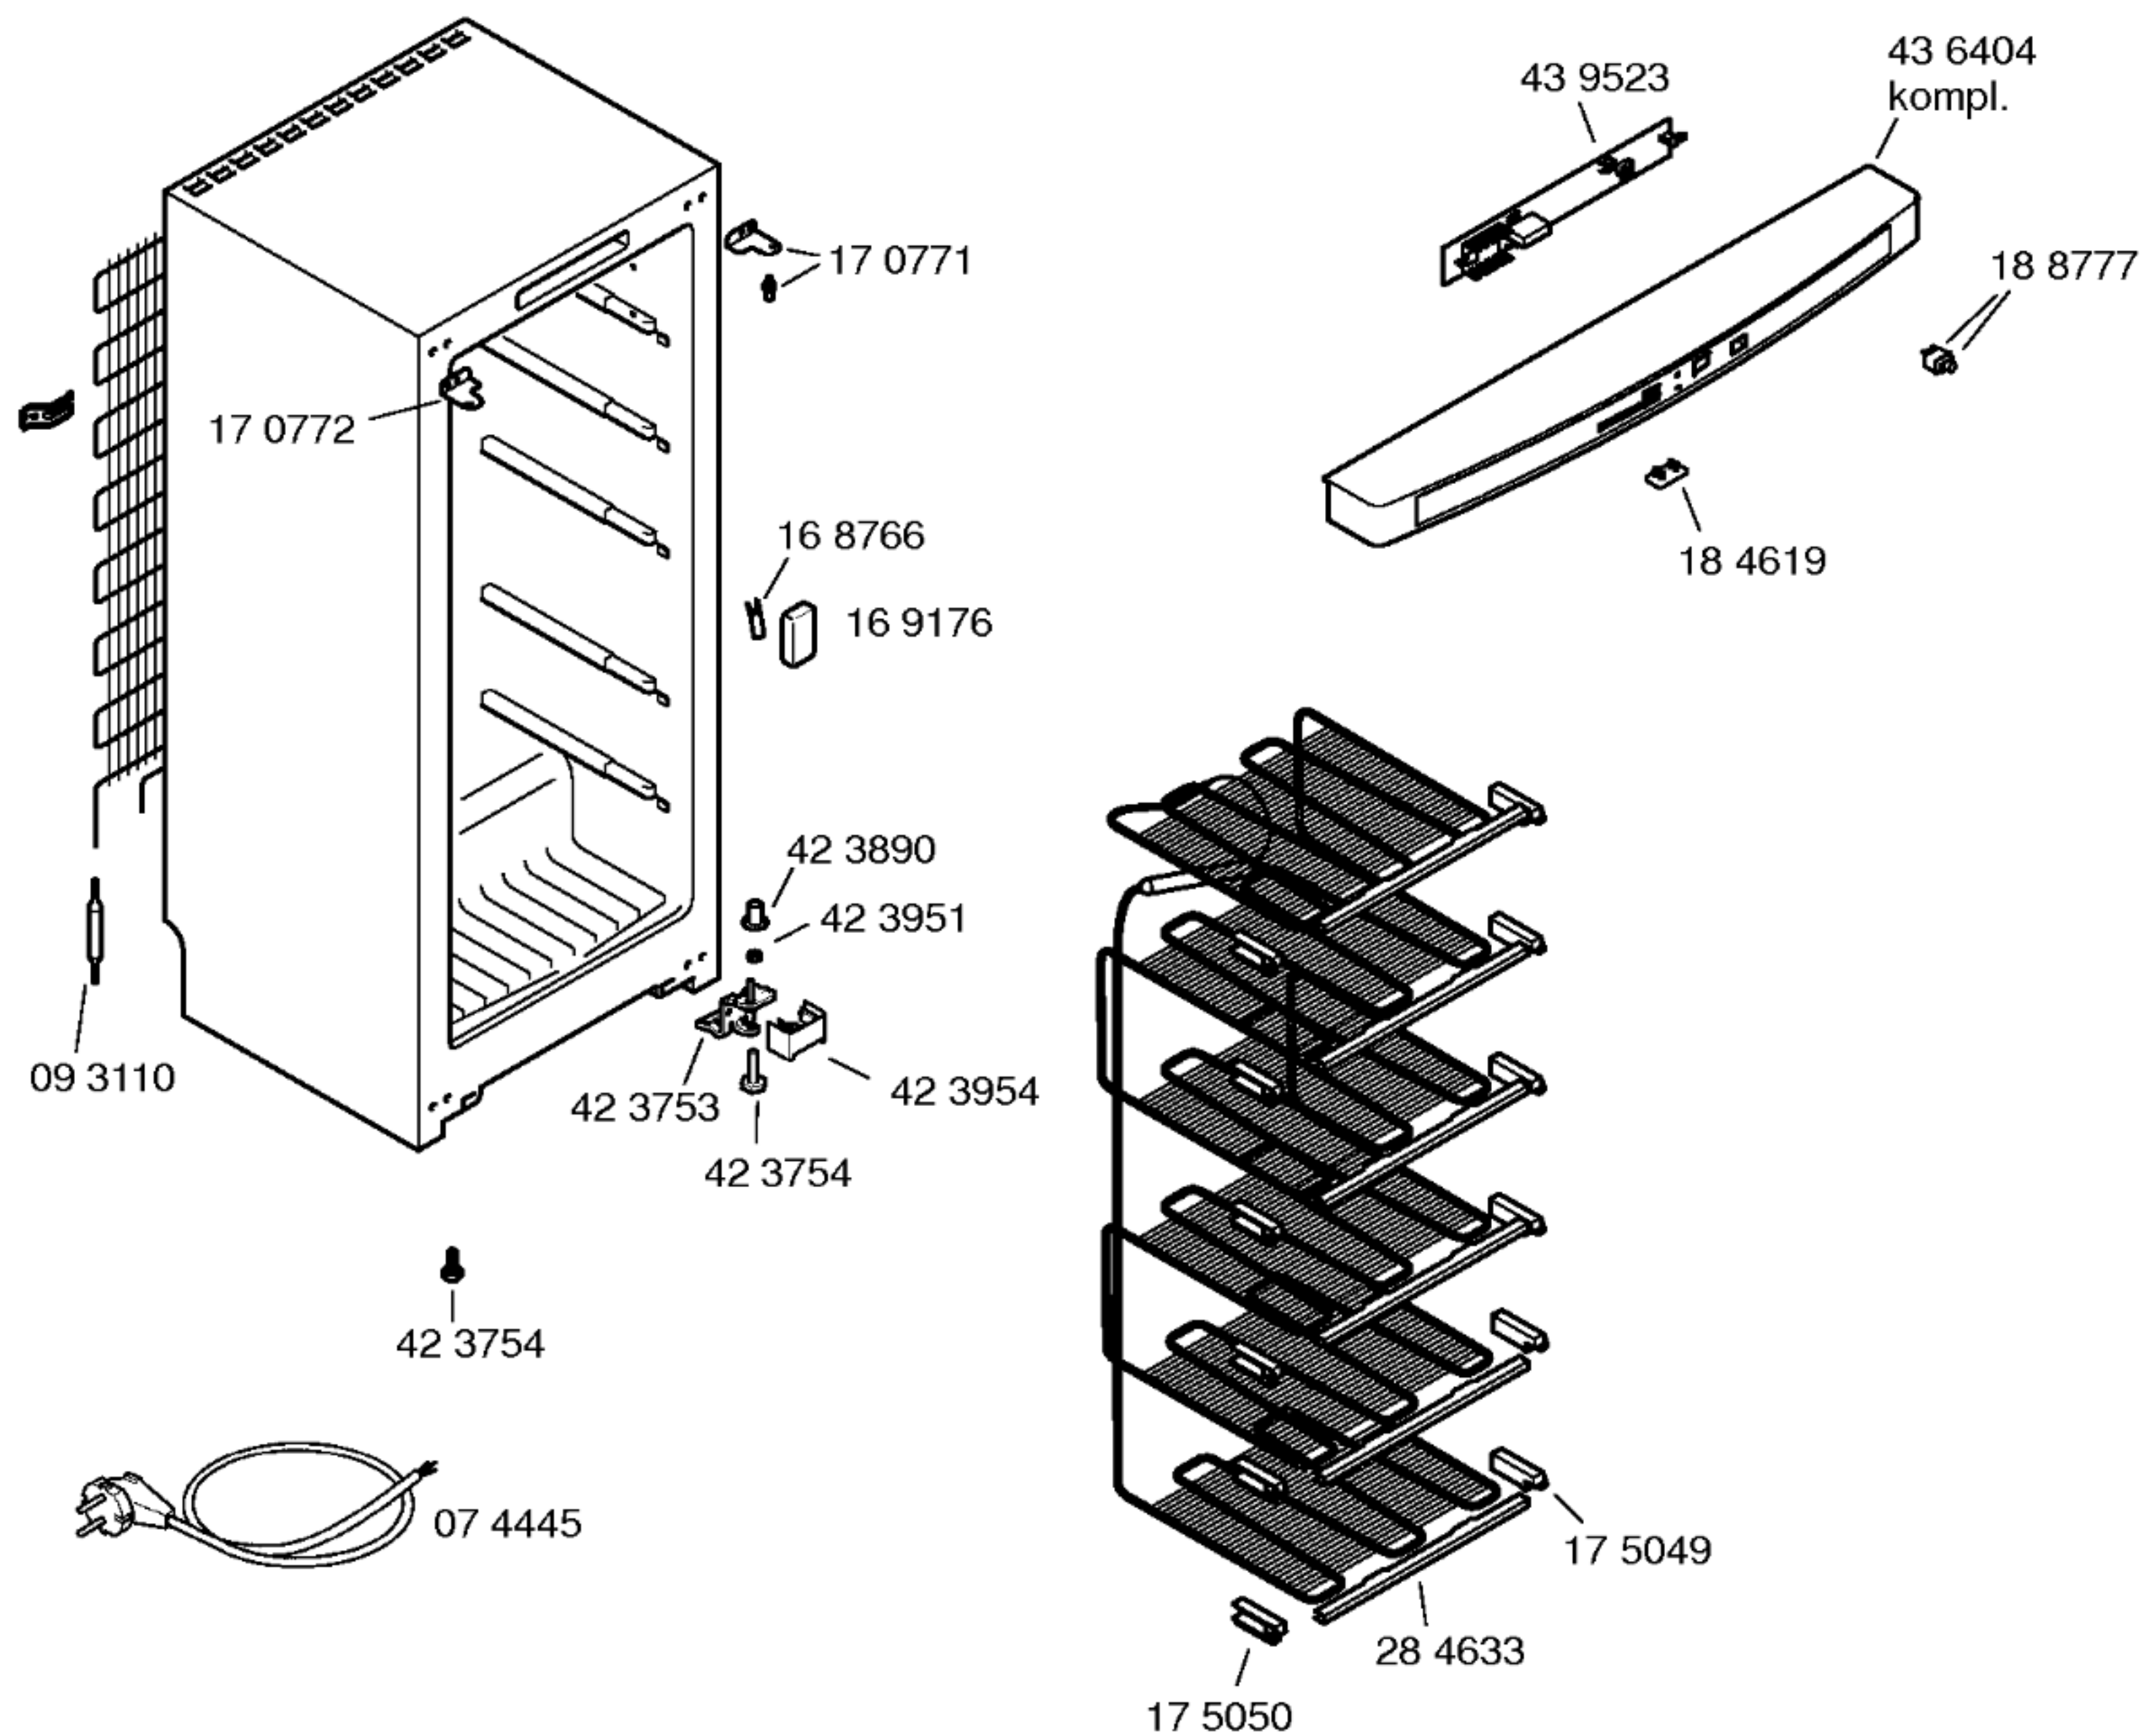


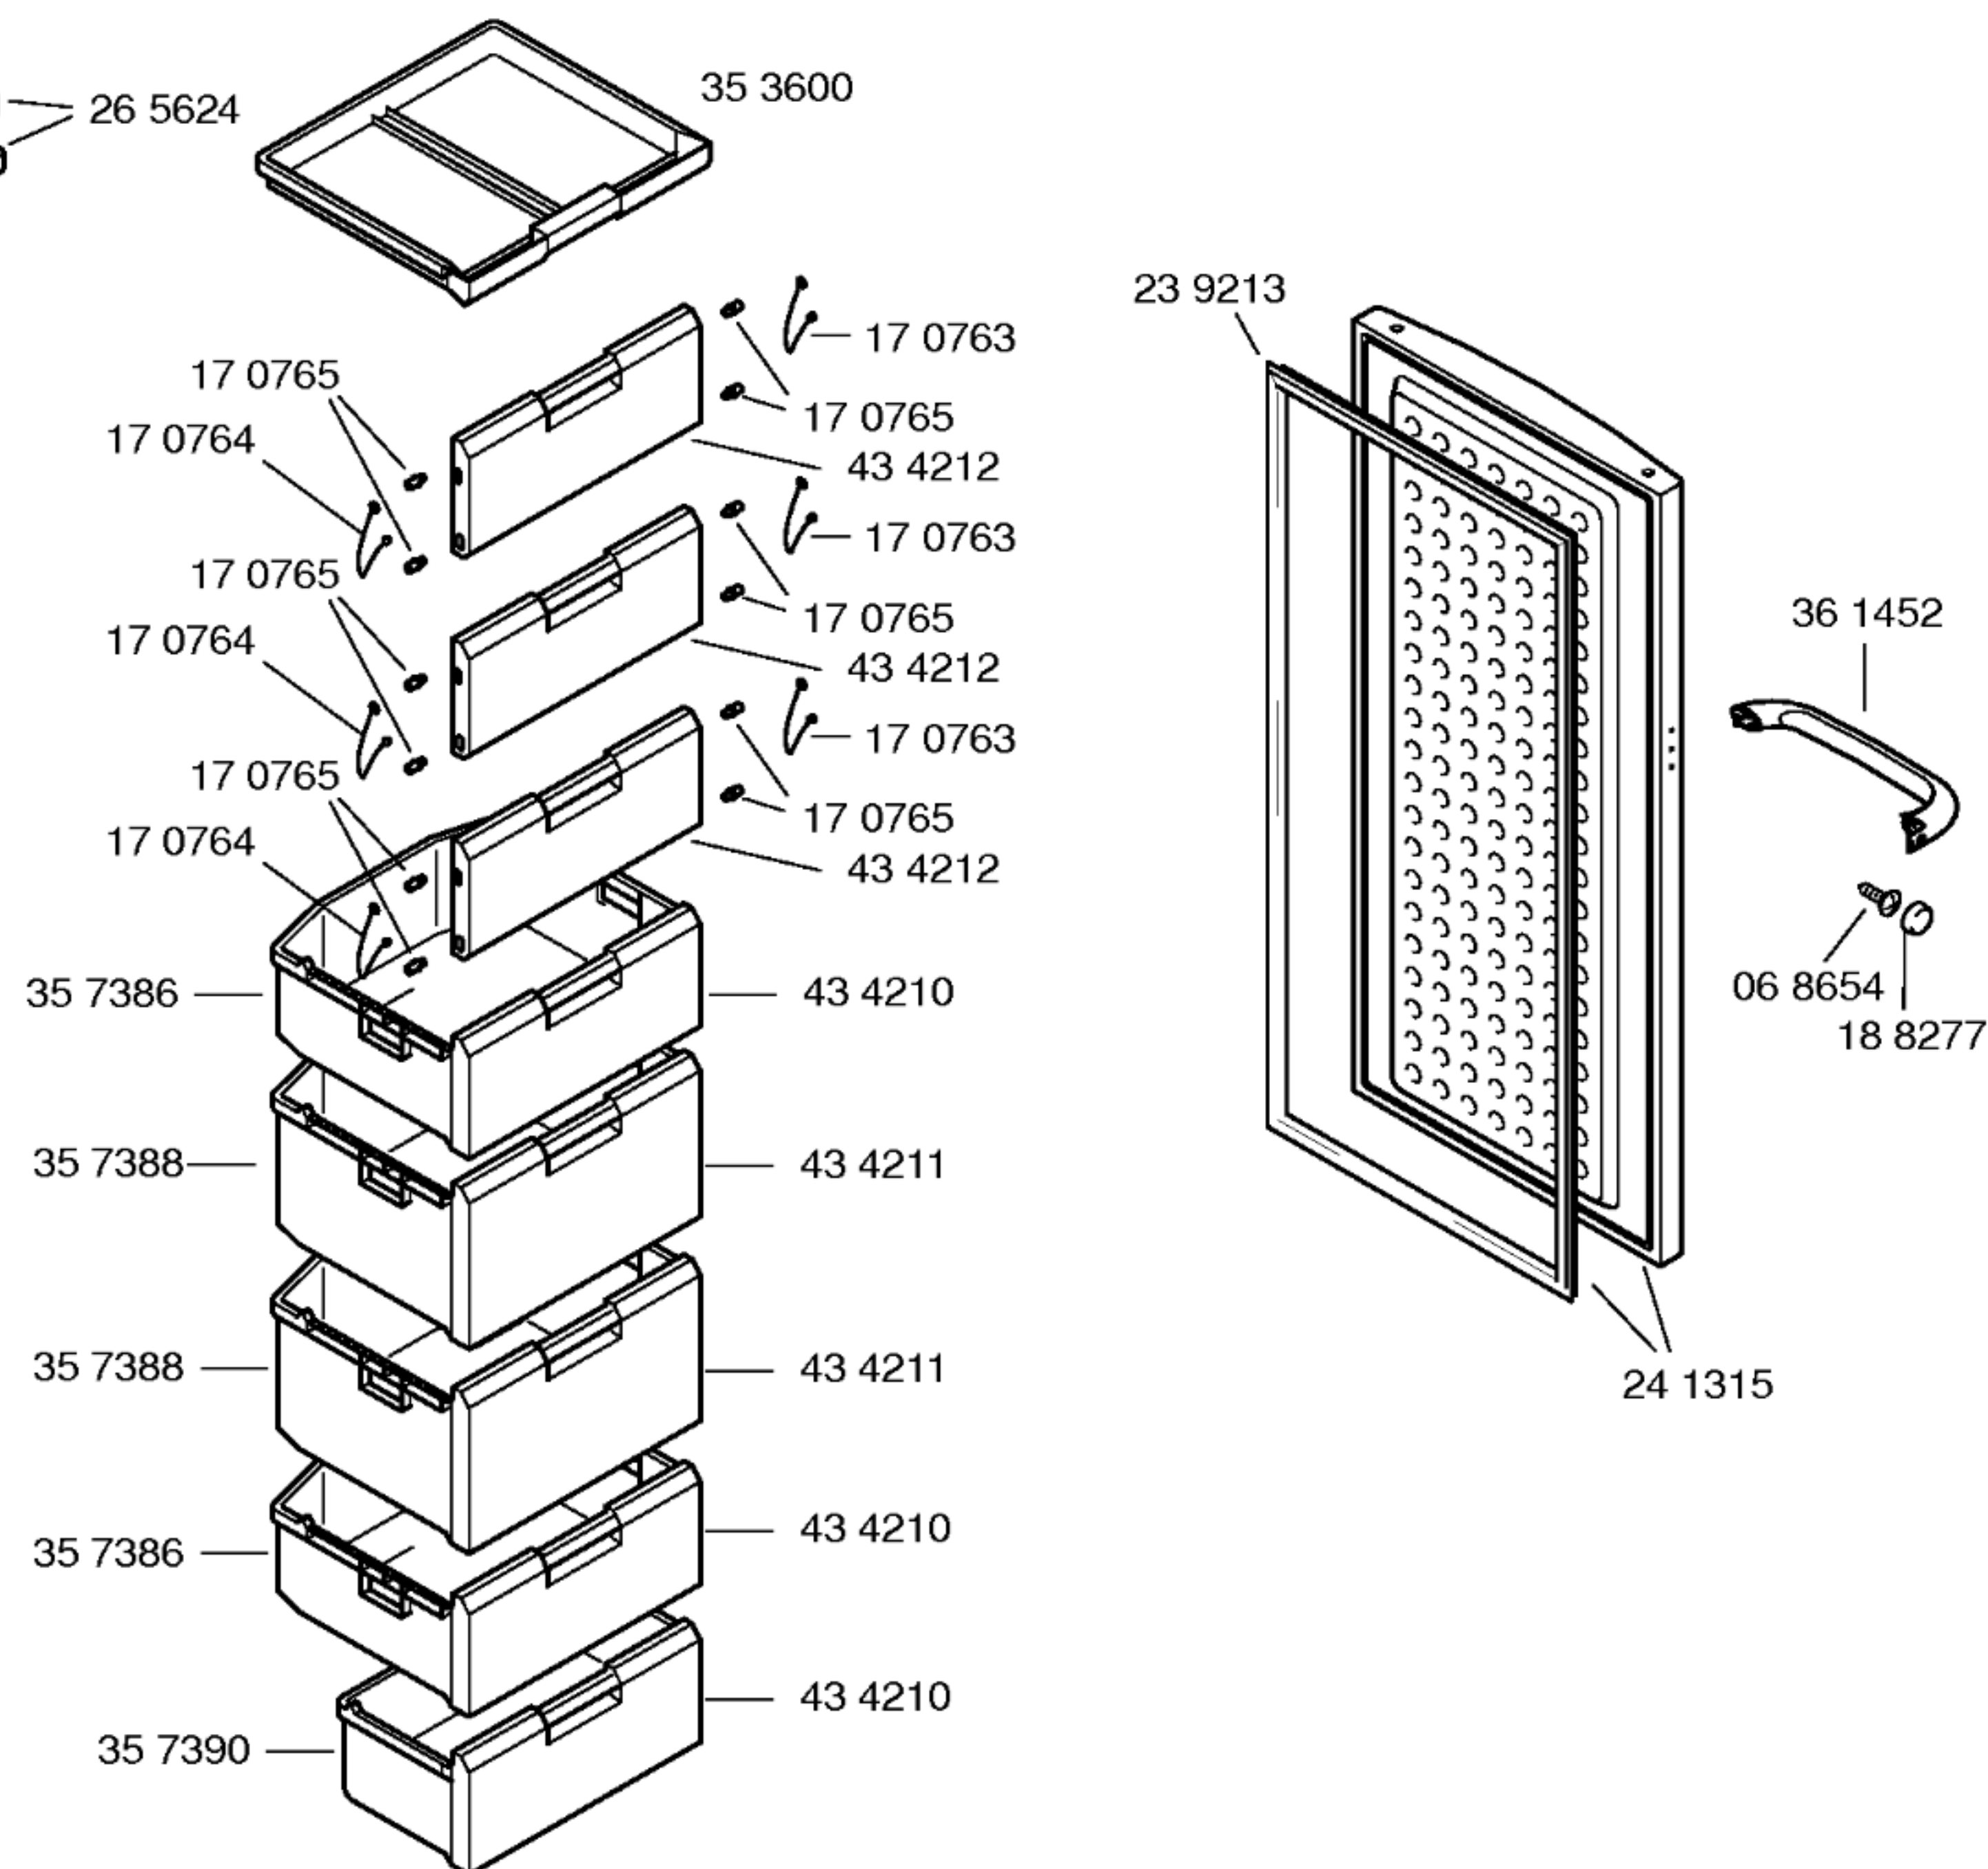

Mat. – Nr. – Konstante
3740
Gebrauchsanweisung
58 6288
(de,en,fr,it,nl)
58 6289
(da,no,fi)
Montageanleitung
58 9231
(
Beistellsatz
42 3954

Mat. – Nr. – Konstante
3740

Mat. – Nr. – Konstante
3740

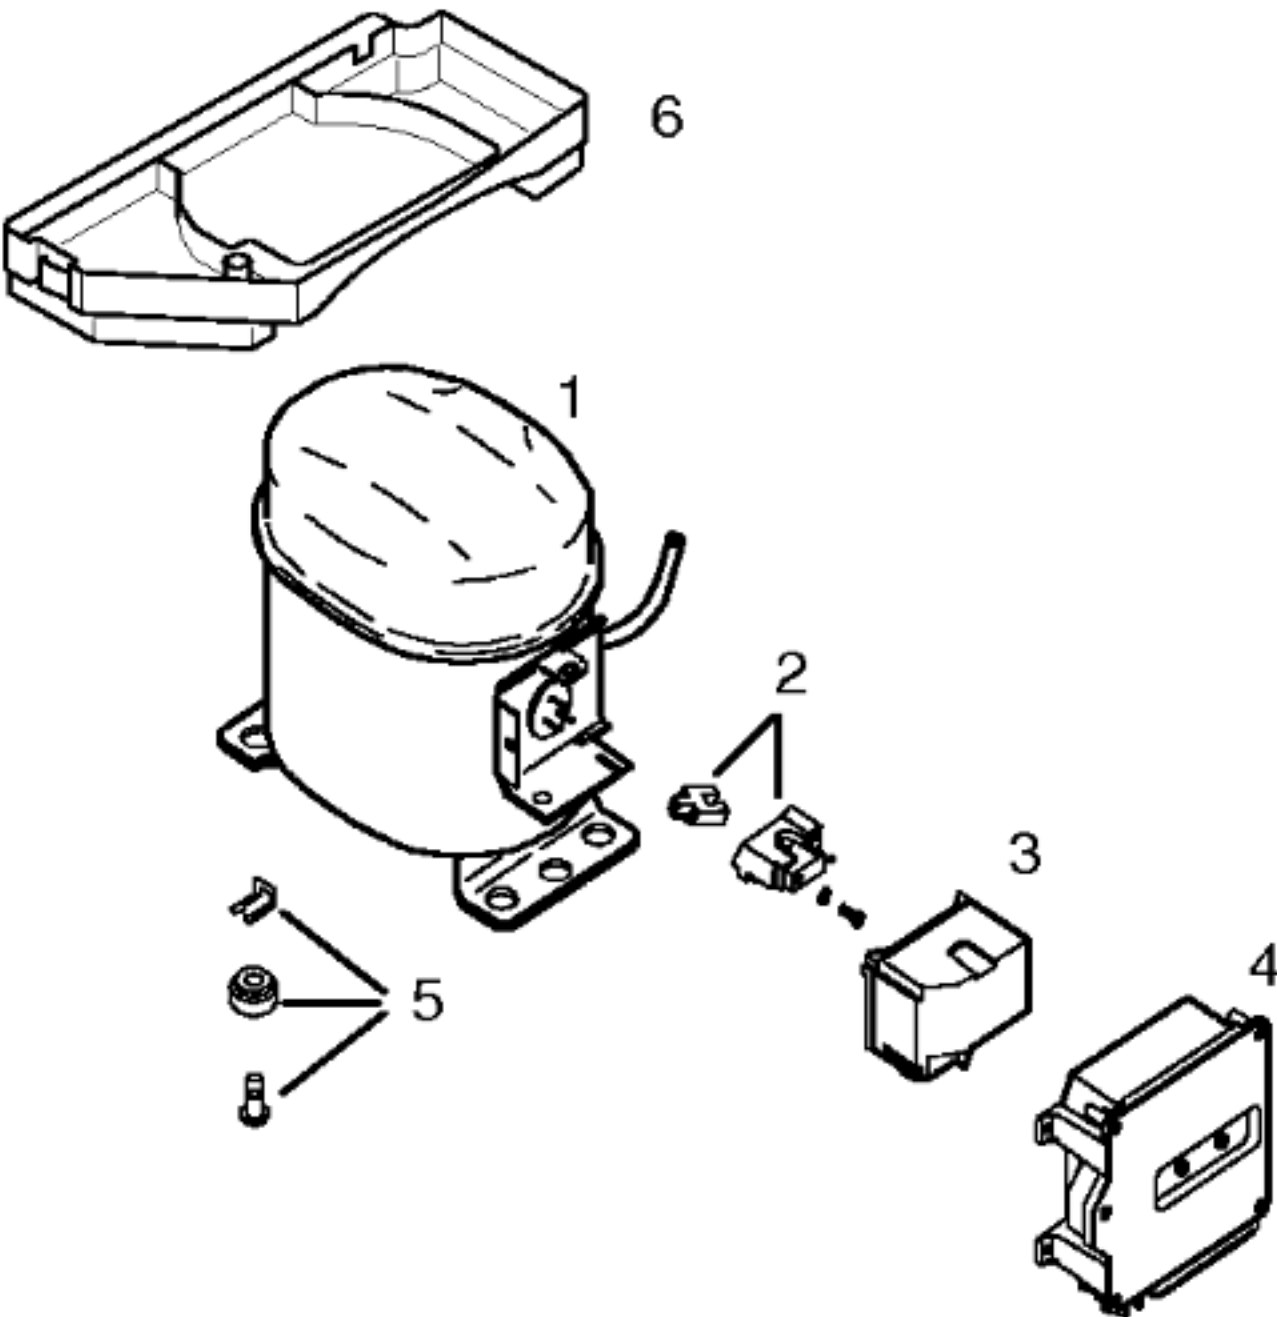

	V01		
	Zanussi		
Pos.	HQT 99RSA		
1	14 3717		
2	17 5277		
3	17 5276		
4	49 1865		
5	05 0166		
6	43 6749		
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Zanussi		
Typ/Type	HQT 99RSA		
Förderleistung/Delivery/Débit	l/h	1250	
Anlaufstrom/Starting current/Cour de démarrage	A	1,5	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	14,3
	Hi/aux	Ω	14,3
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/	„ein“	°C	
Valeurs de commutation	„aus“		
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W	66	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild