


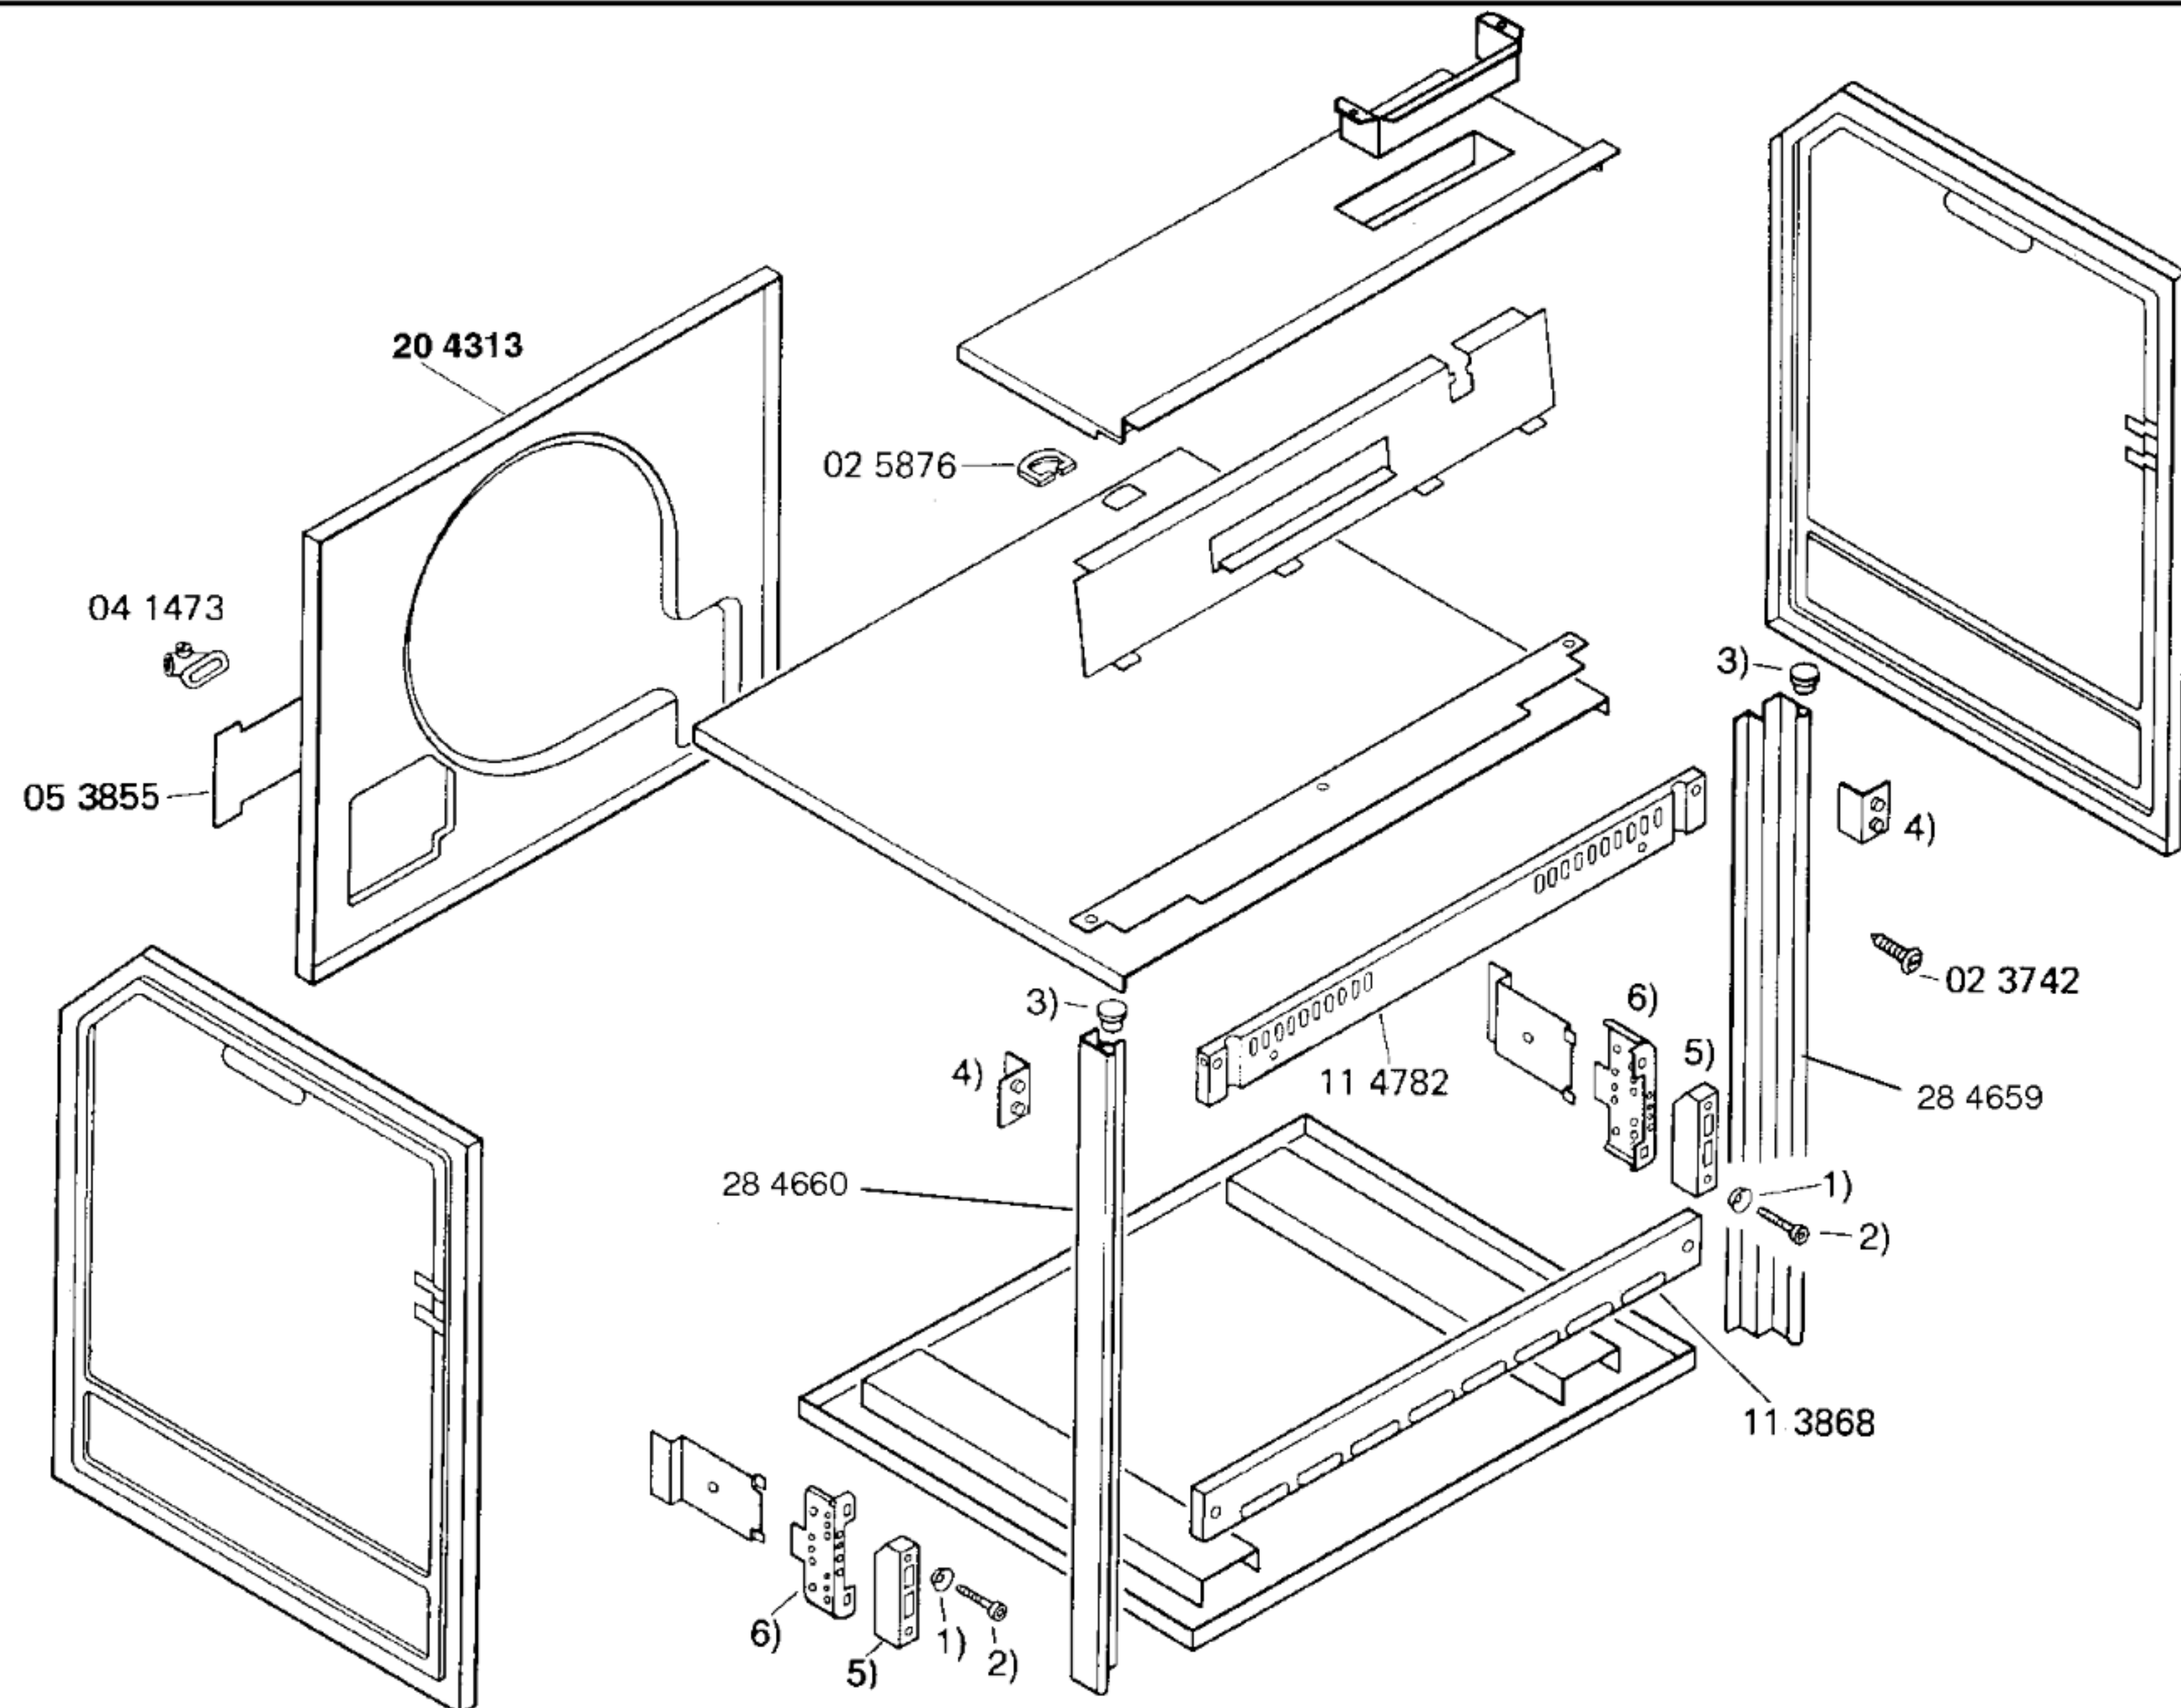

51 7321
Gebrauchsanweisung
(D,F,NL,I)

51 4969
 Tips und Rezepte
 (D)


- 1) 05 3176
- 2) 02 1947
- 3) 02 5992
- 4) 01 8981
- 5) 05 1477
- 6) 08 3566

Zubehör:


Alu-Backblech
Z1320X0


Bratpfanne
Z1220X0



Rost
Z1420X0

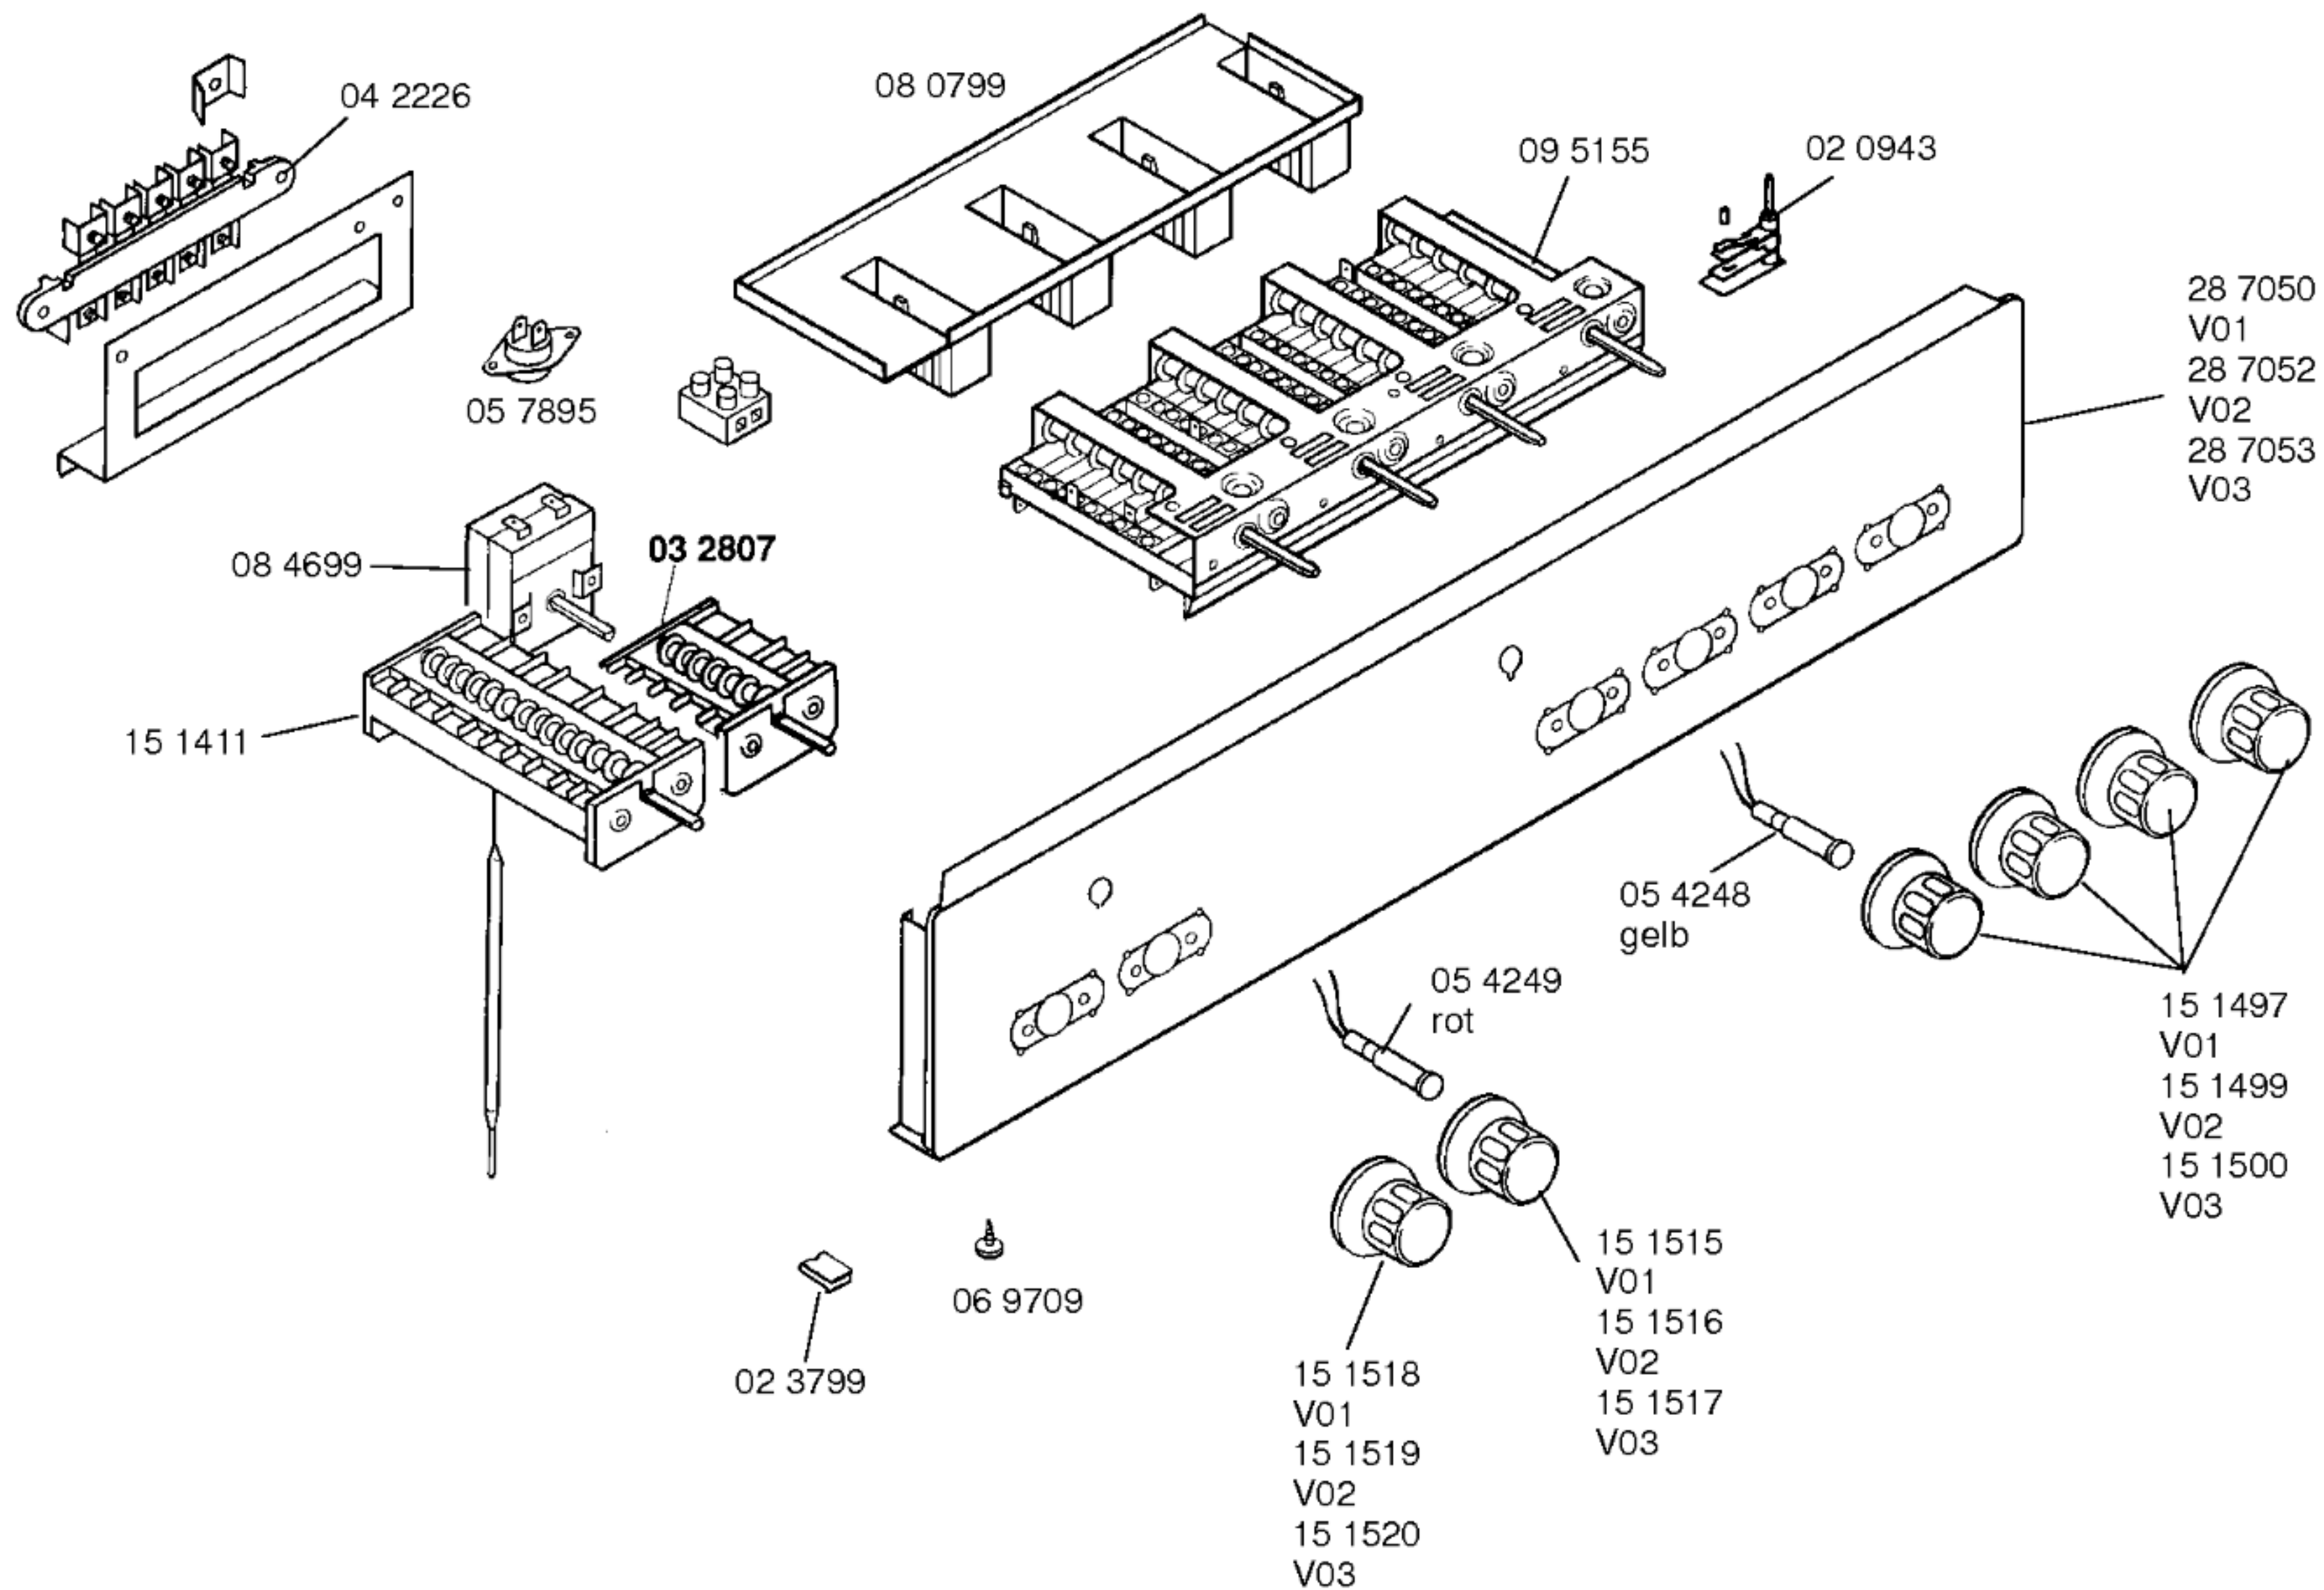


1) 02 2695

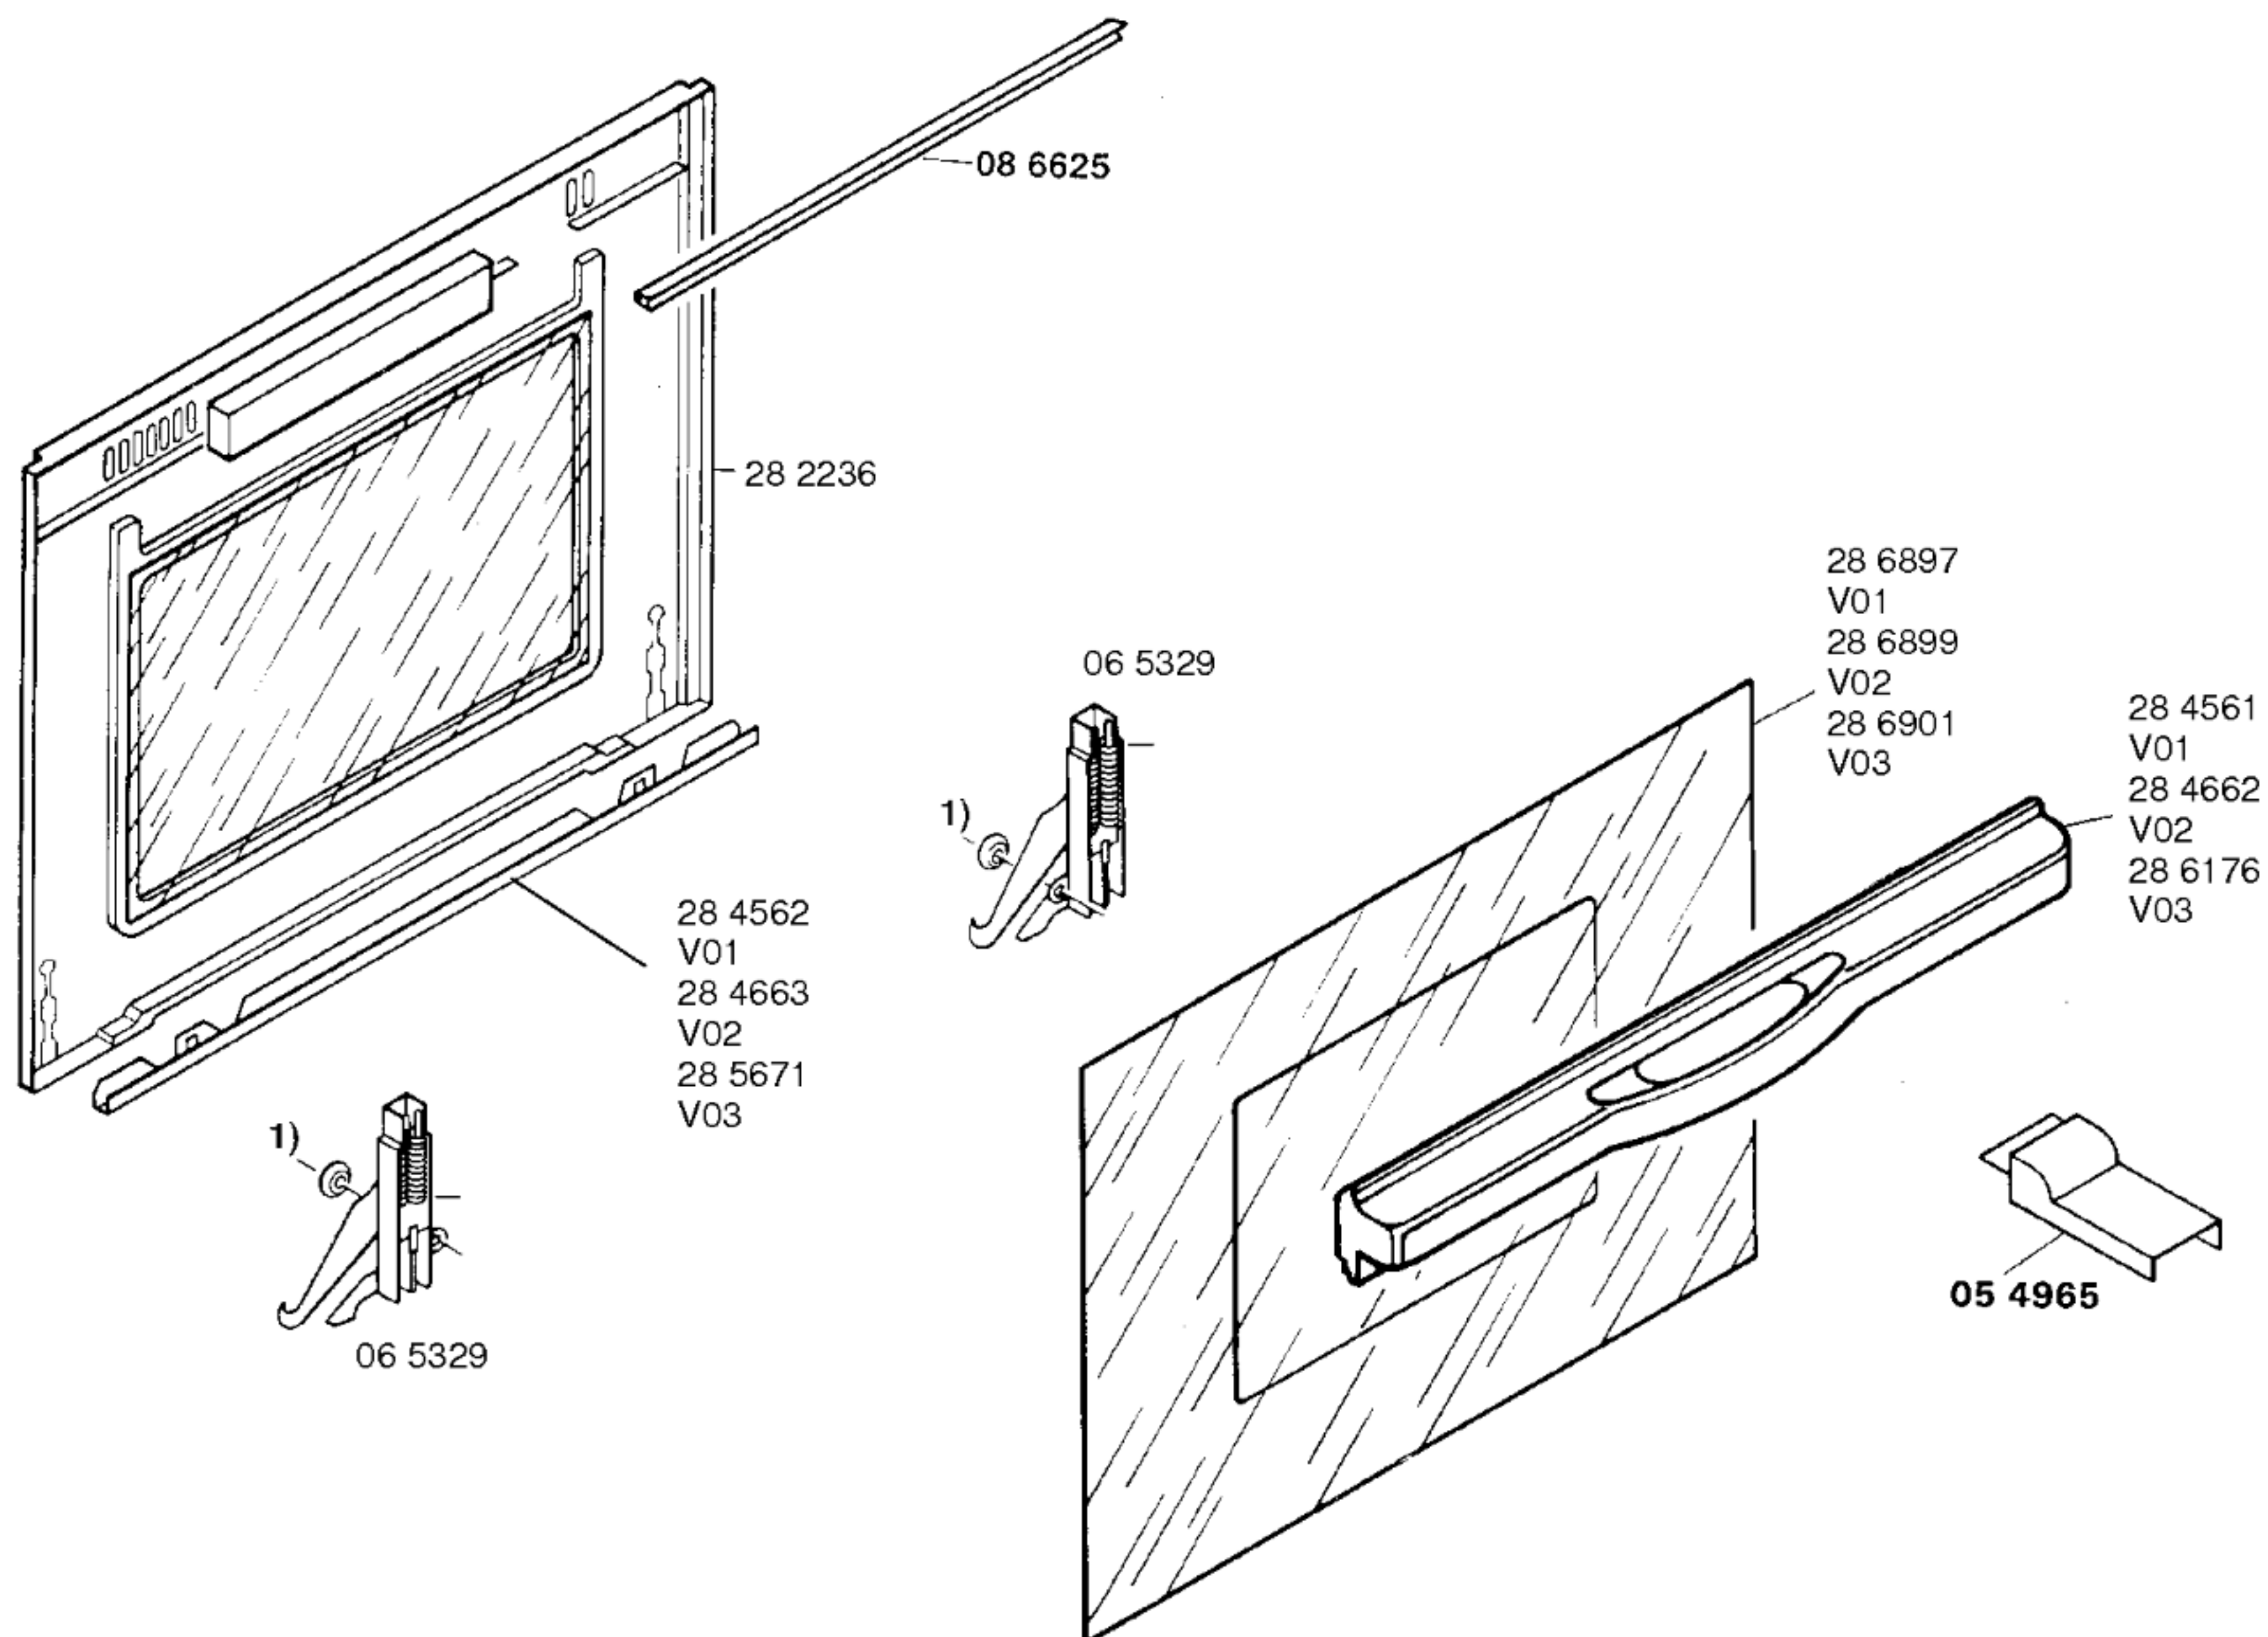

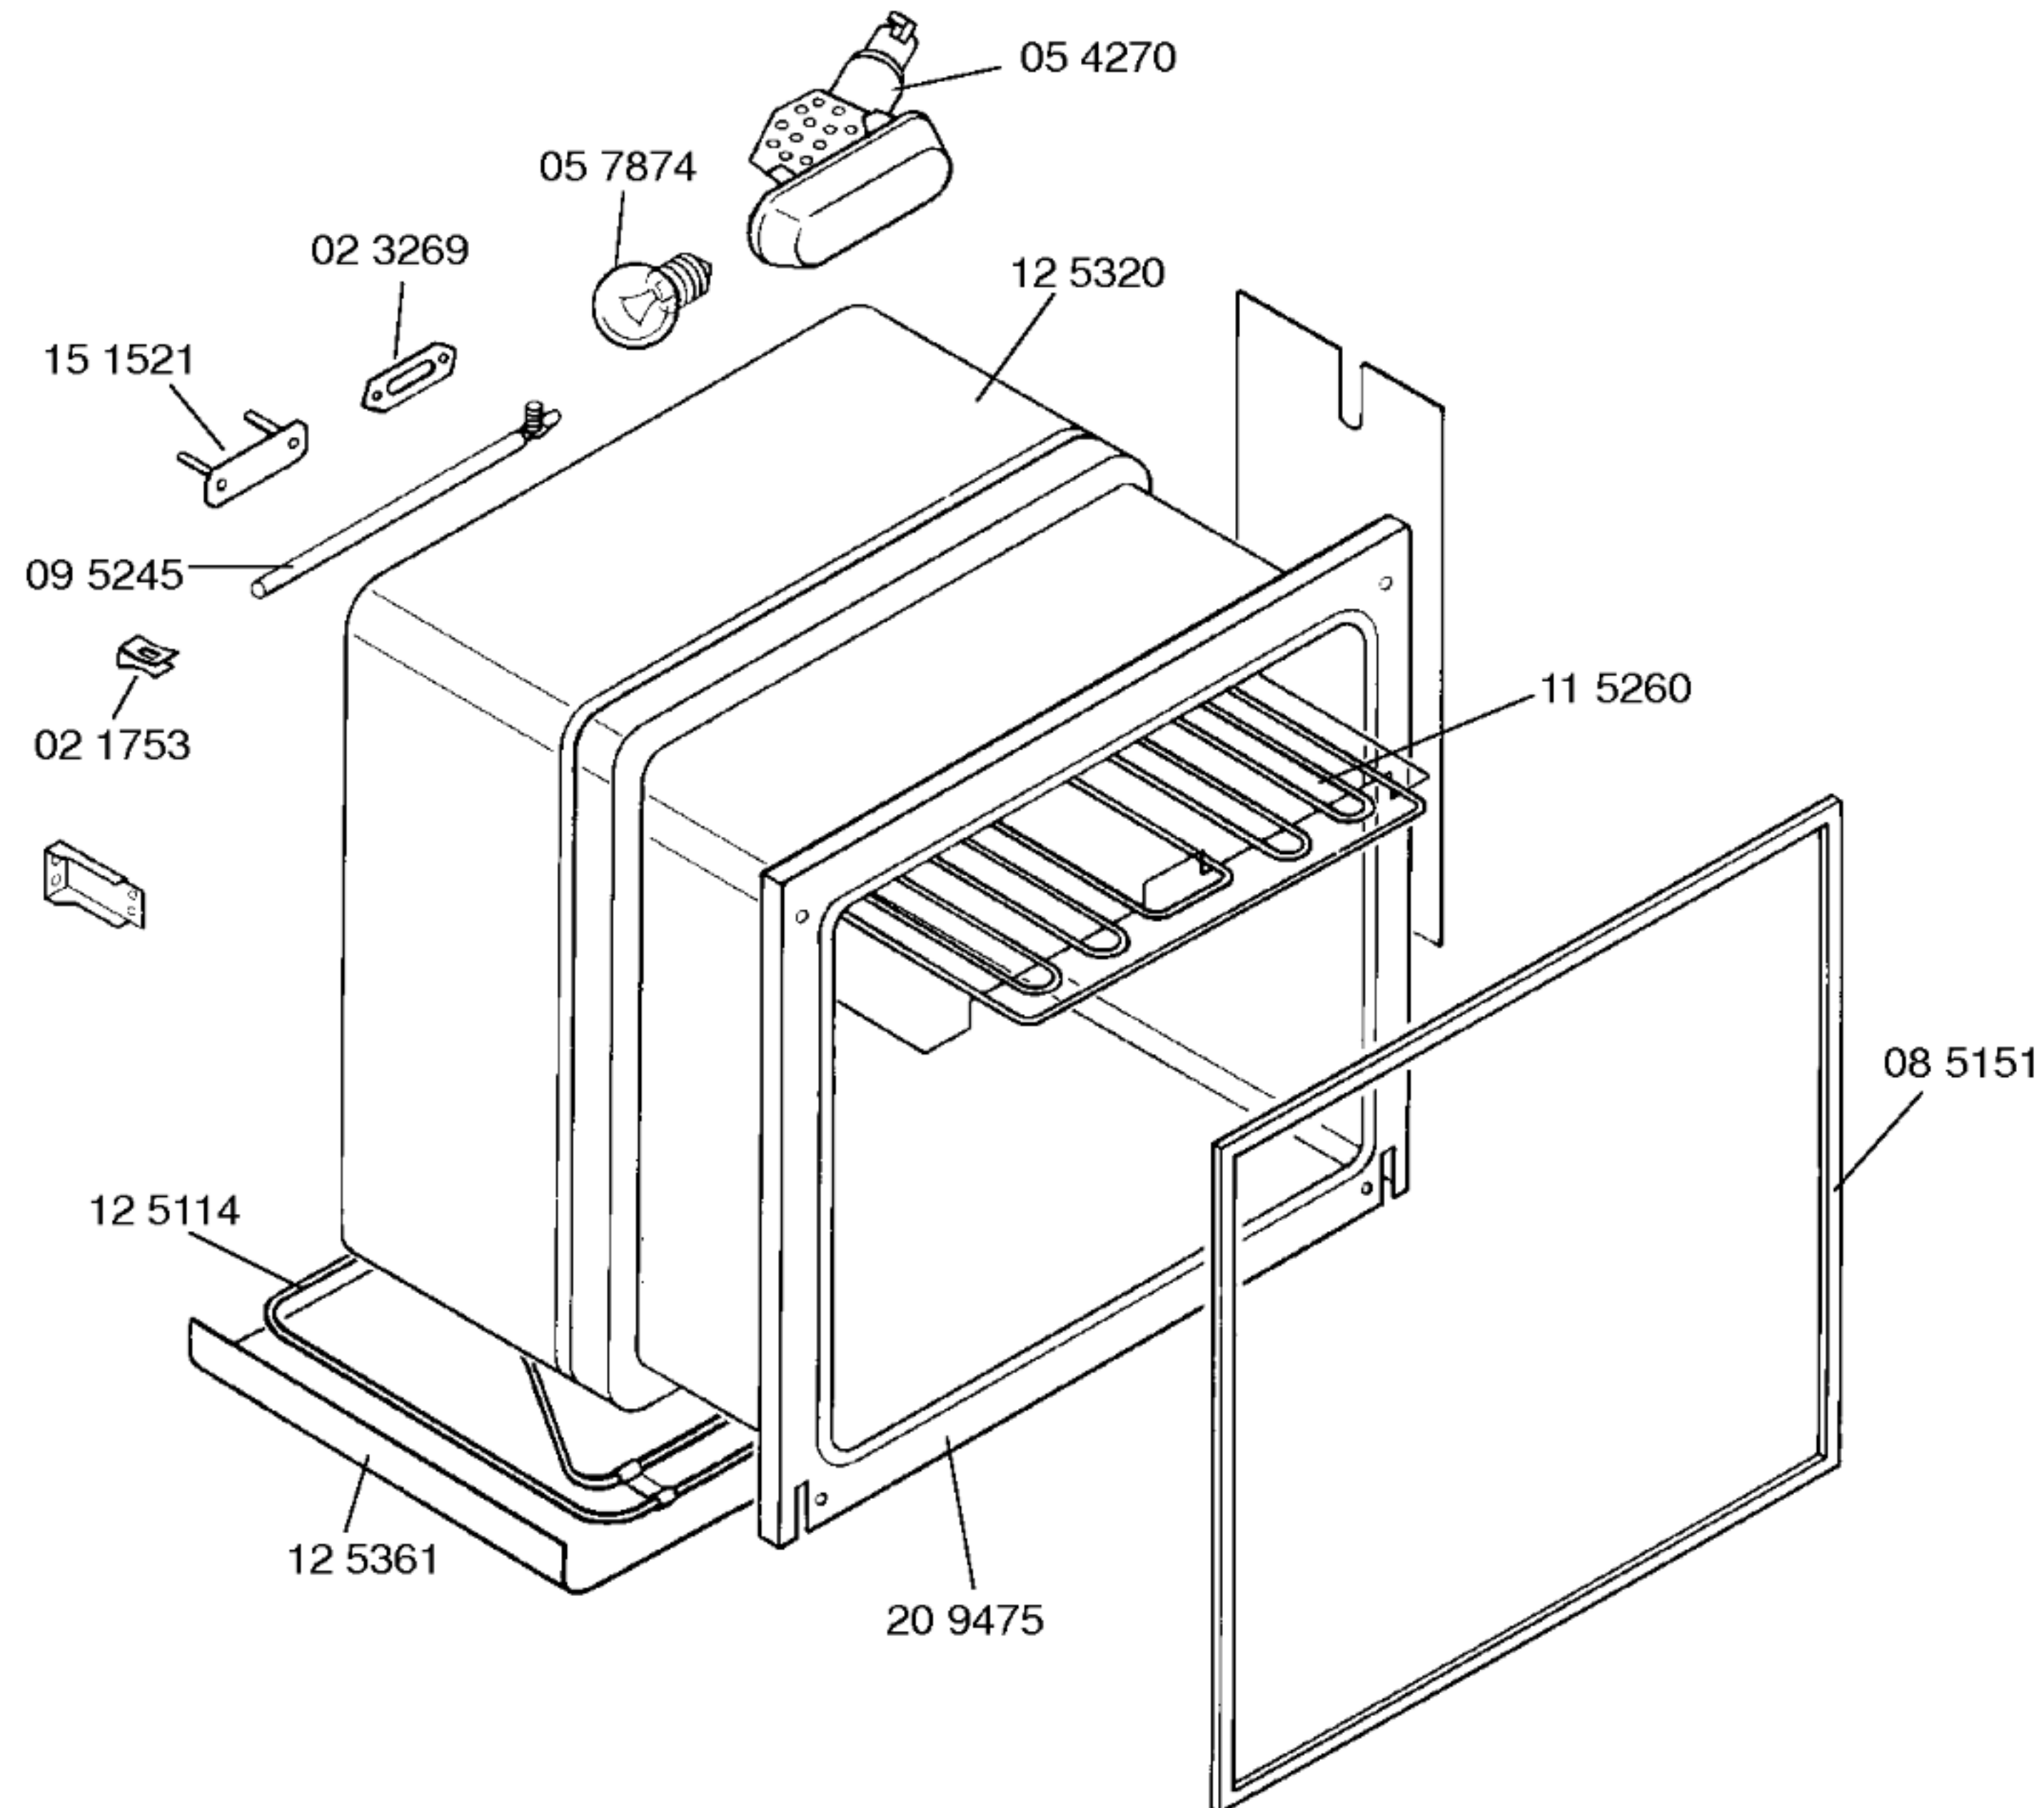

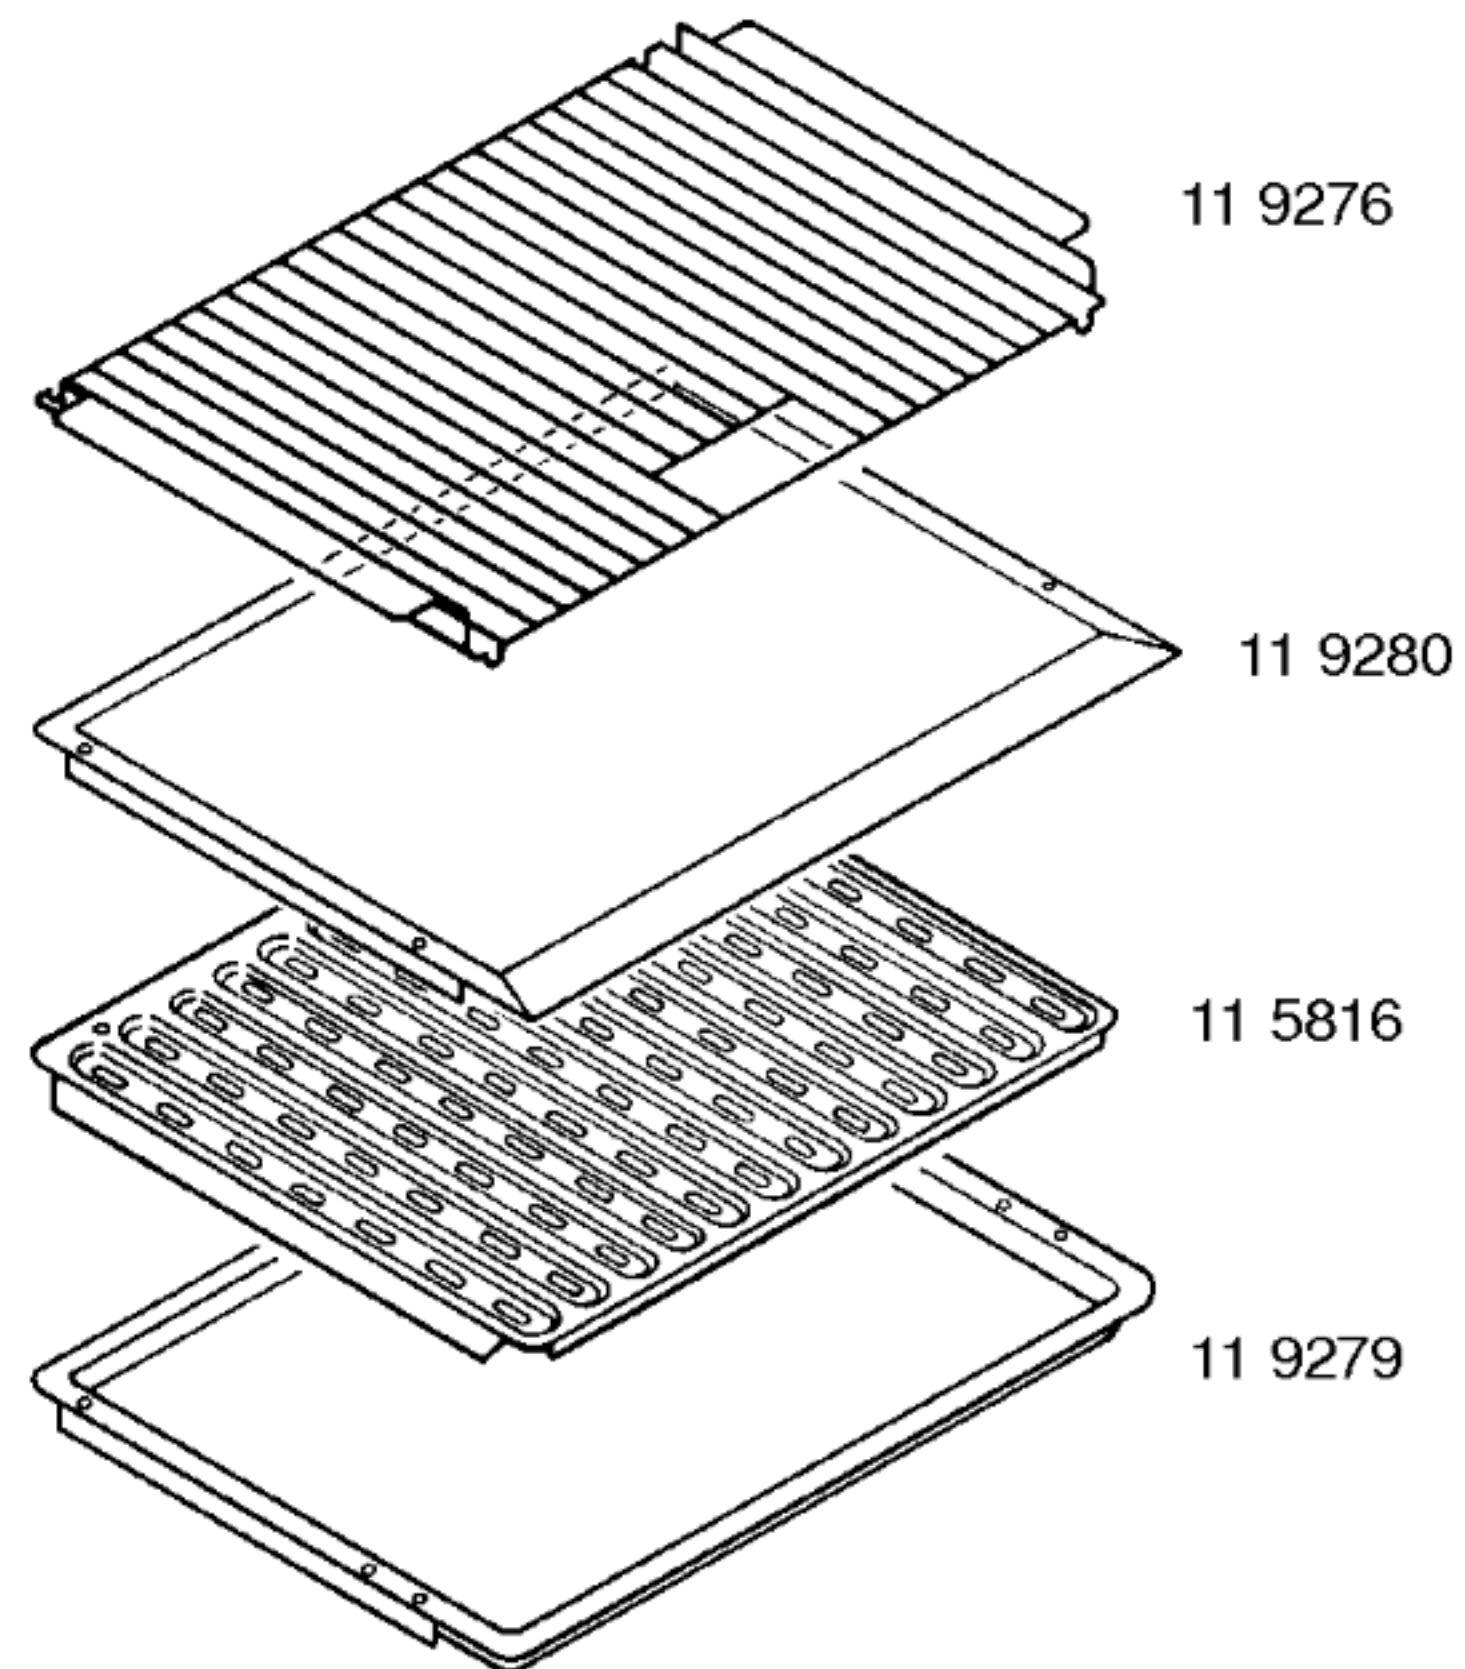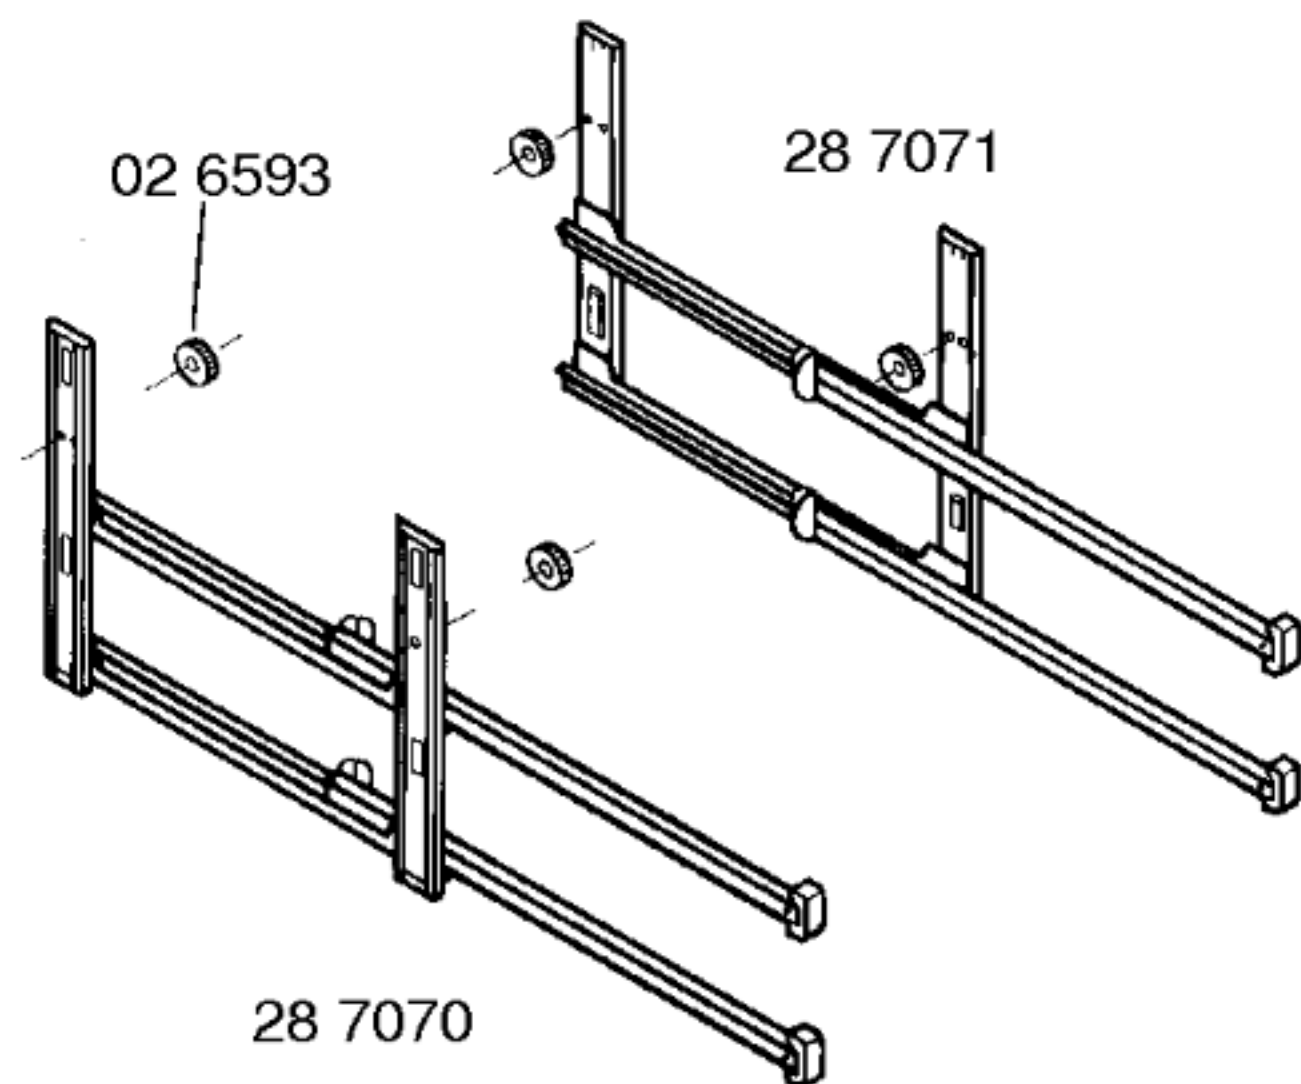

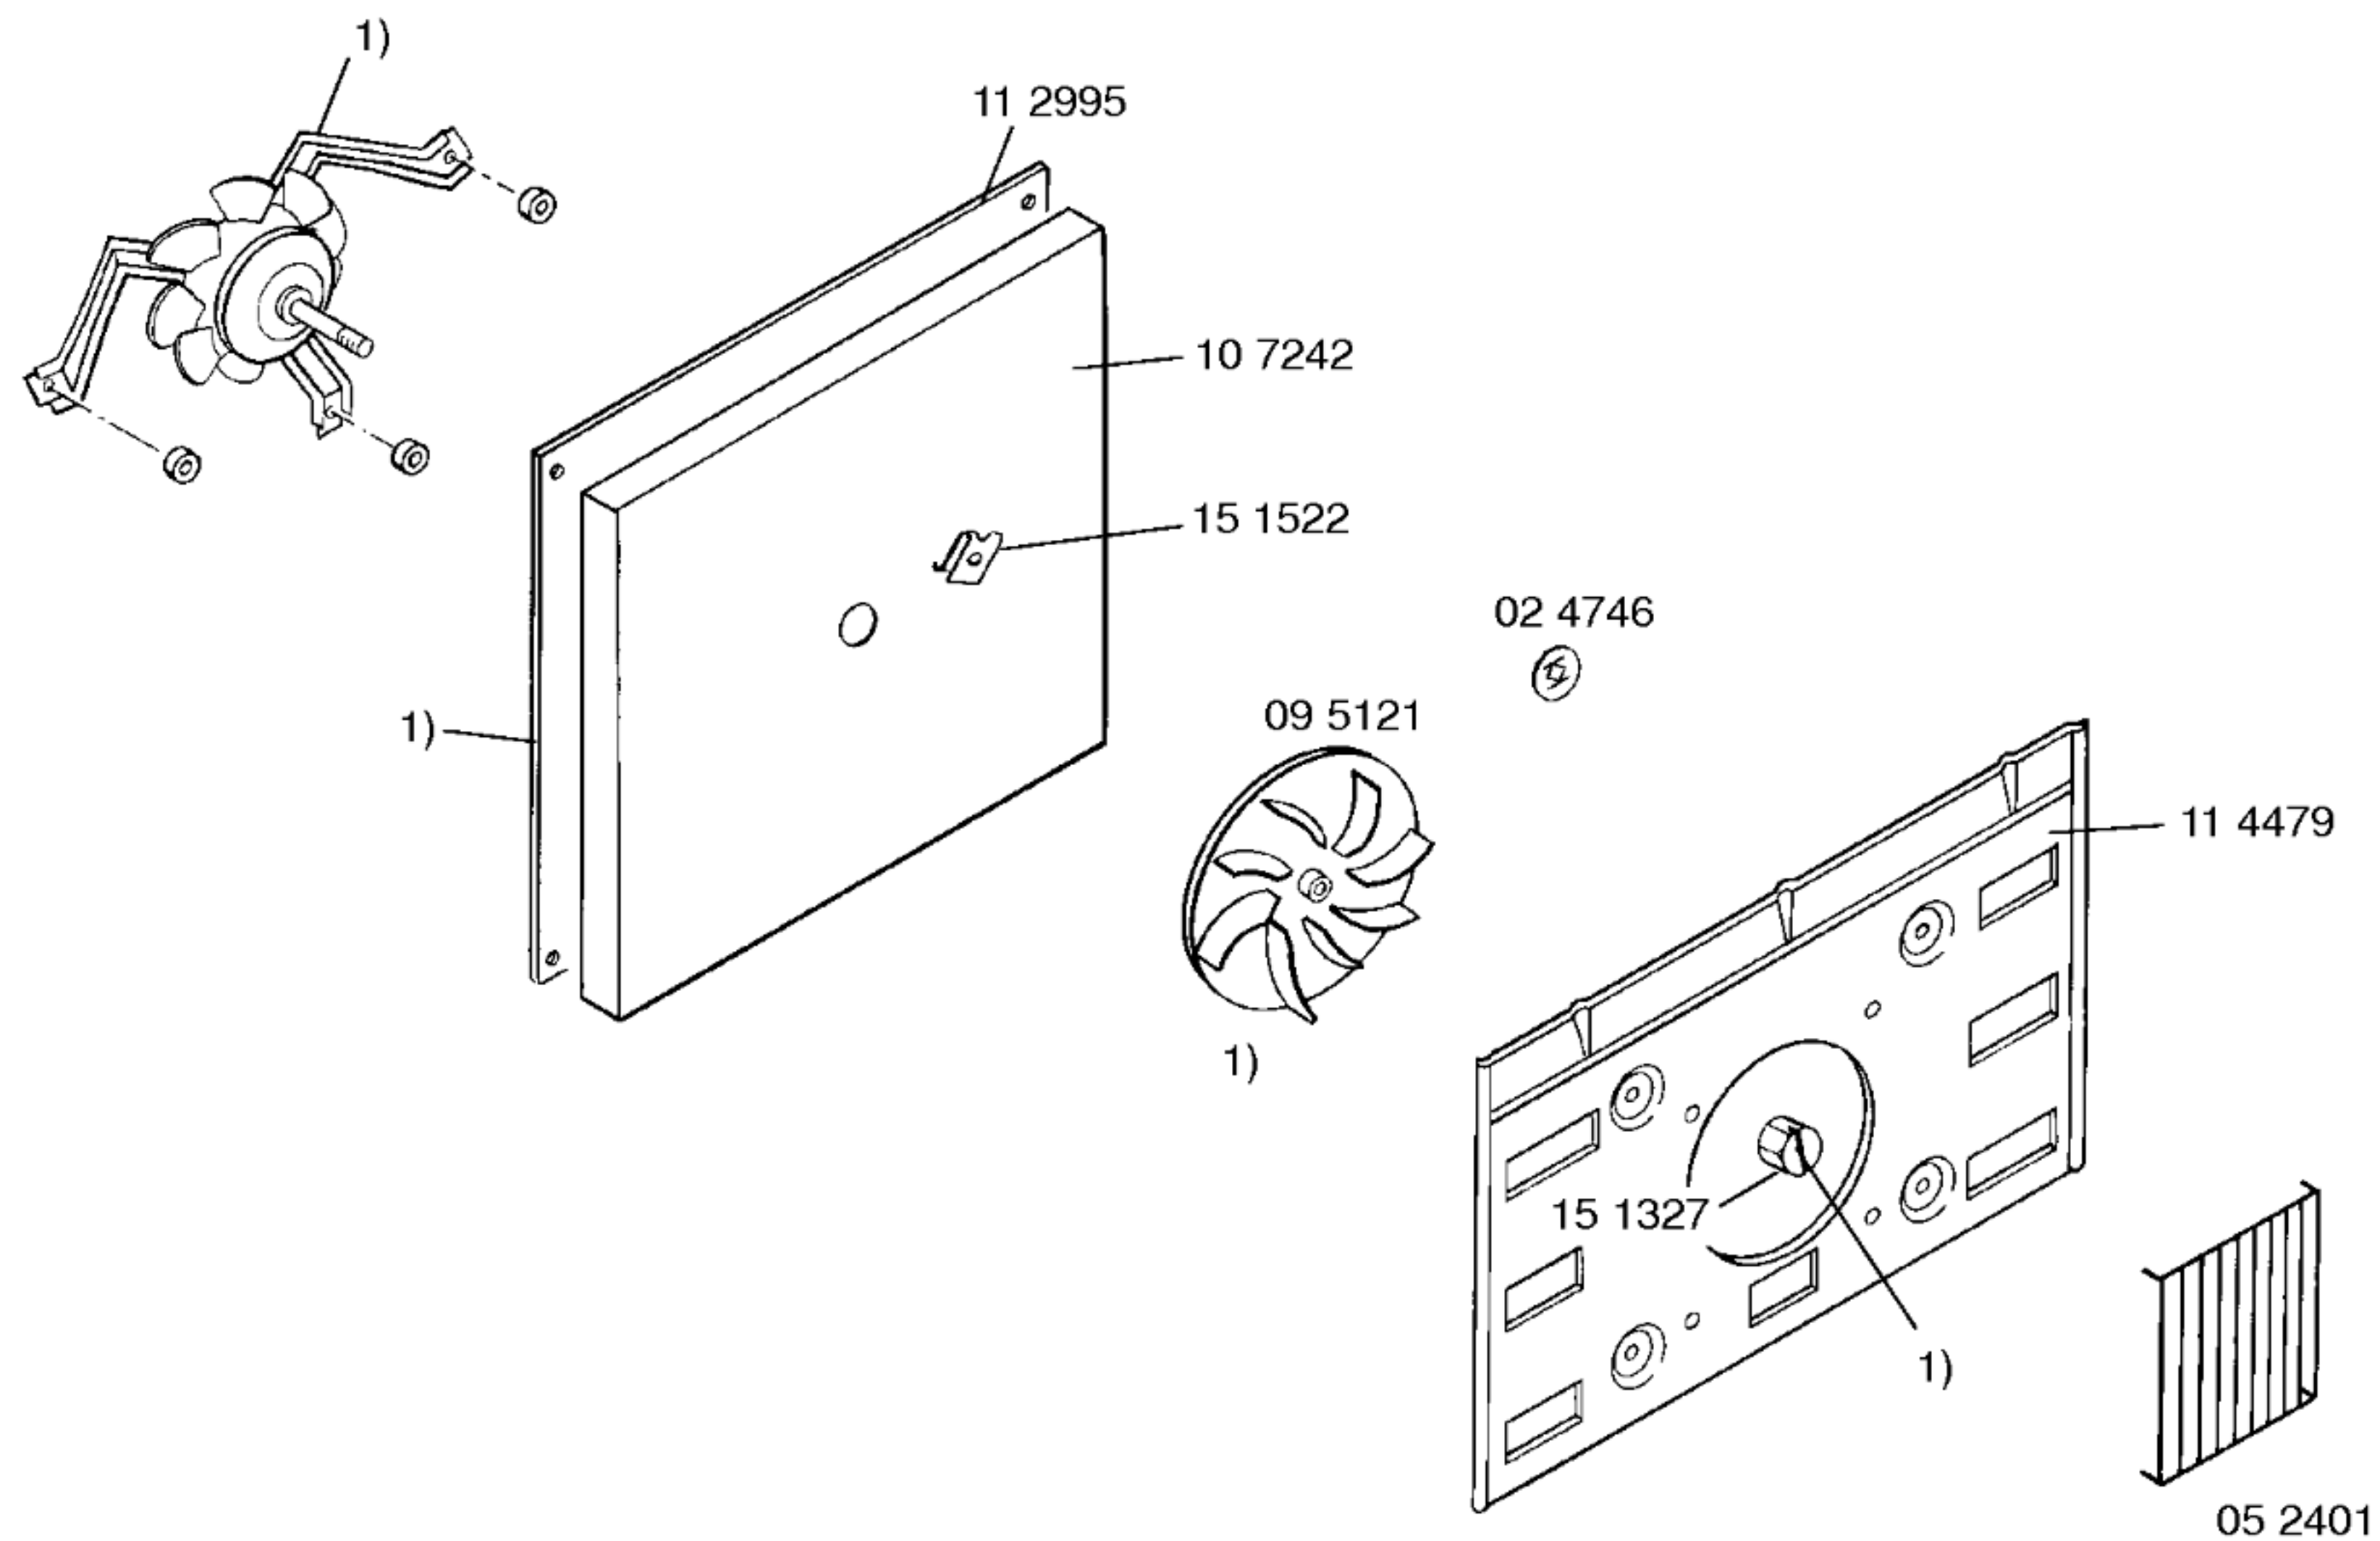

1) 09 5120
Set