




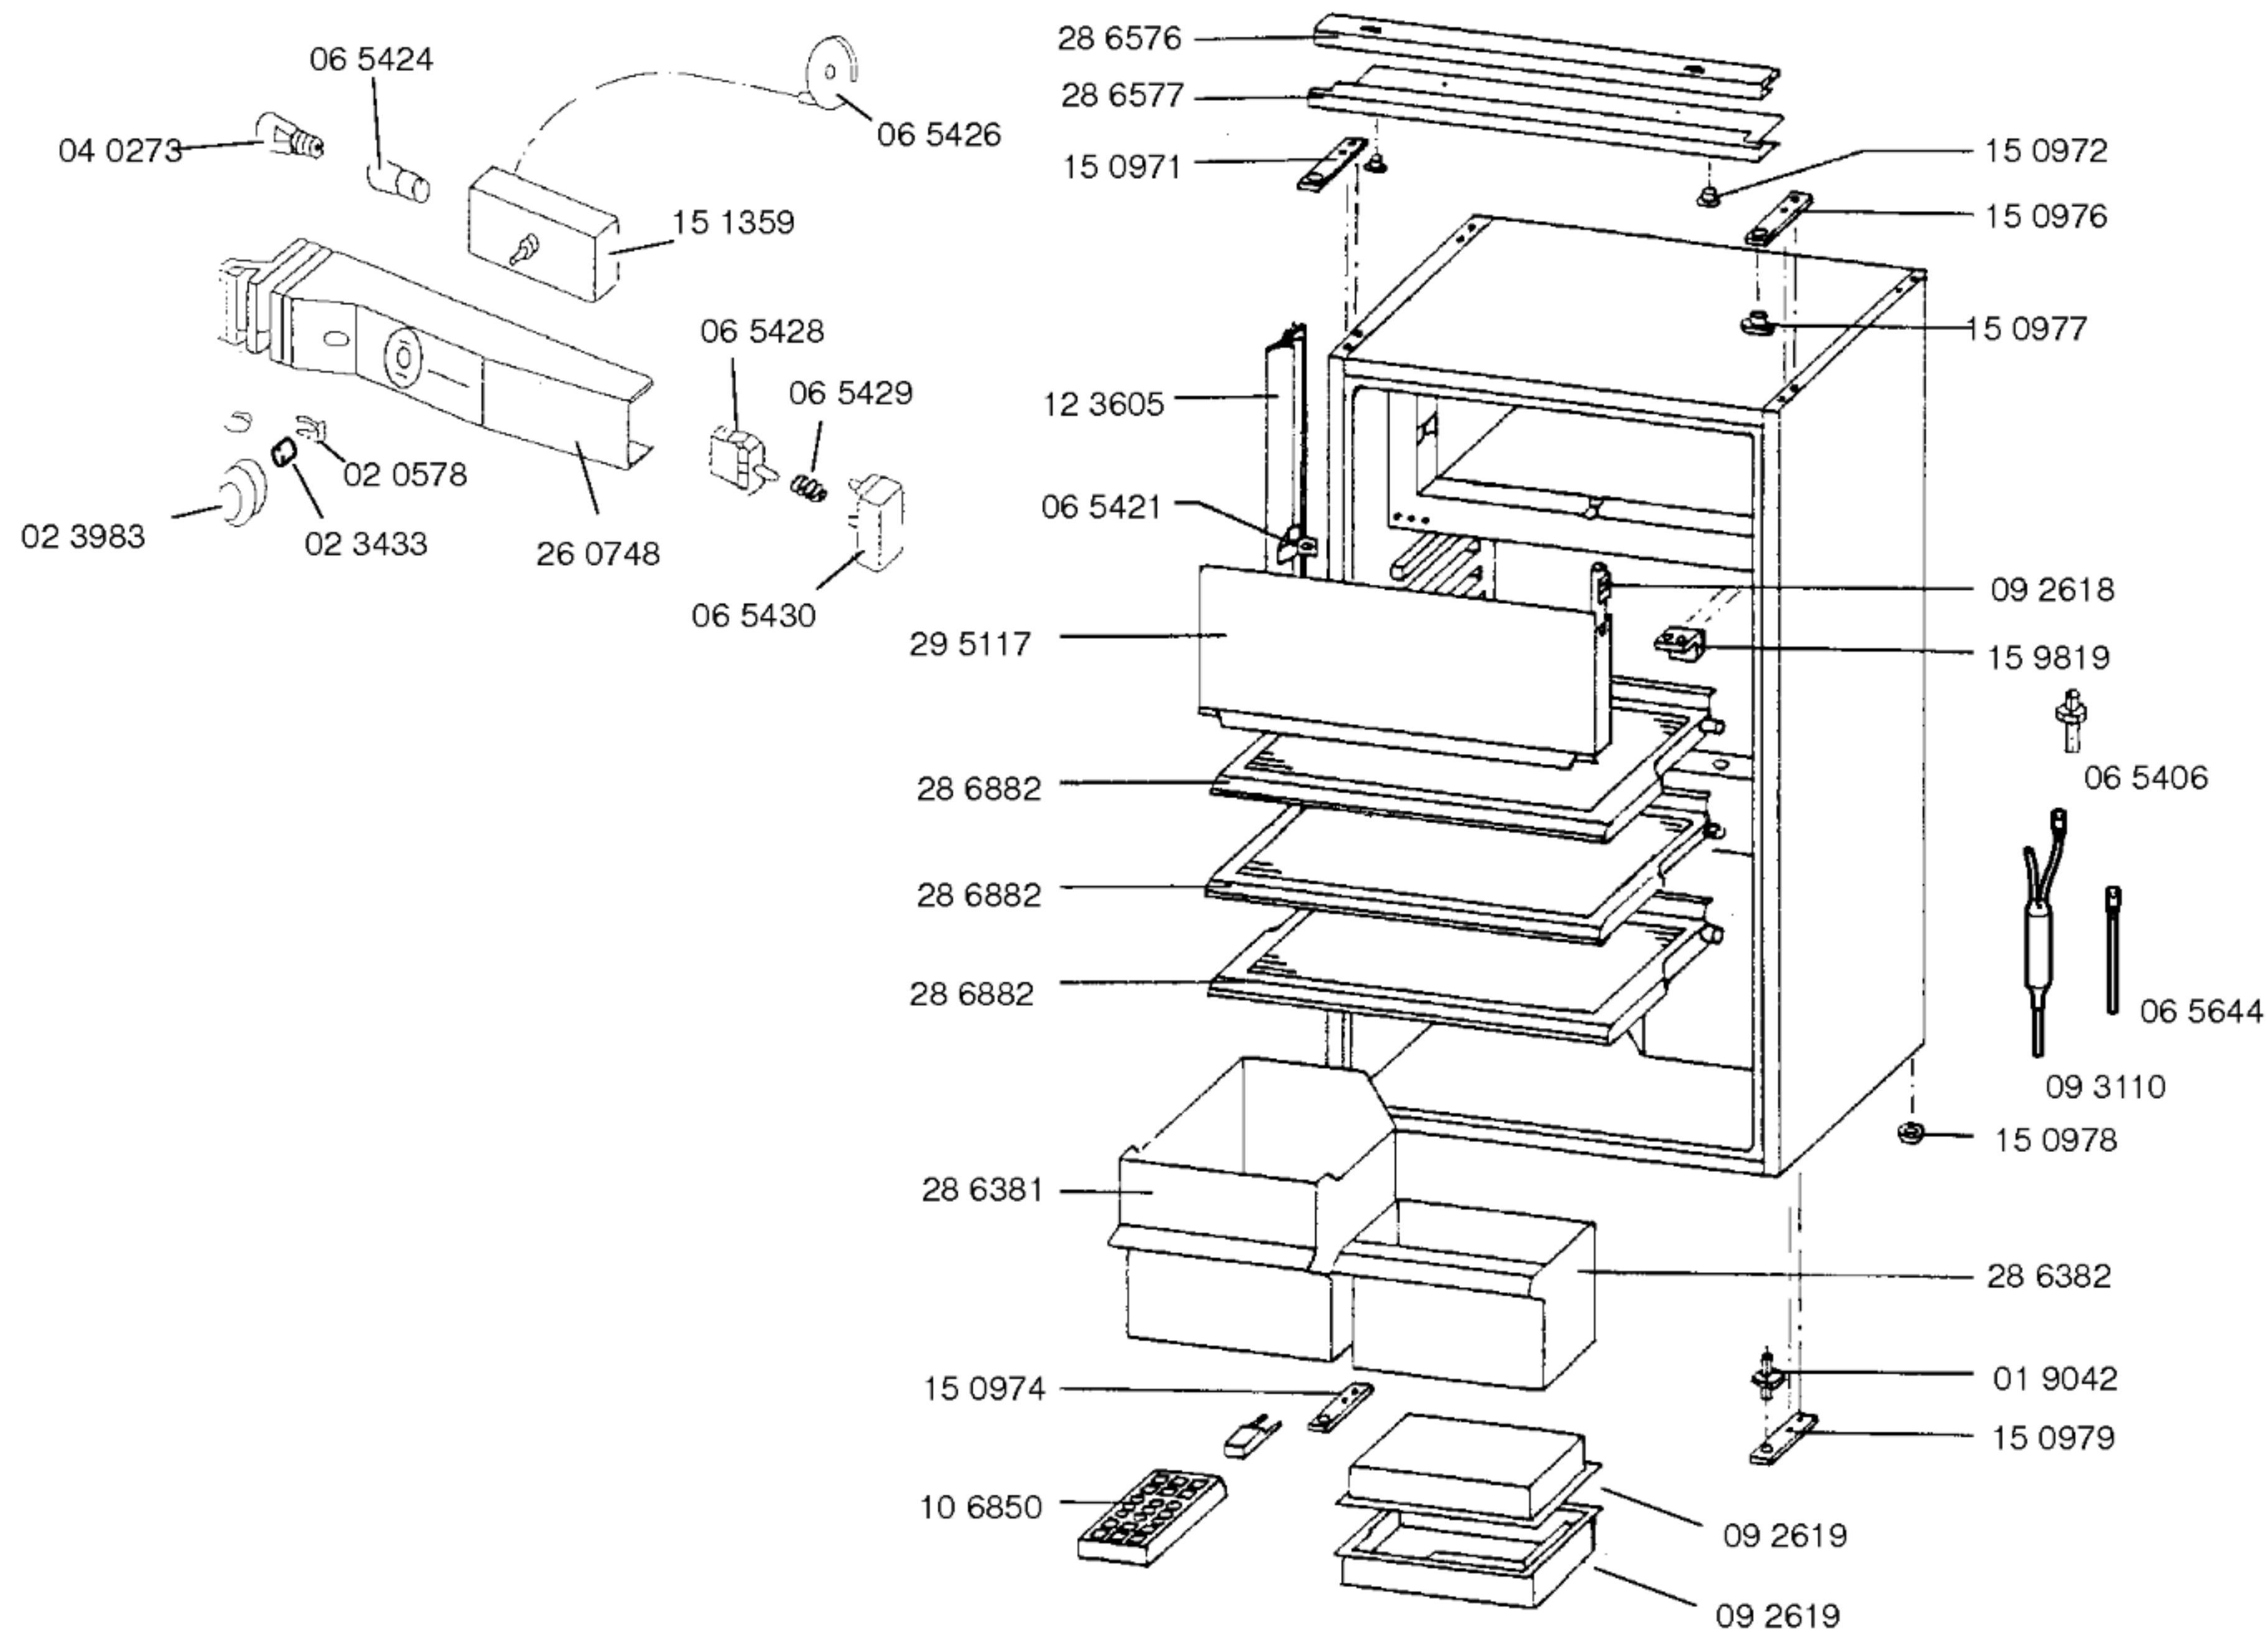

Gebrauchsanweisung
51 7274
(D,GB,F,I,E,NL)

Montageanleitung
51 7263

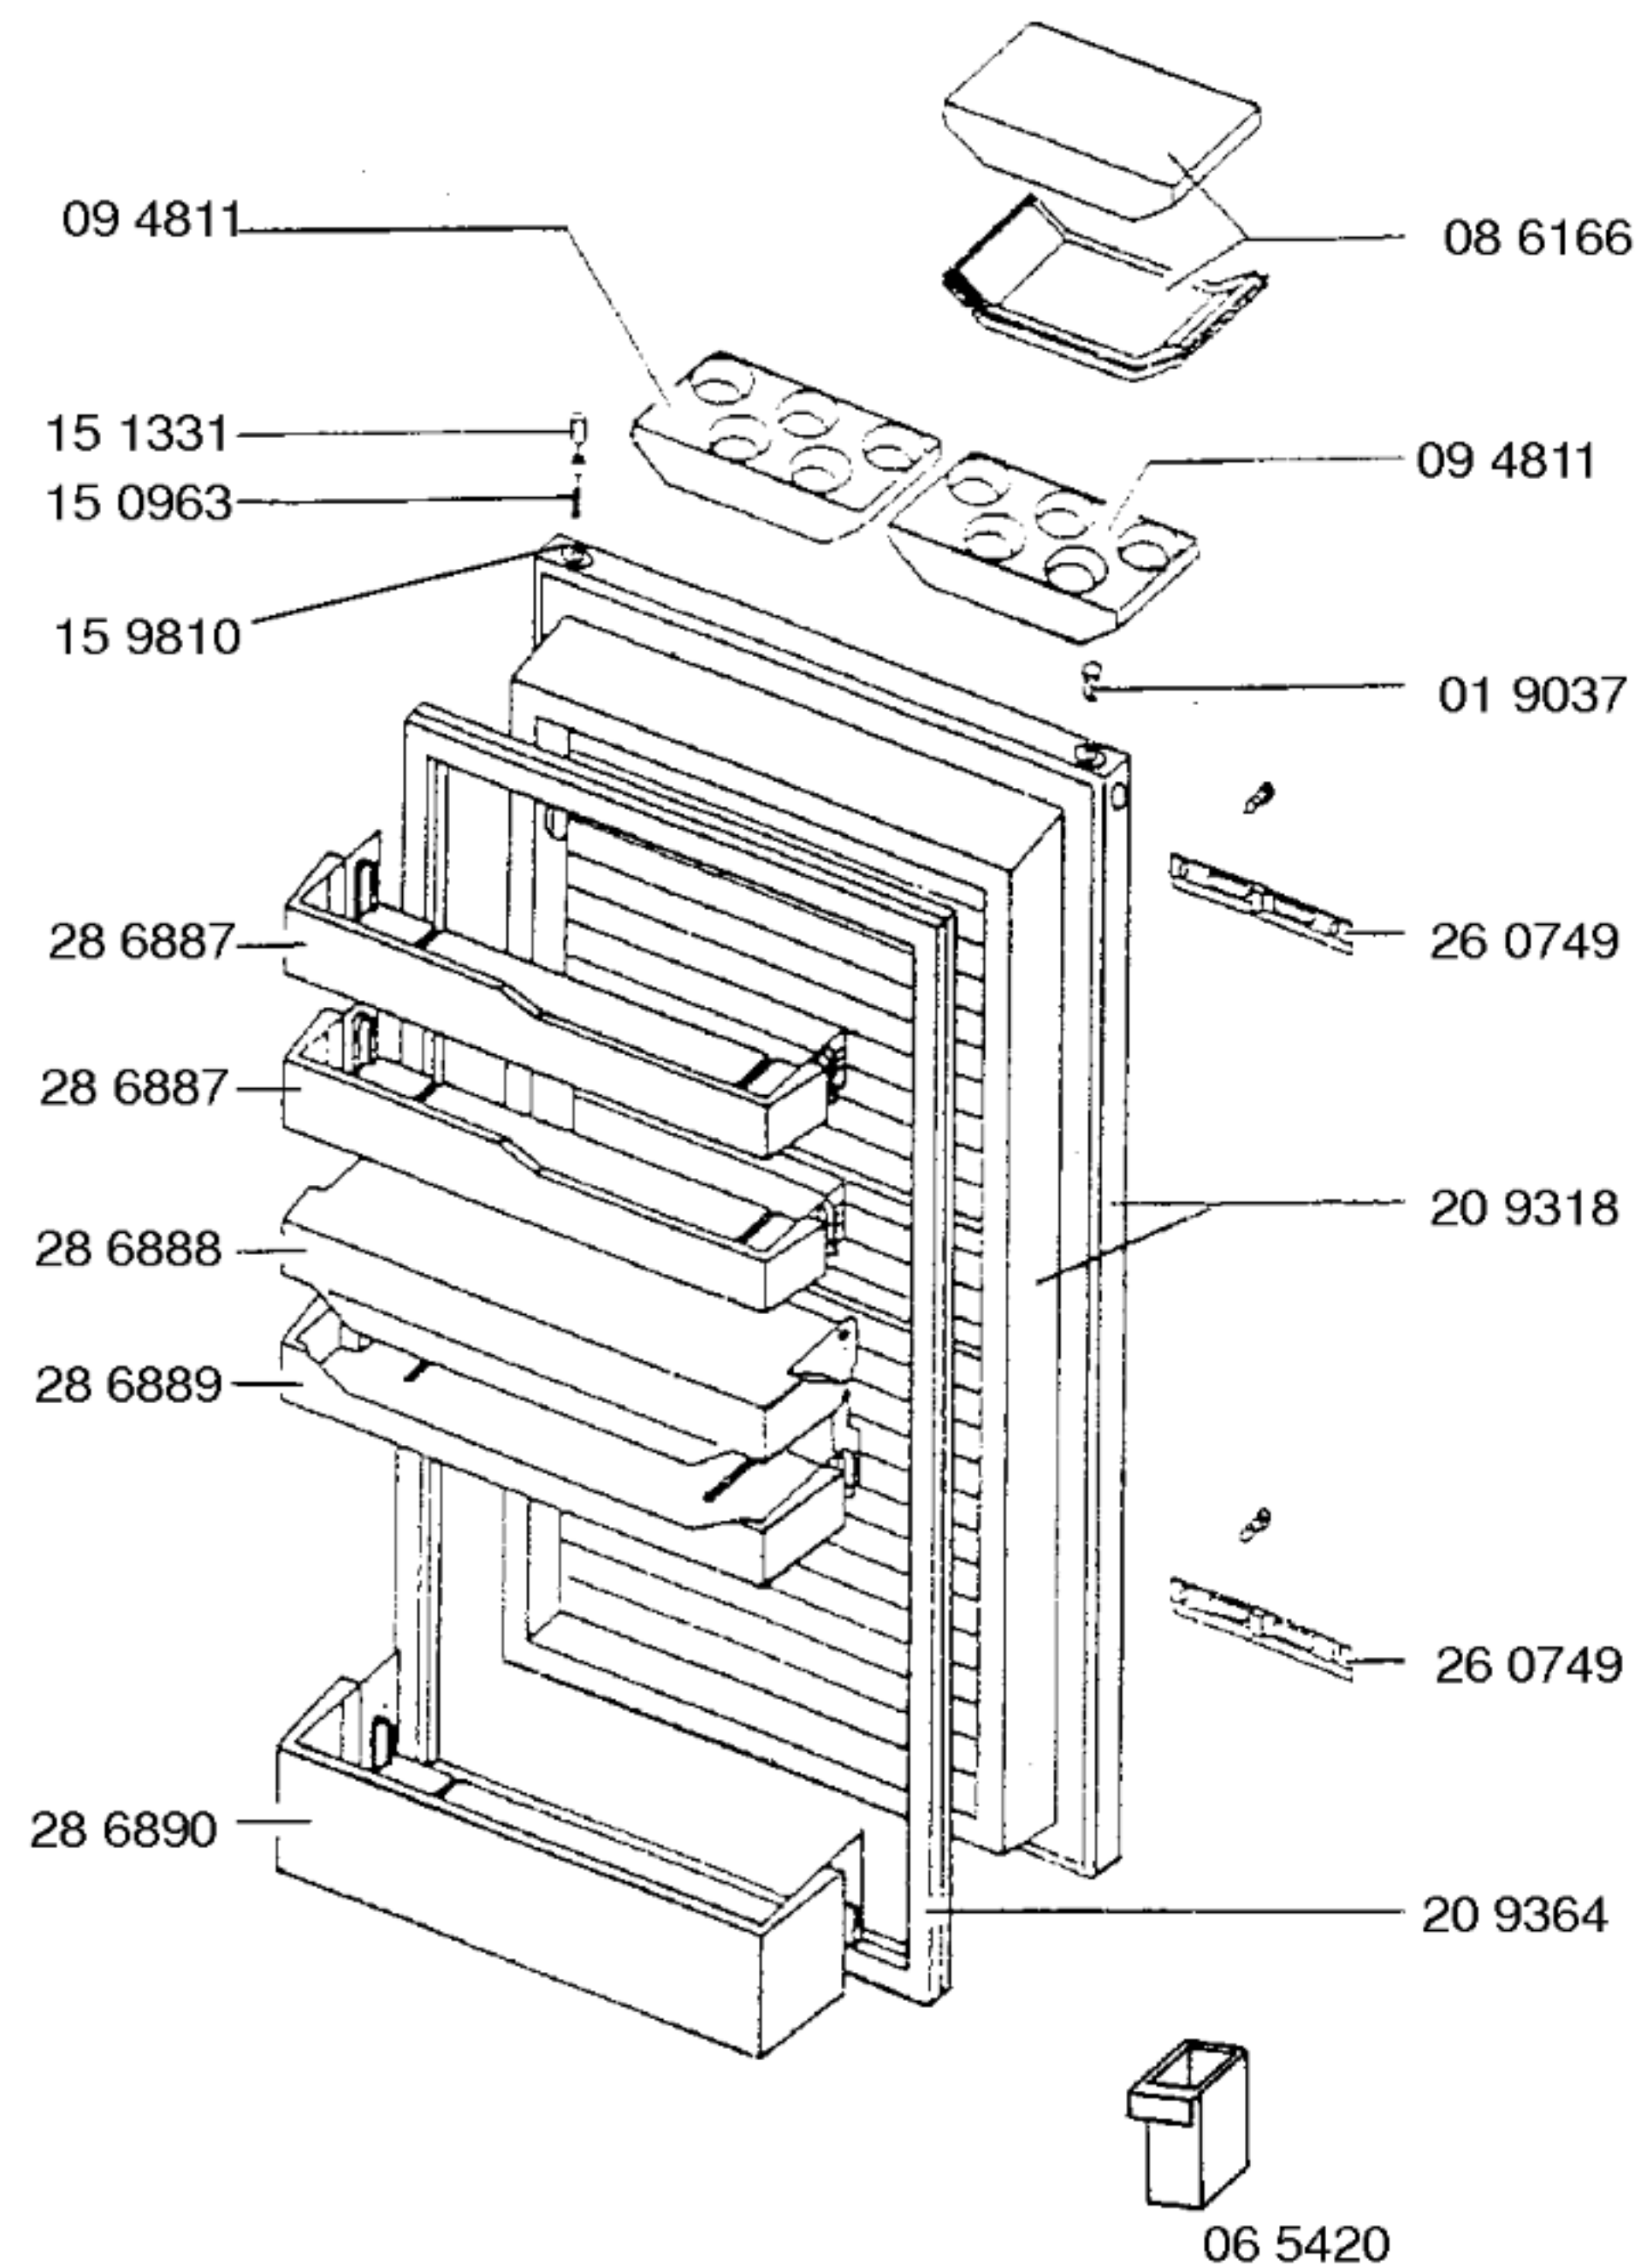

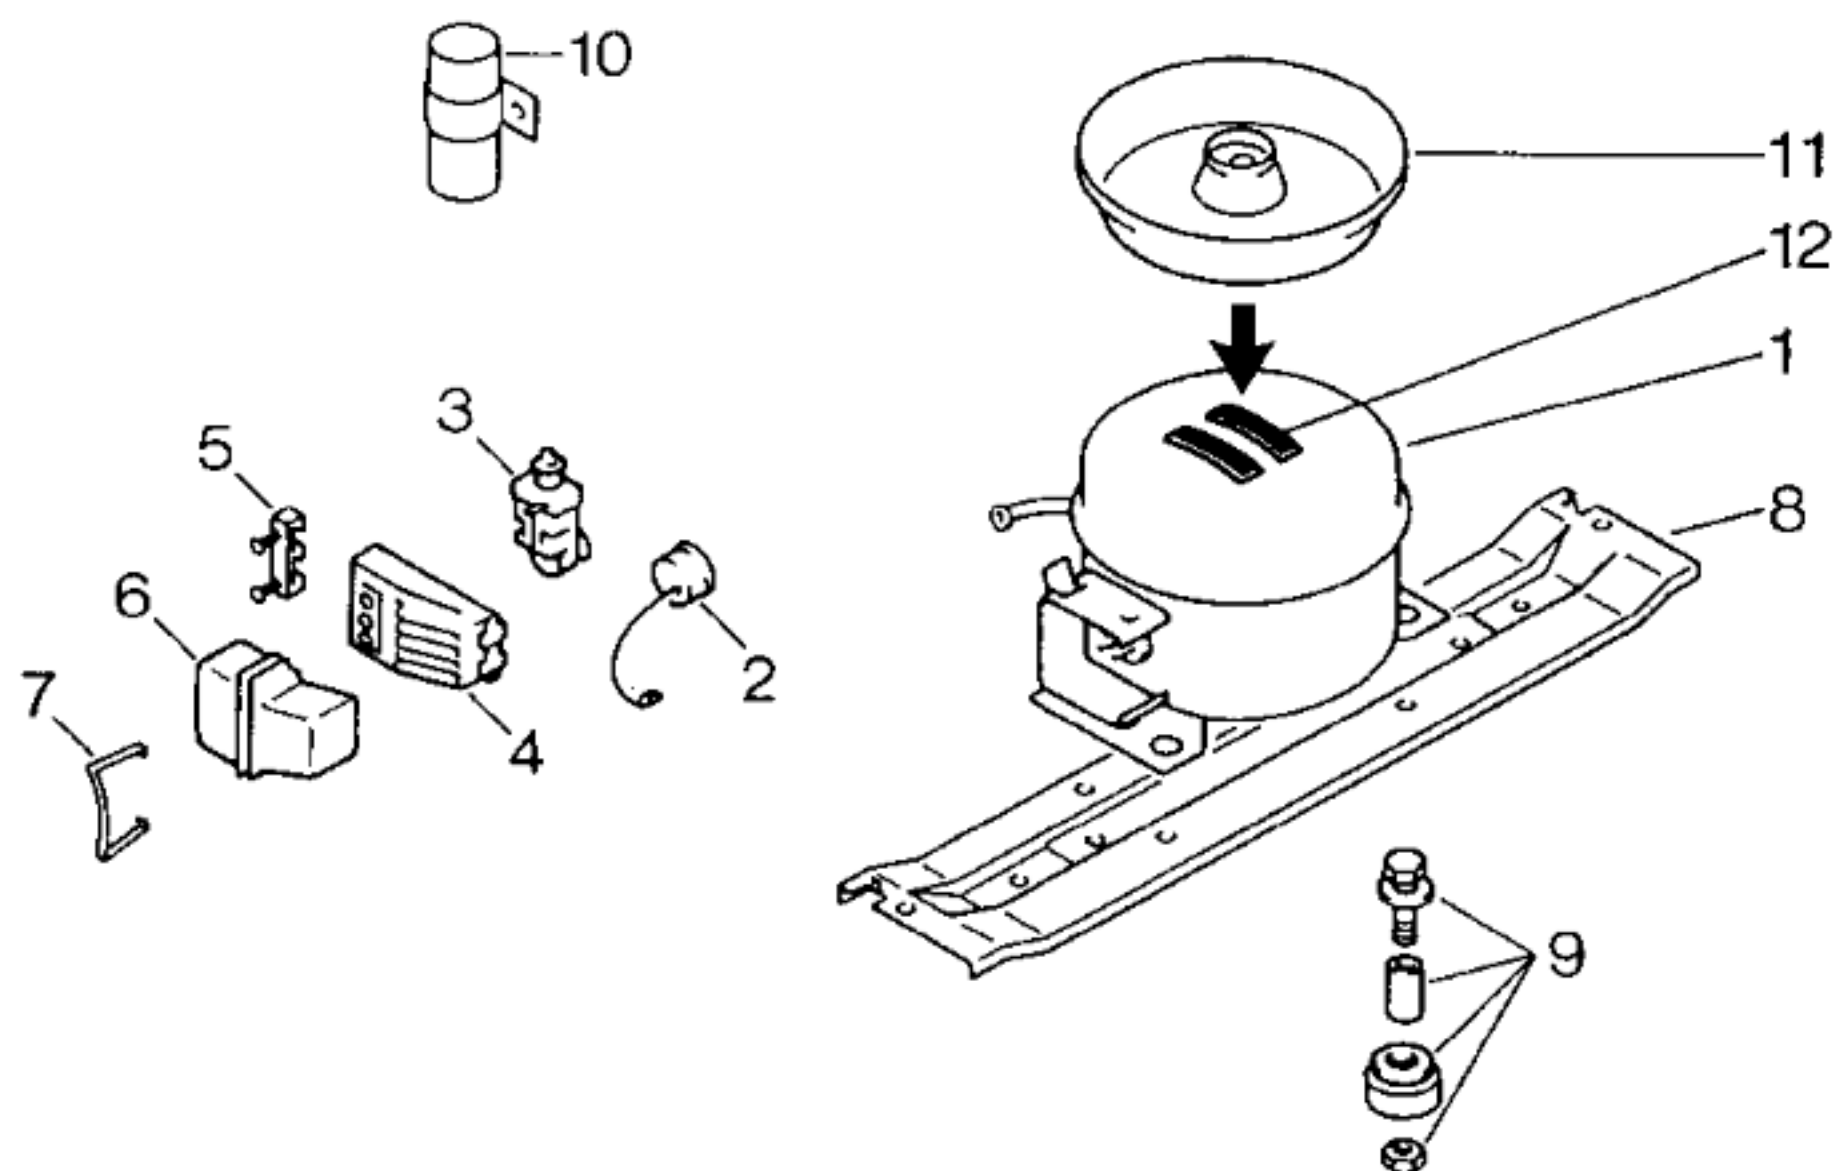

Pos.			
	Danfoss	Unidat	
	TLES 9 K	HL 90 AA	
1	14 1308		
2		15 9824	
3	15 1055	15 9823	
4		15 9821	
5	15 1053	15 9822	
6	15 1072	15 9820	
7			
8	27 0291		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 9 K		
Förderleistung/Delivery/Débit	l/h	1589		
Anlaufstrom/Starting current/Cour de démarrage	A	8,8		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	16,5		
	Hi/aux Ω	16,4		
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/	„ein“ °C	+4,5 +4,5		
Valeurs de commutation	„aus“	-31 -31		
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill.quantity/Charge	R600a	g		
Anschlußwert/Conn.load/Puiss. connectée	W	110		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			