



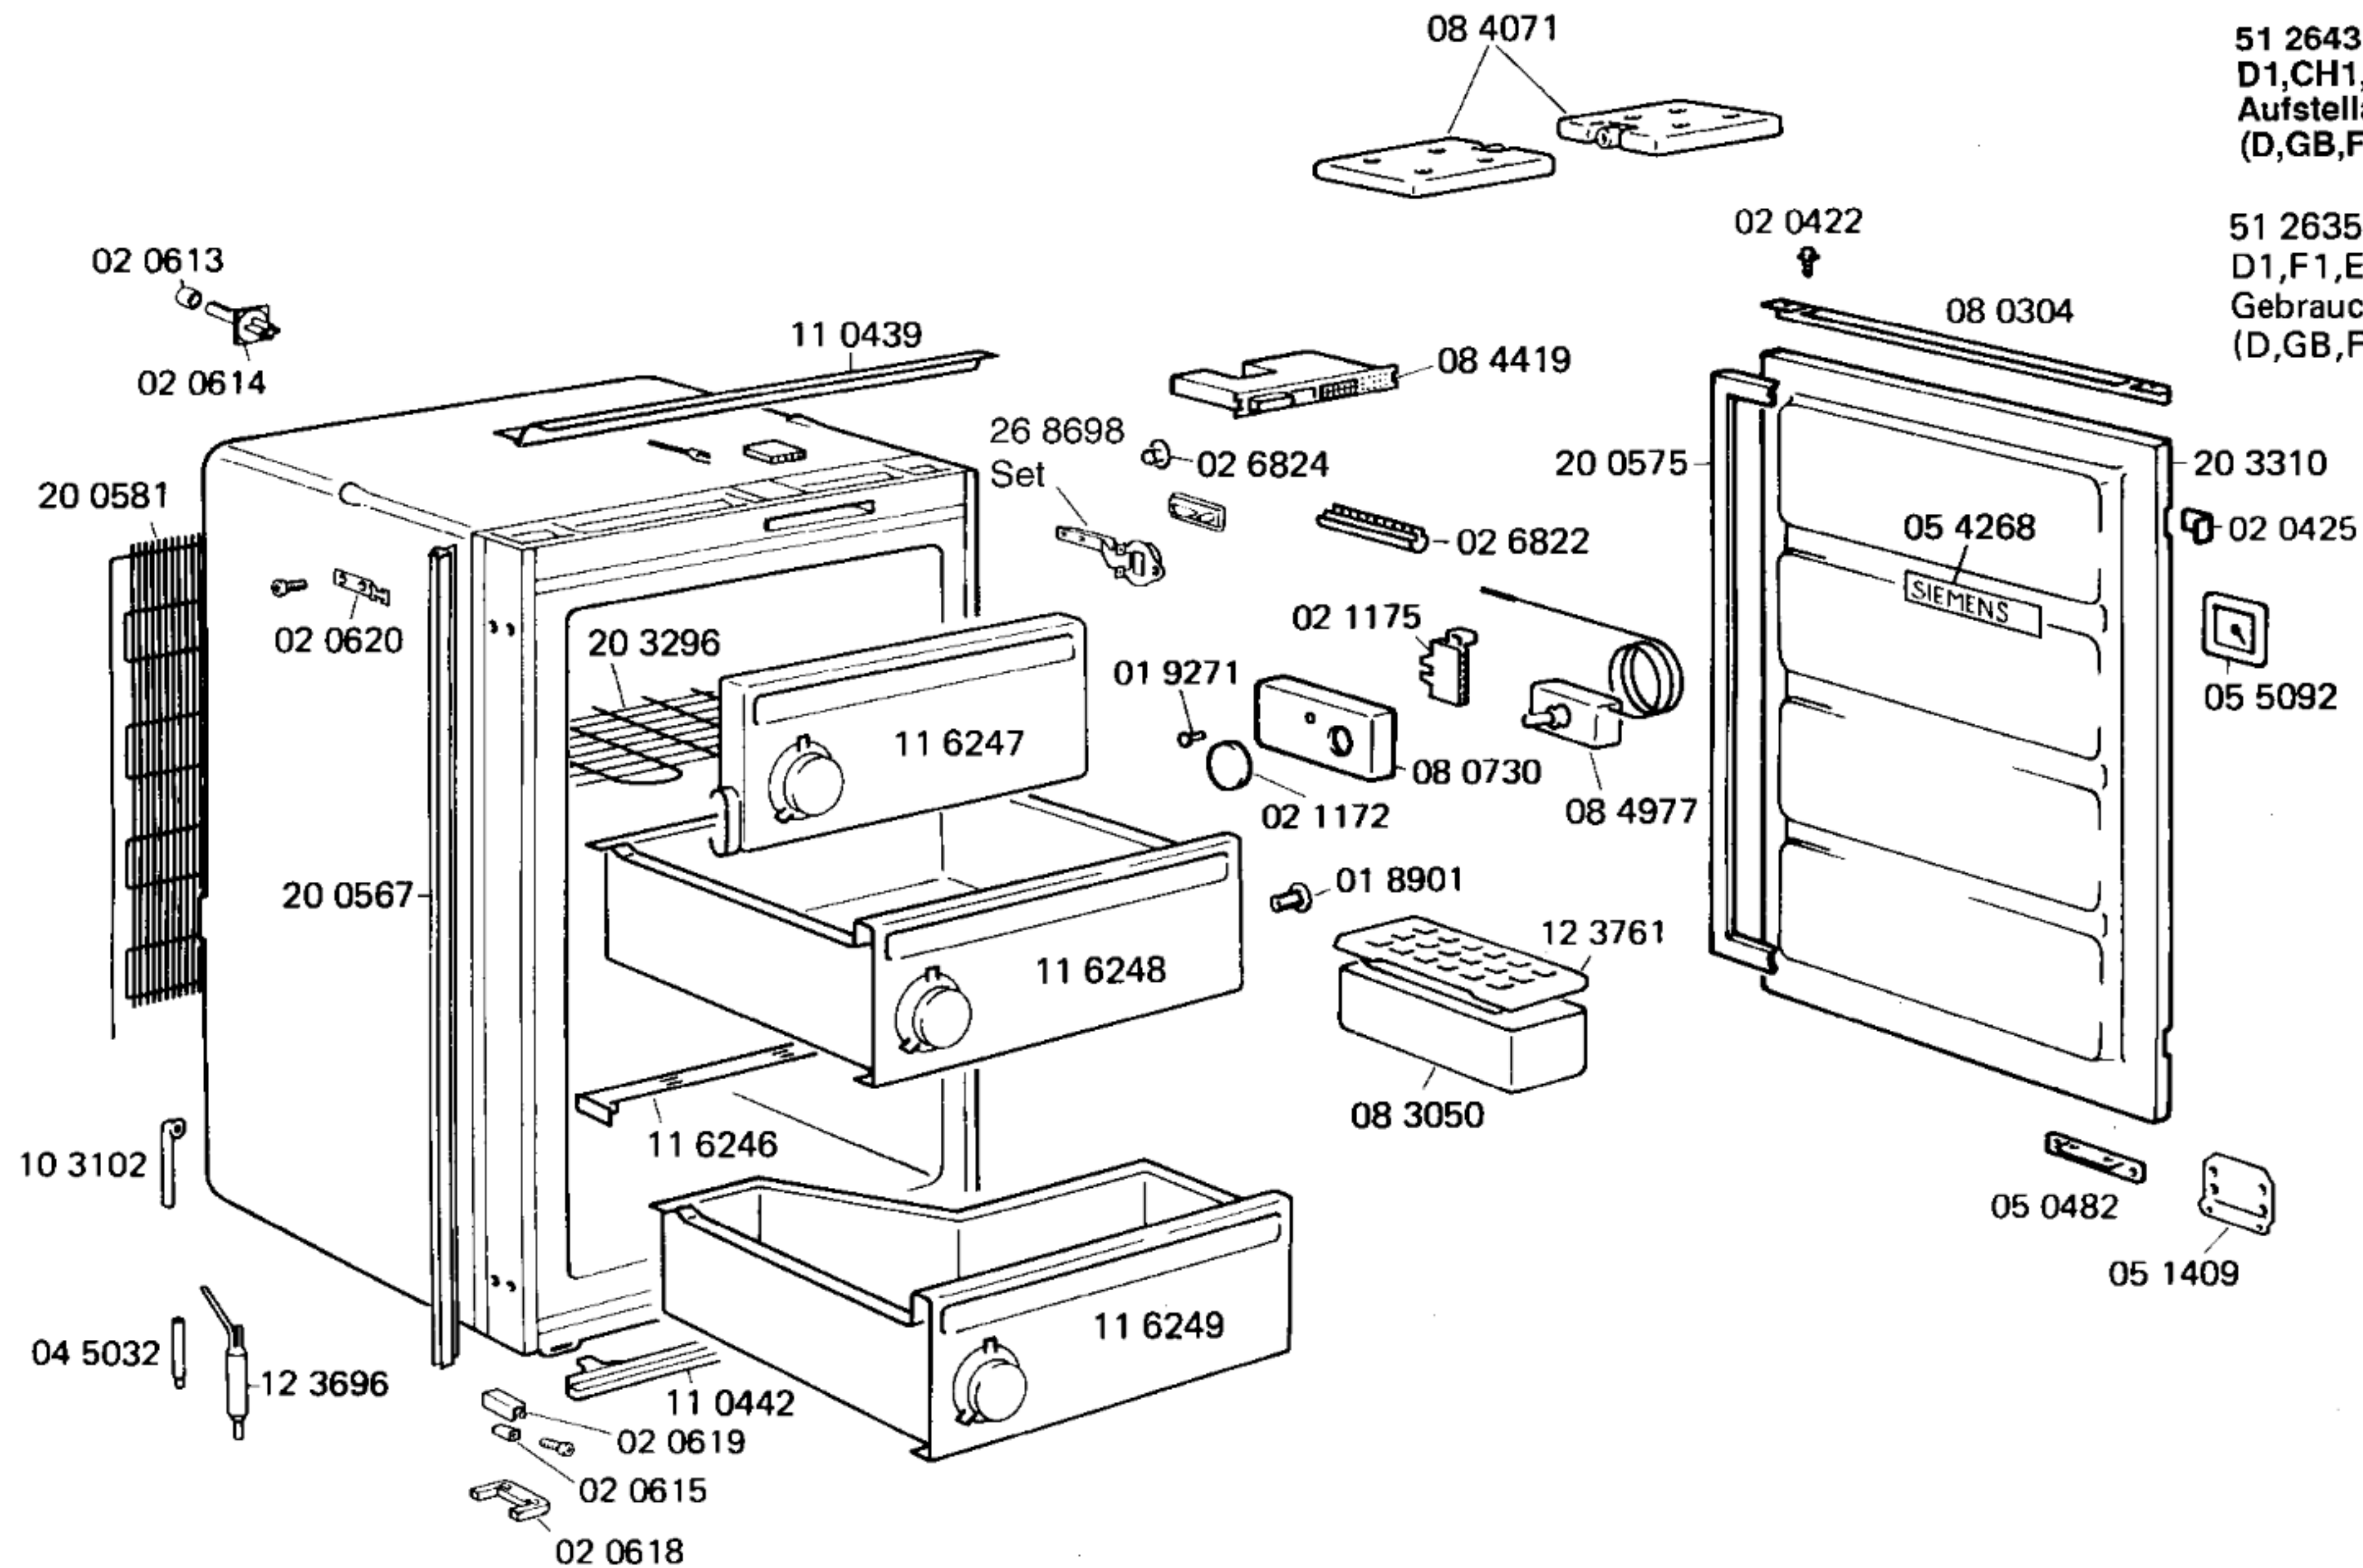

51 2643
D1,CH1,F1,E1
Aufstellanweisung
(D,GB,F,I,NL,S,E,SF,N,DK)

51 2635
D1,F1,E1,CH1
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)

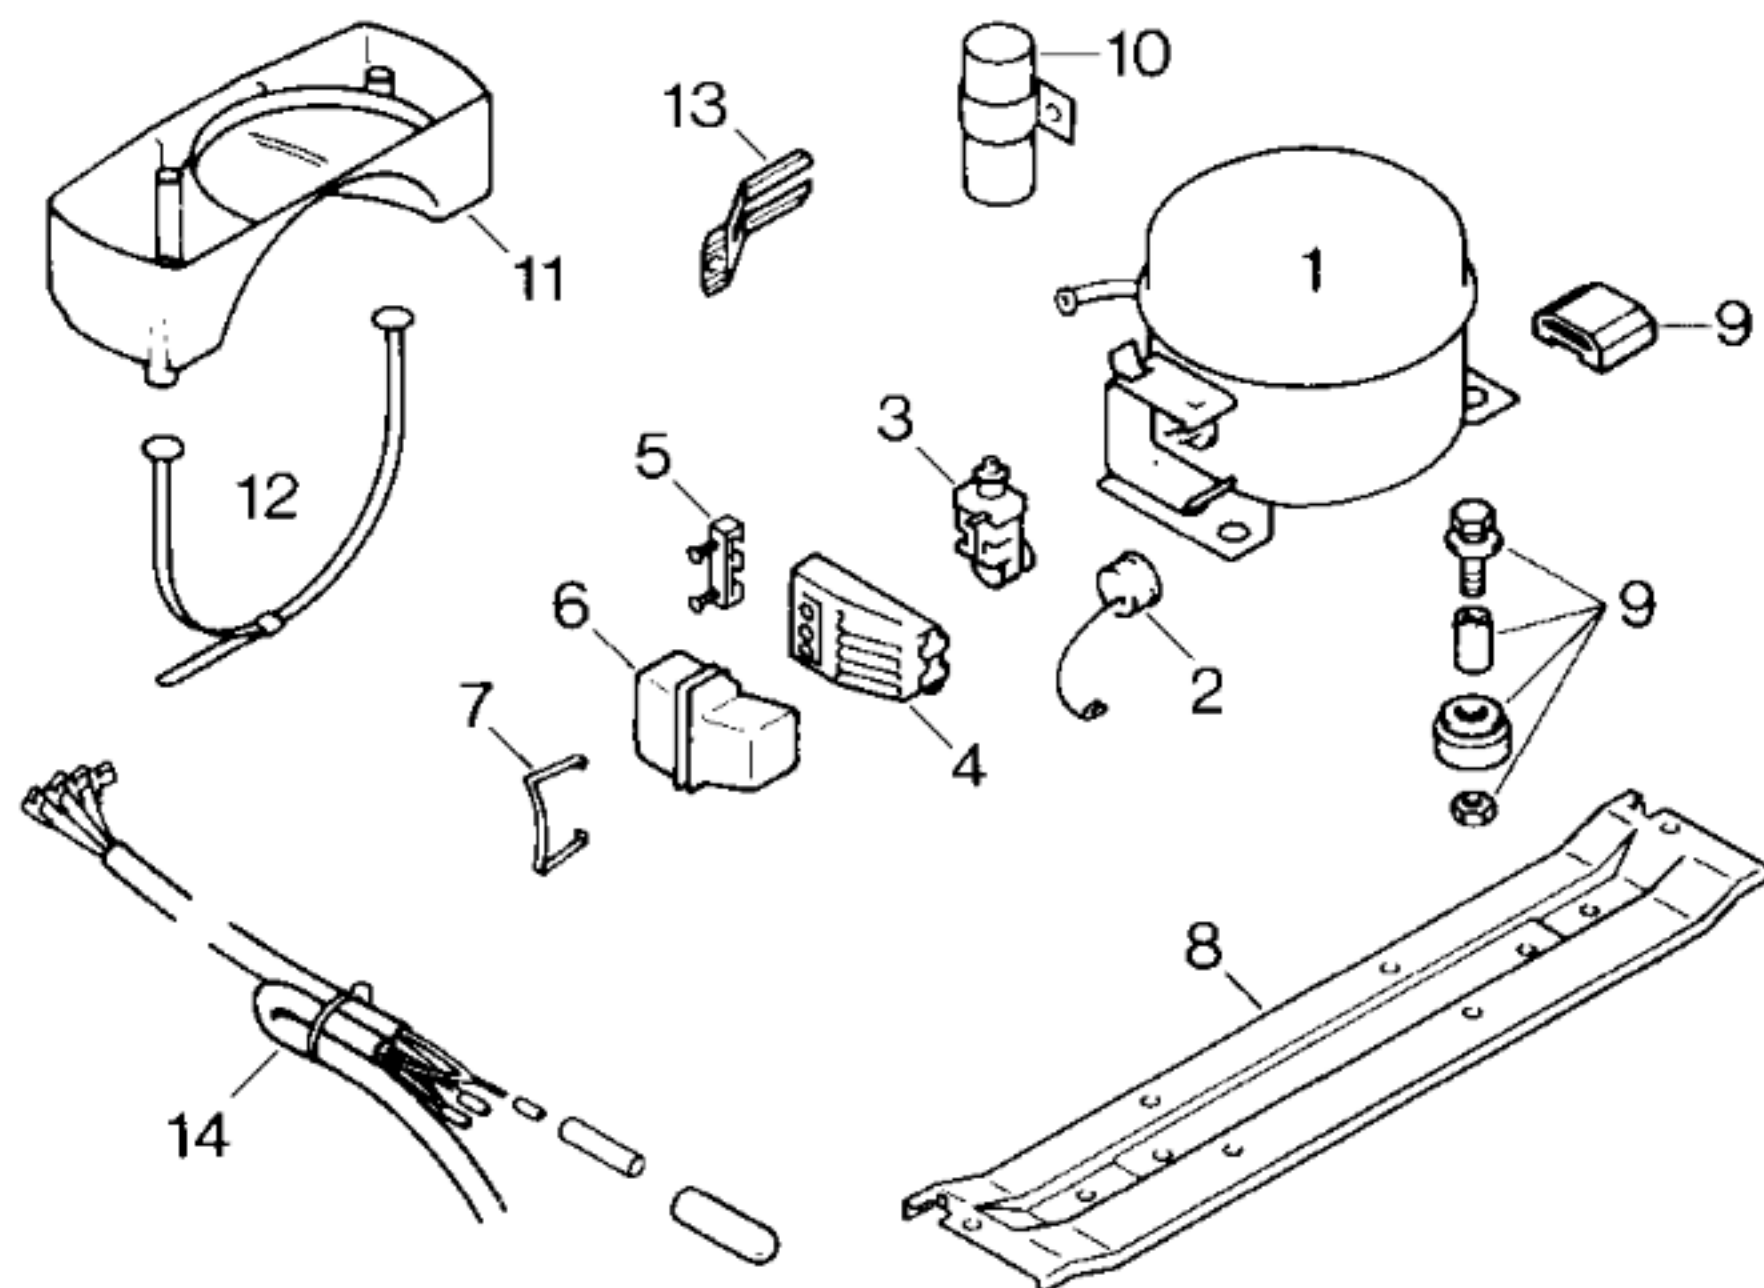

Pos.	D1,CH1,F1	E1	
	Danfoss	Danfoss	
1	13 1064	14 0065	
2			
3	02 0108	02 0108	
4			
5			
6	05 1413	05 1413	
7			
8	11 0437	11 0437	
9	05 0166	05 0166	
10			
11			
12			
13			
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss	Danfoss		
Typ/Type		TL 4 A	TL 5		
Förderleistung/Delivery/Débit		I/h	V 702	V 920	
Anlaufstrom/Starting current/Cour. de démarrage		A	7,8	9,0	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	23,8	15,7	
		Hi/aux Ω	19,7	18,8	
Temp.-Regler/Thermostat		M & J			
Typ/Type		TF 57 SF 2			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	- 24 - 16		
Valeurs de commutation		„aus“	- 34 - 24		
		(„abtauen“ od.) „alarm“	- 19 - 12		
Füllmenge/Fill.quantity/Charge		R12 g	150		
Anschlußwert/Conn.load/Puiss. connectée		W	110		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			