



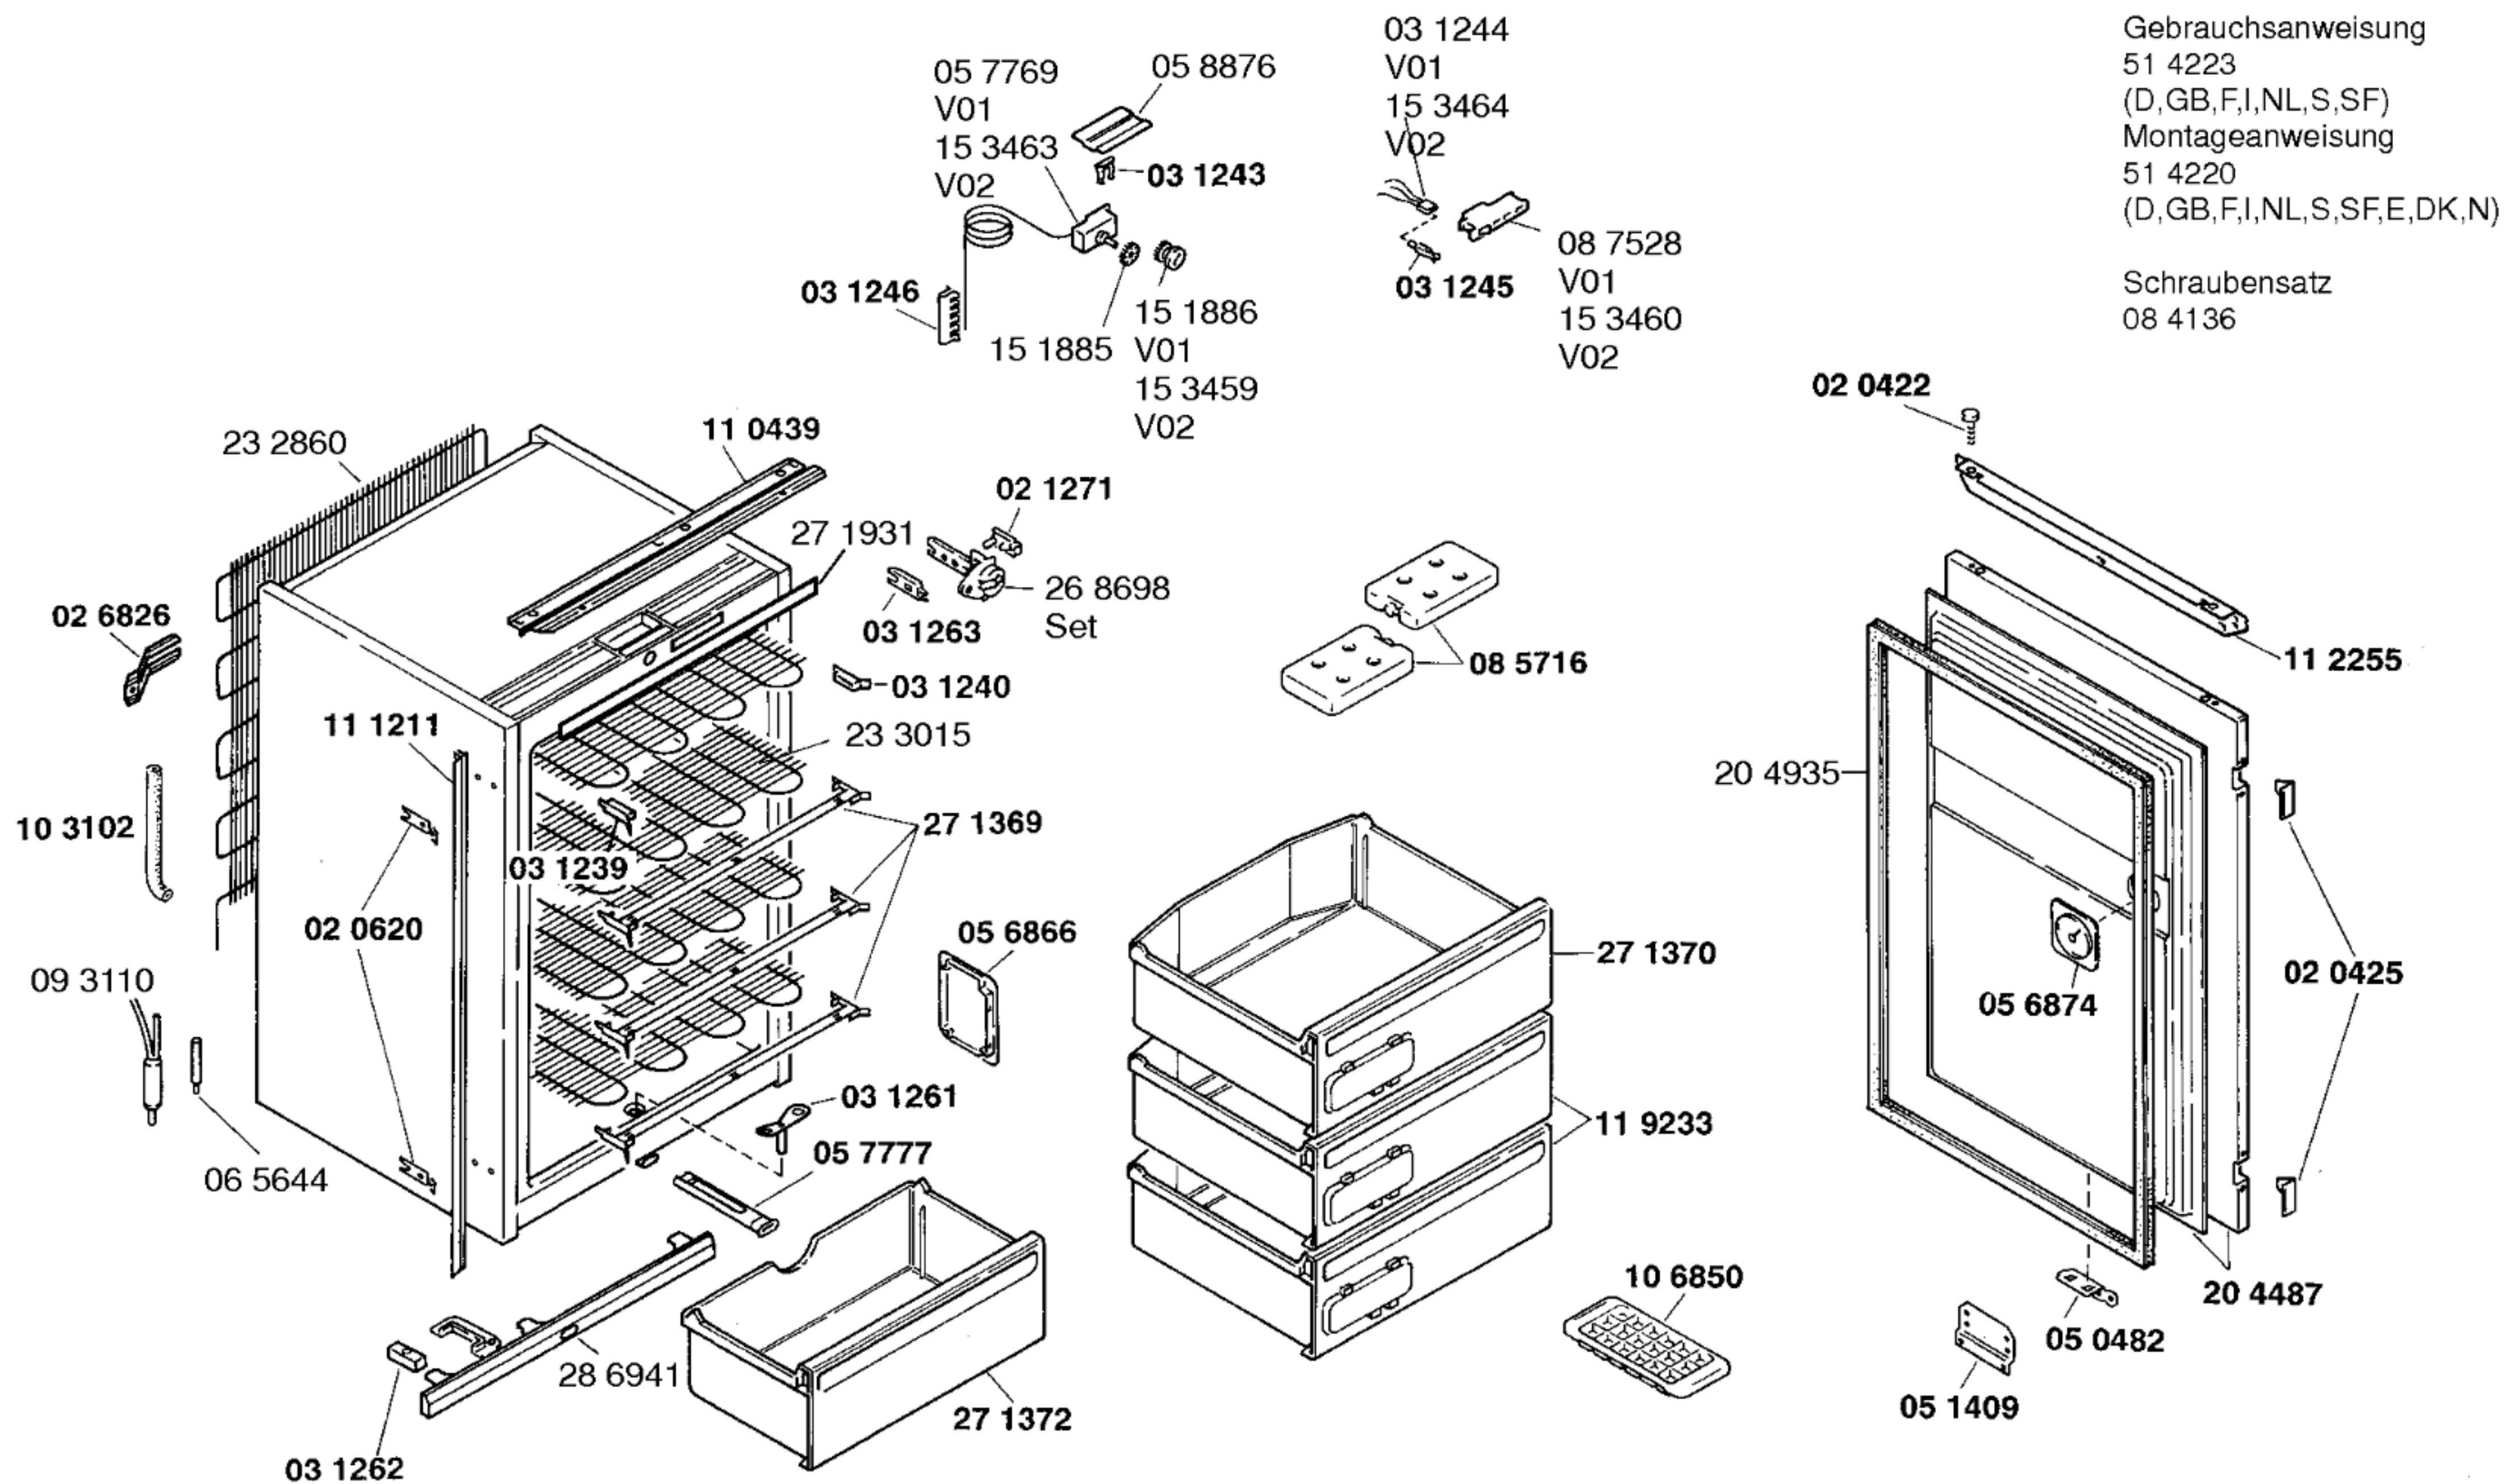

Gebrauchsanweisung
51 4223
(D,GB,F,I,NL,S,SF)
Montageanweisung
51 4220
(D,GB,F,I,NL,S,SF,E,DK,N)

Schraubensatz
08 4136

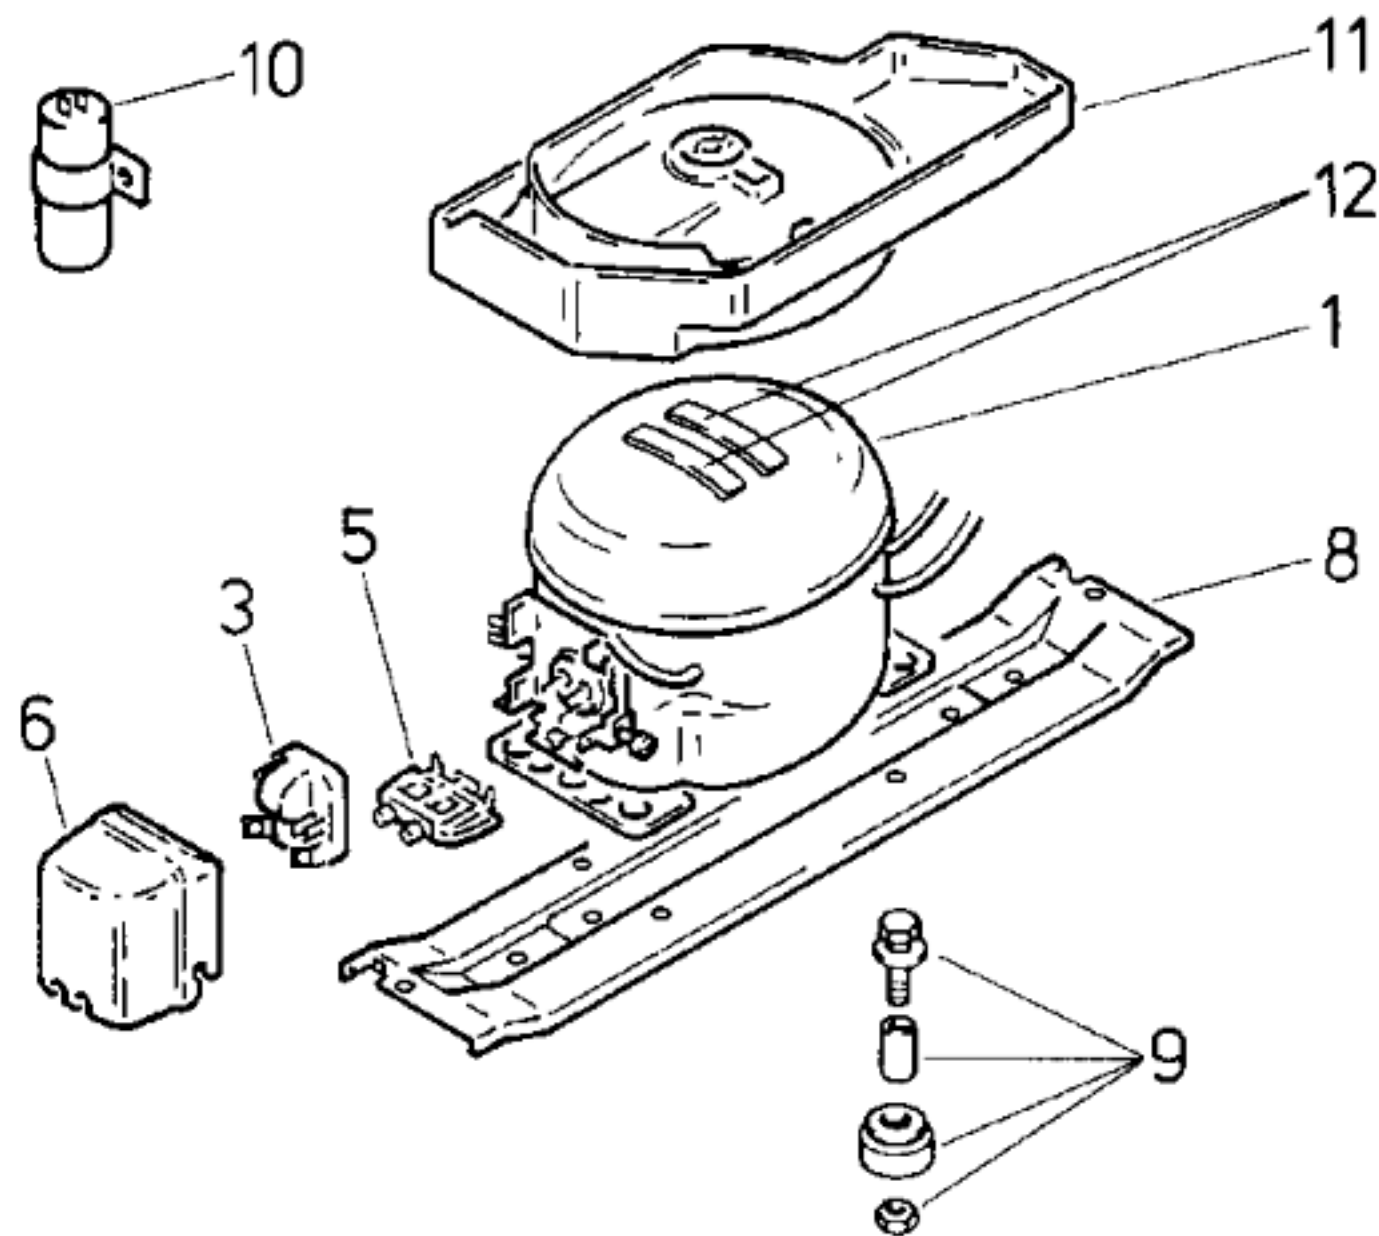

Pos.			
	Danfoss		
	TLES 7 K		
1	14 1239		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 1375		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES						
Verdichter/Compressor/Compresseur			Danfoss			
Typ/Type			TLES 7 K			
Förderleistung/Delivery/Débit			I/h	1168		
Anlaufstrom/Starting current/Cour de démarrage			A	4,5		
Widerstand/Resistance/Résistance			Ha/main/prin.	Ω	16,5	
			Hi/aux	Ω	16,9	
Temp.-Regler/Thermostat			WHF		Danfoss	
Typ/Type			TF 57 SF2		077b2192	
Reglerstellung/Position			kalt	warm	kalt	warm
Schaltwerte/Switching values/			„ein“	°C	-25	-17
Valeurs de commutation			„aus“		-33	-23
(„abtauen“ od.)			„alarm“		-19,5	-13
Füllmenge/Fill.quantity/Charge			R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée			W	79		
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance			Ω			
Leistung/Power/Puissance			W			
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance			Ω			
Schaltuhr/Timer/Minuterie de contact						
Widerstand/Resistance/Résistance			Ω			
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance			Ω			
Spannung/Voltage/Tension			V			

* siehe Typenschild