


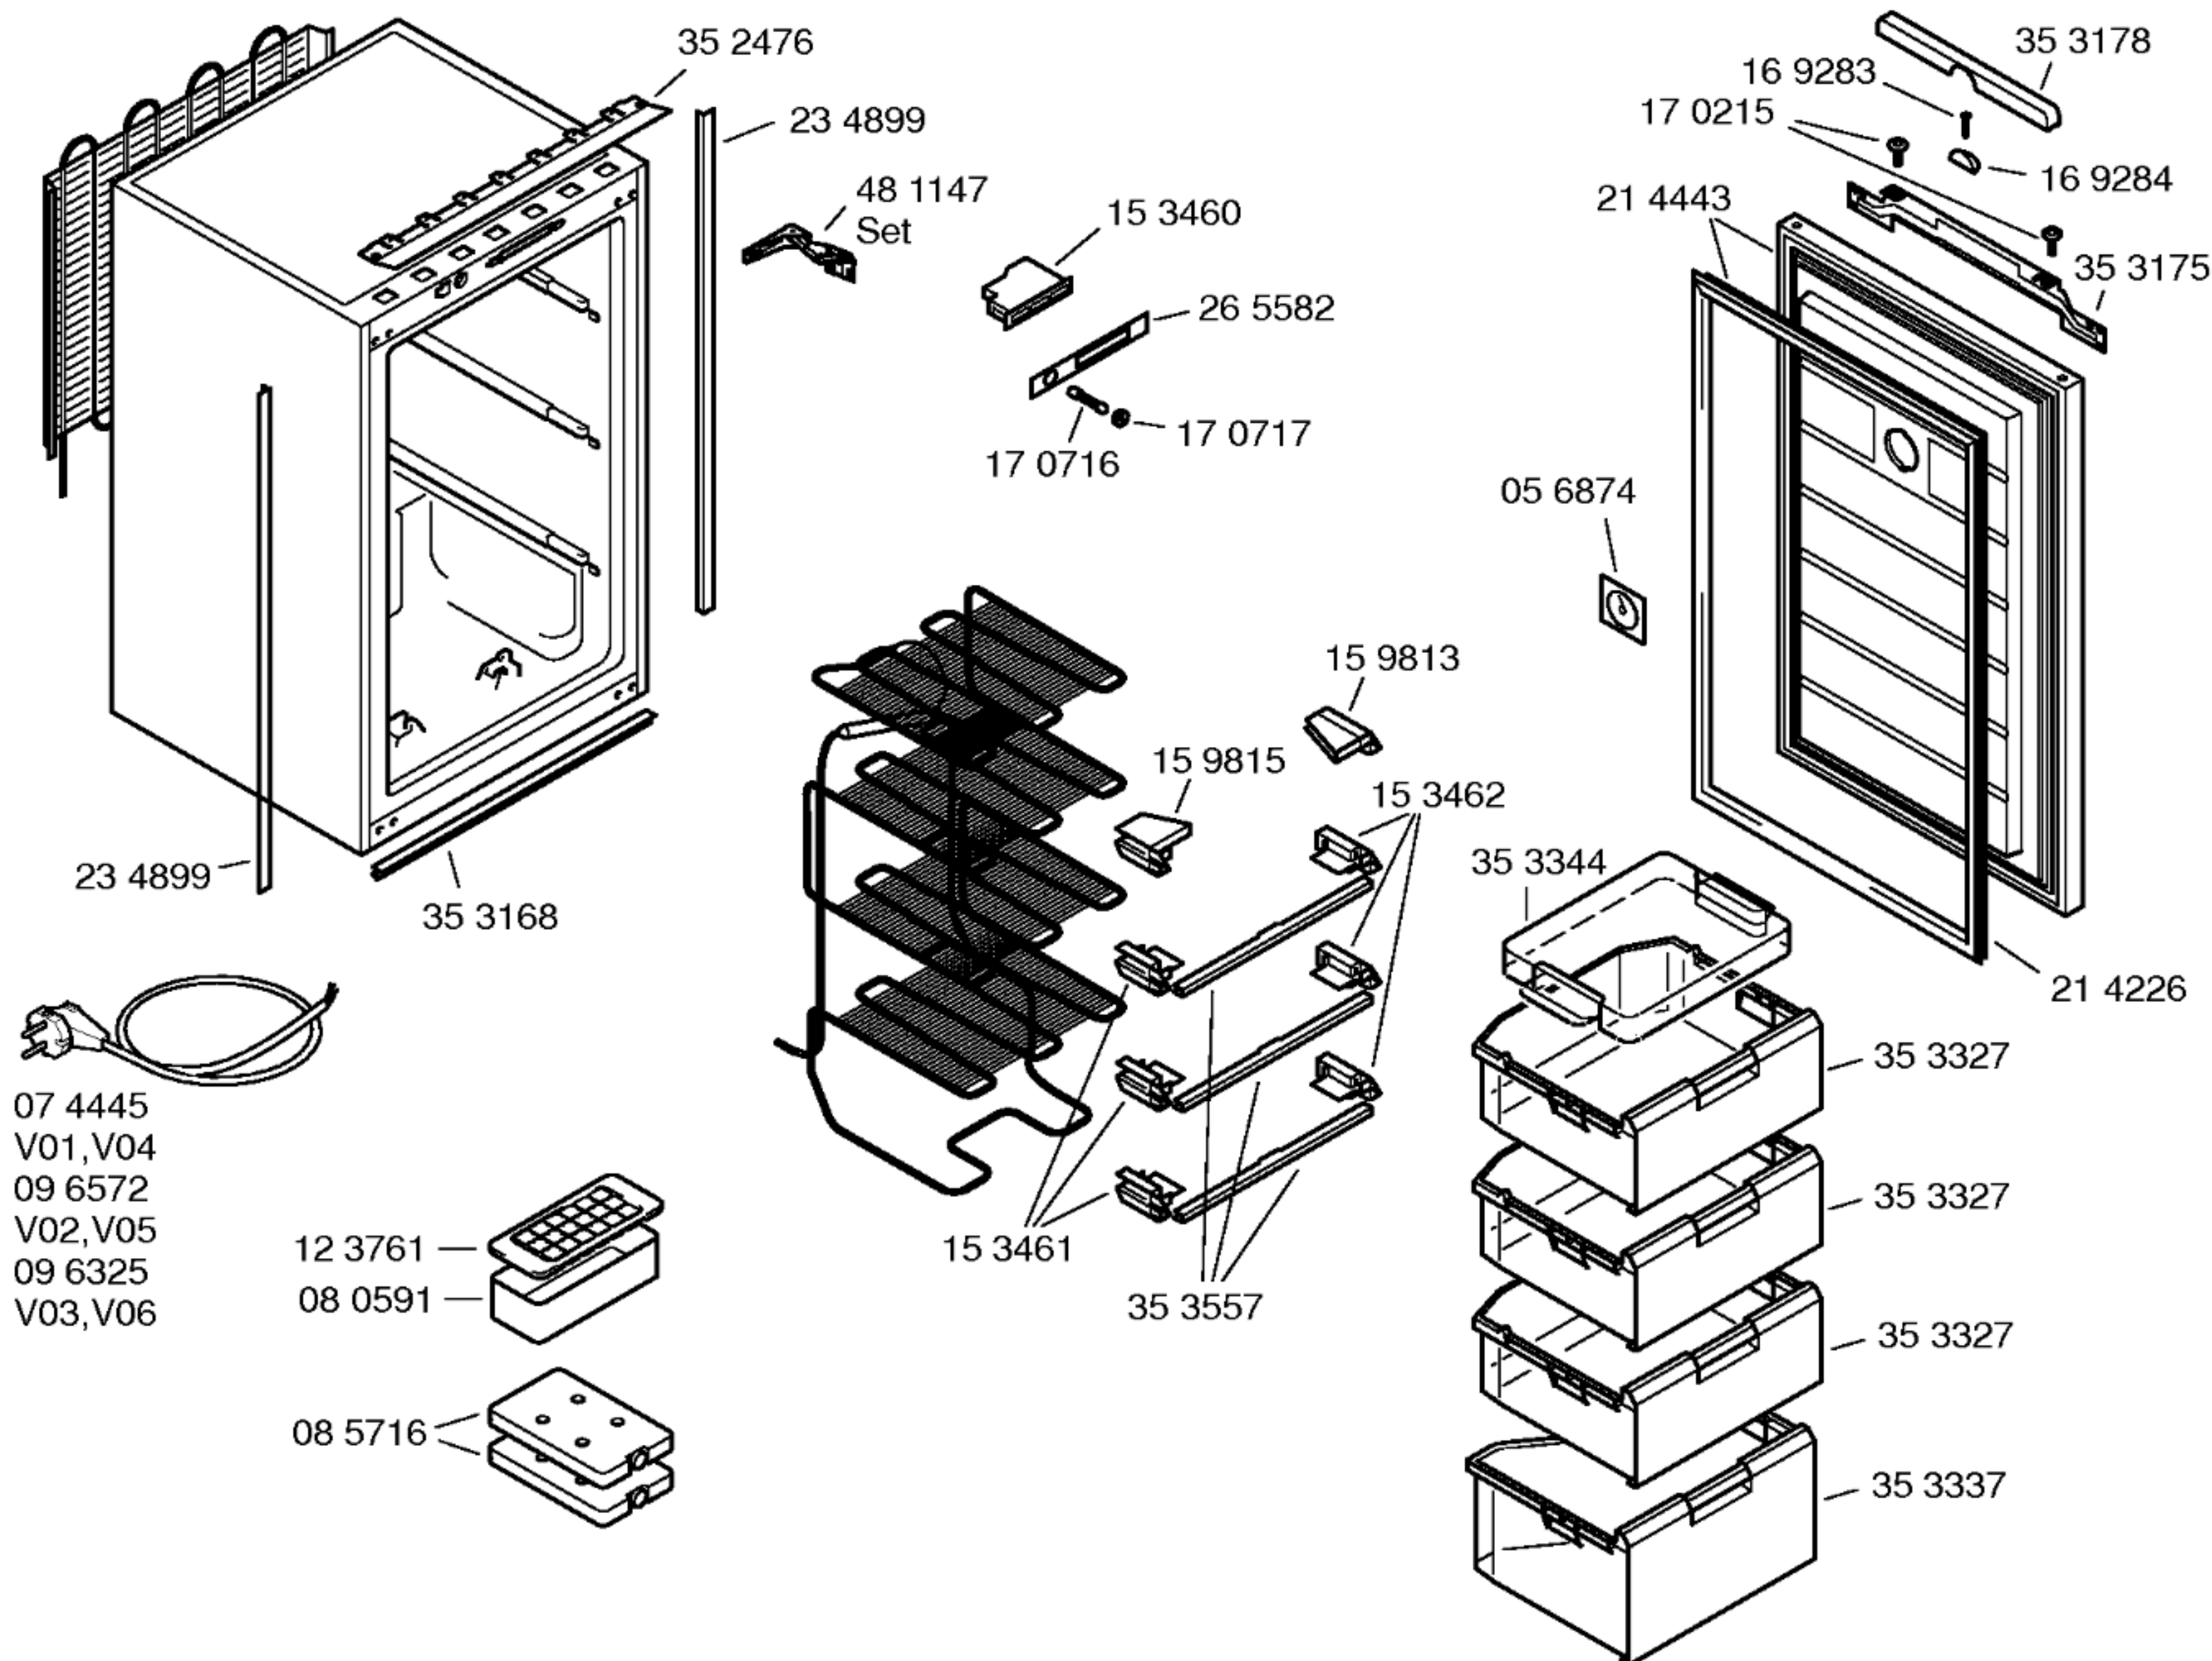


Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 2706
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5162

Temp.–Regler
Rep.–Satz
26 5271

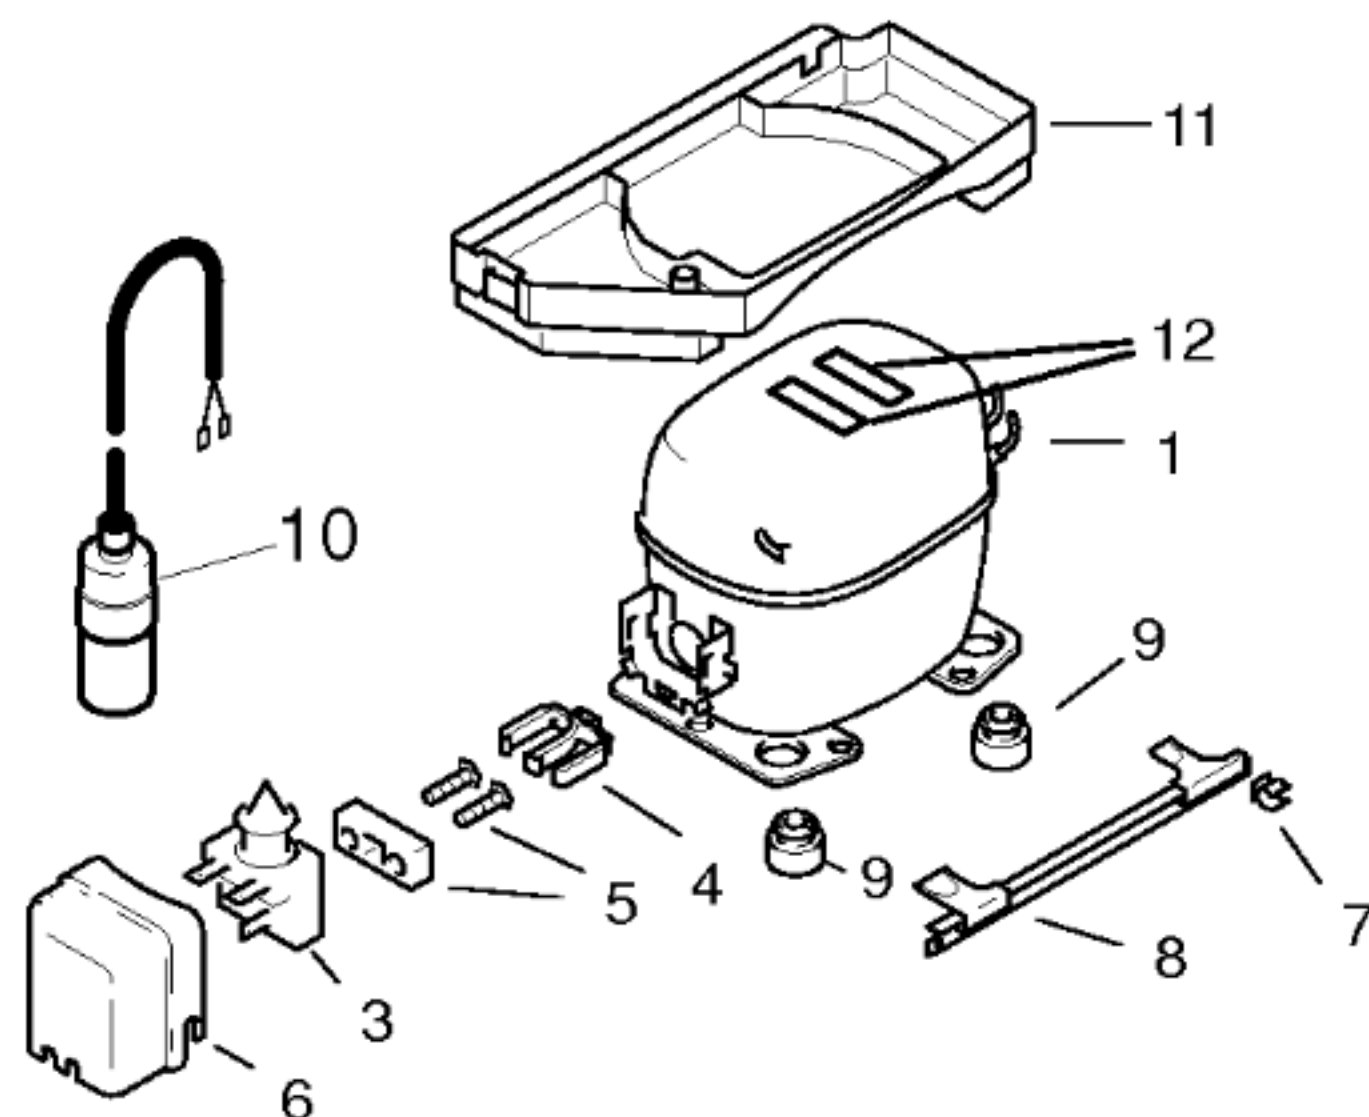

	V01–V03	V04–V06	
Pos.	Danfoss	Aspera	
	TLY8K	EMT 40 CLP	
1	14 1657	14 1839	
2			
3	15 1055	17 1315	
4	15 1053		
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852		
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Danfoss	Aspera	
Typ/Type	TLY8K	EMT 40 CLP	
Förderleistung/Delivery/Débit	l/h	1404	1384
Anlaufstrom/Starting current/Cour de démarrage	A	6,4	4,4
Widerstand/Resistance/Résistance Ha/main/prin	Ω	21,6	23,0
Hi/aux	Ω	26,0	23,0

Temp.–Regler/Thermostat	KER		
Typ/Type	RCO		
Regelstellung/Position	kalt	warm	
Schaltwerte/Switching values	ein"	–23,0	–15,0
Valeurs de commutation	aus"	–31,0	–21,0
	"alarm"		

Füllmenge/Fill.quantity/Charge	R600a	*	
--------------------------------	-------	---	--

Anschlußwert/Conn.load/Puiss. connectée	W	90	88
---	---	----	----

Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		

Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		

Temp.–Regler/Thermostat			
-------------------------	--	--	--

Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		