



07 4445
V01,V03,V04,V06
09 6572
V02,V05,V07

05 7769
V01-V03,V06,V07
15 3463
V04,V05

05 8876

03 1243

03 1244
V01-V03,V06,V07
15 3467
V04,V05

06 9059
V01-V03,V06,V07

03 1245


08 7528
V01-V03,V06,V07
15 3460
V04,V05


03 1246

15 1885
15 1886
V01-V03,V06,V07
15 3459
V04,V05

Gebrauchsanweisung
51 4222
(D,GB,F,I,NL,S,SF)
Montageanweisung
51 4220
(D,GB,F,I,NL,S,SF,E,DK,N)

Schraubensatz
08 4136

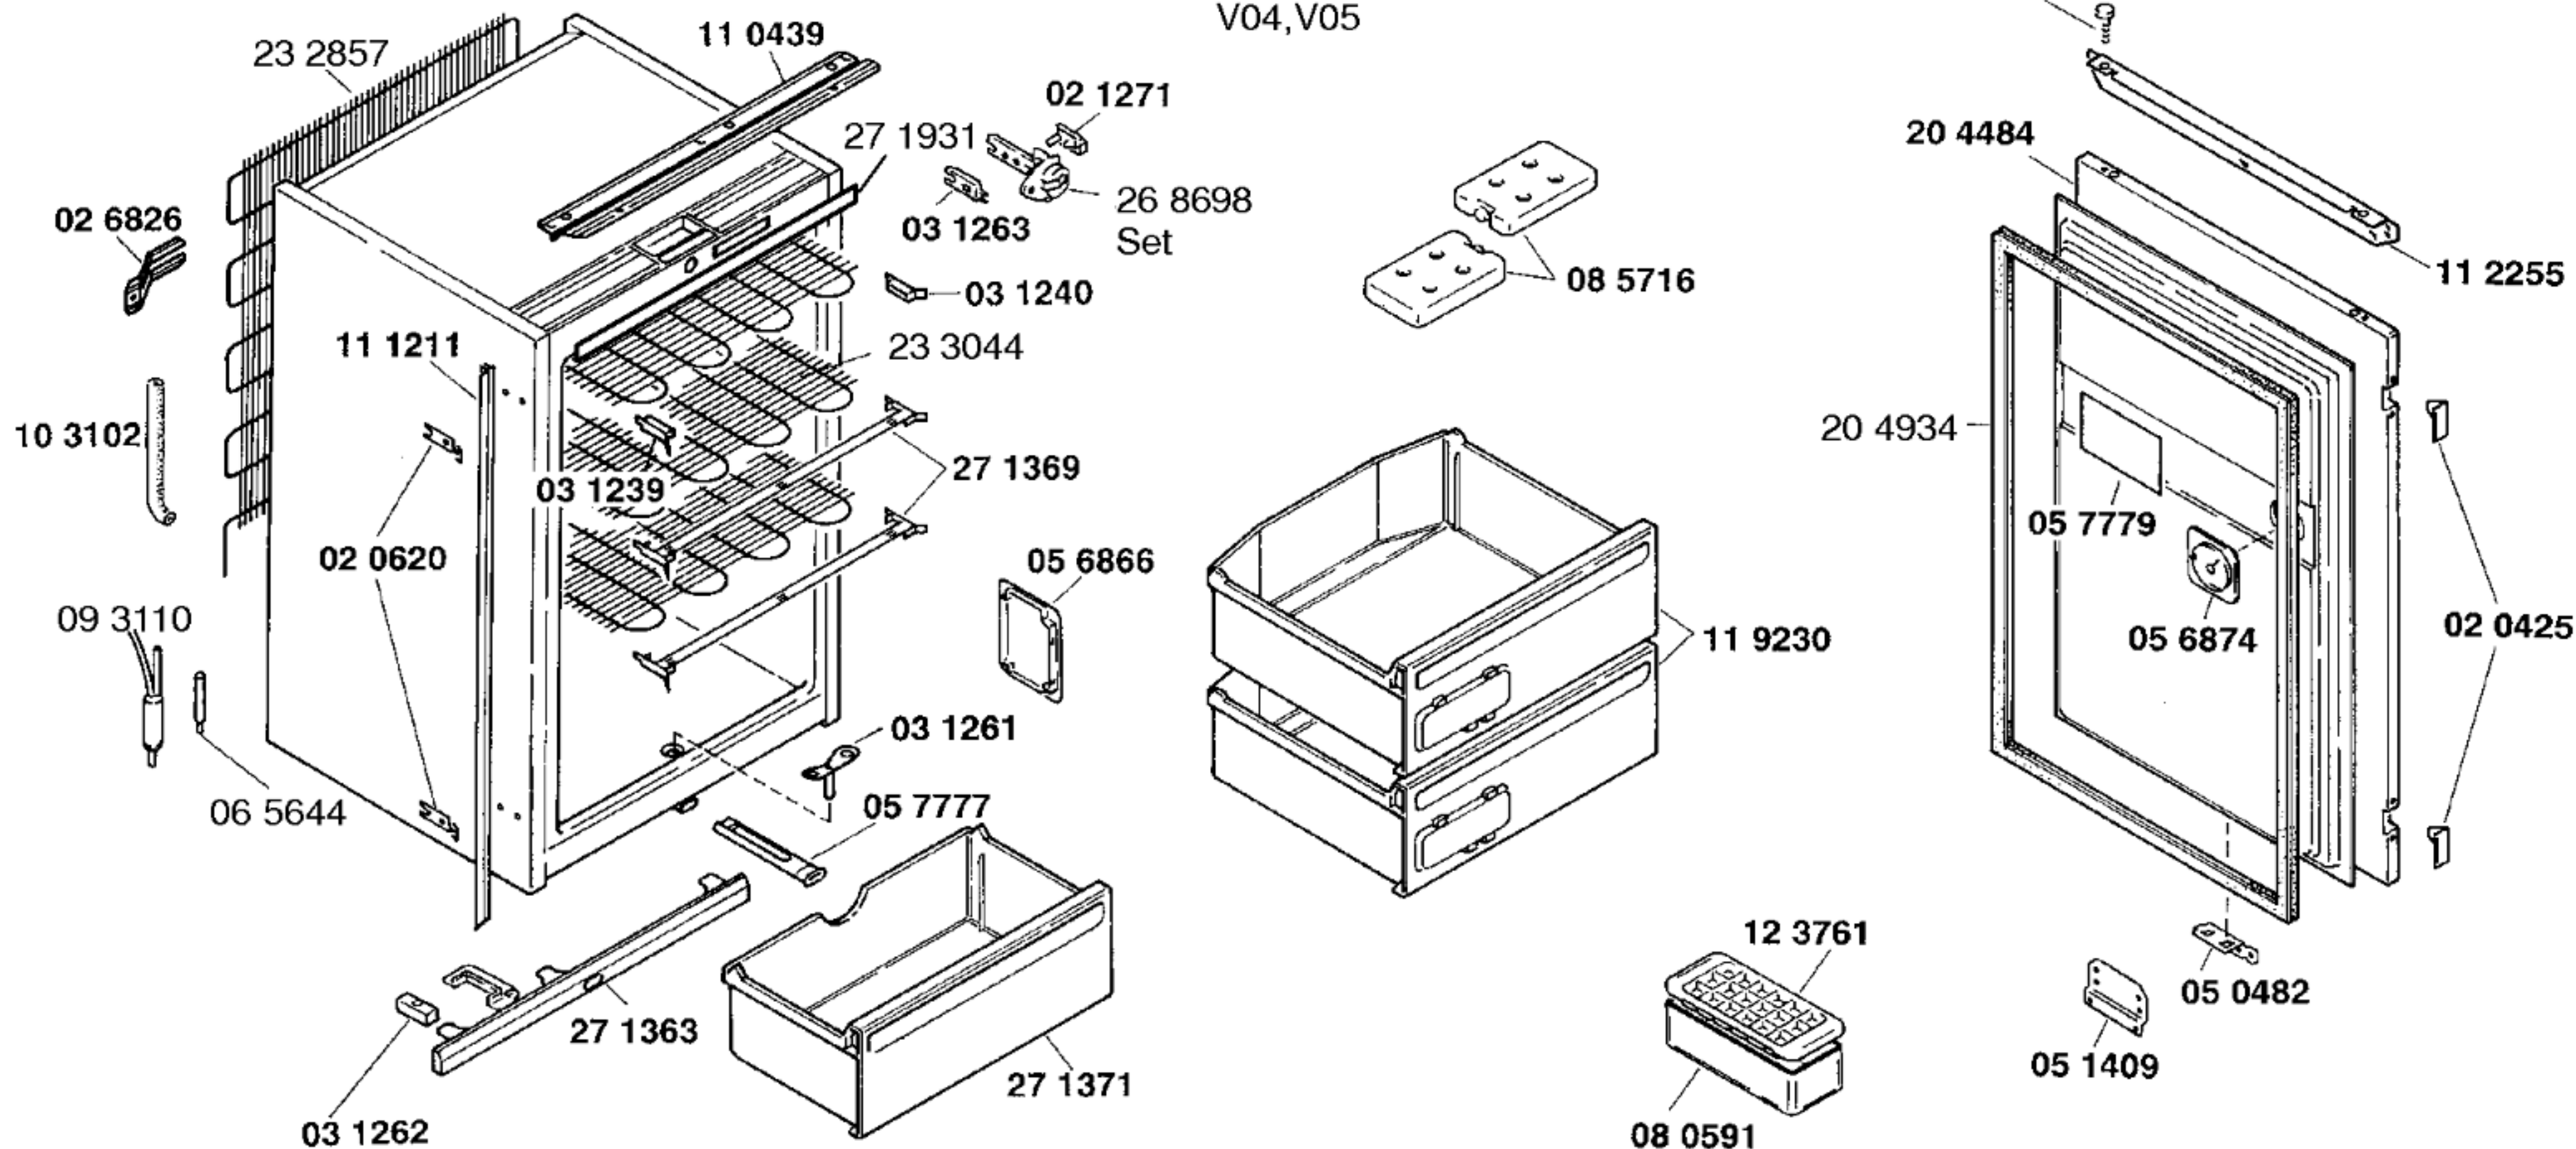

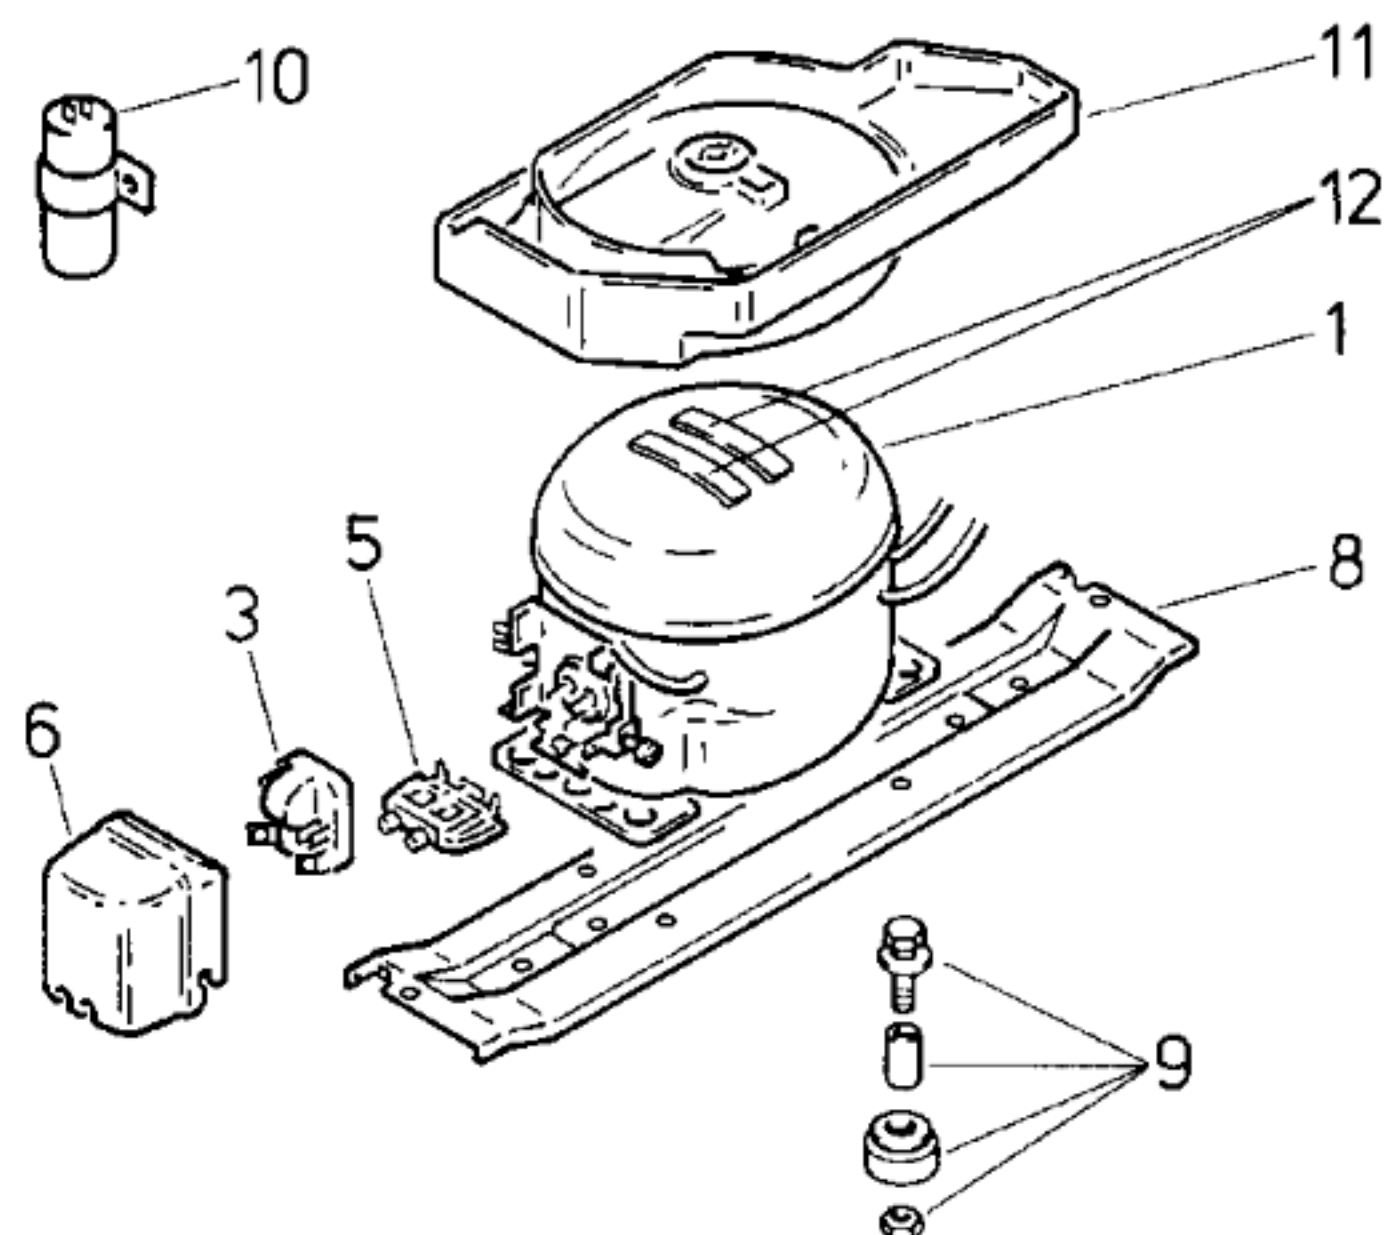

	V01,V02	V03	V04-V07
Pos.	Danfoss	Zanussi	Danfoss
	TLES 7 K	HL 80 AH	TLES 9 K
1	14 1239	14 1330	14 1308
2			
3	15 1055	15 3709	15 1055
4			
5	15 0760		15 0760
6	15 1072	15 3321	15 1072
7			
8	27 1375		27 1375
9	05 0166		05 0166
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Zanussi
Typ/Type		TLES 7 K		HL 80 AH
Förderleistung/Delivery/Débit		l/h	1168	1460
Anlaufstrom/Starting current/Cour de démarrage		A	4,5	9
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	16,5	18,3
		Hi/aux Ω	16,9	24,3
Temp.-Regler/Thermostat		WHF		Danfoss
Typ/Type		TF 57 SF2		
Reglerstellung/Position		kalt	warm	kalt
Schaltwerte/Switching values/		„ein“	°C	„aus“
Valeurs de commutation		„abtauen“ od.)	„alarm“	
		-25	-17	-25
		-33	-23	-33
		-19,5	-13	-19,5
Füllmenge/Fill.quantity/Charge		R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée		W	79	100
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild