

Item	PNC	ELC	Brand	Model	Market
A	900275760	00	Electrolux	ERC3305	THA
A	900275770	00	Electrolux	ERC3305	VNE
A	900275736	00	Electrolux	ERC3305	IDE
A	900275752	00	Electrolux	ERC3305	PHH
A	900275744	00	Electrolux	ERC3305	MYH

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

		Rice Cooker	
Electrolux SEA Pte.,Ltd. APAC		Publication-No. 160714	

Model

PNC

Ex. View Drawing

ERC3305

900275760

Parts

ERC3305

900275770

ERC3305

900275736

ERC3305

900275752

ERC3305

900275744

1




2



3



4

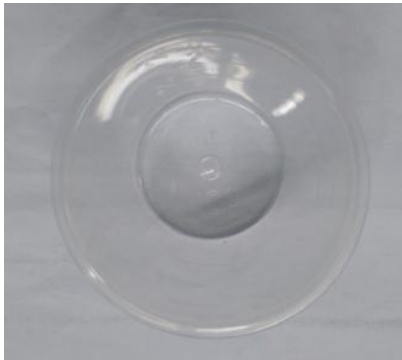

5



6



PNC	ELC	Brand	Model	Market
900275760	00	Electrolux	ERC3305	IDE
900275770	00	Electrolux	ERC3305	THA
900275736	00	Electrolux	ERC3305	VNE
900275752	00	Electrolux	ERC3305	MYH
900275744	00	Electrolux	ERC3305	PHH

Important Note: Please list the PNC and Model code for part purchase order (PO)

Pos.	Part Code	Description
1	12161000007283	Lid Button
2	12161000007286	lever button
3	12161000007237	pot lift a hand
4	12161000000320	Measuring Cup
5	12161000003147	Rice scoop and soup scoop assembly
6	12161000003802	Steaming tray
7	12261000003850	Inner pot