



Electrolux

SPARE PARTS LIST

Food Preparation

3483

Item	PNC	ELC	Brand	Model	Market
A	900275937	00	Electrolux	EBR9804C	AUW

SAFETY WARNING


Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

Electrolux SEA Pte.,Ltd. APAC		Publication-No. 150427	Small Appliance Food Preparation Blender
----------------------------------	--	---------------------------	--

Model PNC
EBR9804C 900275937

Ex. View Drawing Internal Parts and Accessories

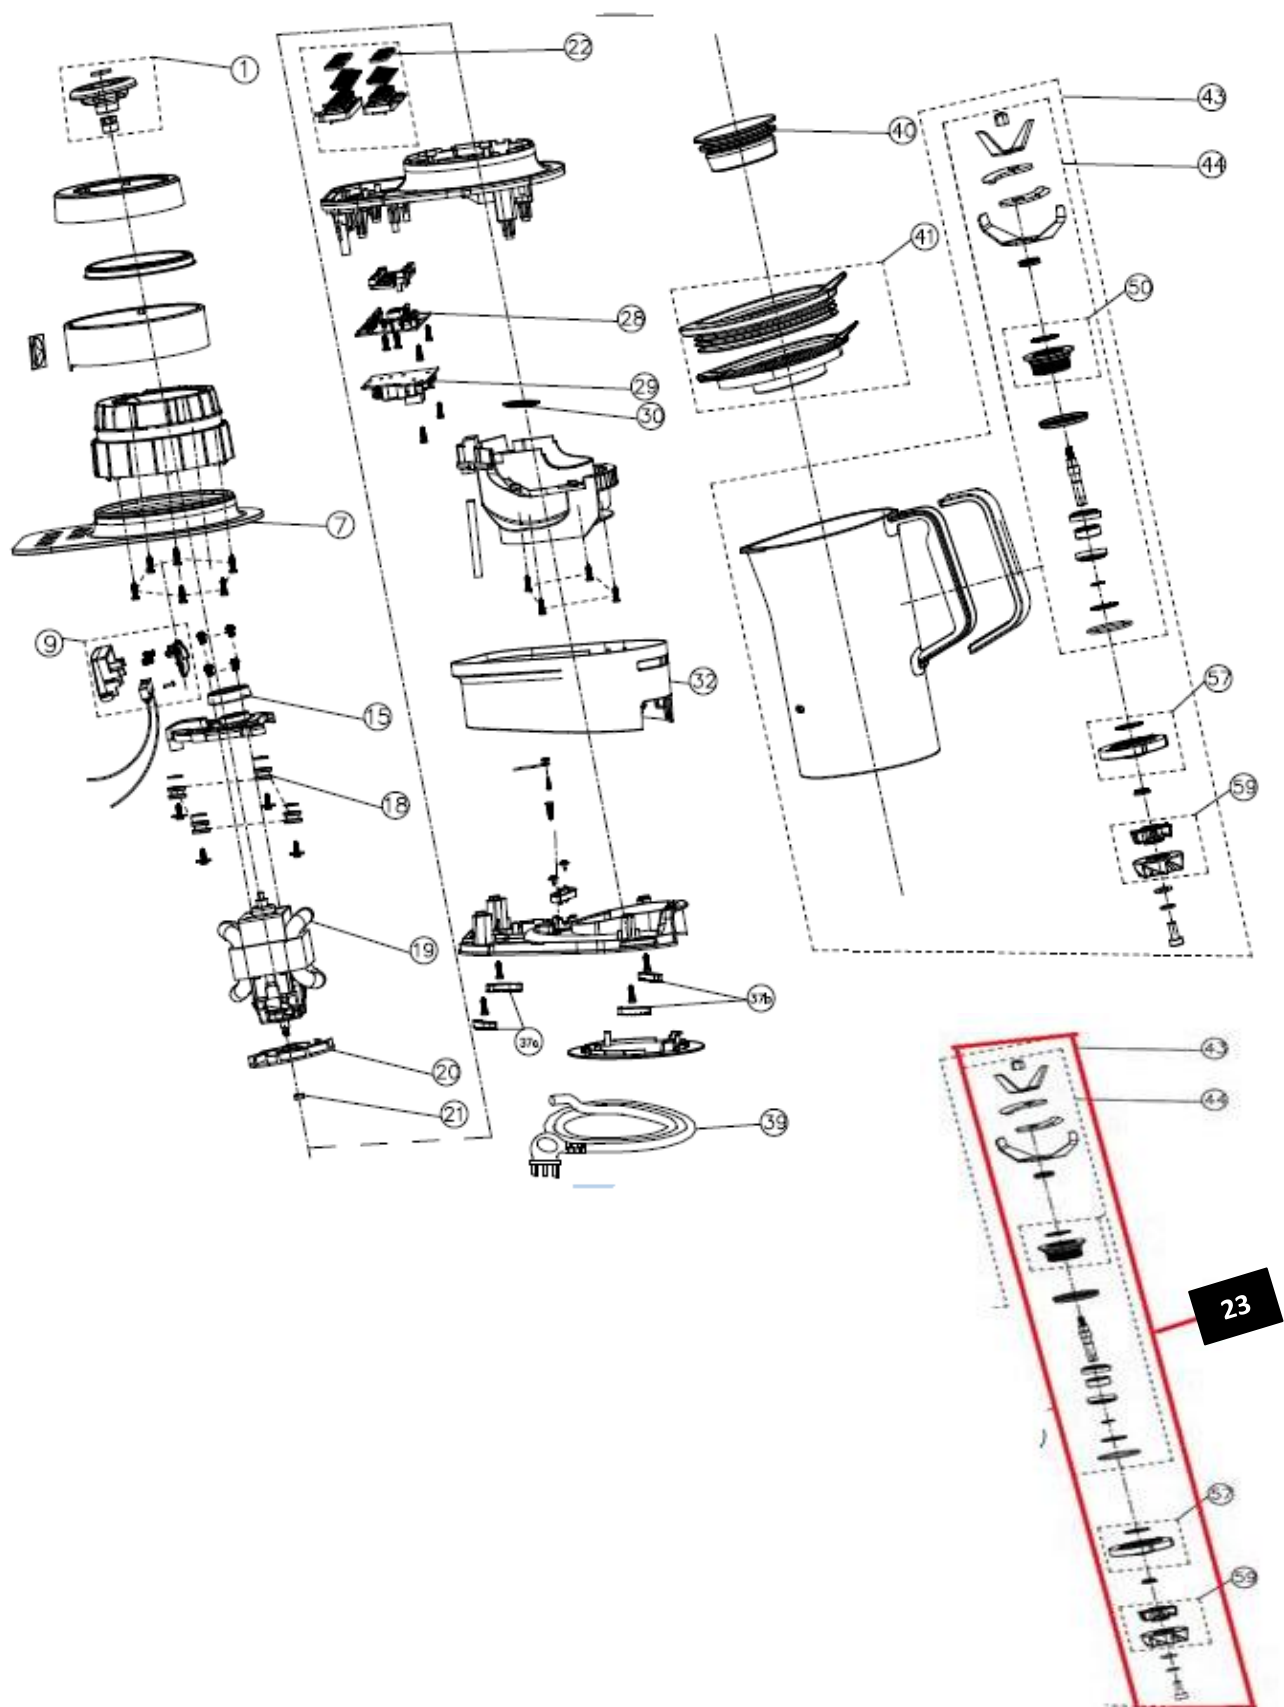

PNC	ELC	Brand	Model	Market
900275937	00	Electrolux	EBR9804C	AUW

Spart Part

POS.	Parts No.(HS)	Description
1	SPA840003-A000000	Main Housing Clutch ass. (Copper)
7	PLA840013-004F02	Panel (Copper)
9	SPA840004-B000000	Safety Switch ass. (Copper)
15	RUB840002-020B00	Motor Rubber Washer-Upper
18	RUB840006-020B00	Washer Isolator
19	MOTW096302301RFC	Motor(230V)
20	PLA830015-005000	Fan
21	SCR100009-C46000	Nut
22	SPA840005-A00000	Button ass. (Copper)
28	PCB840230-001E0B	Control PCB (230V)
29	PCB840230-001E0A	Power PCB (230V)
30	RUB840004-020Z00	Motro Rubber Washer-Lower
32	DCS840001-B56000	Housing-DCS (Copper)
37a	RUB840011-020G01	Foot Rubber (a)
37b	RUB840012-020G01	Foot Rubber (b)
39	SPA840012-A000000	Power Cord with Plug (c-SAA) - AUS
44	SPA840007-A000000	Blade ass. (Copper)
50	SPA840008-000000	Blade Holder ass.
51	SPA840030-A00000	Blade Holder ass (Full including clutch ass.)
57	SPA840009-A000000	Bearing Lock ass.
59	SPA840010-A000000	Jar Clutch ass.
	CABW09605-000000	Carbon Brush

Accessories

40	PLA840001-0130001	Dozer
41	SPA840001-A00000	Jar Lid ass. (Copper)
43	SPA840002-B00000	Jug ass. (with Copper Handle Cover)