



51 1941
Gebrauchsanweisung
(D,GB,F,I,NL,P,SF,DK,
E,S)

- 1) 02 6816
- 2) 02 6819
- 3) 02 7786
- 4) 02 6824
- 5) 02 6815
- 6) 02 6823
- 7) 01 8901
- 8) 02 6747

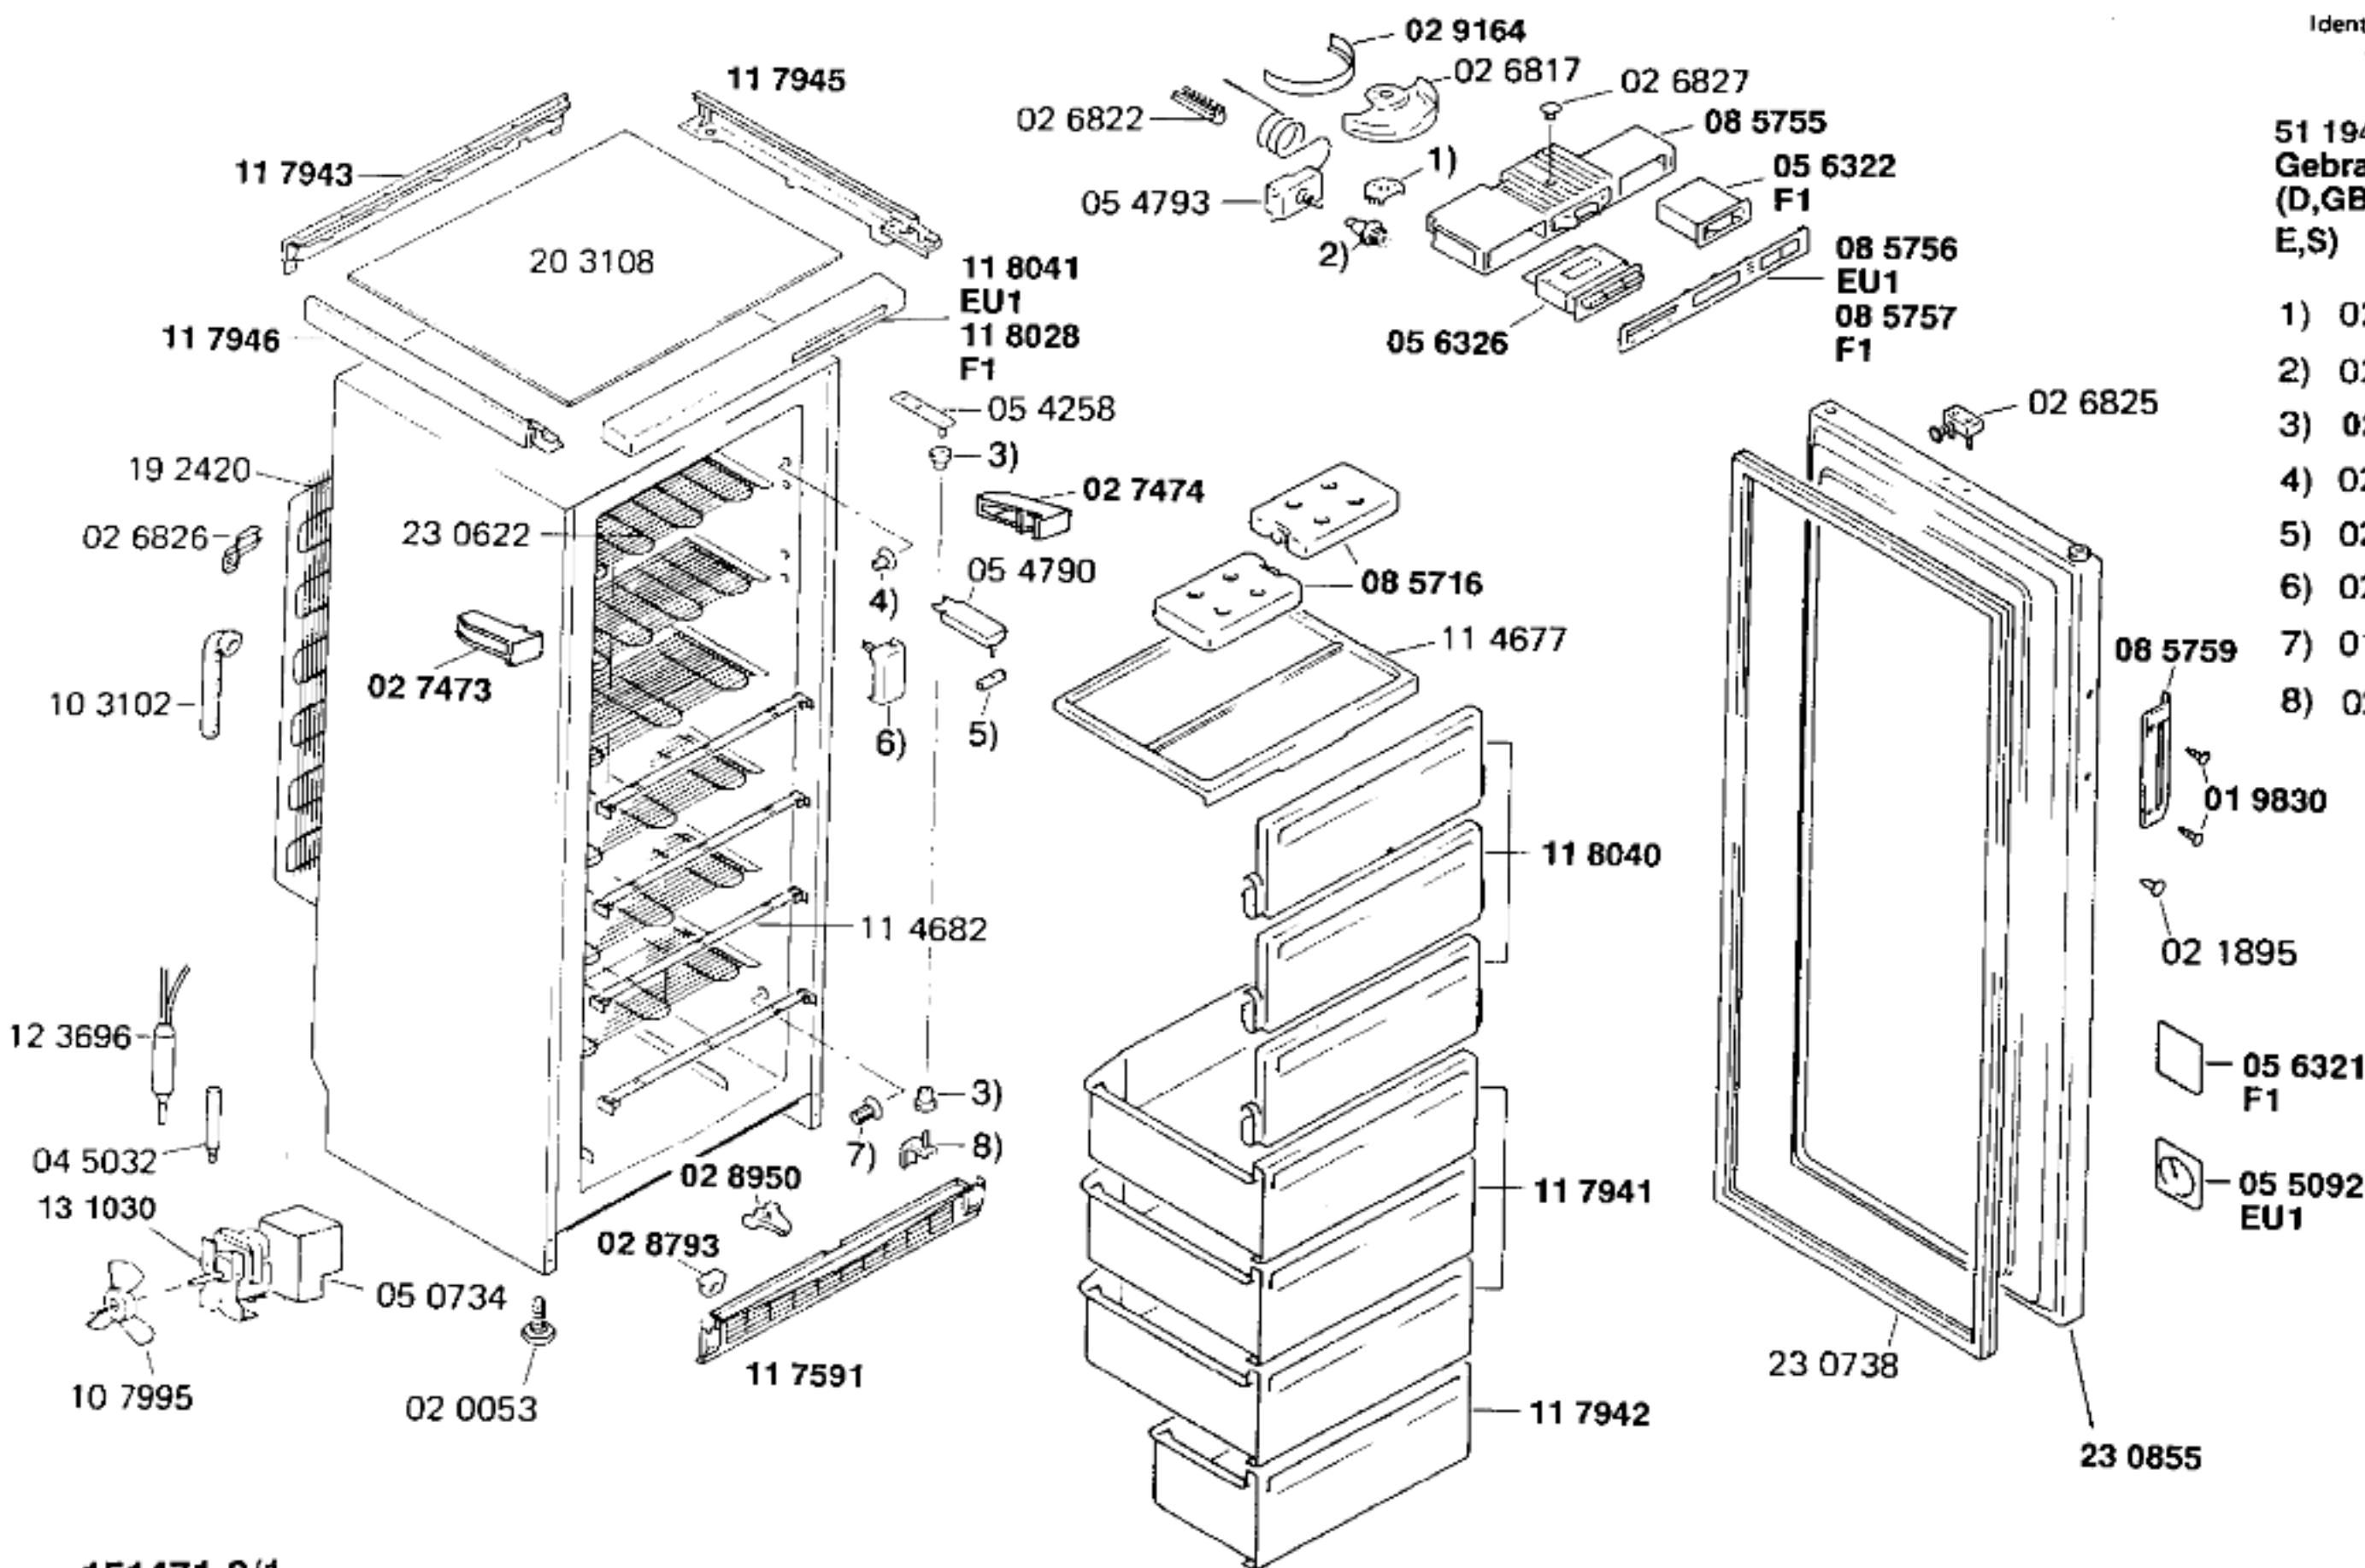

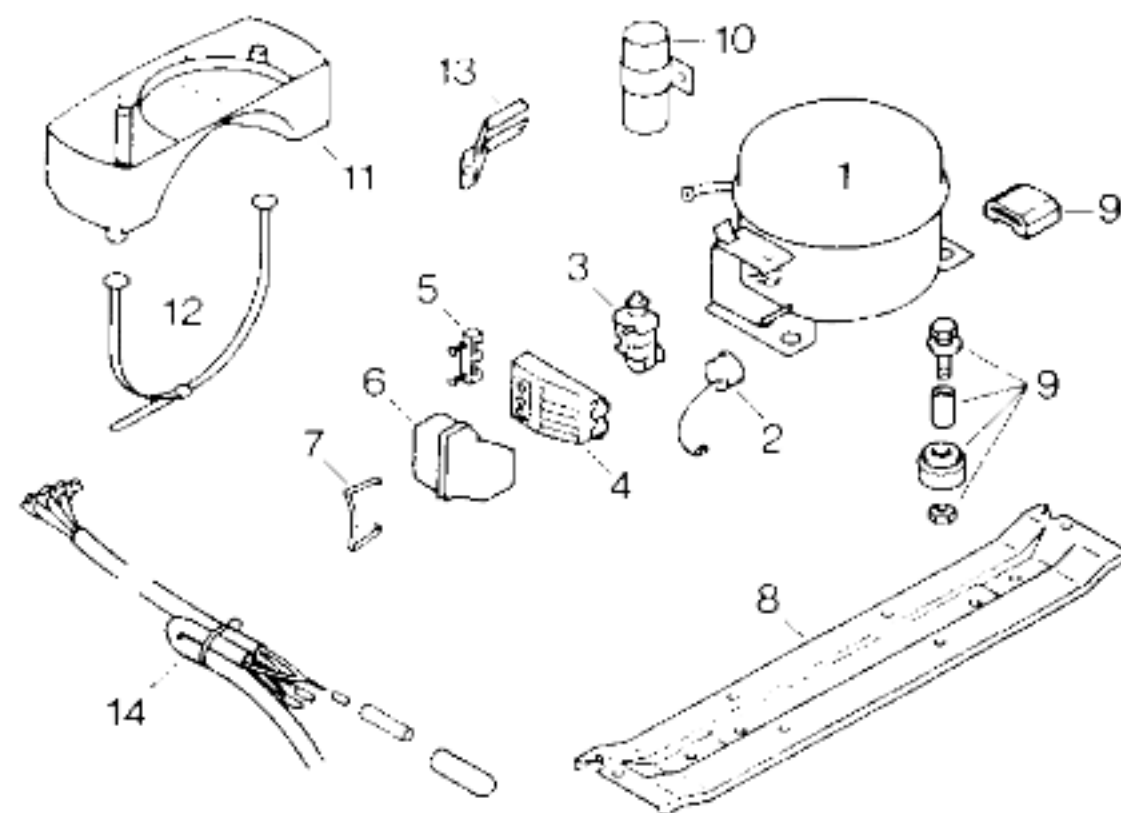

Pos.	Danfoss		
	FR 8,5 A		
1	14 0157		
2			
3	02 0108		
4			
5	02 1361		
6	05 1413		
7			
8			
9	05 0166		
10			
11			
12			
13			
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		FR 8,5 A				
Förderleistung/Delivery/Débit	l/h	1430				
Anlaufstrom/Starting current/Cour. de démarrage	A	10,3				
Widerstand/Resistance/Résistance	Hi/main/prin.	Ω	12,2			
	Hi/aux	Ω	13,7			
Temp.-Regler/Thermostat		Danfoss				
Typ/Type		077 B 2054				
Reglerstellung/Position		kalt warm				
Schaltwerte/Switching values/	„ein“ °C	- 24	- 16			
Valeurs de commutation	„aus“	- 34	- 24			
	[„abtauen“ od.] „alarm“	- 19	- 12			
Fillmenge/Fill quantity/Charge	R12	g	195			
Anschlußwert/Conn.load/Puiss. connectée	W	170				
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance	Ω					
Leistung/Power/Puissance	W					
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance	Ω	190				
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance	Ω					
Spannung/Voltage/Tension	V					