



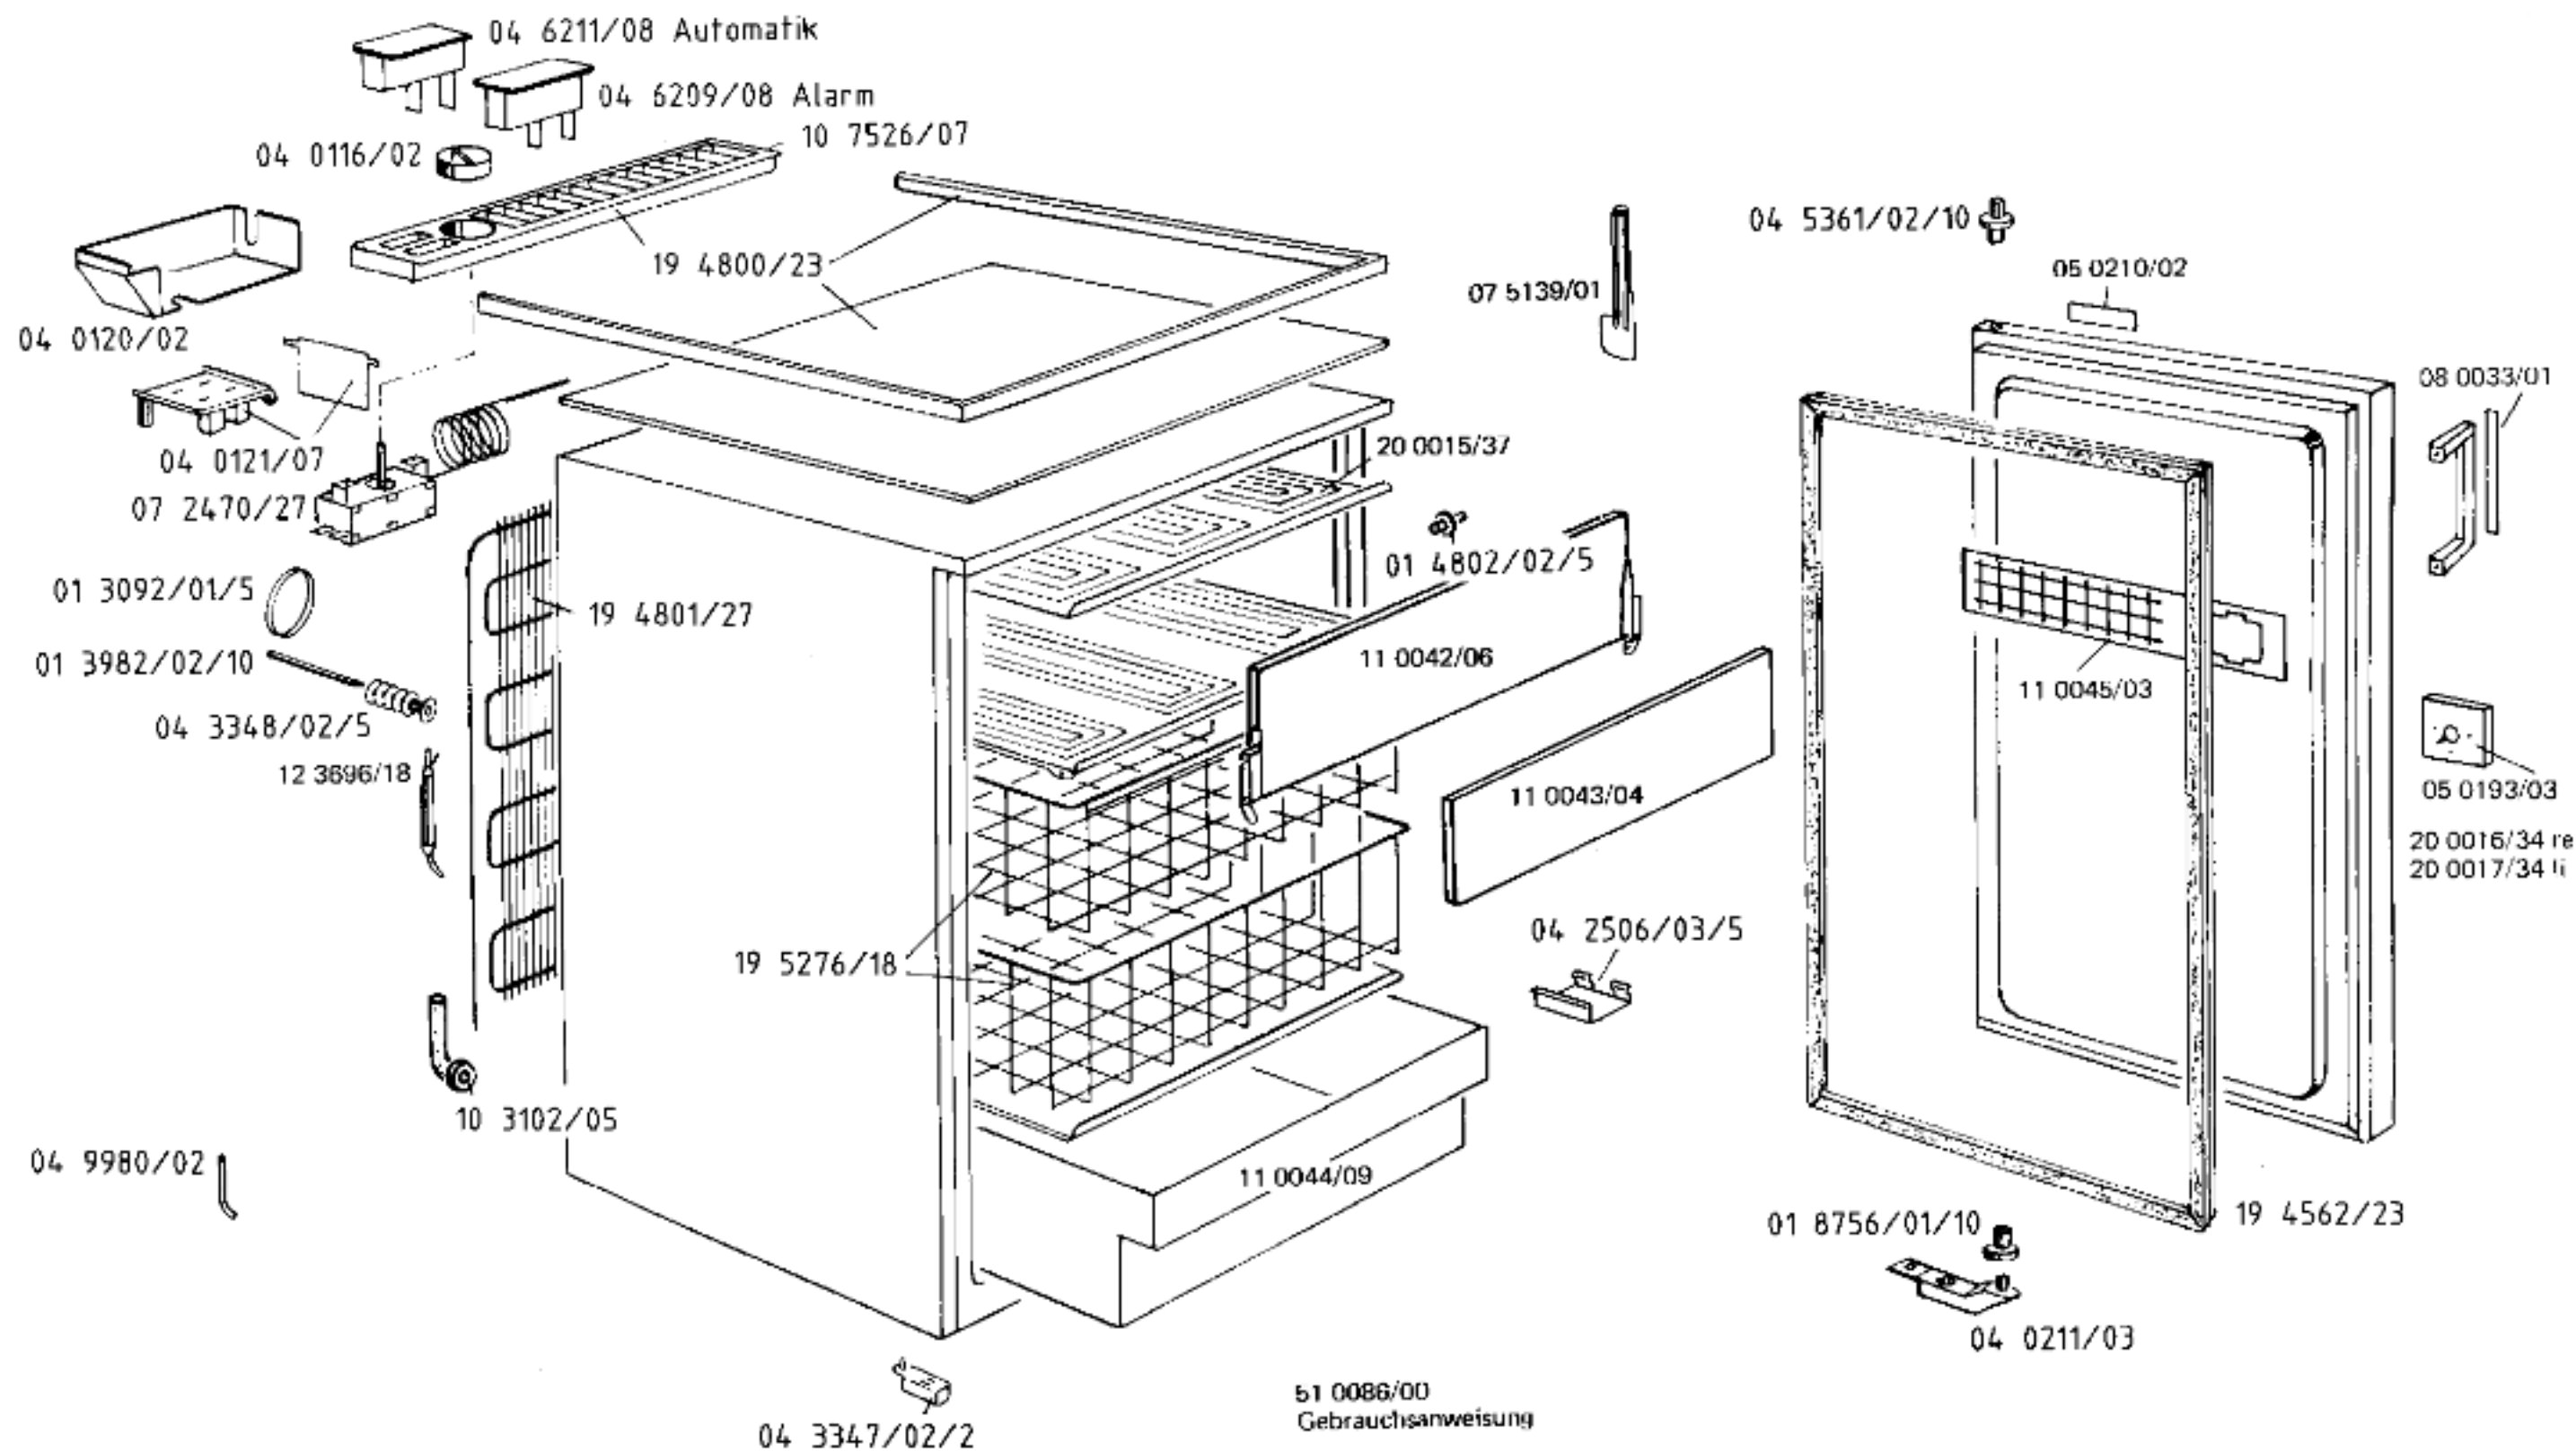

**BOSCH**

GEFRIERSCHRANK GS 164 — 0 705 144 134  
 — 0 705 144 135  
 GS 1640 — 0 705 144 140  
 — 0 705 144 141

Ident-Nummern-Konstante  
 3740 .....

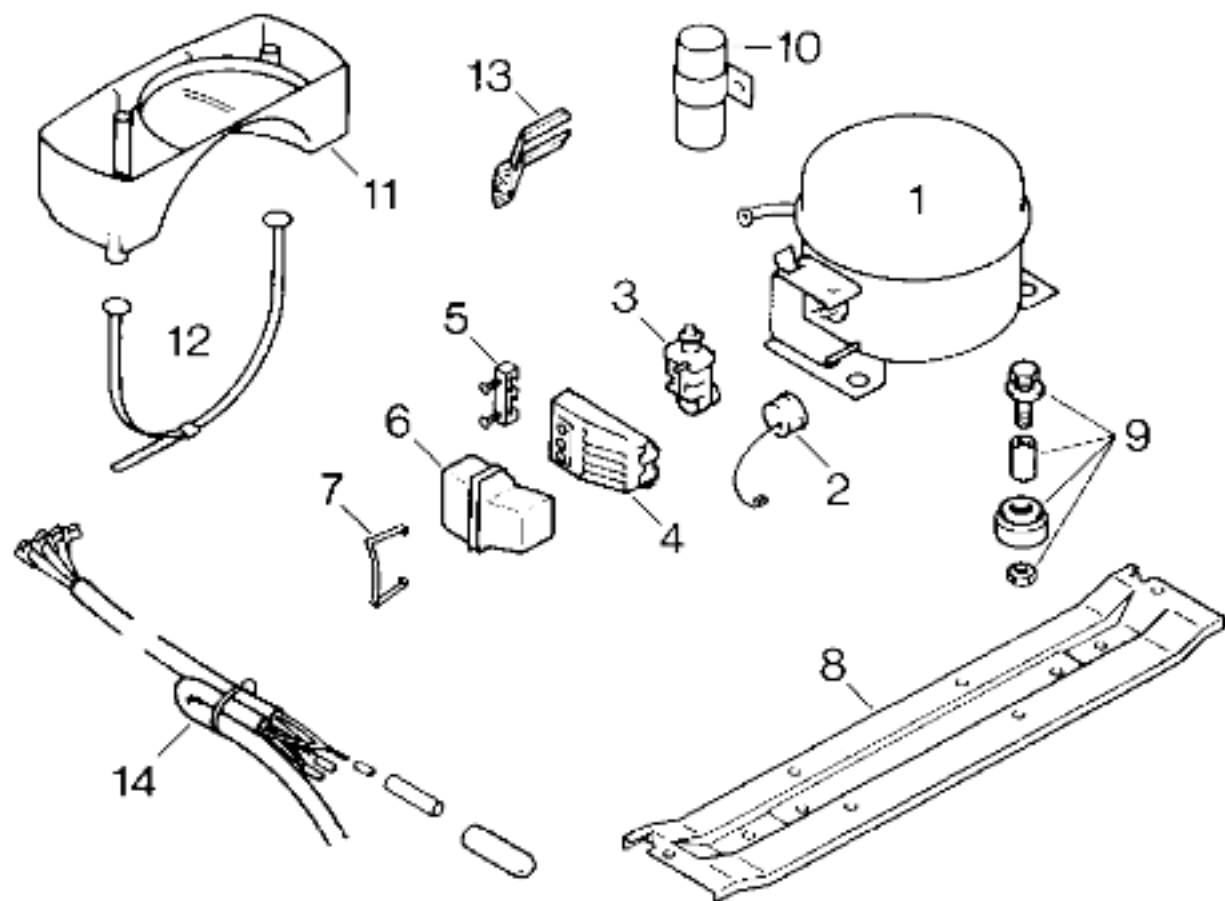

# TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

|                                                 |  |                 |   |        |         |  |  |
|-------------------------------------------------|--|-----------------|---|--------|---------|--|--|
| Verdichter/Compressor/Compresseur               |  | Typ/Type        |   | Bosch  | Danfoss |  |  |
| Förderleistung/Delivery/Débit                   |  | l/h             |   | V 1040 | TL 5 A  |  |  |
| Anlaufstrom/Starting current/Cour. de démarrage |  | A               |   | 9,5    | 9,0     |  |  |
| Widerstand/Resistance/Résistance                |  | Ha/main/prin.   |   | 15,0   | 15,7    |  |  |
|                                                 |  | Hi/aux          |   | 29,0   | 18,8    |  |  |
| Temp.-Regler/Thermostat                         |  | Typ/Type        |   | Bosch  |         |  |  |
| Reglerstellung/Position                         |  |                 |   | kalt   | warm    |  |  |
| Schaltwerte/Switching values/                   |  | „ein“           |   | -24    | -18     |  |  |
| Valeurs de commutation                          |  | „aus“           |   | -32    | -25     |  |  |
|                                                 |  | („abtauen“ od.) |   | -18    | -13     |  |  |
| Füllmenge/Fill.quantity/Charge                  |  | R12             | g | 150    |         |  |  |
| Anschlußwert/Conn.load/Puiss. connectée         |  | W               |   | 120    |         |  |  |
| Heizung/Heater/Chauffage                        |  |                 |   |        |         |  |  |
| Widerstand/Resistance/Résistance                |  | Ω               |   |        |         |  |  |
| Leistung/Power/Puissance                        |  | W               |   |        |         |  |  |
| Ventilator/Blower/Ventilateur                   |  |                 |   |        |         |  |  |
| Widerstand/Resistance/Résistance                |  | Ω               |   |        |         |  |  |
| Magnetventil/Magnetic valve/Electrovanne        |  |                 |   |        |         |  |  |
| Widerstand/Resistance/Résistance                |  | Ω               |   |        |         |  |  |
| Spannung/Voltage/Tension                        |  | V               |   |        |         |  |  |

| Pos. | Bosch      | Danfoss       |  |  |
|------|------------|---------------|--|--|
| 1    |            | 14 0065/45    |  |  |
| 2    | 07 2131/18 |               |  |  |
| 3    | 07 3699/09 | 02 0108/27    |  |  |
| 4    | 04 9865/05 |               |  |  |
| 5    |            |               |  |  |
| 6    | 04 9865/05 | 05 1413/05    |  |  |
| 7    |            |               |  |  |
| 8    |            | *11 1840/04   |  |  |
| 9    | 01 4895/02 | *05 0166/05   |  |  |
| 10   |            |               |  |  |
| 11   |            |               |  |  |
| 12   |            |               |  |  |
| 13   |            | *04 1568/01/2 |  |  |
| 14   |            | *05 1226/08   |  |  |

\*1 Bei Ersatz des Bosch-Verdichters mitbestellen  
 To be ordered when replacing the Bosch compressor  
 À commander lors du remplacement du compresseur Bosch