


Ident – Nummern – Konstante
 3740

51 0504
 Gebrauchsanweisung

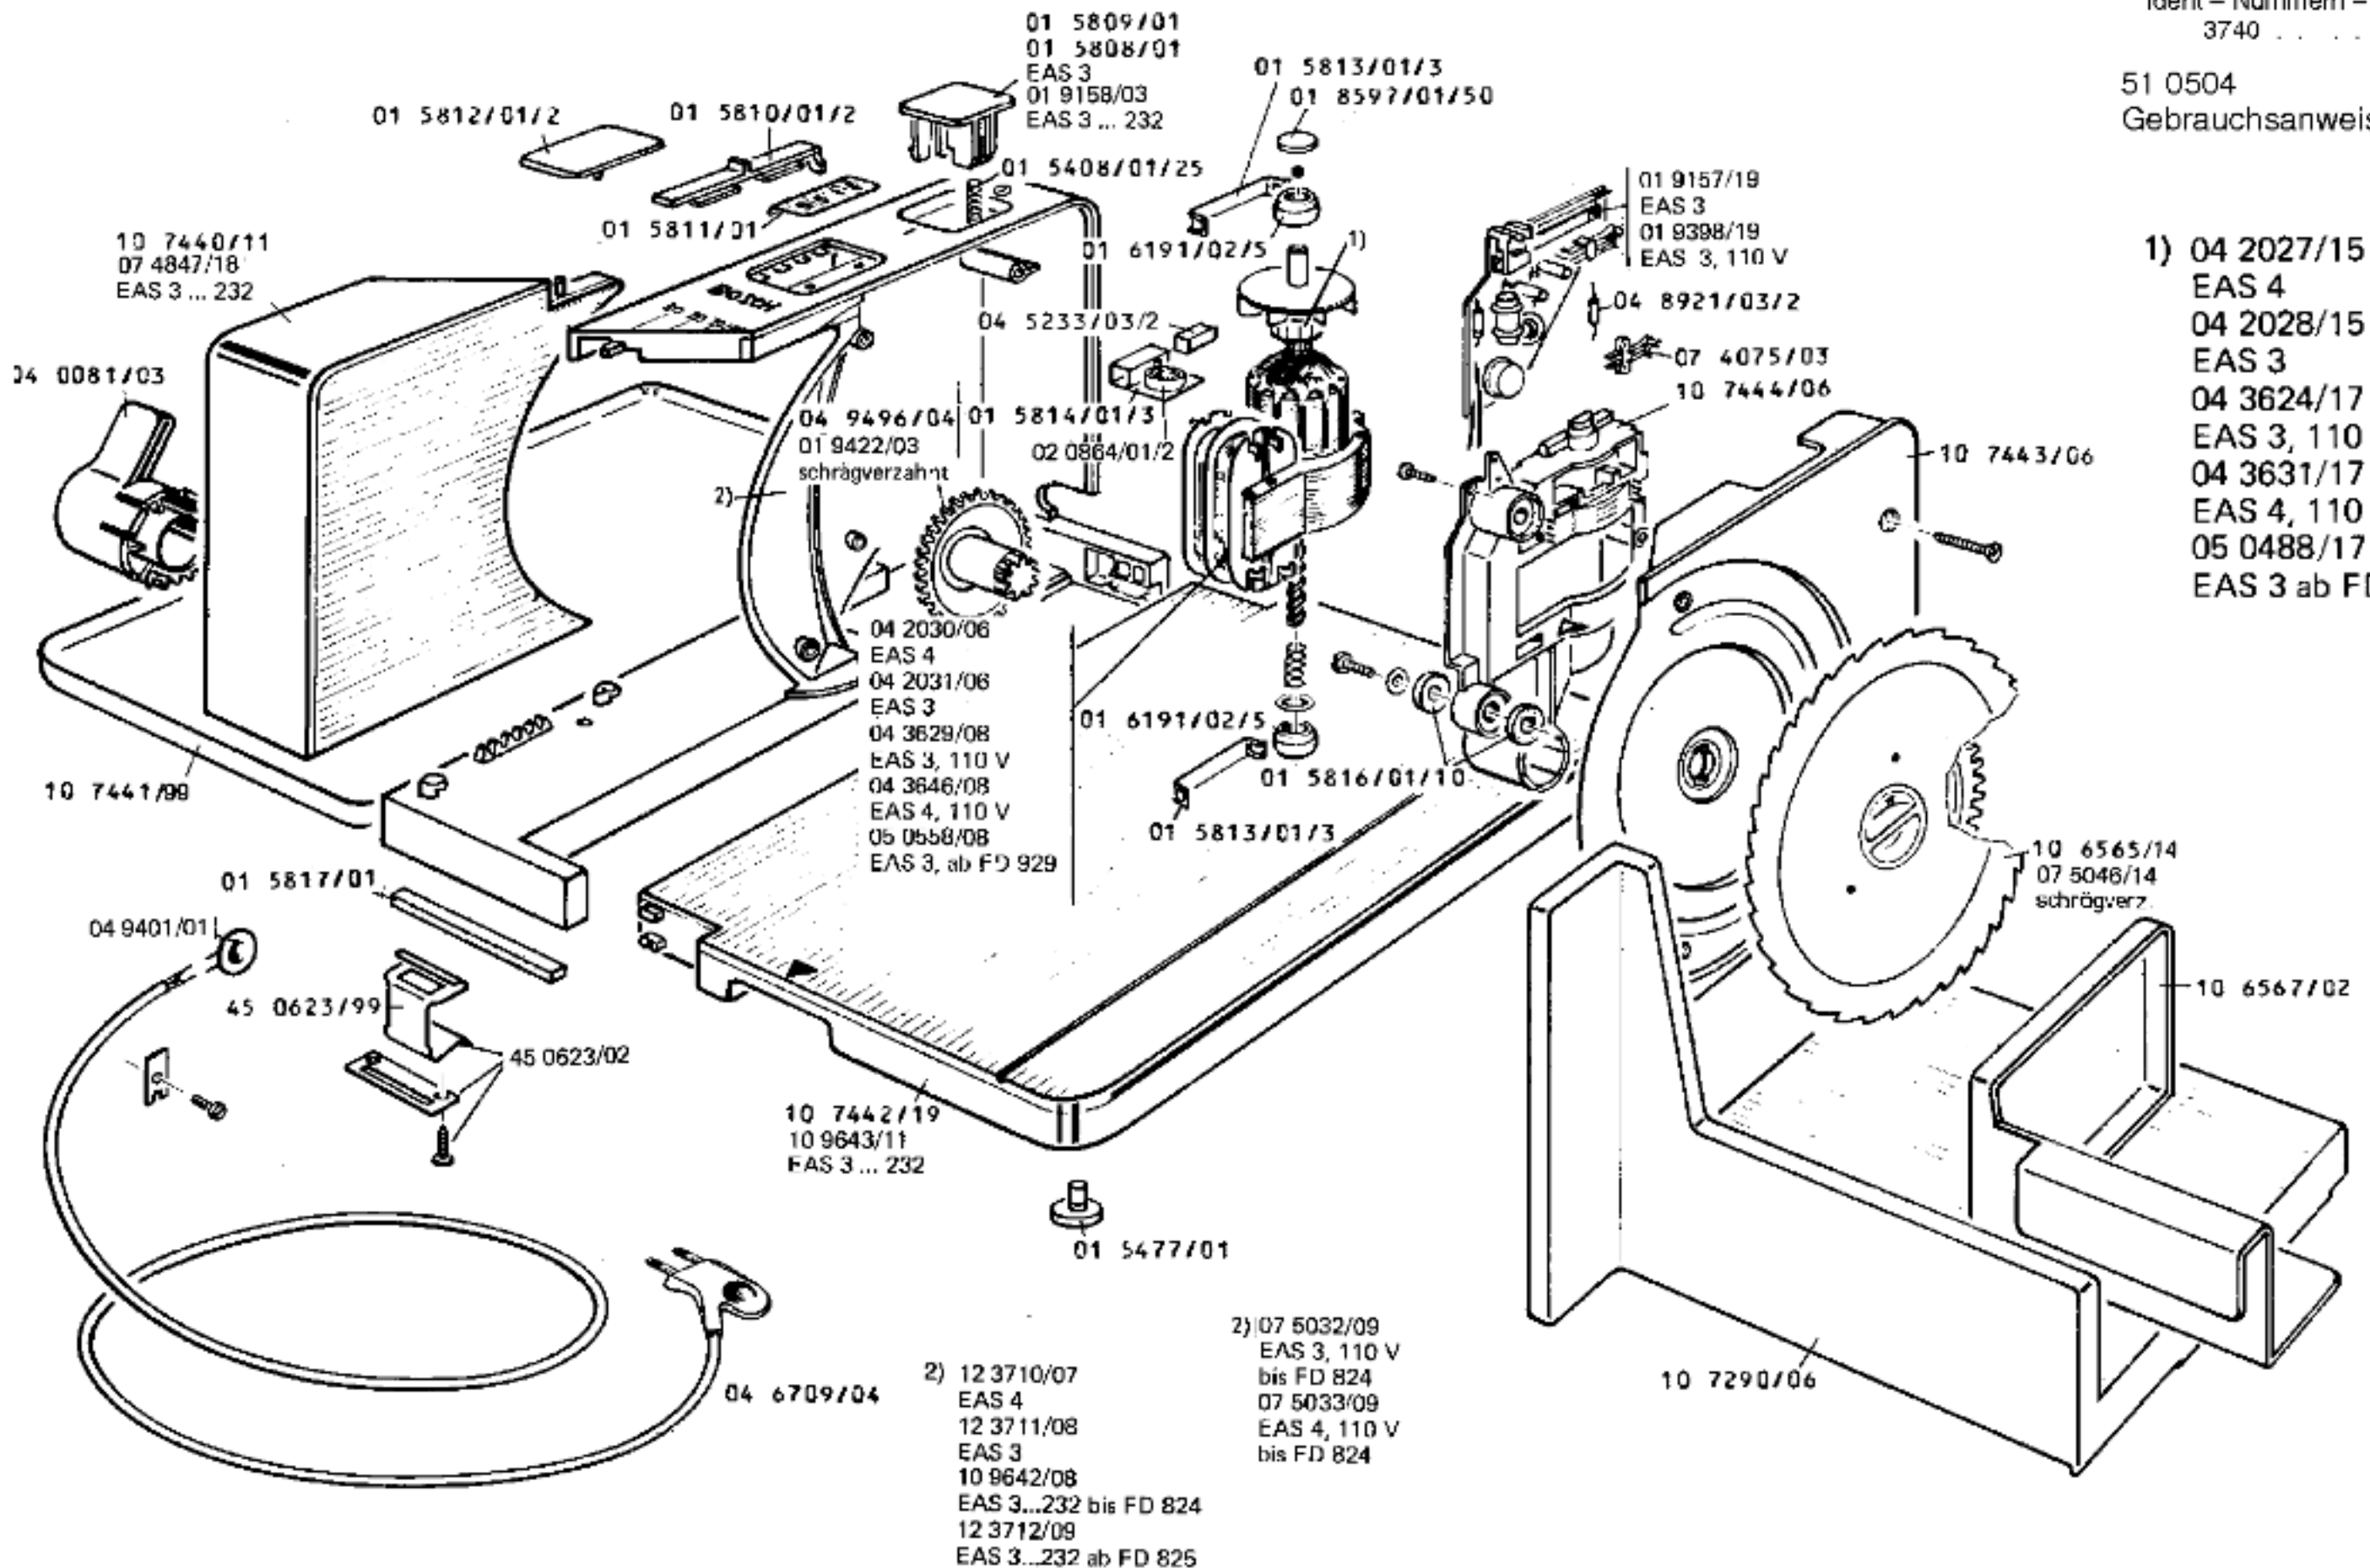

- 1) 04 2027/15
 EAS 4
- 04 2028/15
 EAS 3
- 04 3624/17
 EAS 3, 110 V
- 04 3631/17
 EAS 4, 110 V
- 05 0488/17
 EAS 3 ab FD 929