



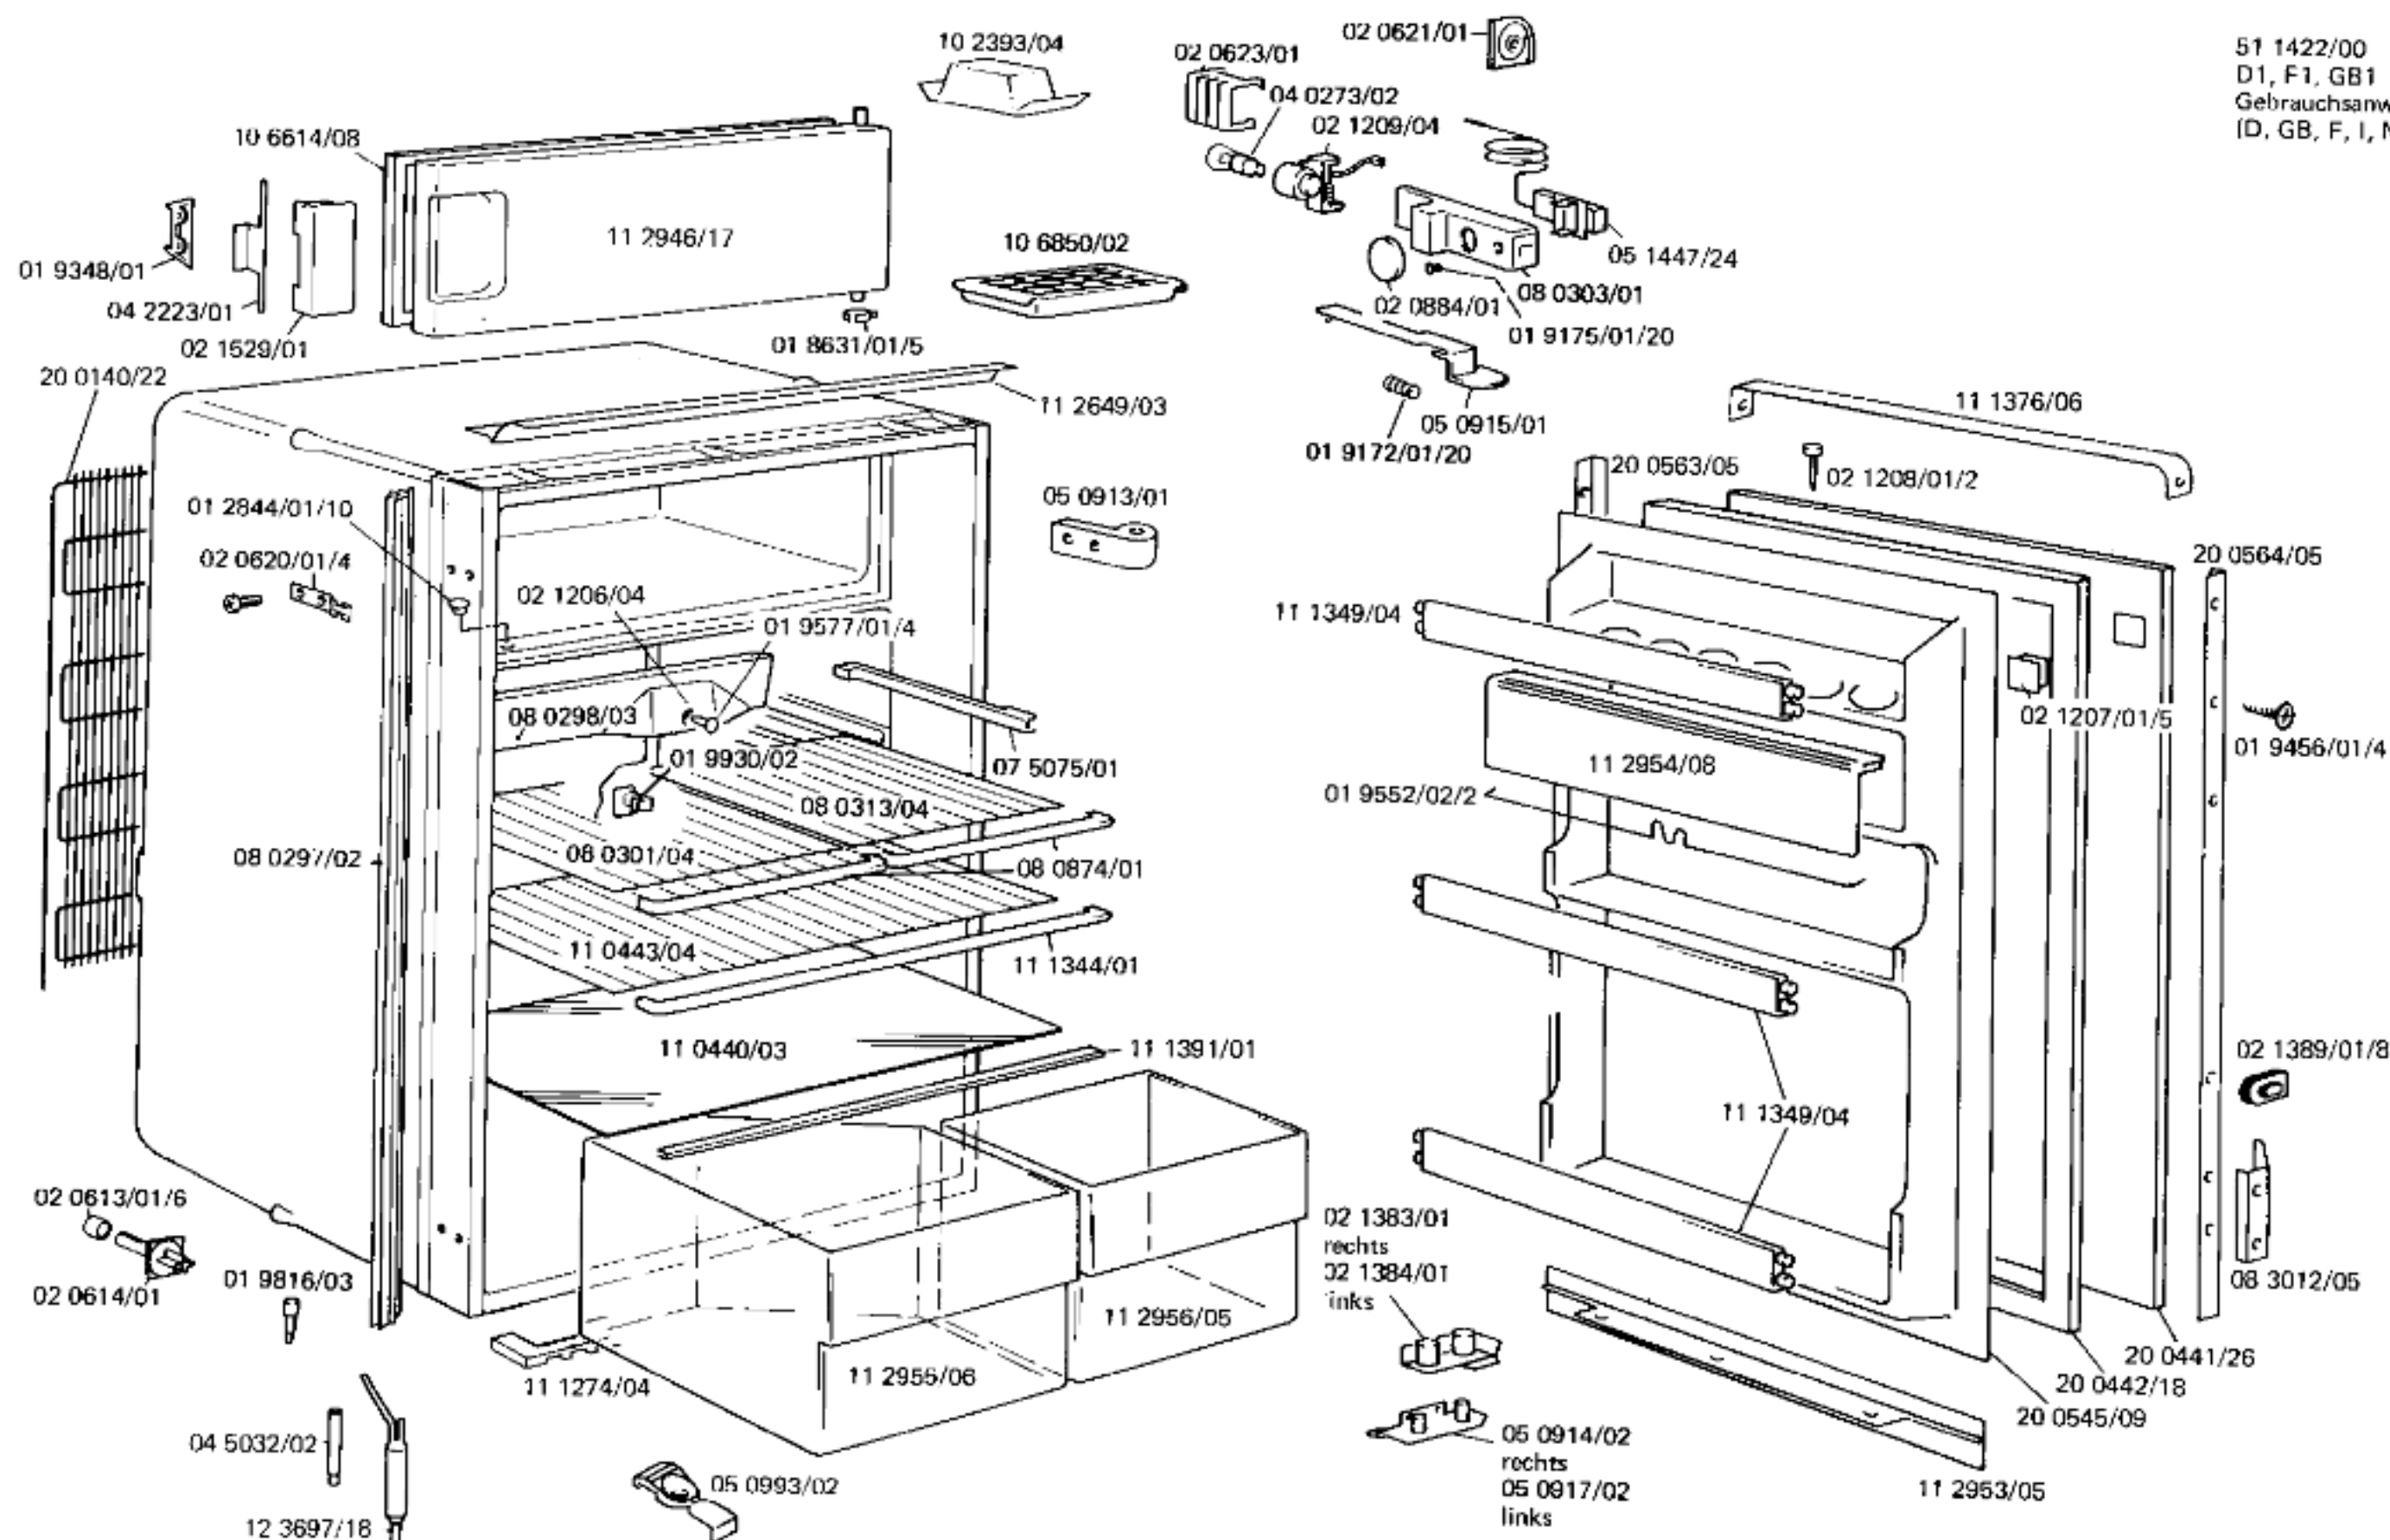

51 1422/00
D1, F1, GB1
Gebrauchsanweisung
(D, GB, F, I, NL, E)

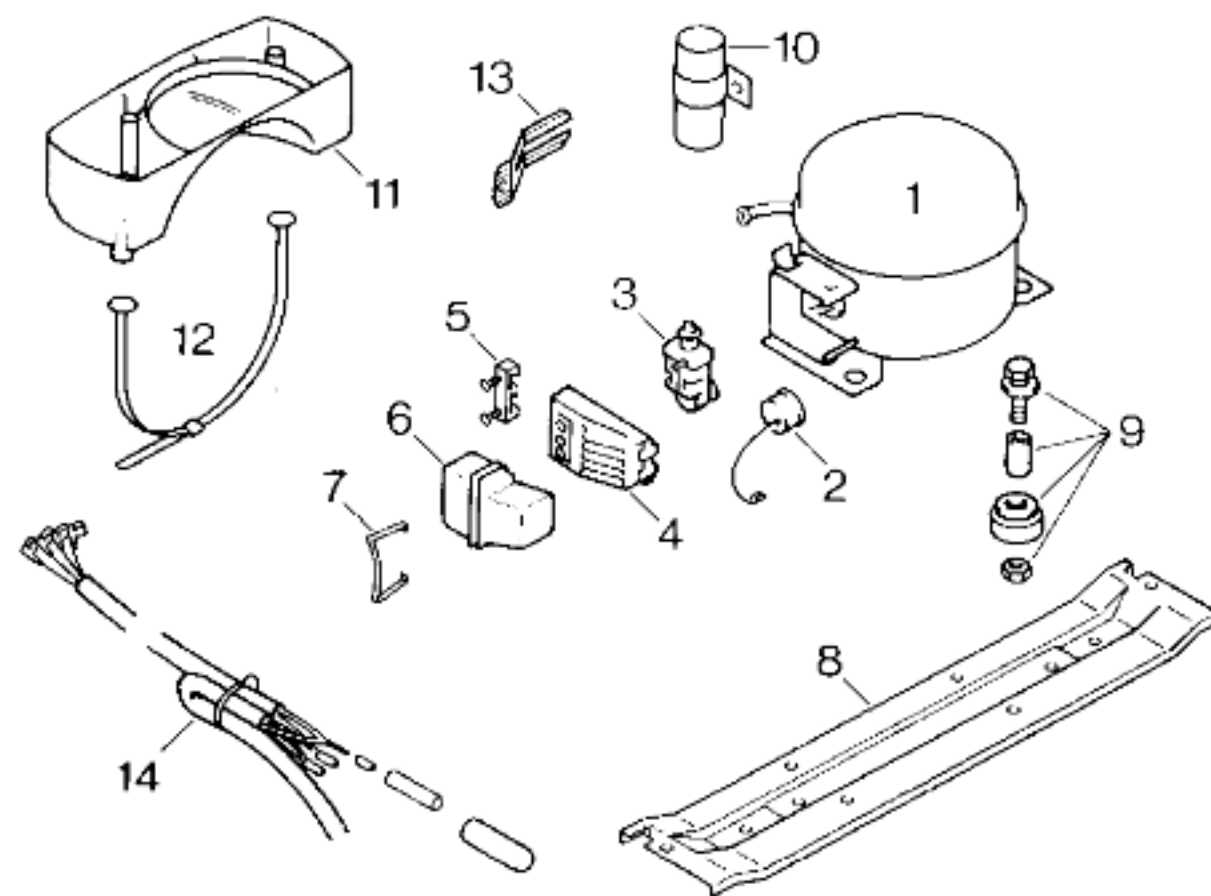

Pos.	D1, F1, GB1			
	Danfoss			
1	13 1064/45			
2				
3	02 0108/27			
4				
5	02 1361/04			
6	05 1413/06			
7				
8	11 0437/04			
9	05 0166/05/4			
10				
11	11 1243/01			
12				
13				
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNÉES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		TL 4 A				
Förderleistung/Delivery/Débit	l/h	702				
Anlaufstrom/Starting current/Cour. de démarrage	A	7,8				
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	23,8			
	Hi/aux	Ω	17,0			
Temp.-Regler/Thermostat		M + J				
Typ/Type		TF 57				
Reglerstellung/Position		kalt warm				
Schaltwerte/Switching values/	„ein“ °C	+ 4 + 4				
Valeurs de commutation	„aus“	- 30 - 15				
	(„abtauen“ od.)	„alarm“				
Füllmenge/Fill.quantity/Charge	R12	g	120			
Anschlußwert/Conn.load/Puiss. connectée		W	110			
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance	Ω					
Leistung/Power/Puissance	W					
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance	Ω					
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance	Ω					
Spannung/Voltage/Tension	V					