


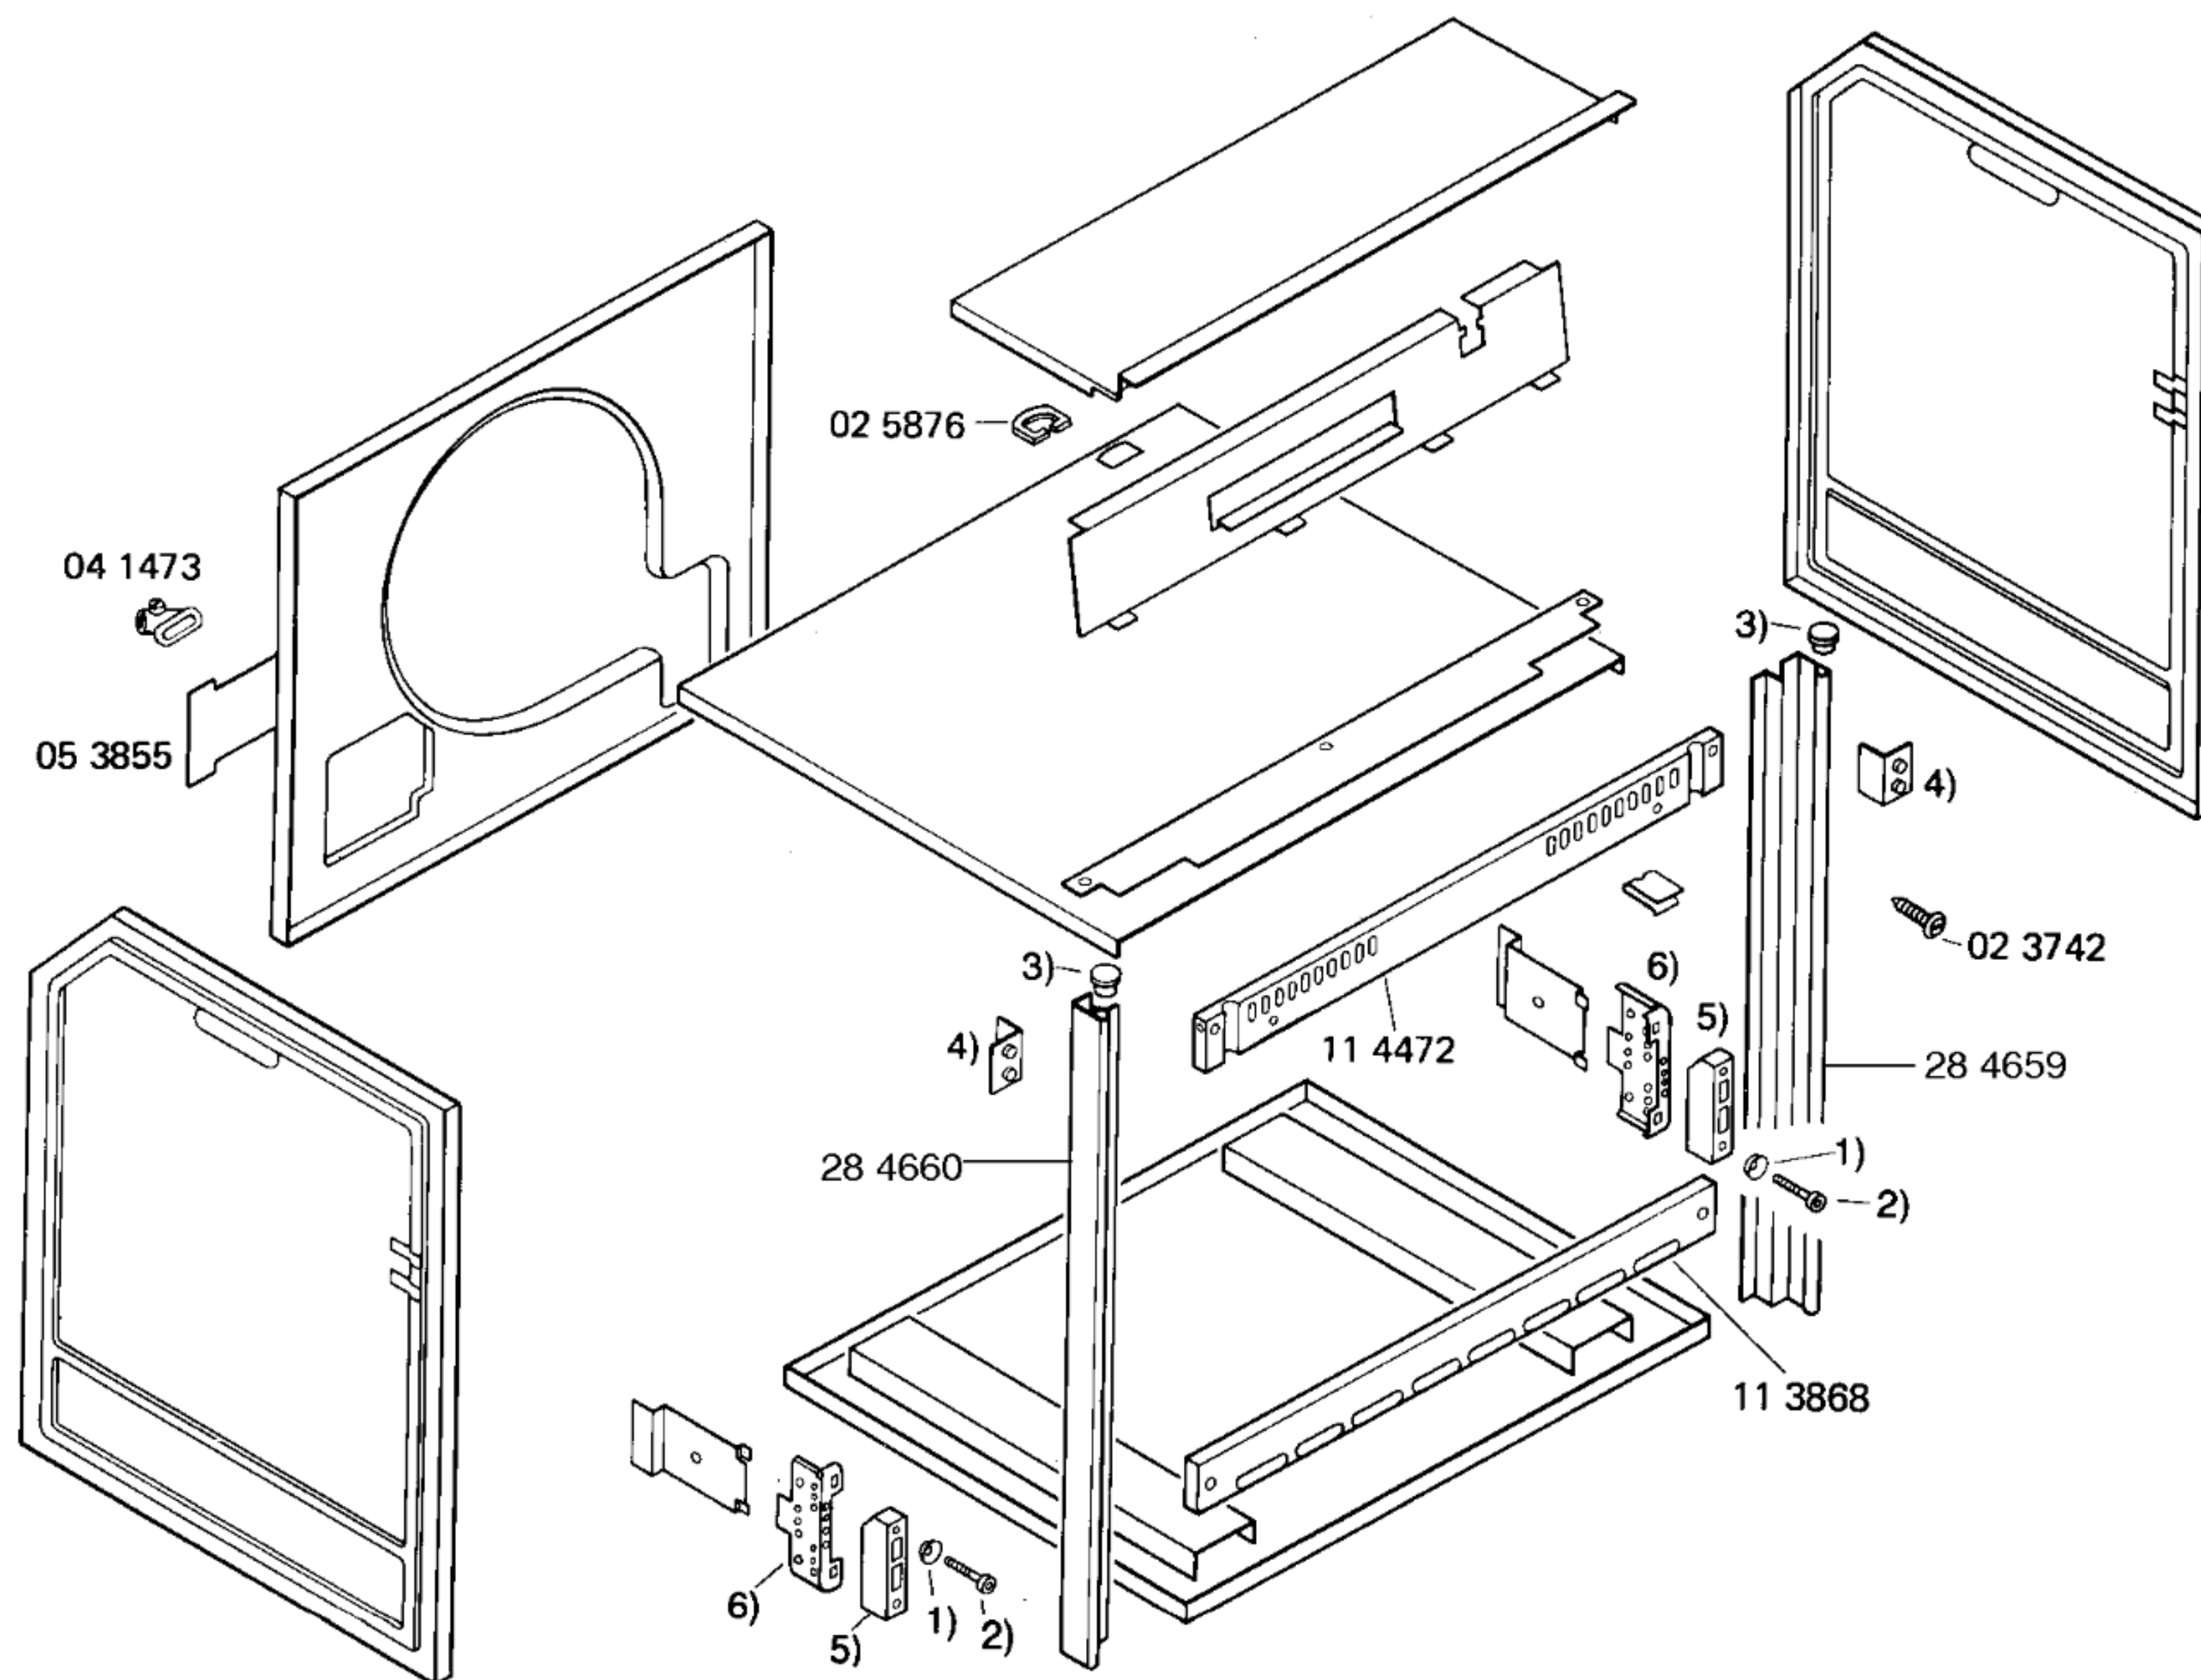

Gebrauchsanweisung
51 6755
(D)

Tips und Rezepte
51 4971


- 1) 05 3176
- 2) 02 1947
- 3) 02 5992
- 4) 01 8981
- 5) 05 1477
- 6) 08 3566


Zubehör:


Bratpfanne
Z1200X1




Backblech–Alu
Z1300X1

Backblech emailliert
Z1400X1

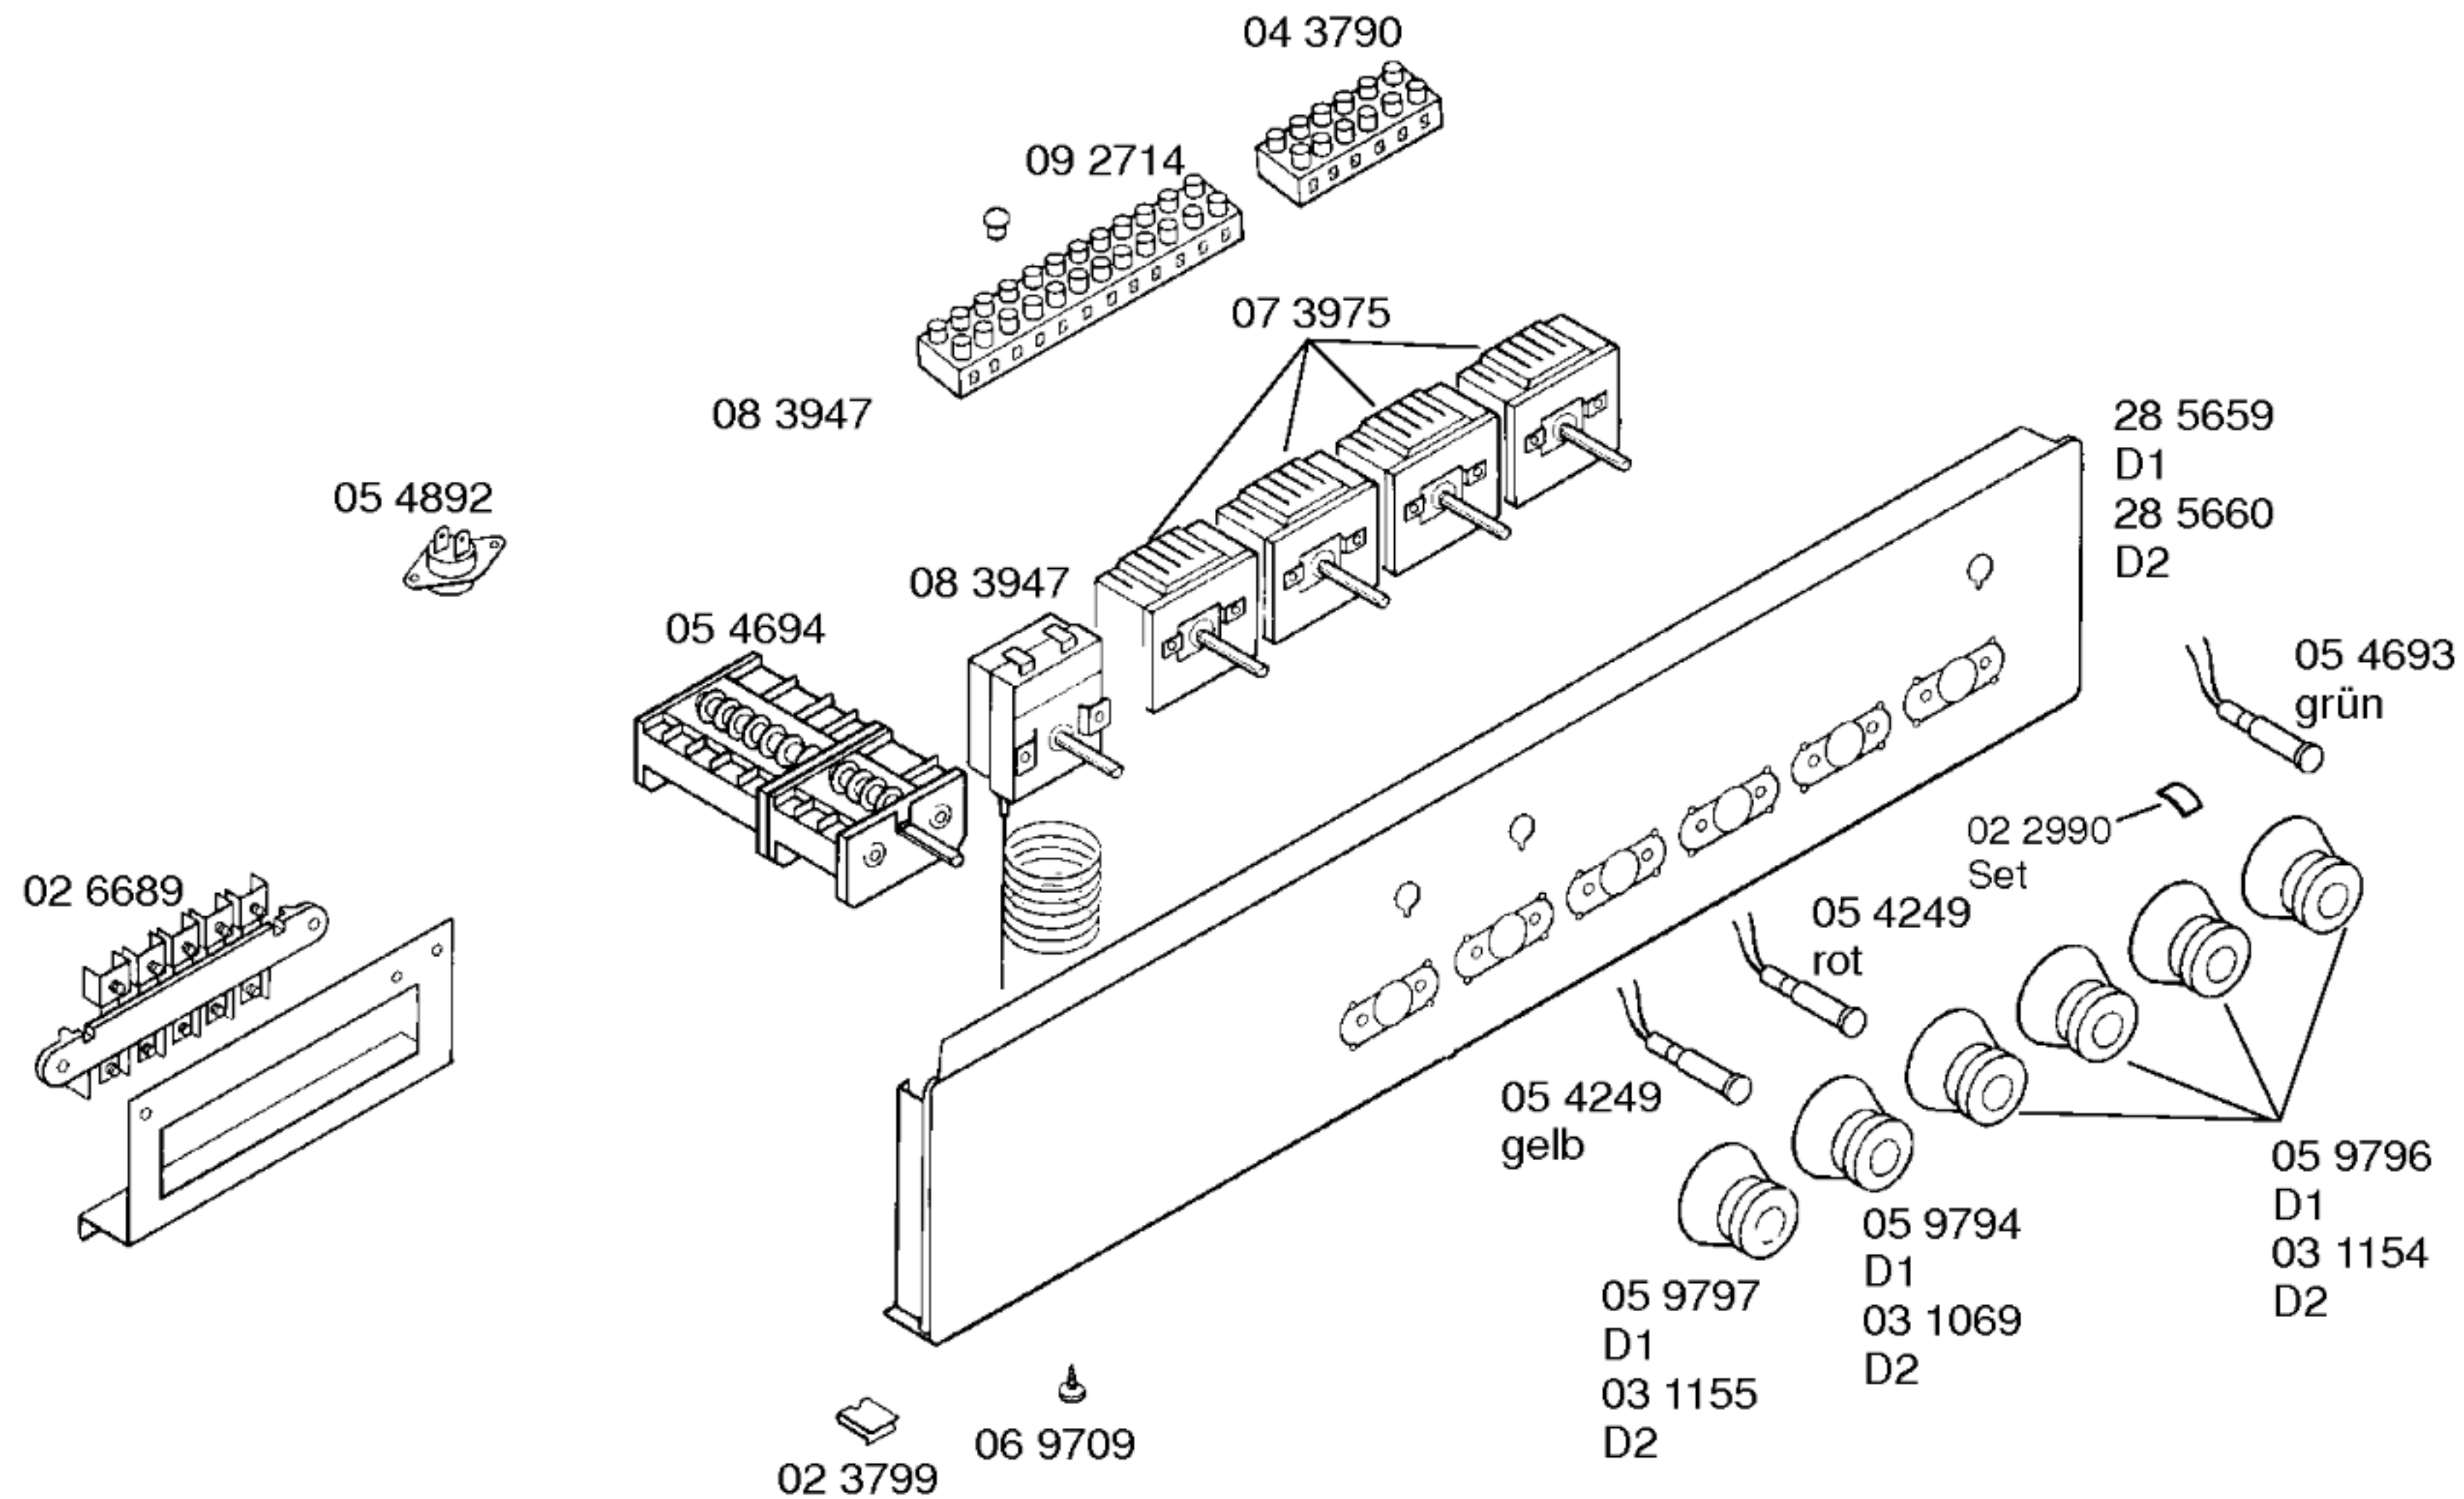

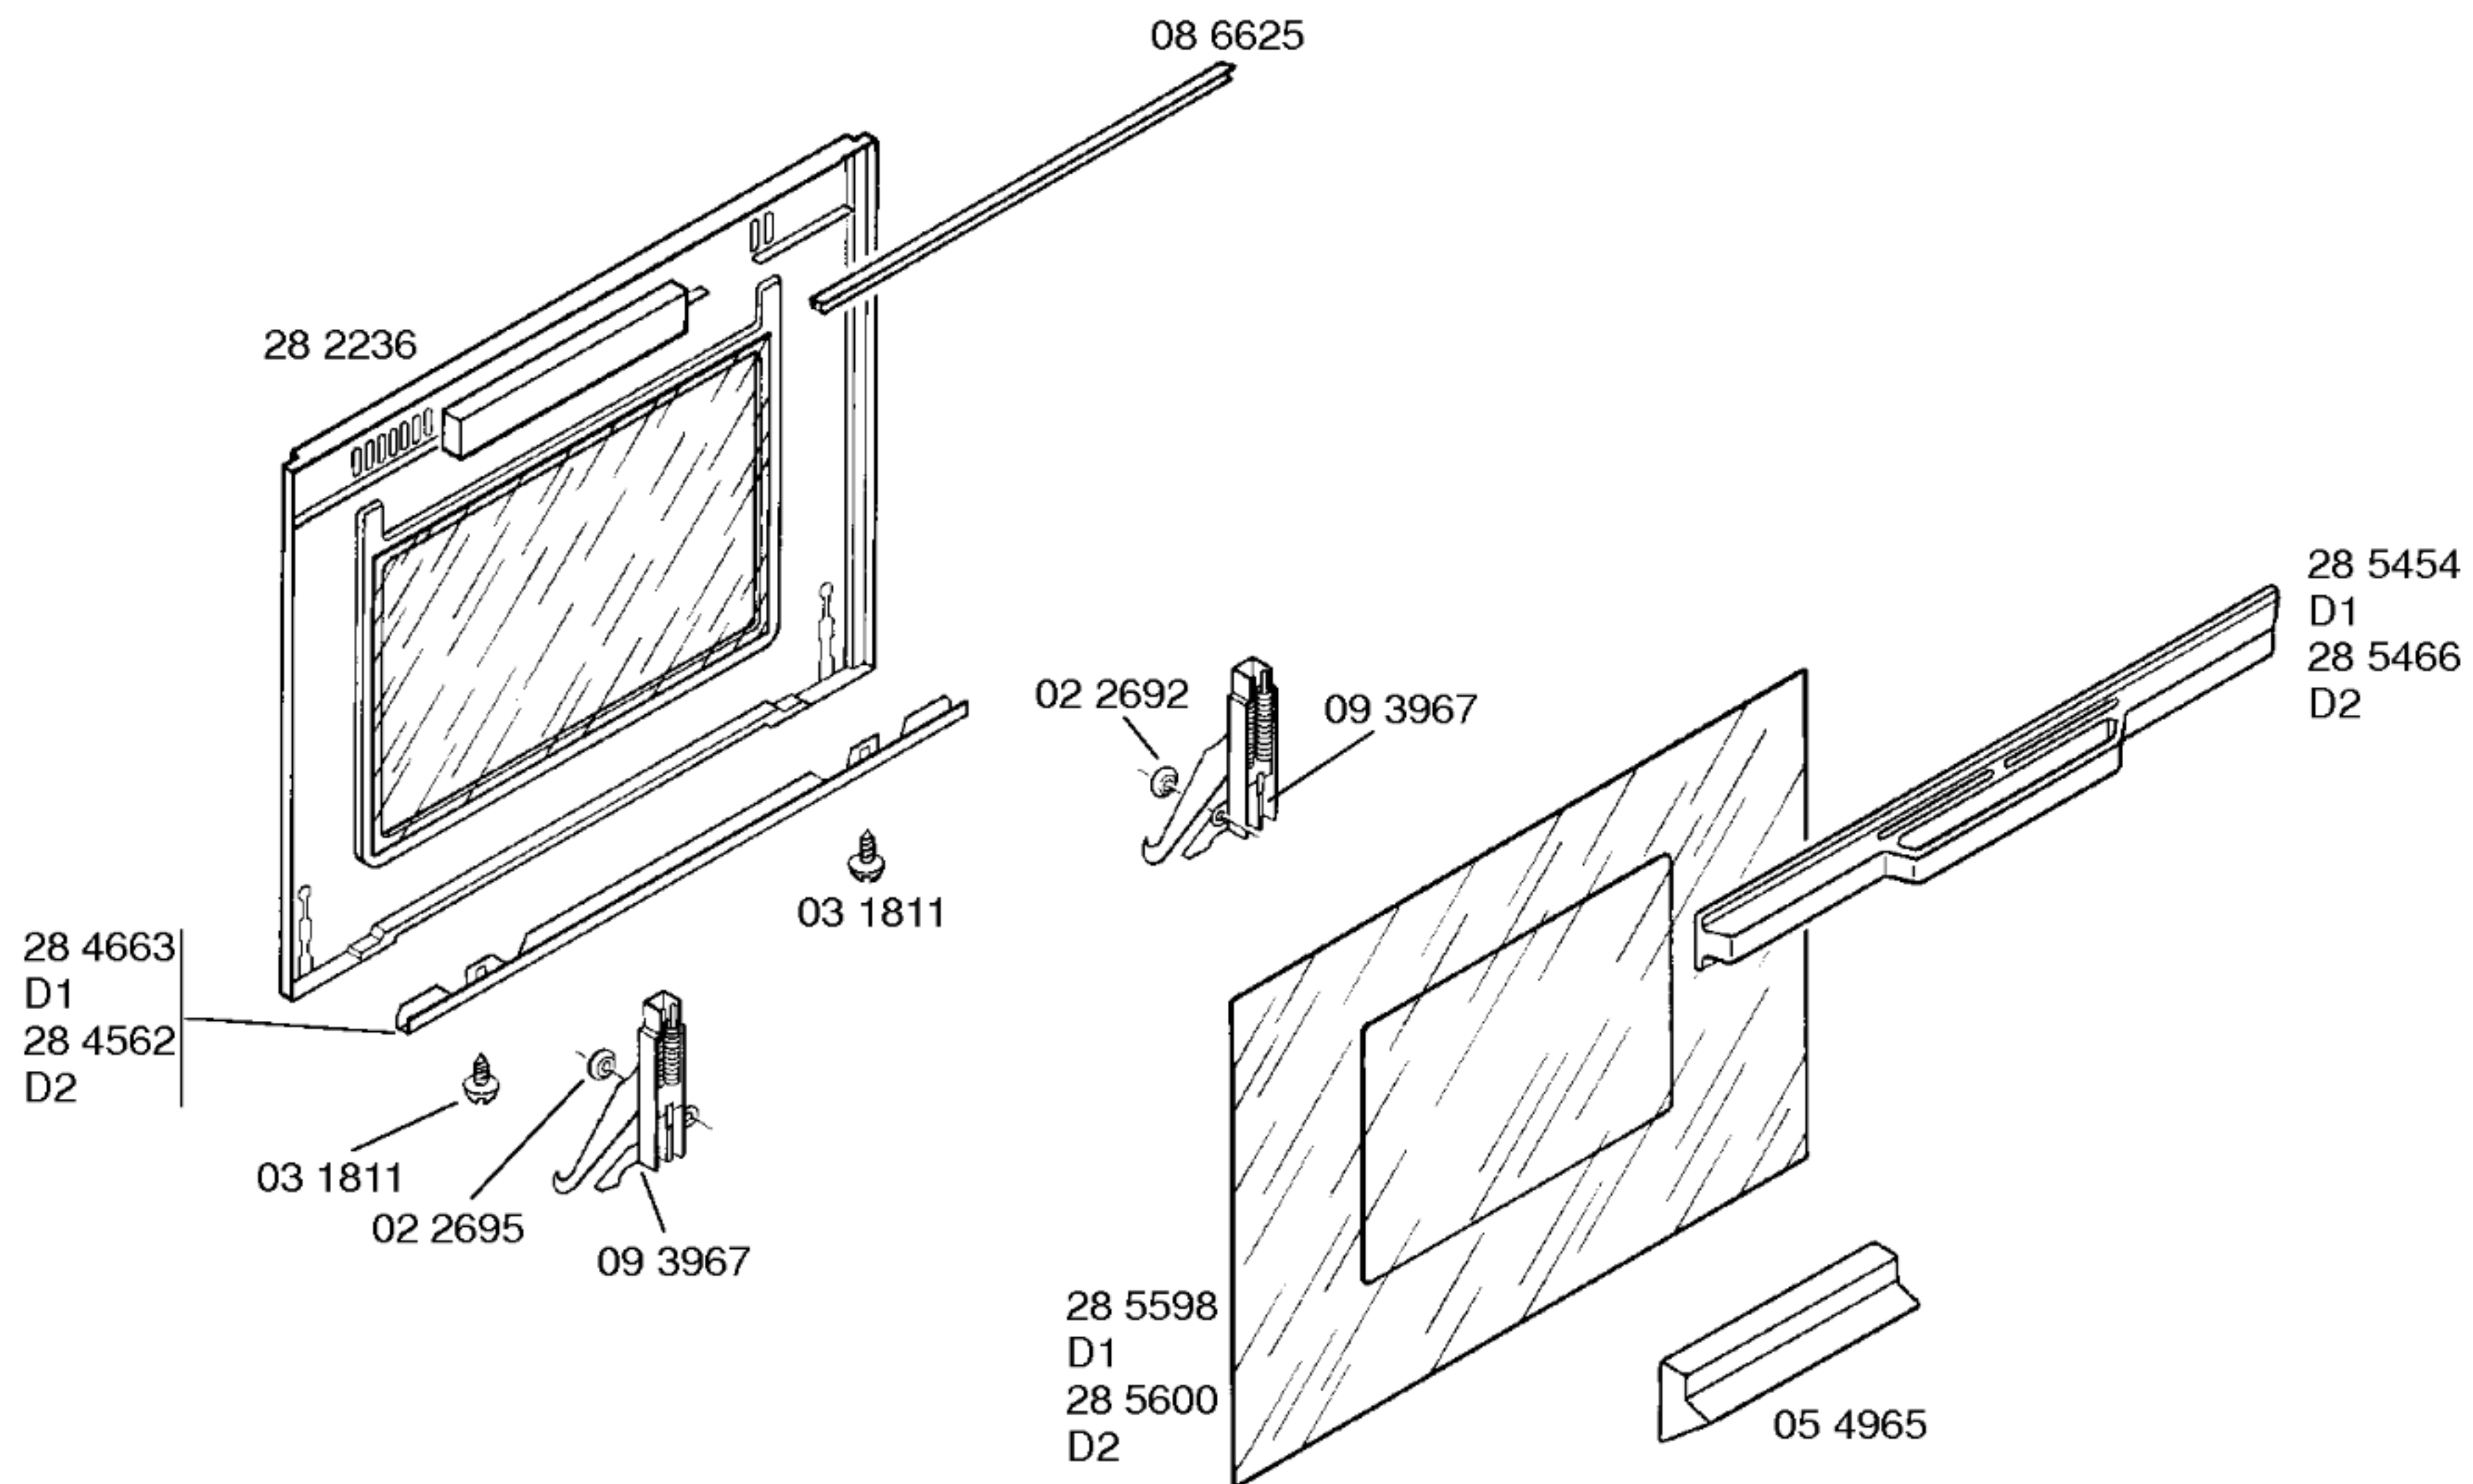

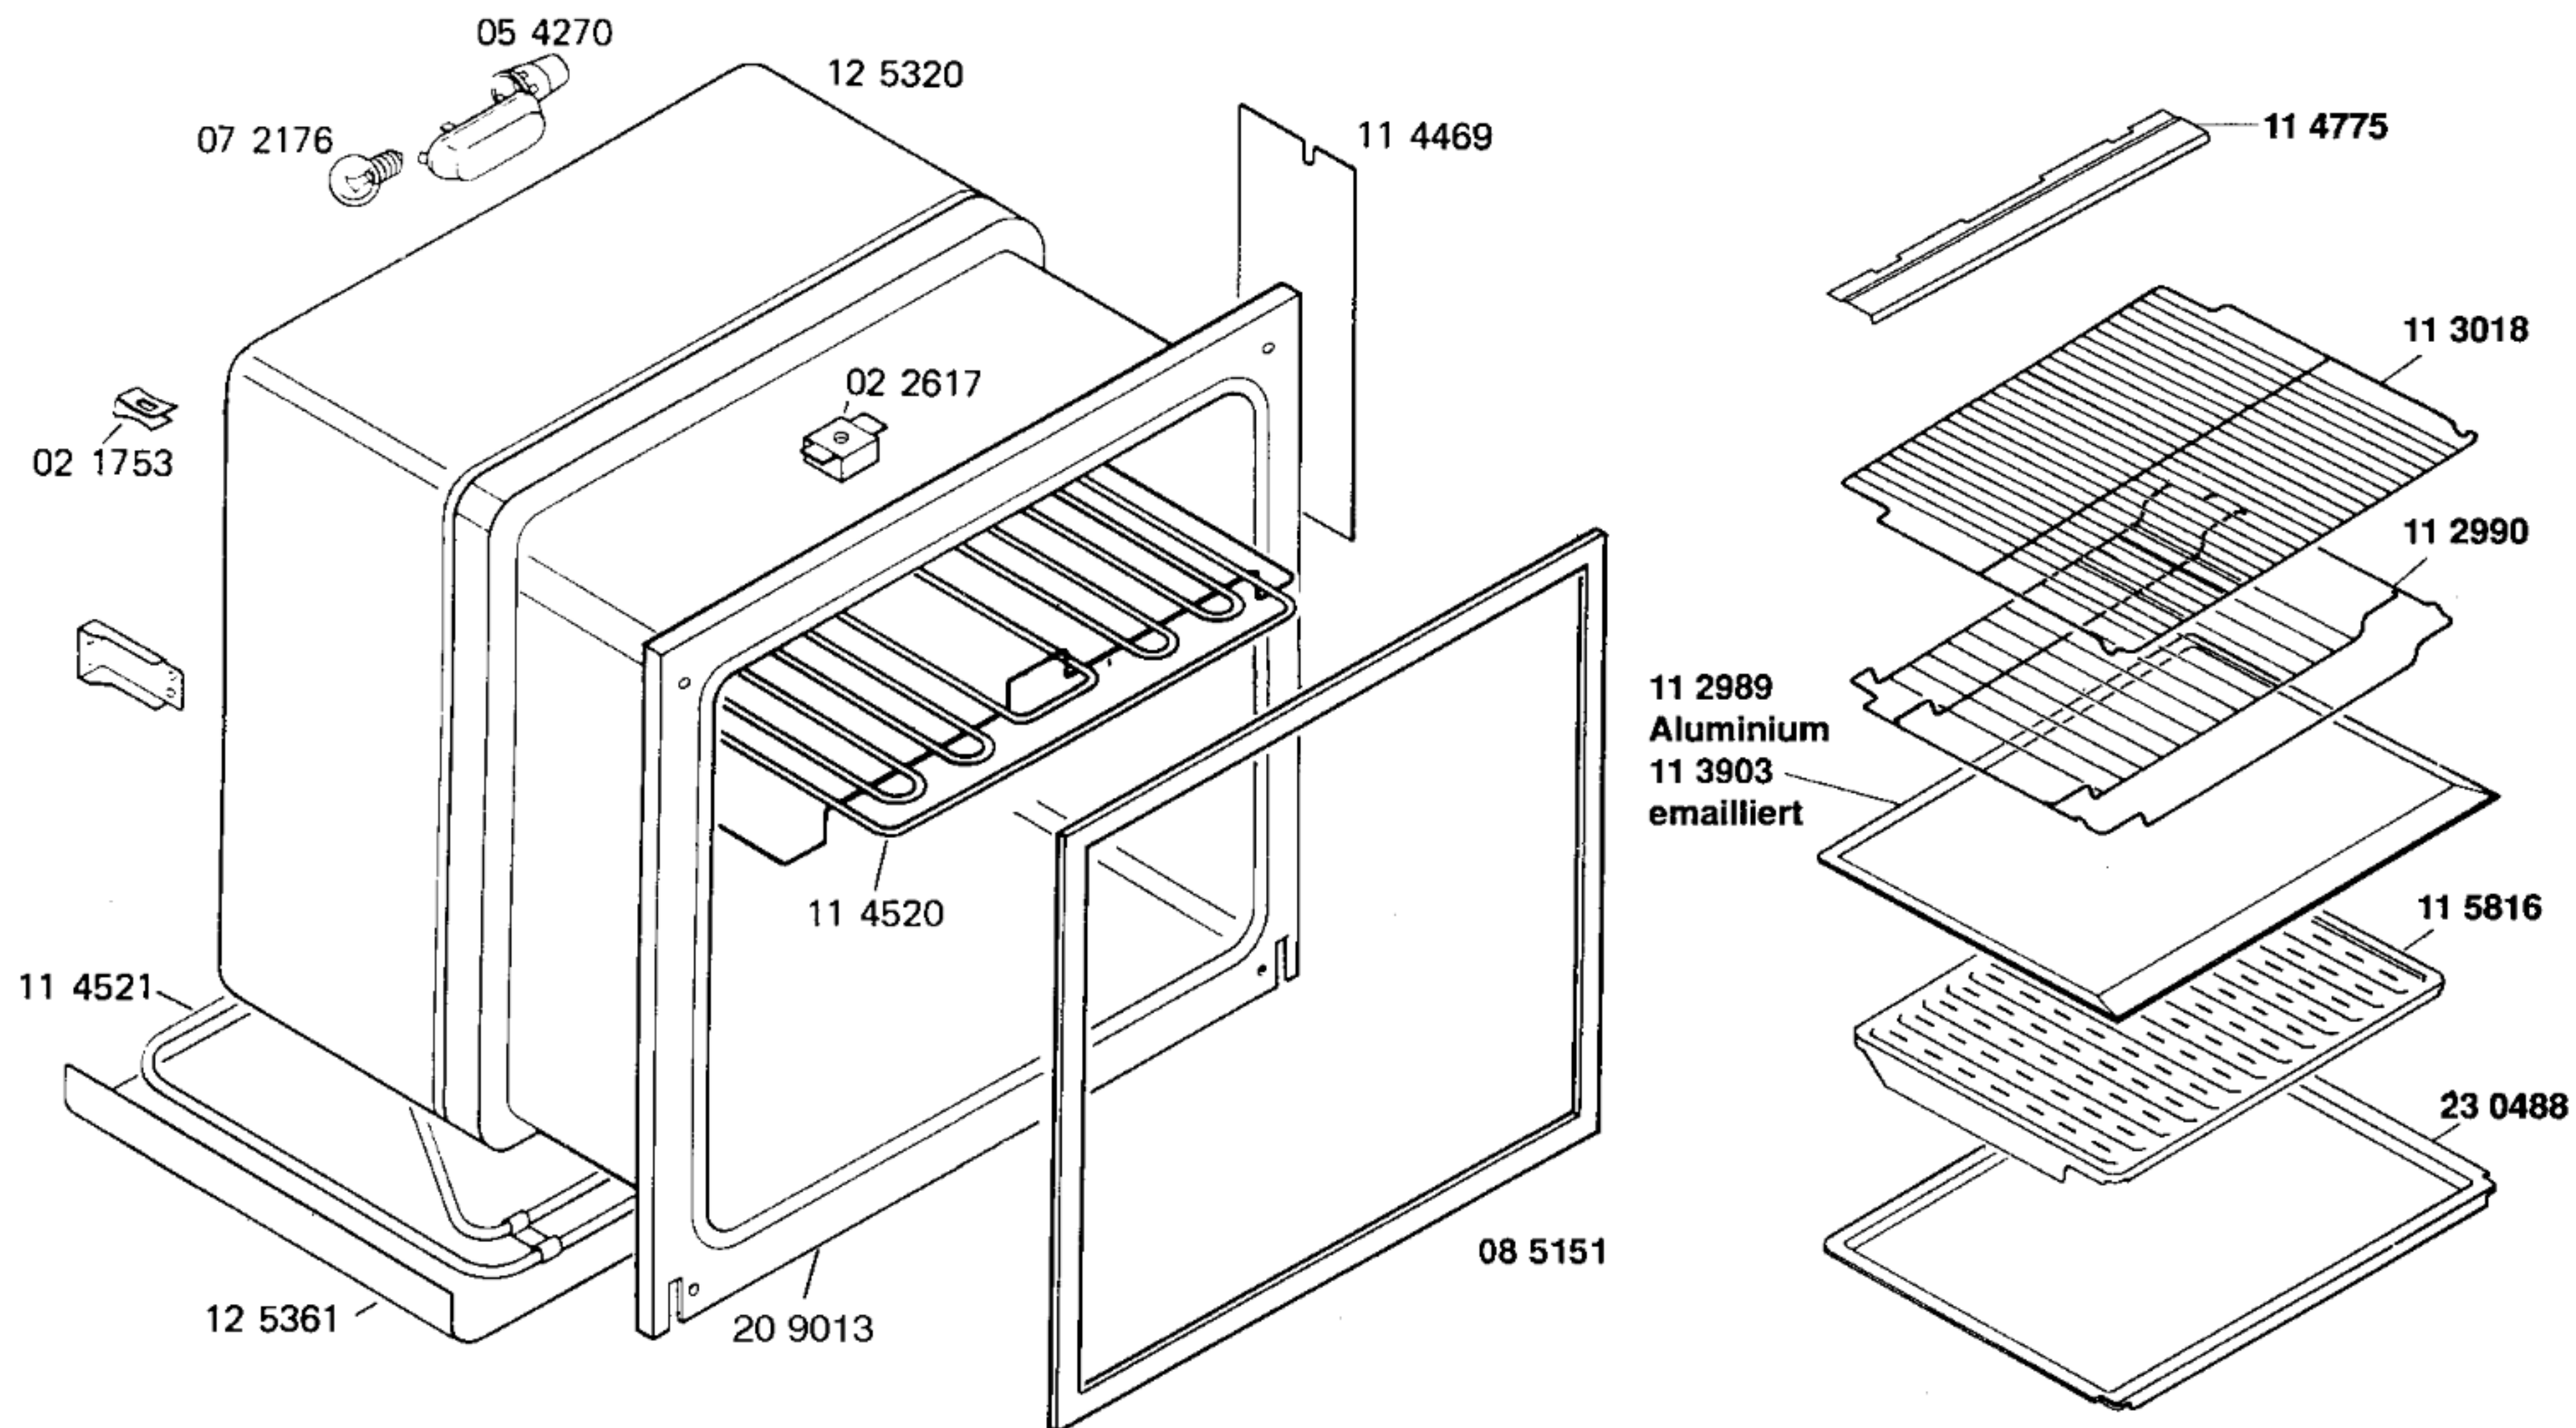

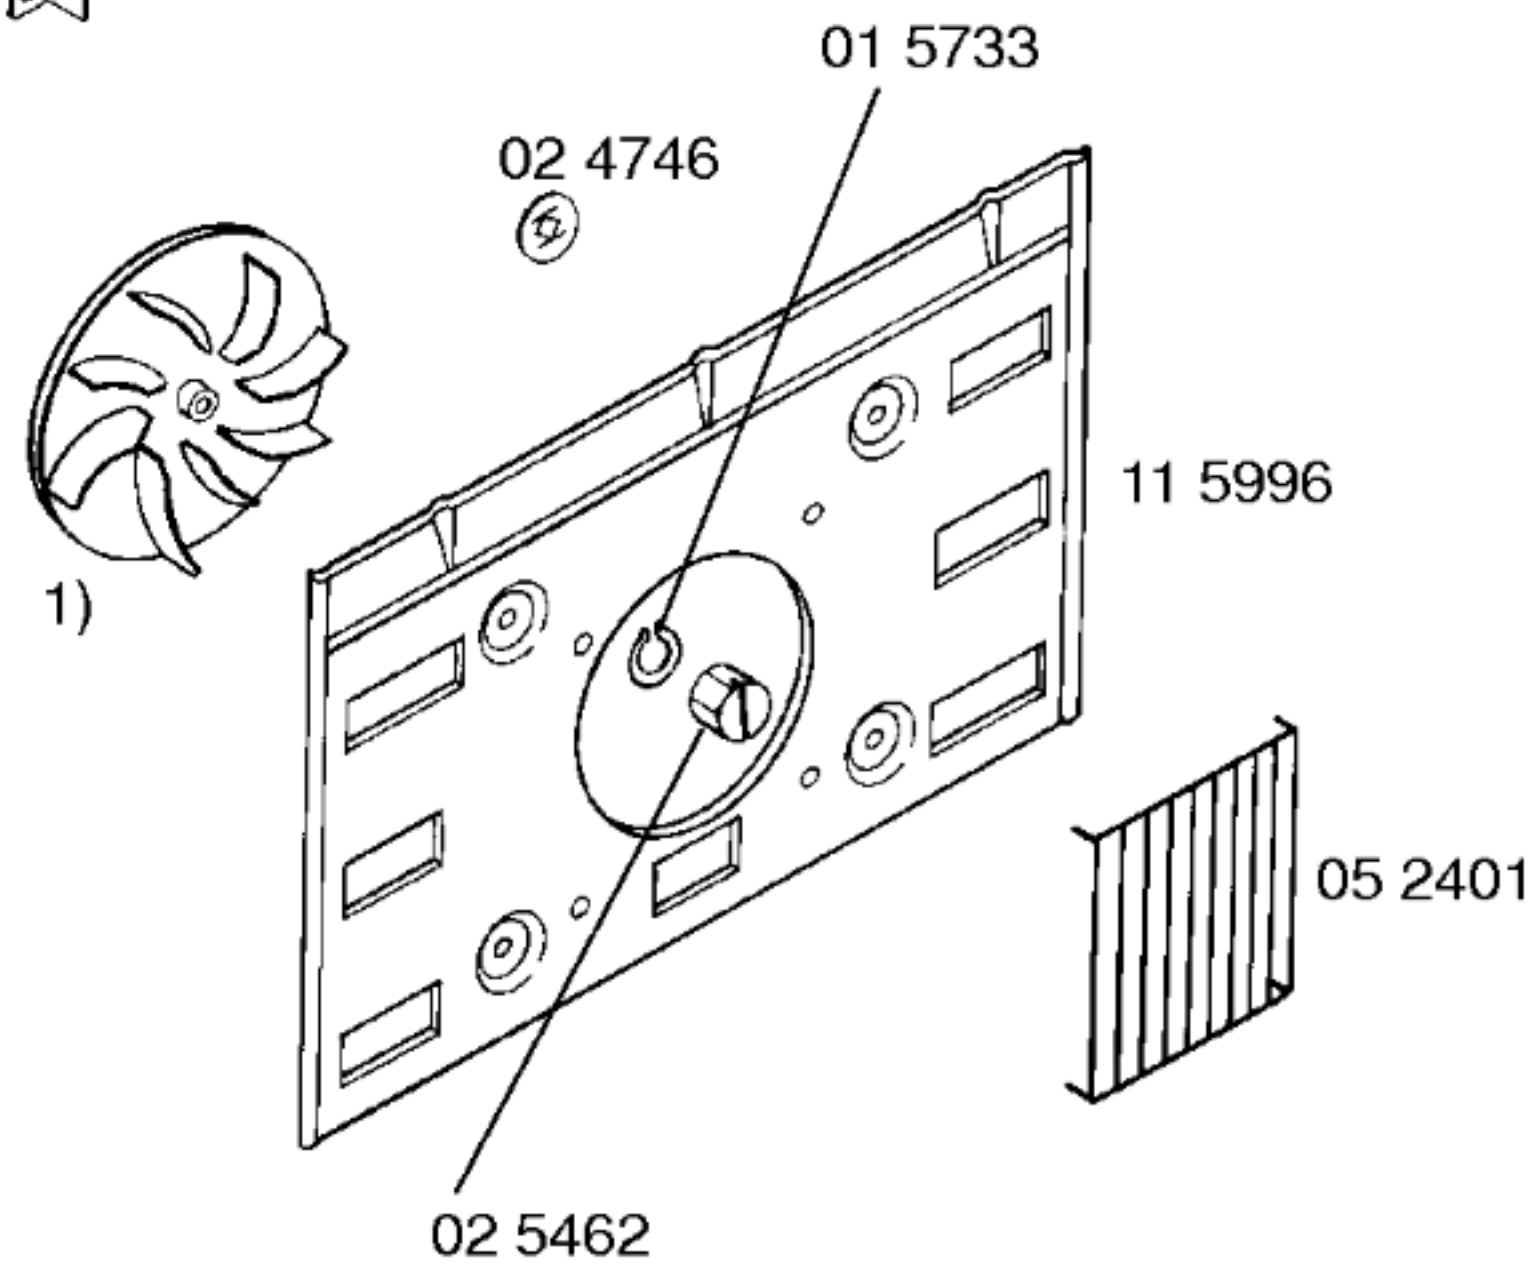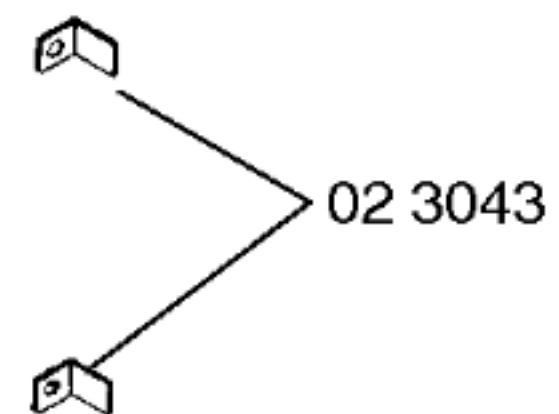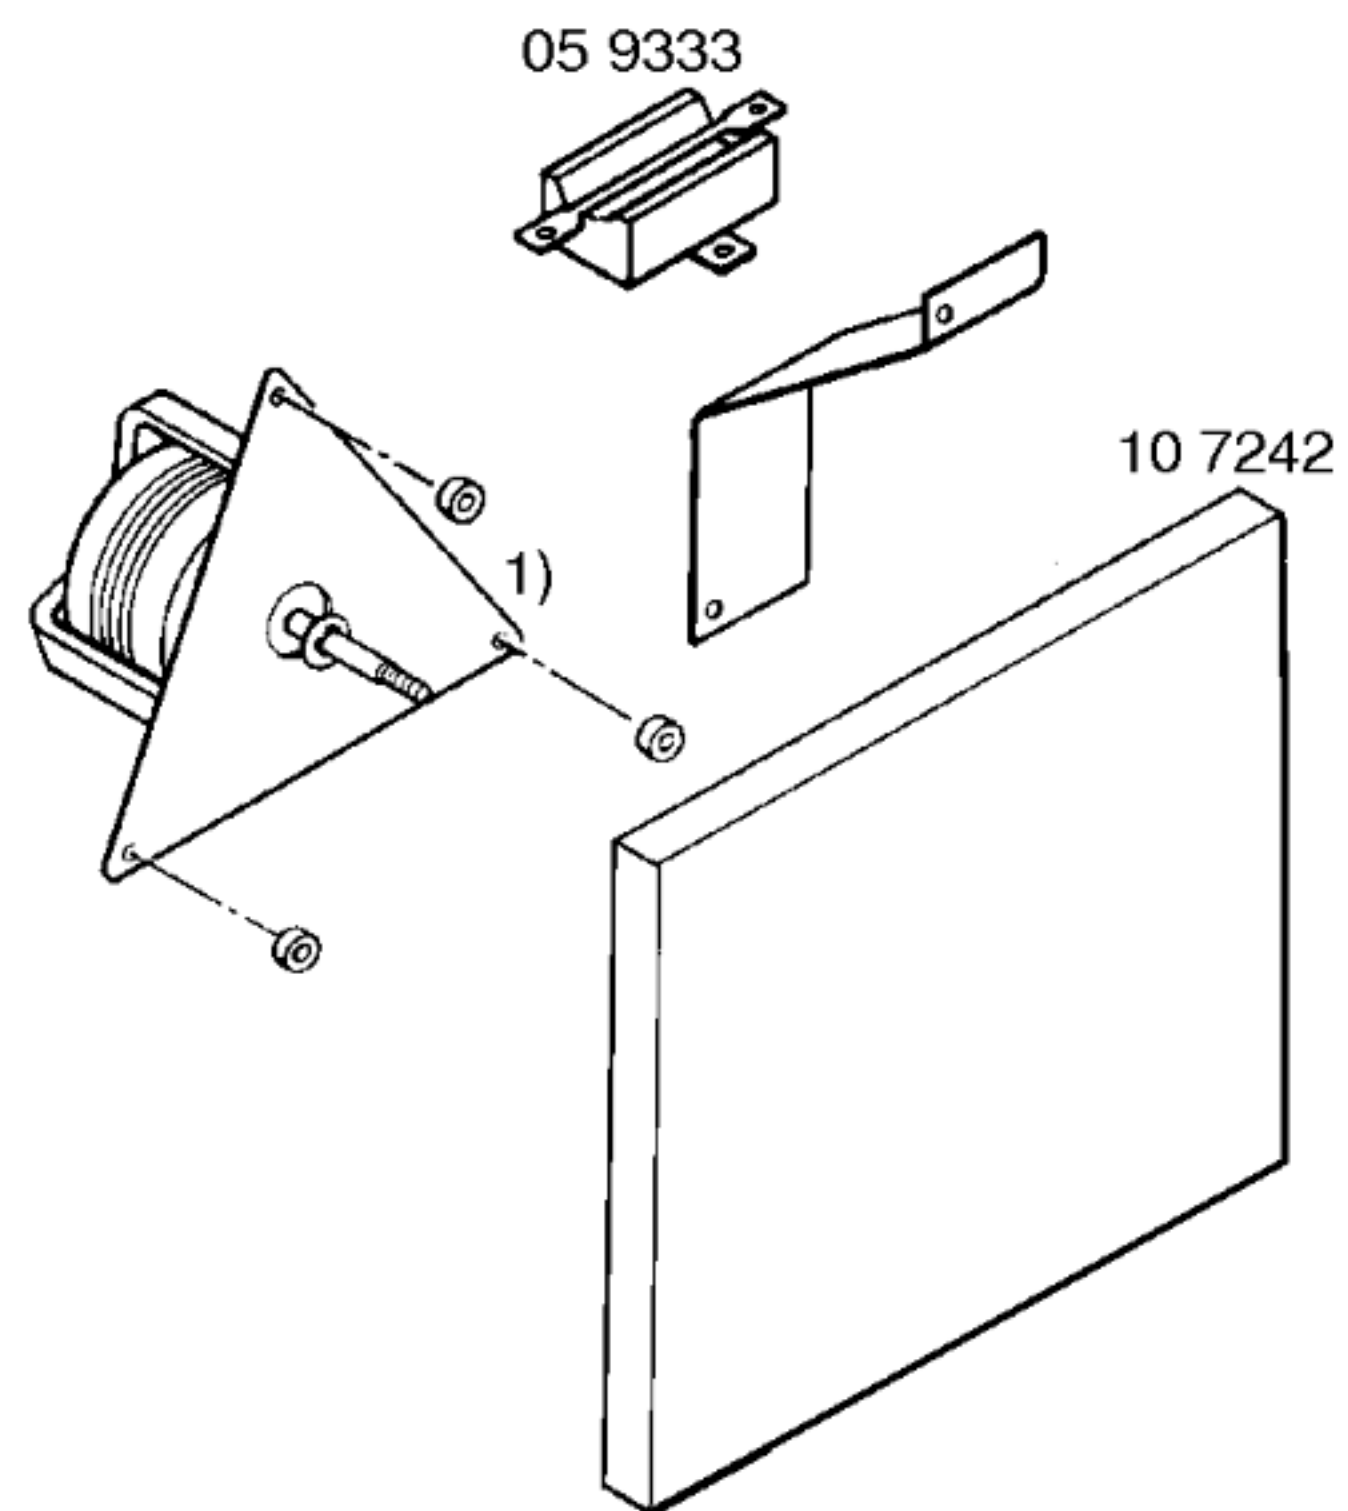

1) 14 0314
kompl.