


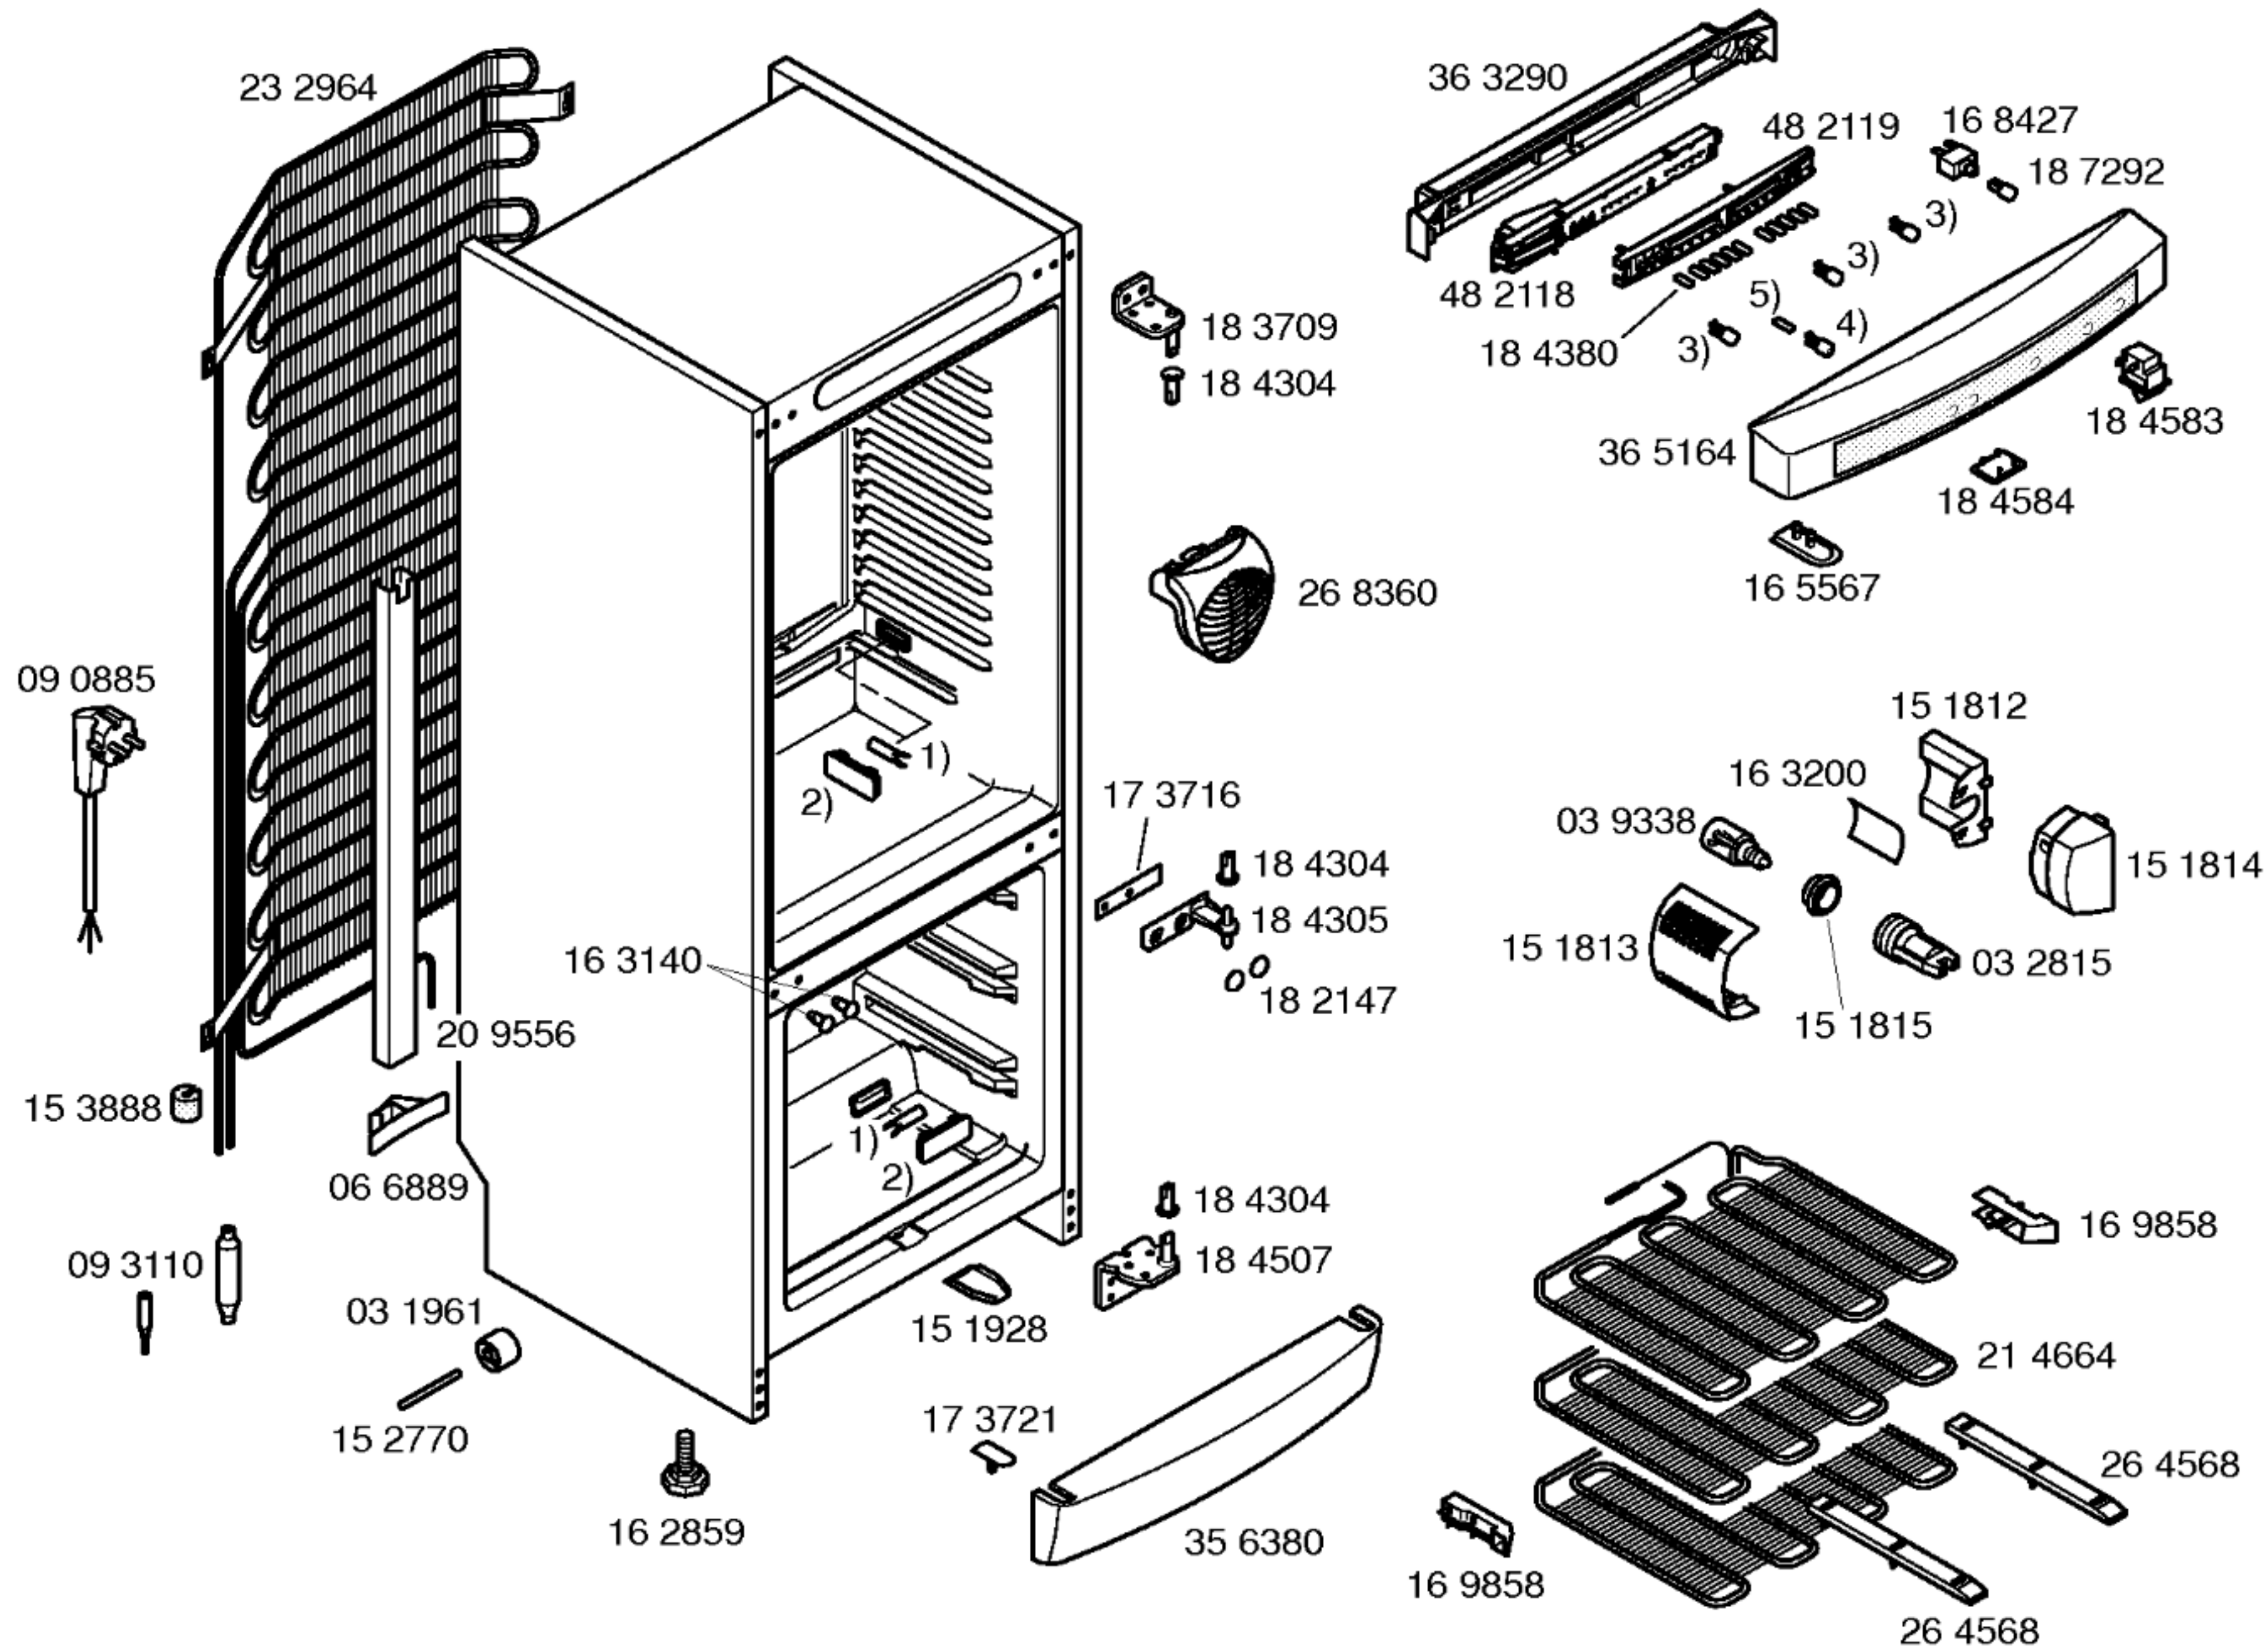



Ident – Nummern – Konstante
3740

Gebrauchsanweisung
52 9594
(de,en,fr,es,it,pt,el)

Montageanweisung
52 4888
(de,en,fr,nl,es,it,pt,el,pl,
sv,no,fi,da,ru)

- 1) 16 8766
Rep. Satz
- 2) 16 9176
- 3) 18 7290
- 4) 18 7291
- 5) 18 4433

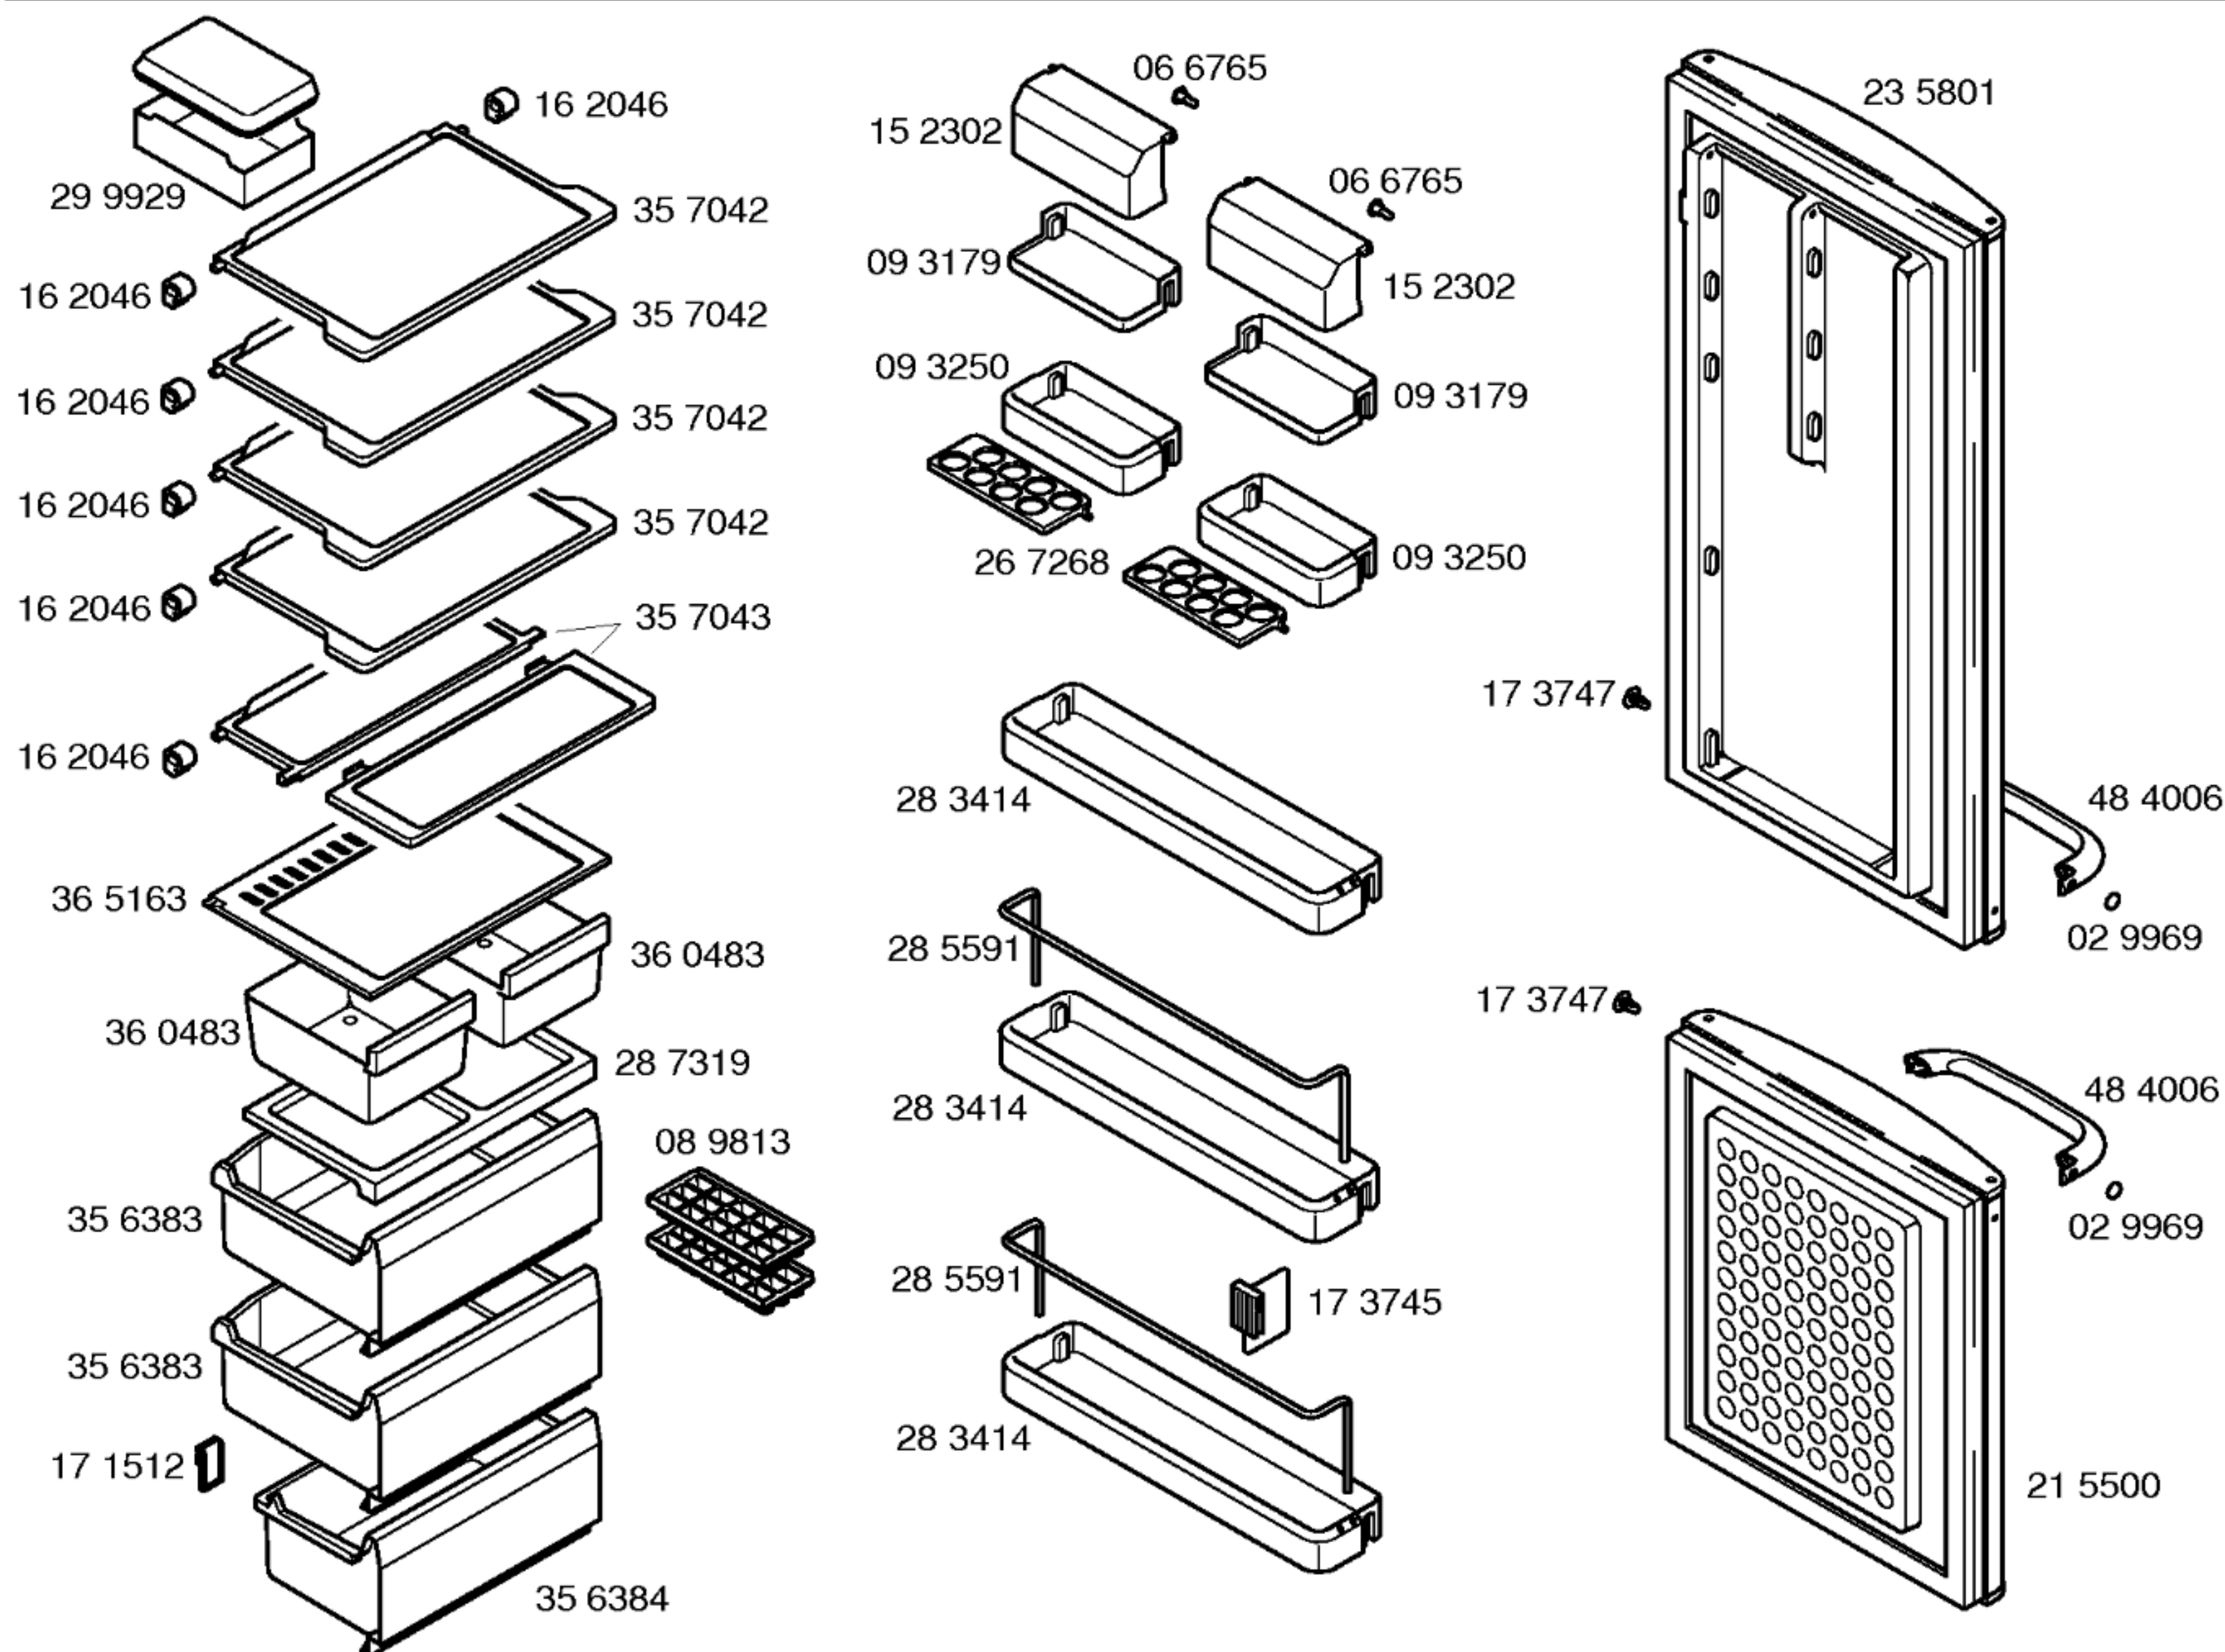

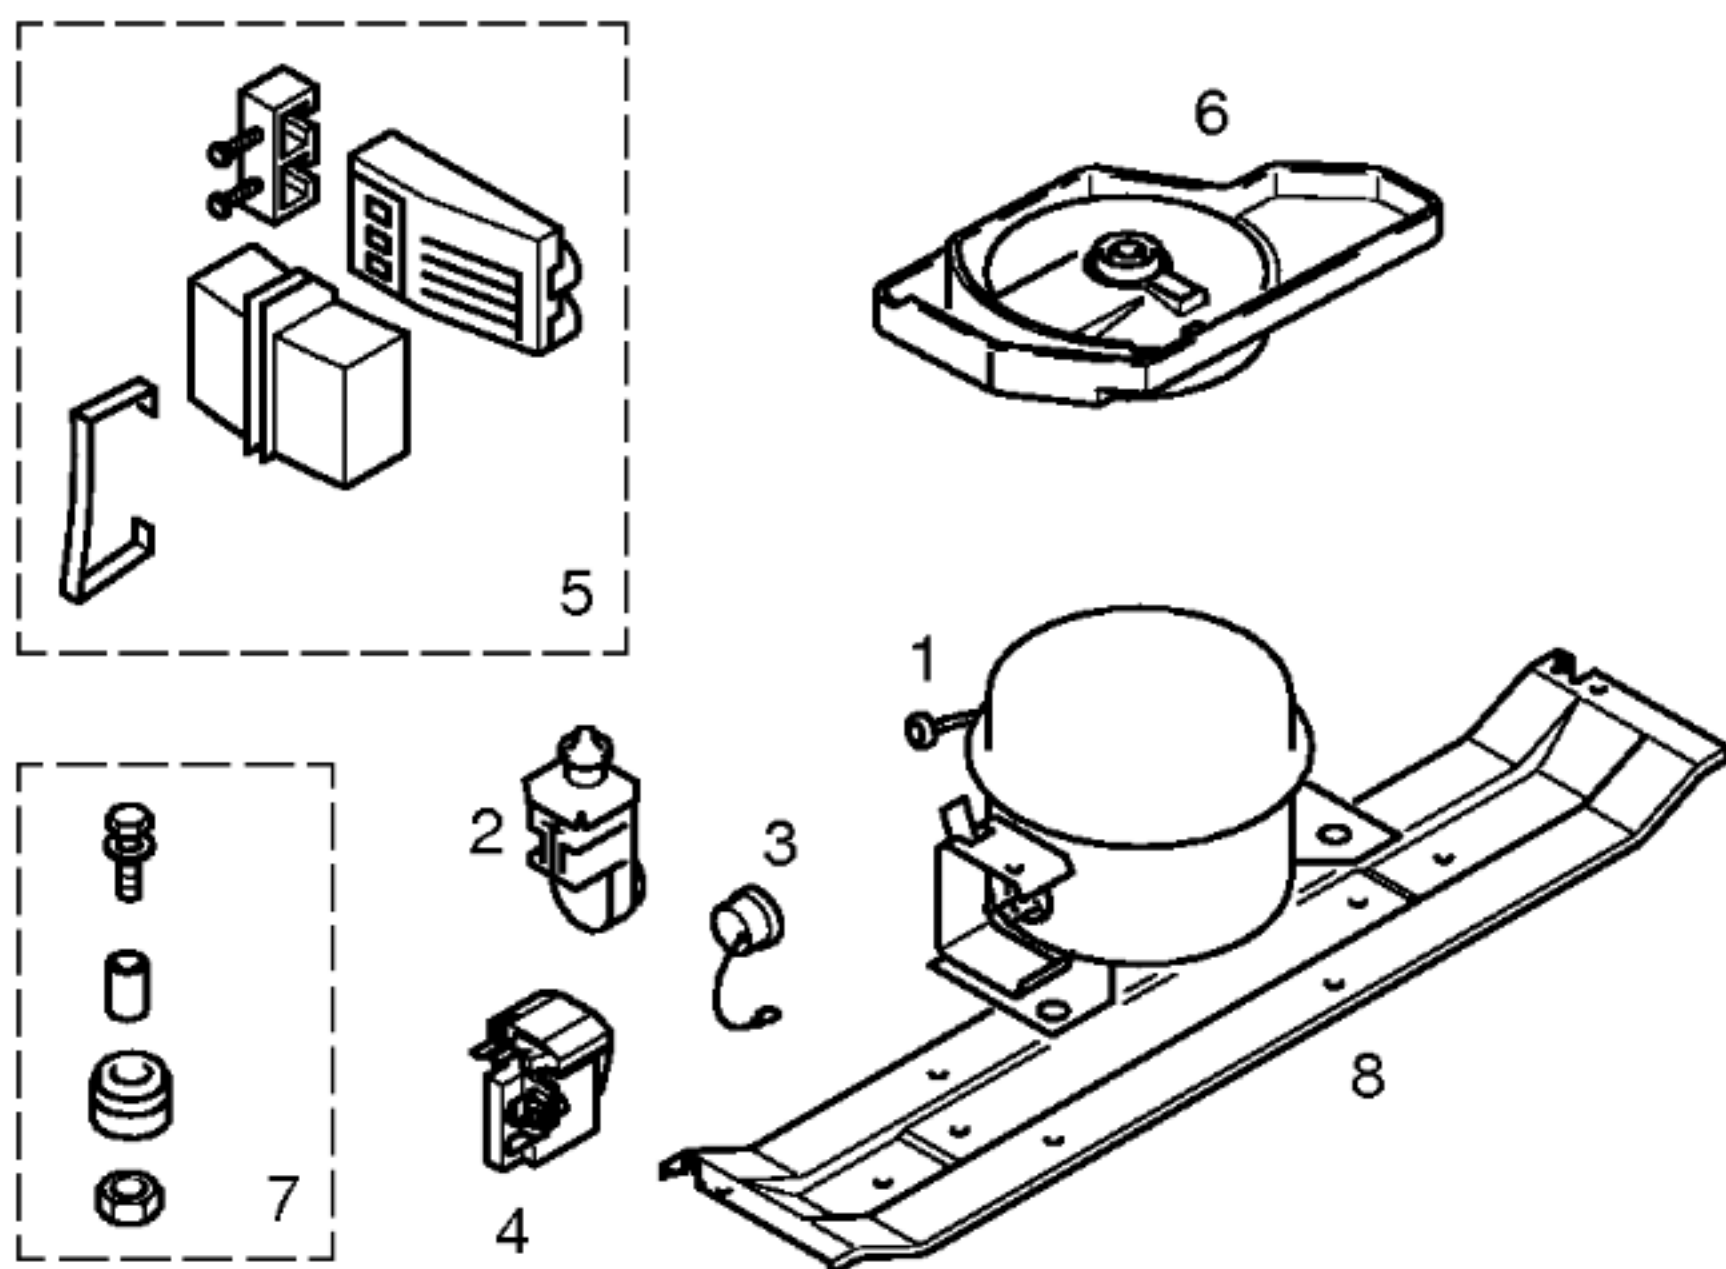

Pos.		*****		
	Aspera	Gold Star		
	BPK1072Y	ND69NAEG		
1	14 2000	14 2001		
2	15 4315			
3	17 3748			
4		17 1011		
5				
6	26 4123			
7	05 0166	05 0166		
8	28 8253	28 8253		
9				
10				
11				
12				
13				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS					

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux. Ohm		Aspera BPK1072Y 0,47 33,10 38,20		GoldStar ND69NAEG	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ Valeurs de commutation/Desconex. („abtaven“ od) Verdampfersensor/Evaporator sensor/Sonda evaporador Schaltwerte/Switching values/ Valeurs de commutation/Desconex.		Electronic. KS E2000 Komfort MIN. MAX. 11°C 1°C 10°C 0°C 4°C 4°C — —		Electronic. GS E2000 Komfort MIN. MAX. -12,5°C -24'5°C -14°C -26°C	
Füllmenge/Fill. quantily/Charge/Carga R600a. g		*		*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W		79		83	
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W					
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm					
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V					
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador					

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características