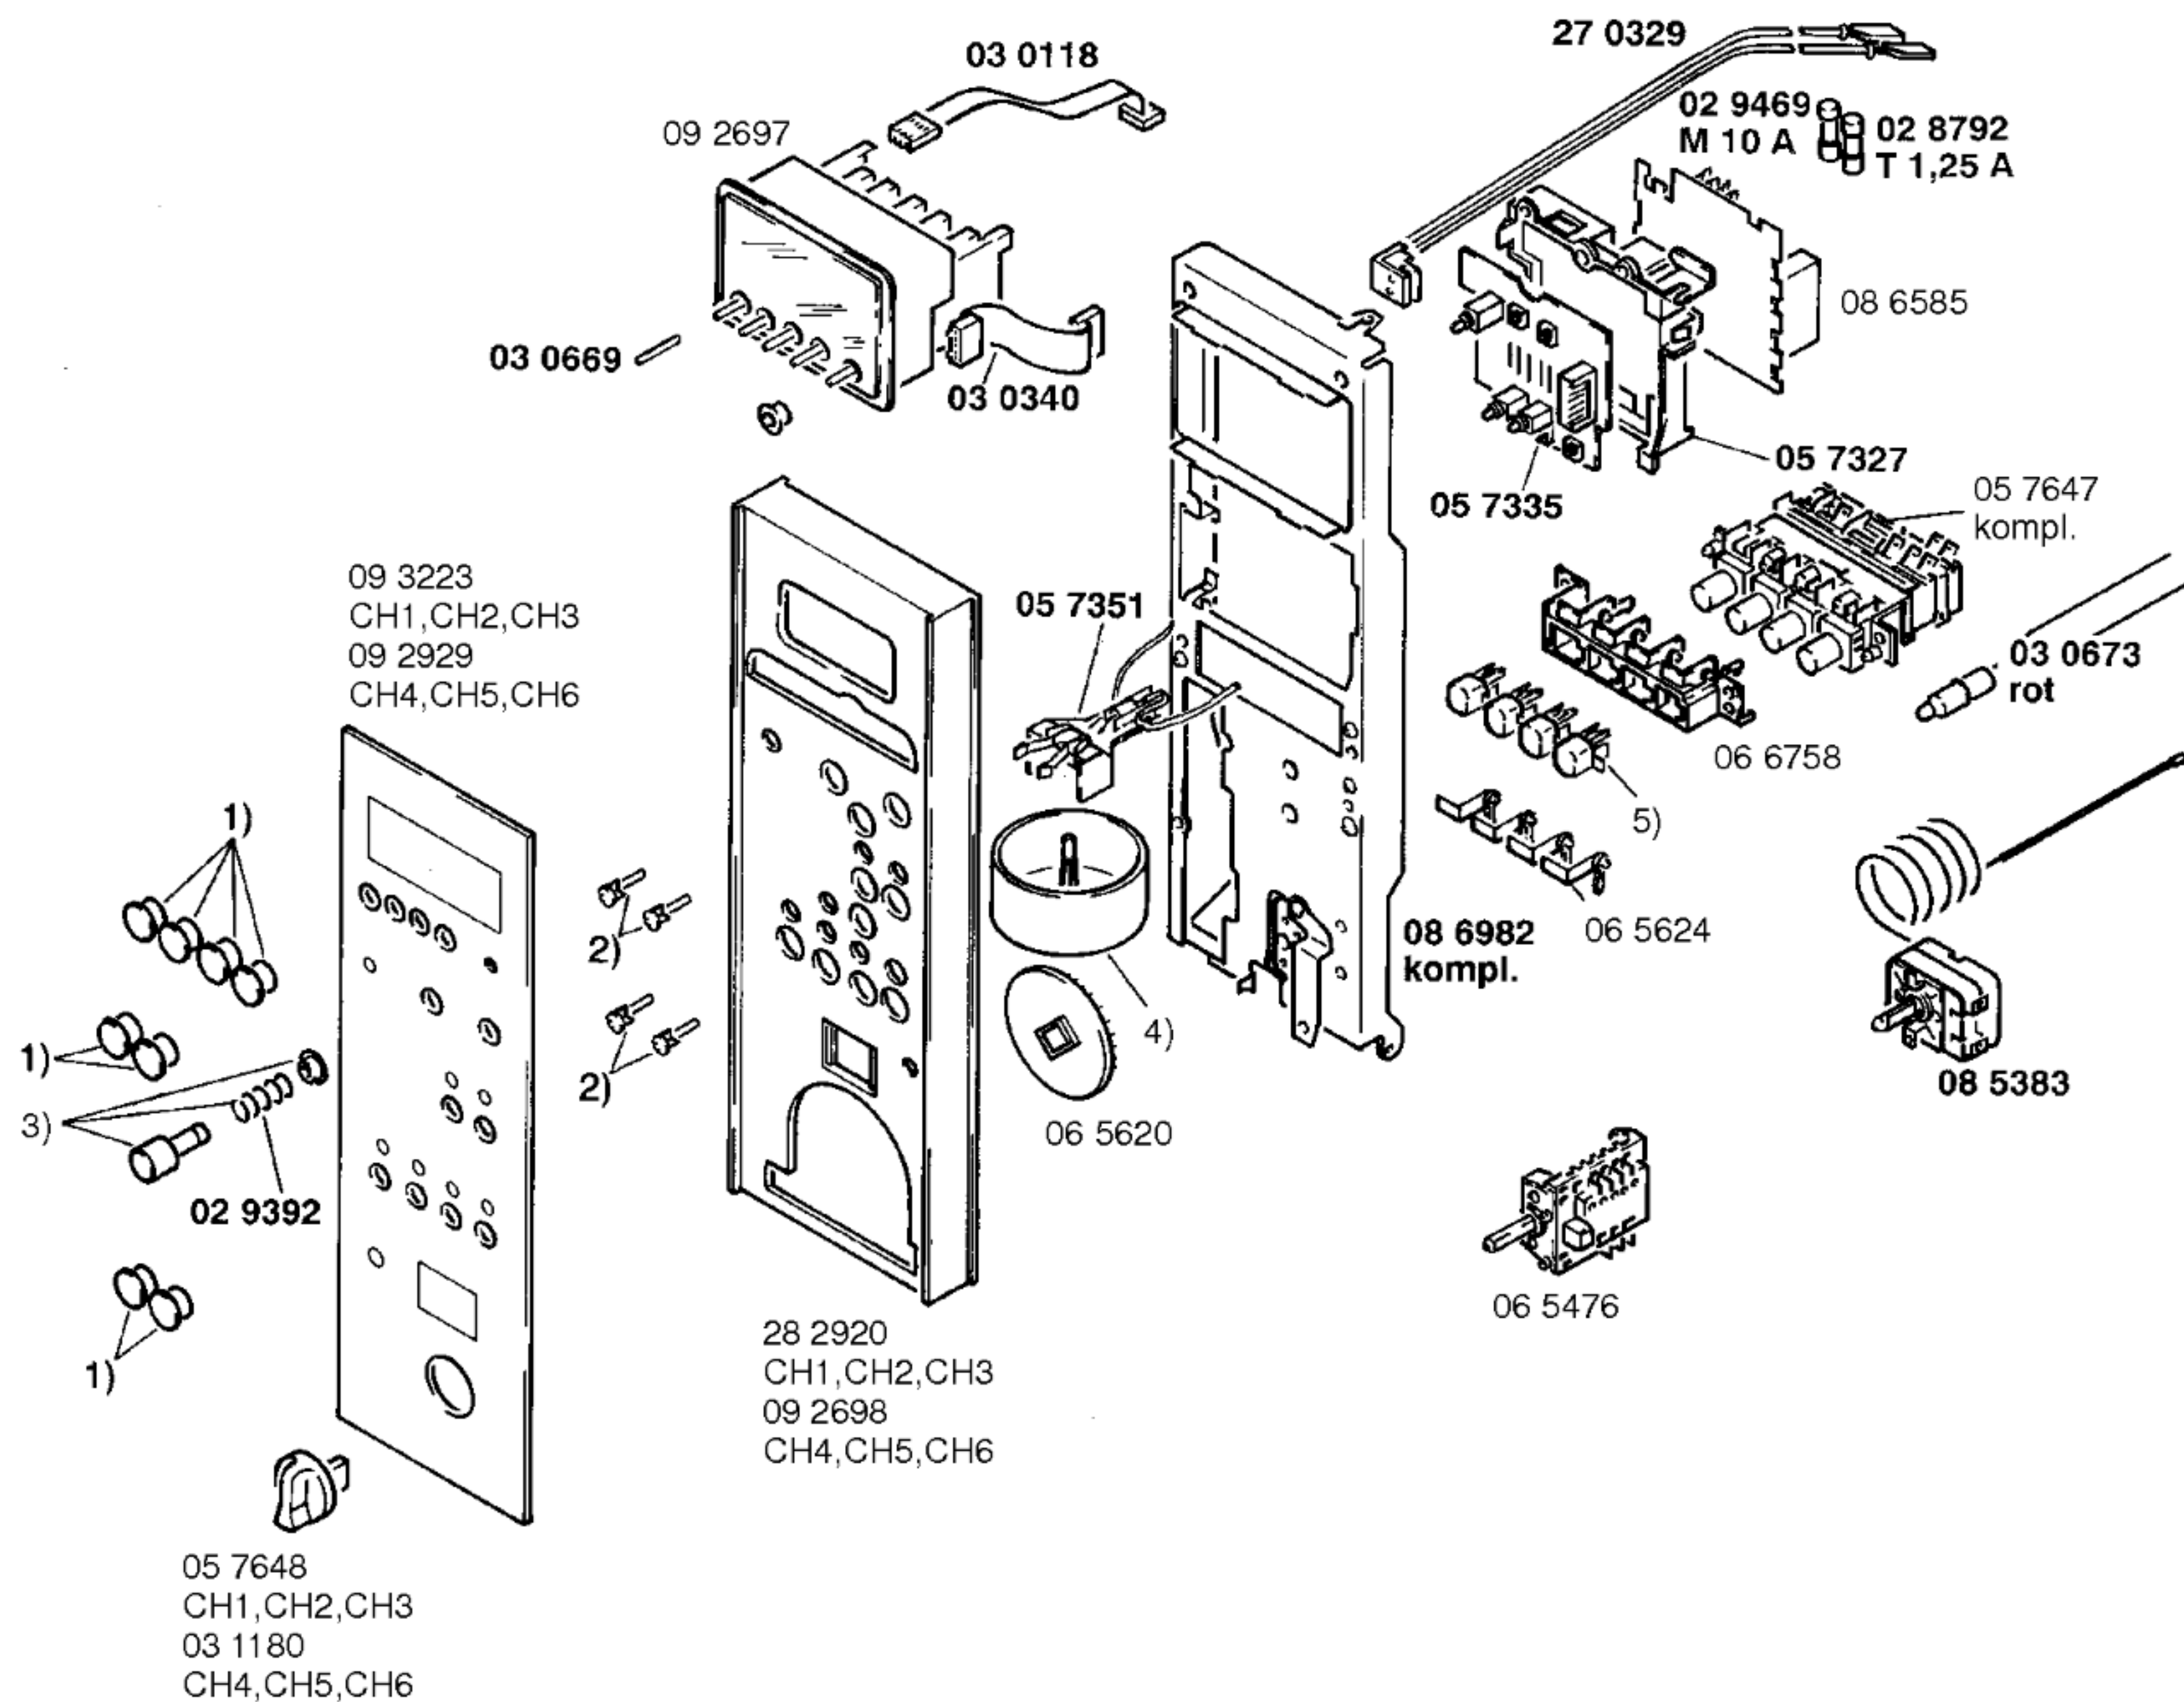


Ident – Nummern – Konstante
3740

Gebrauchsanweisung
51 6128
(D/10A)

- 1) 03 1084
CH1,CH2,CH3
03 0696
CH4,CH5,CH6
- 2) 03 0679
- 3) 03 2171
Set
CH1,CH2,CH3
02 9809
CH4,CH5,CH6
- 4) 06 6816
CH1,CH2,CH3
06 6007
CH4,CH5,CH6
- 5) 06 6757
CH1,CH2,CH3
06 5623
CH4,CH5,CH6

Zubehör:

Einbaurahmen
HMZ 8020
kratzfeste Abdeckung
HMZ 8720
Alu-Backblech
HMZ 19BB
Glaspfanne
HMZ 10GP
Glasbräter
HMZ 21GB

**BOSCH**


HMG8462CH/01-CH1,schwarz-braun
HMG8462CH/02-CH2,schwarz-braun
HMG8462CH/03-CH3,schwarz-braun
HMG8422CH/01-CH4,weiss

HMG8422CH/02-CH5,weiss
HMG8422CH/03-CH6,weiss

HERDE
Mikrowellenherde

Ident – Nummern – Konstante
3740

- 1) 03 0671
2) 03 0813
Arretierstift

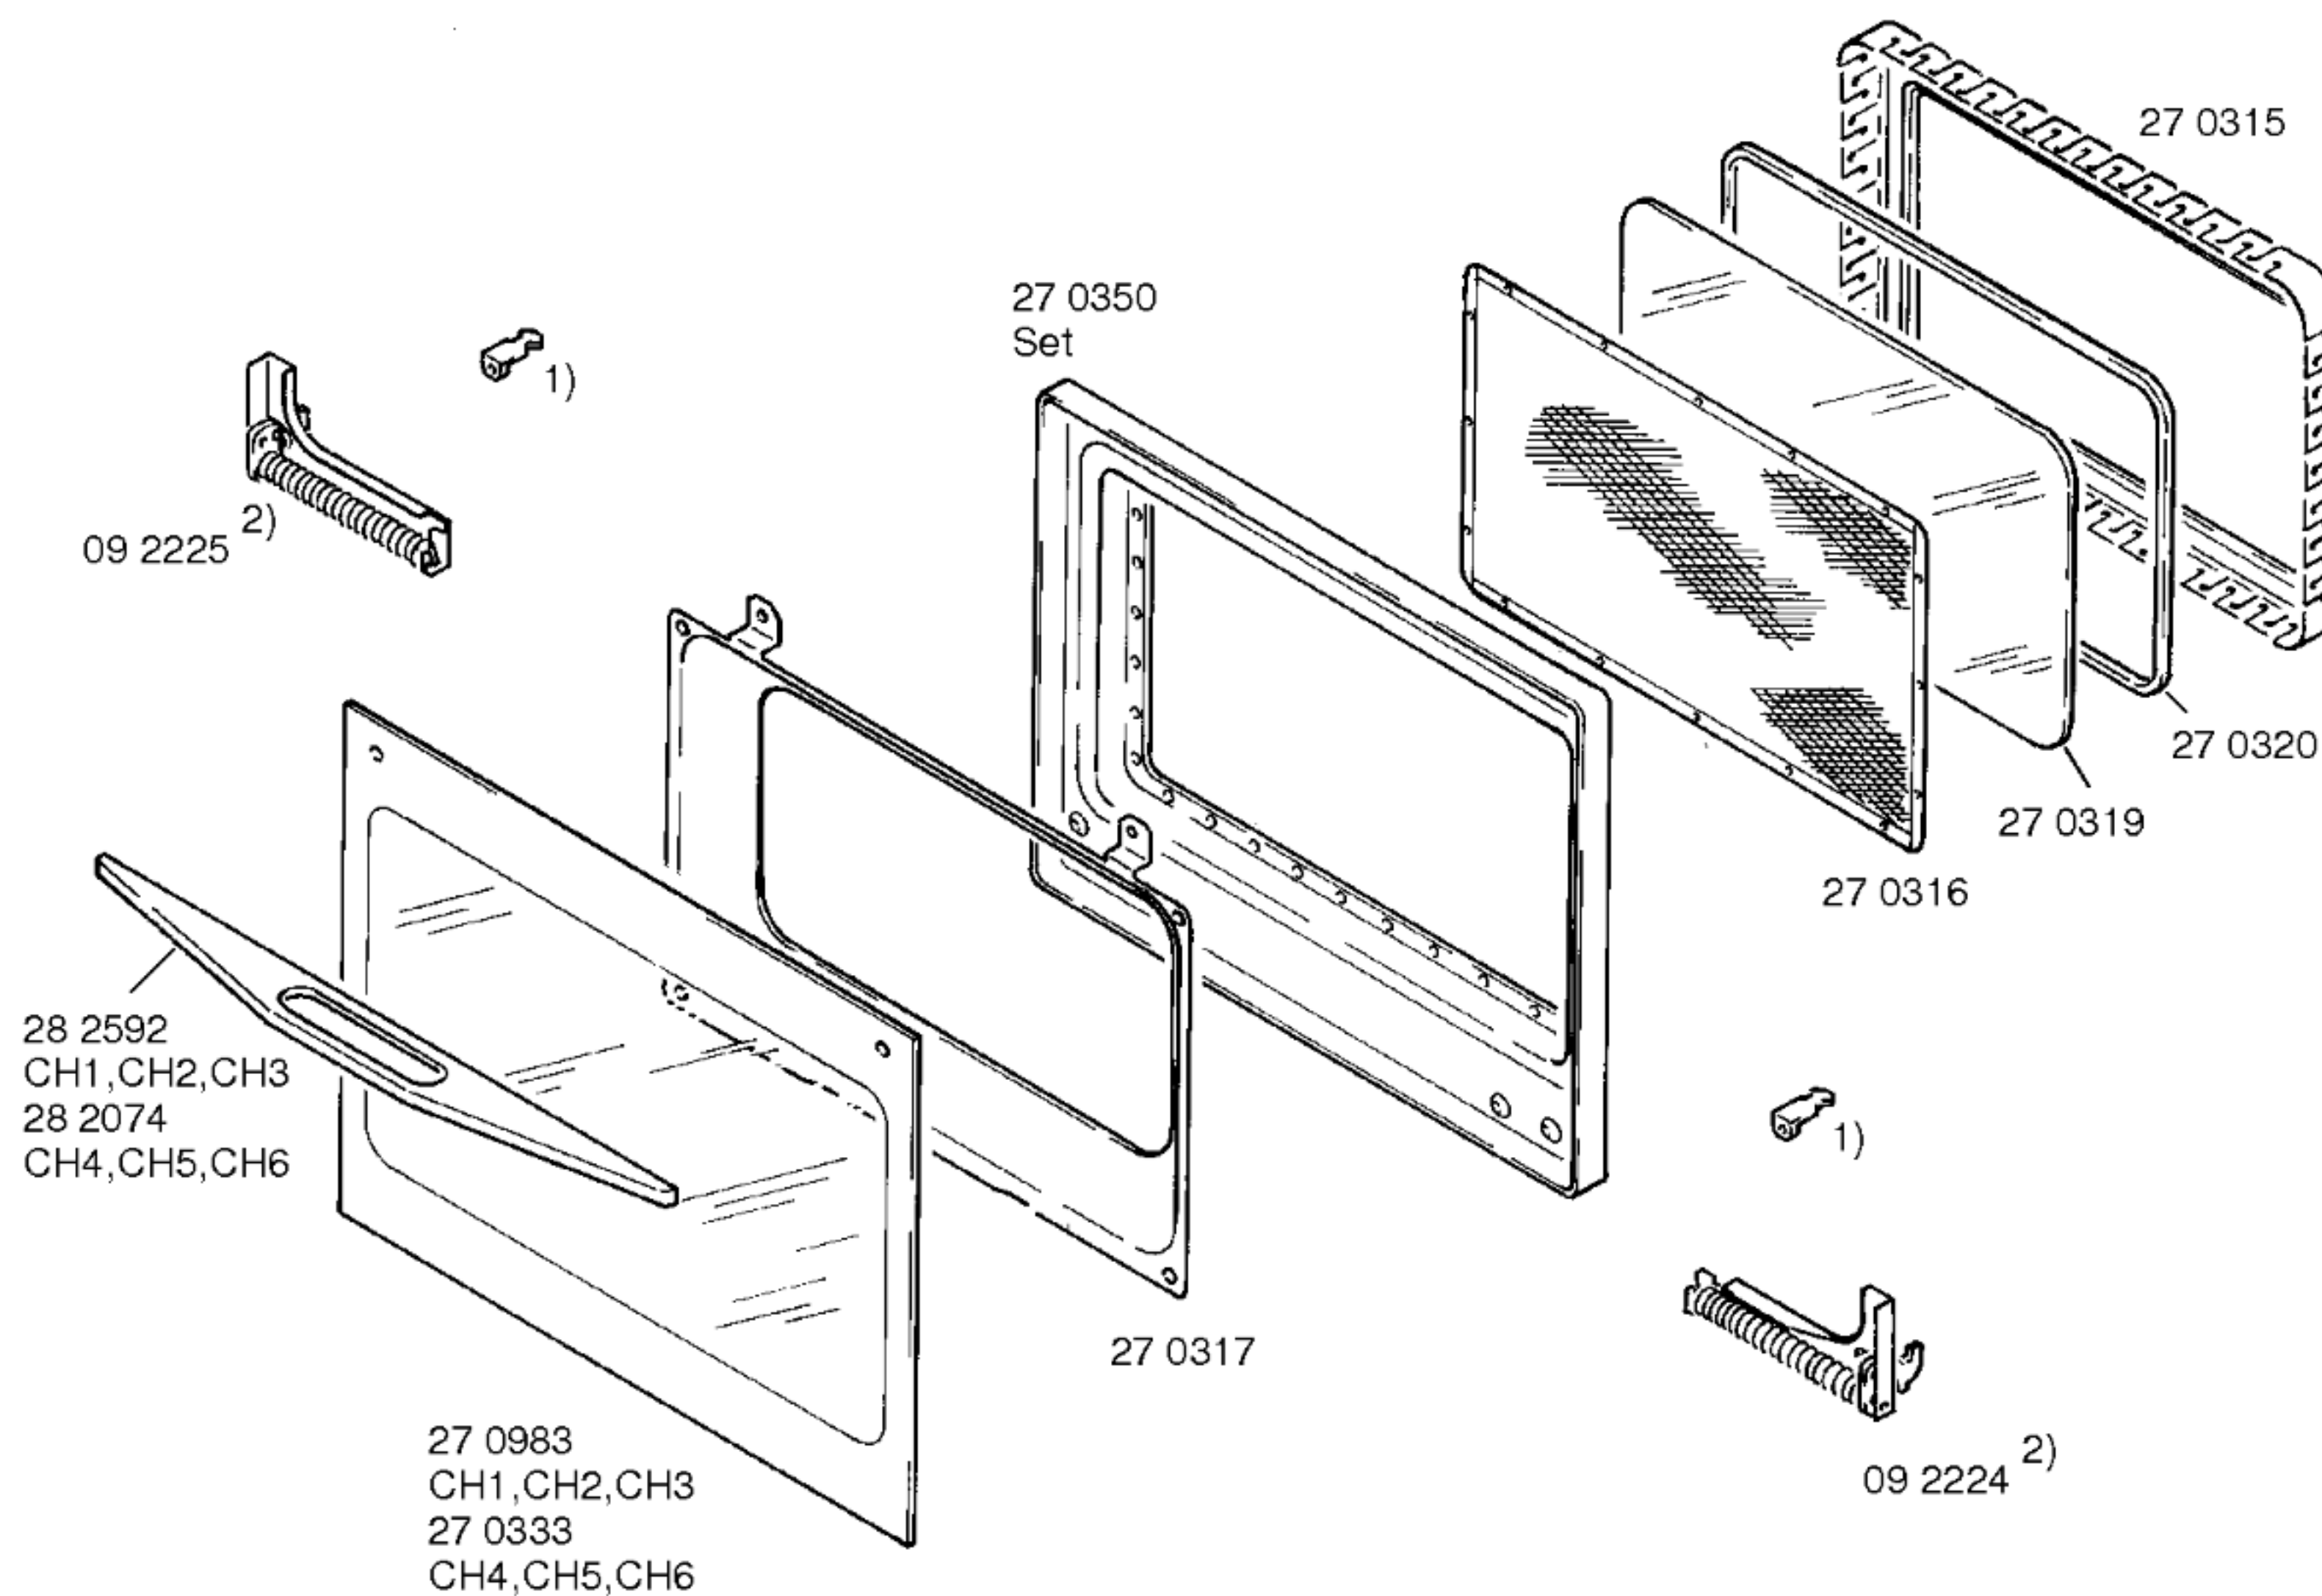


**BOSCH**

HMG8462CH/01-CH1, schwarz-braun
 HMG8462CH/02-CH2, schwarz-braun
 HMG8462CH/03-CH3, schwarz-braun
 HMG8422CH/01-CH4, weiss

HMG8422CH/02-CH5, weiss
 HMG8422CH/03-CH6, weiss

HERDE
 Mikrowellenherde

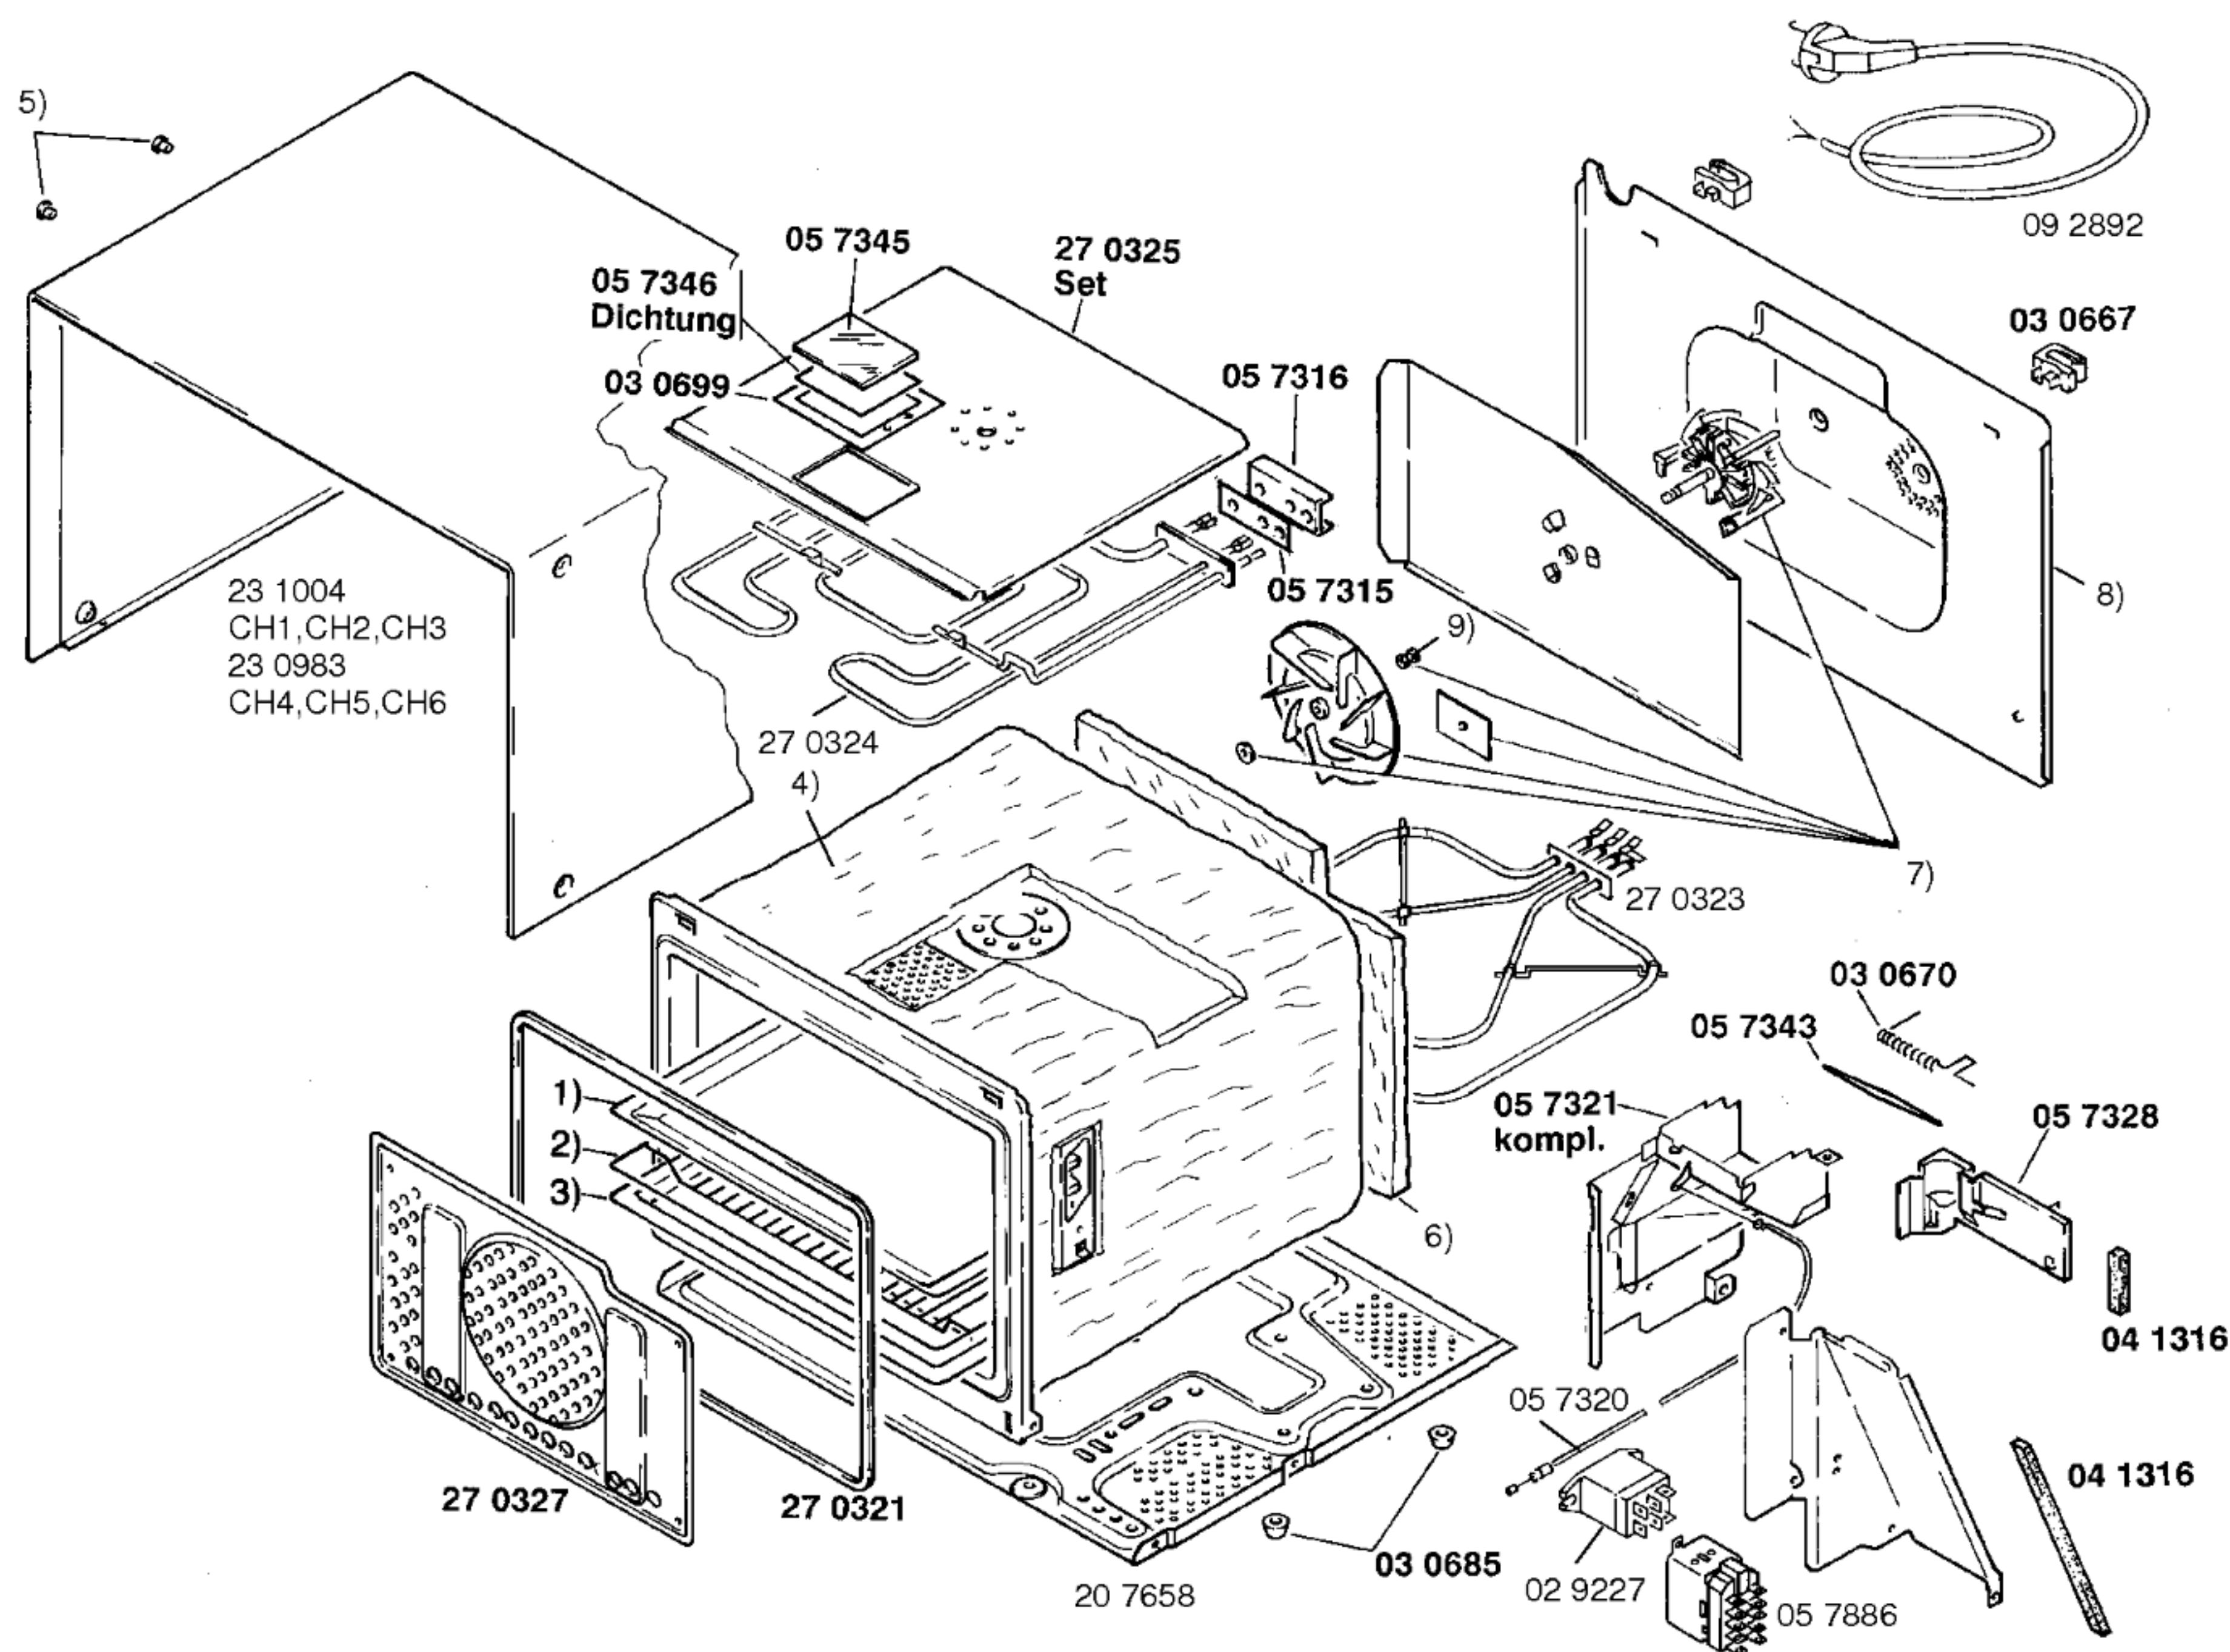

Ident - Nummern - Konstante
 3740

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale
- 4) 23 1101
CH1,CH4
23 2269
CH2,CH3,CH5,CH6
- 5) 03 1085
CH1,CH2,CH3
03 0688
CH4,CH5,CH6
- 6) 27 3122
CH1,CH4
28 3307
CH2,CH3,CH5,CH6
- 7) 08 8518
CH1,CH4
09 2677
CH2,CH3,CH5,CH6
- 8) 20 7659
CH1,CH4
20 7701
CH2,CH3,CH5,CH6
- 9) 03 2778
CH1,CH4


02 8732
Anschlag-Backblech

**BOSCH**

HMG8462CH/01-CH1, schwarz-braun
 HMG8462CH/02-CH2, schwarz-braun
 HMG8462CH/03-CH3, schwarz-braun
 HMG8422CH/01-CH4, weiss

HMG8422CH/02-CH5, weiss
 HMG8422CH/03-CH6, weiss

HERDE
 Mikrowellenherde

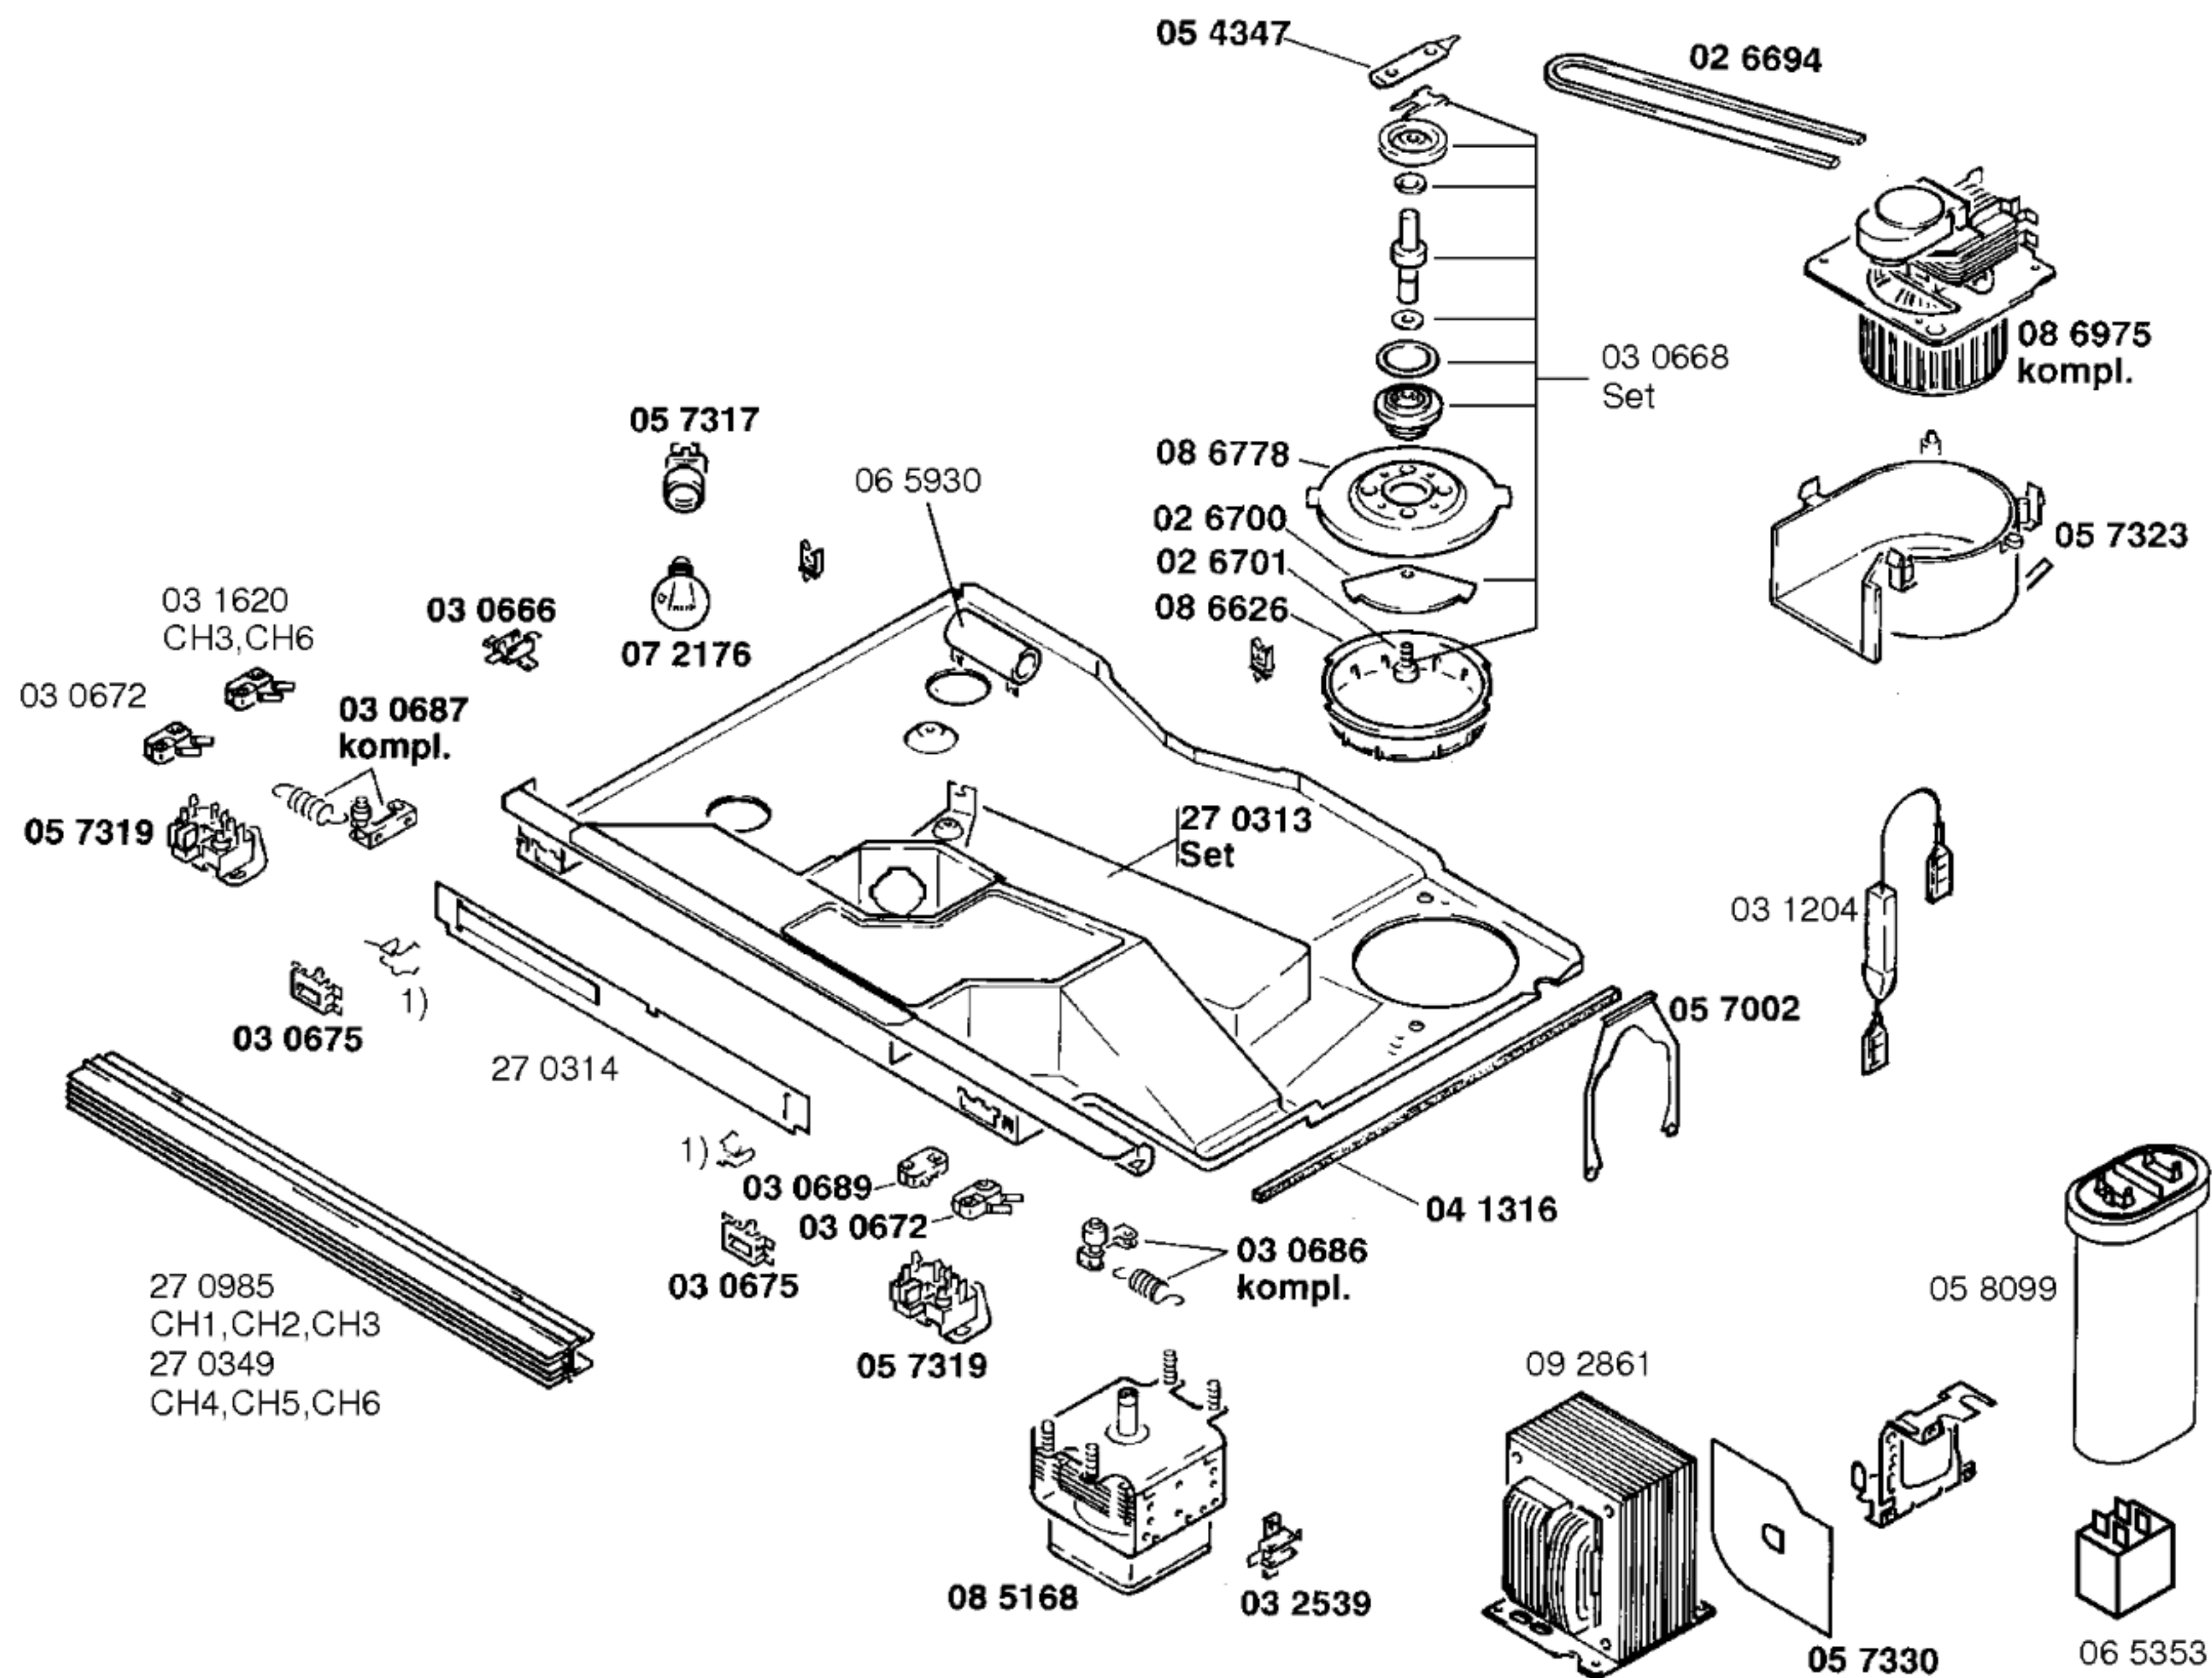

1) 03 0678
 CH4, CH5, CH6