 
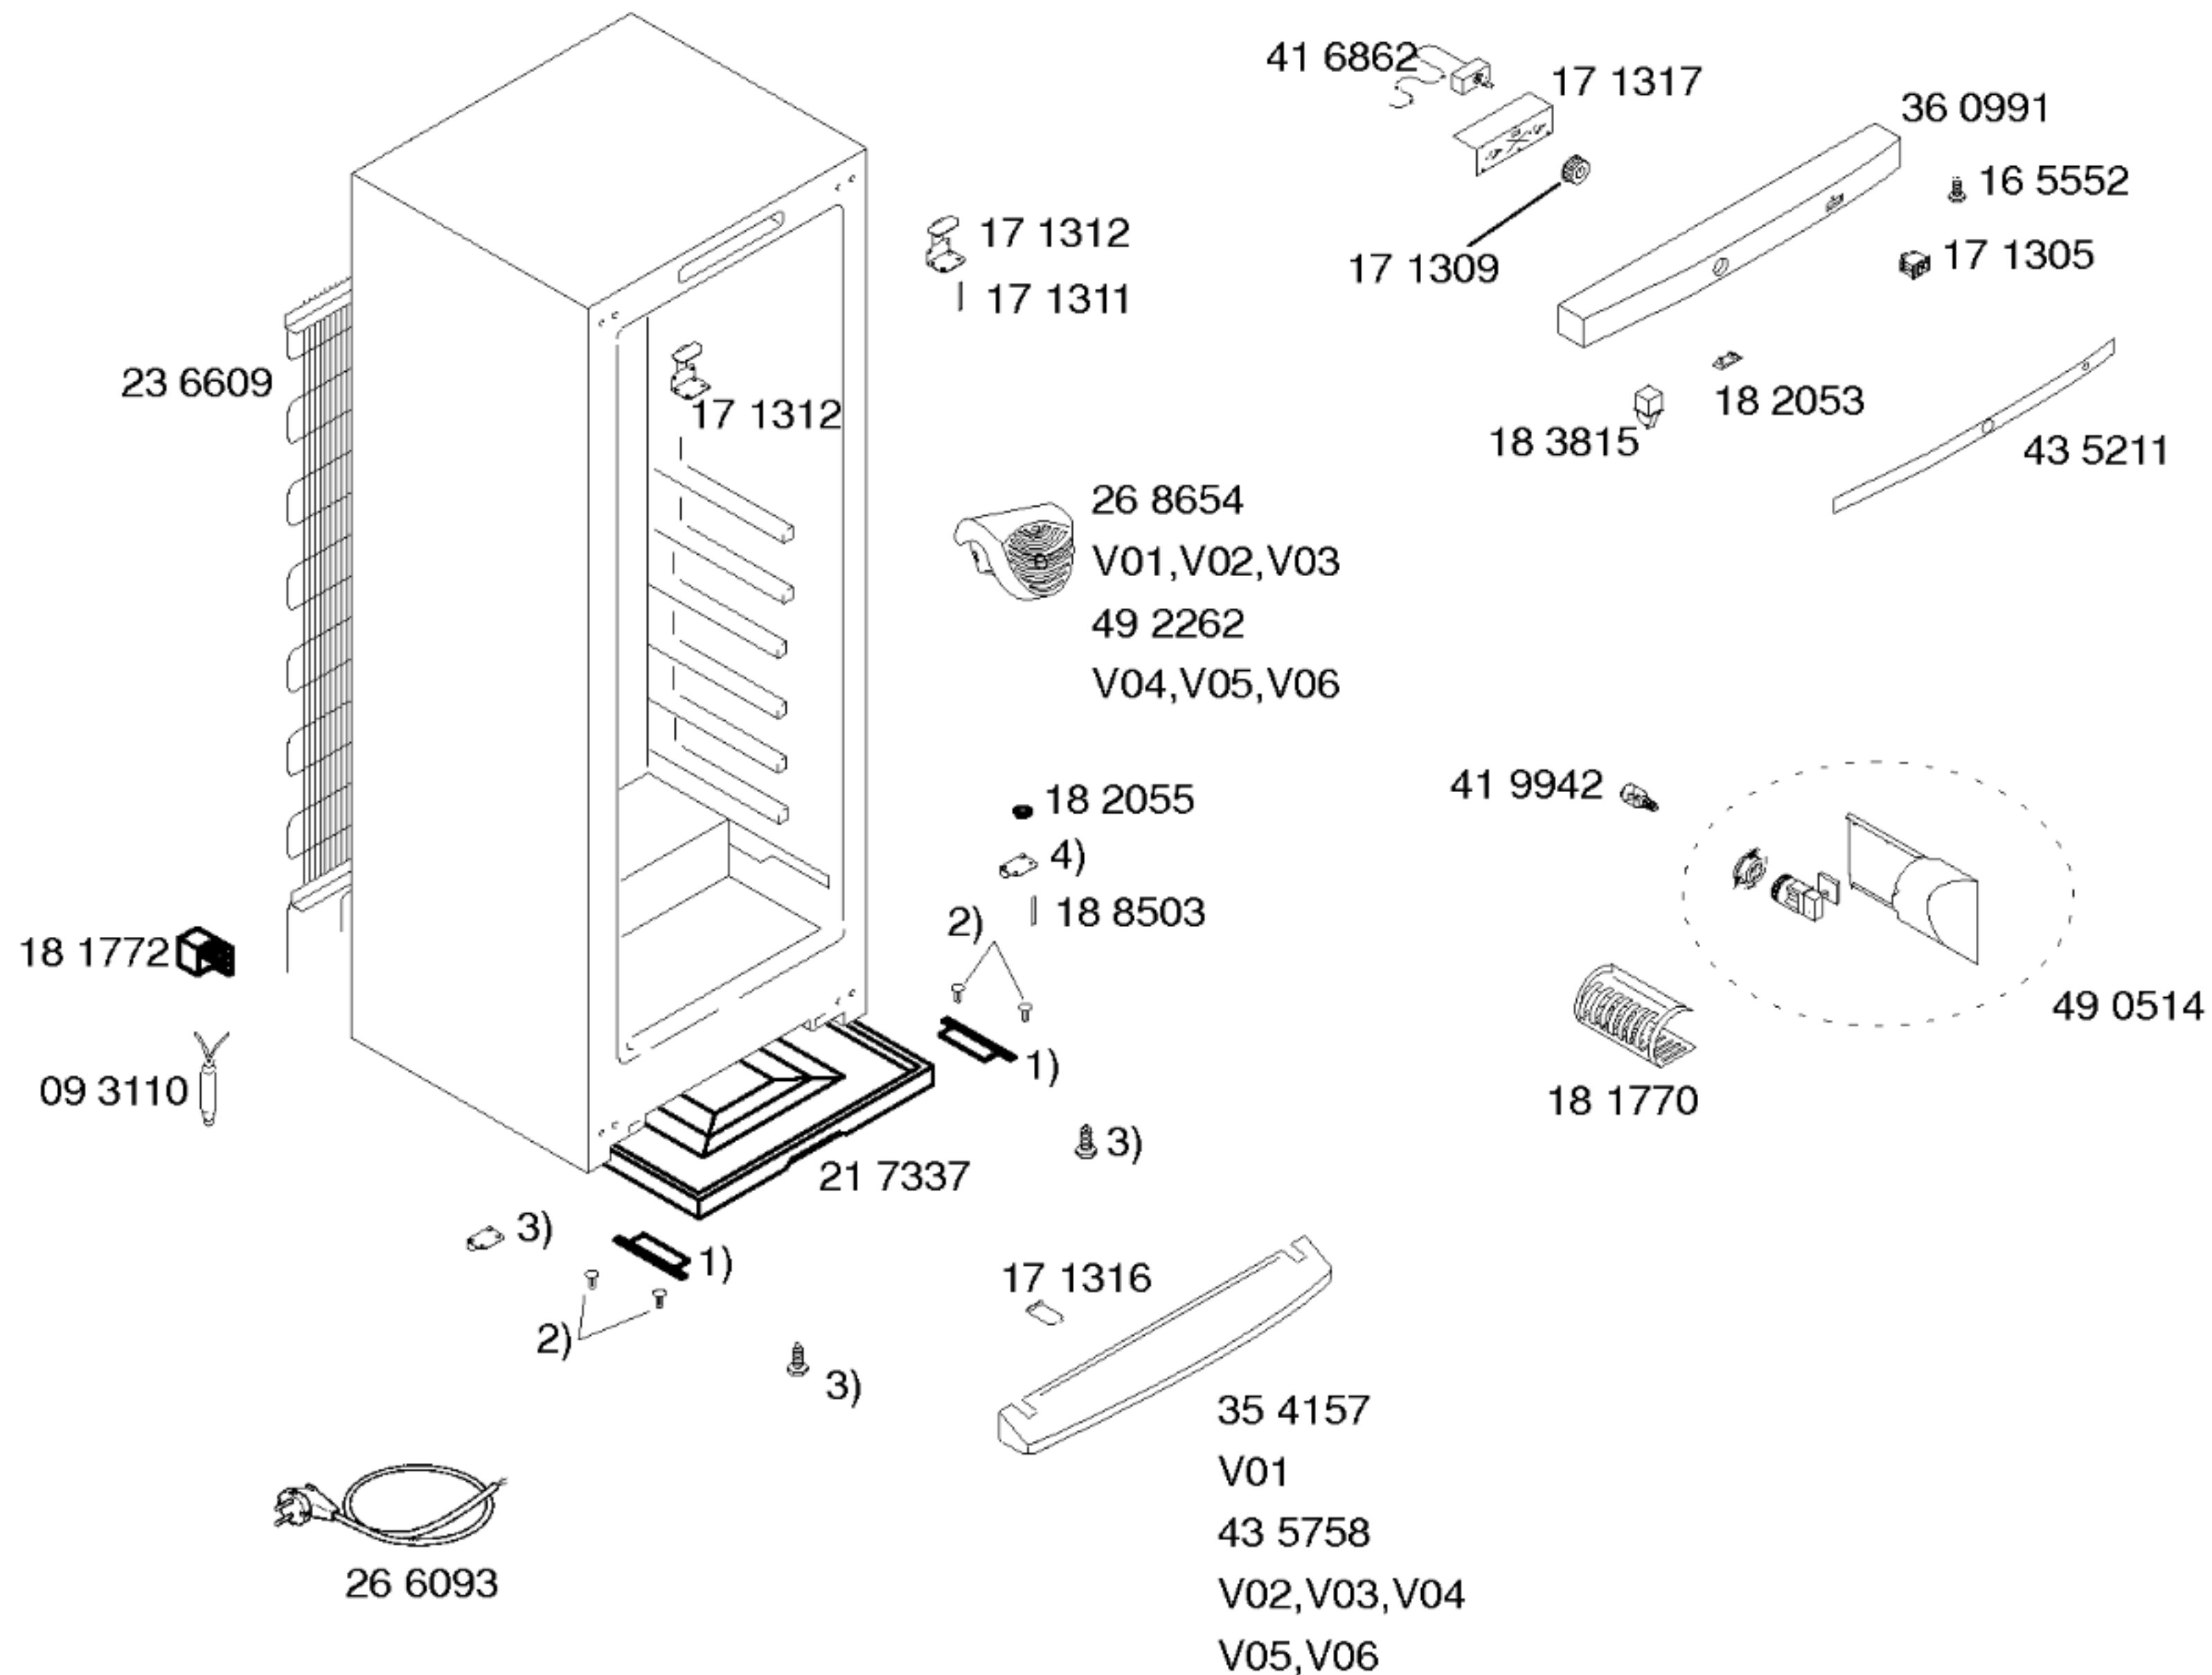 


Mat. – Nr. – Konstante
3740

 
Gebrauchsanweisung
58 7035

- 1) 48 1783
2) 16 3505
3) 18 9089
V01,V02
42 1516
V03,V04,V05,V06
- 4) 17 1303
V01,V02
42 1601
V03,V04,V05,V06
- 5) 17 1303
V01,V02
42 1602
V03,V04,V05,V06

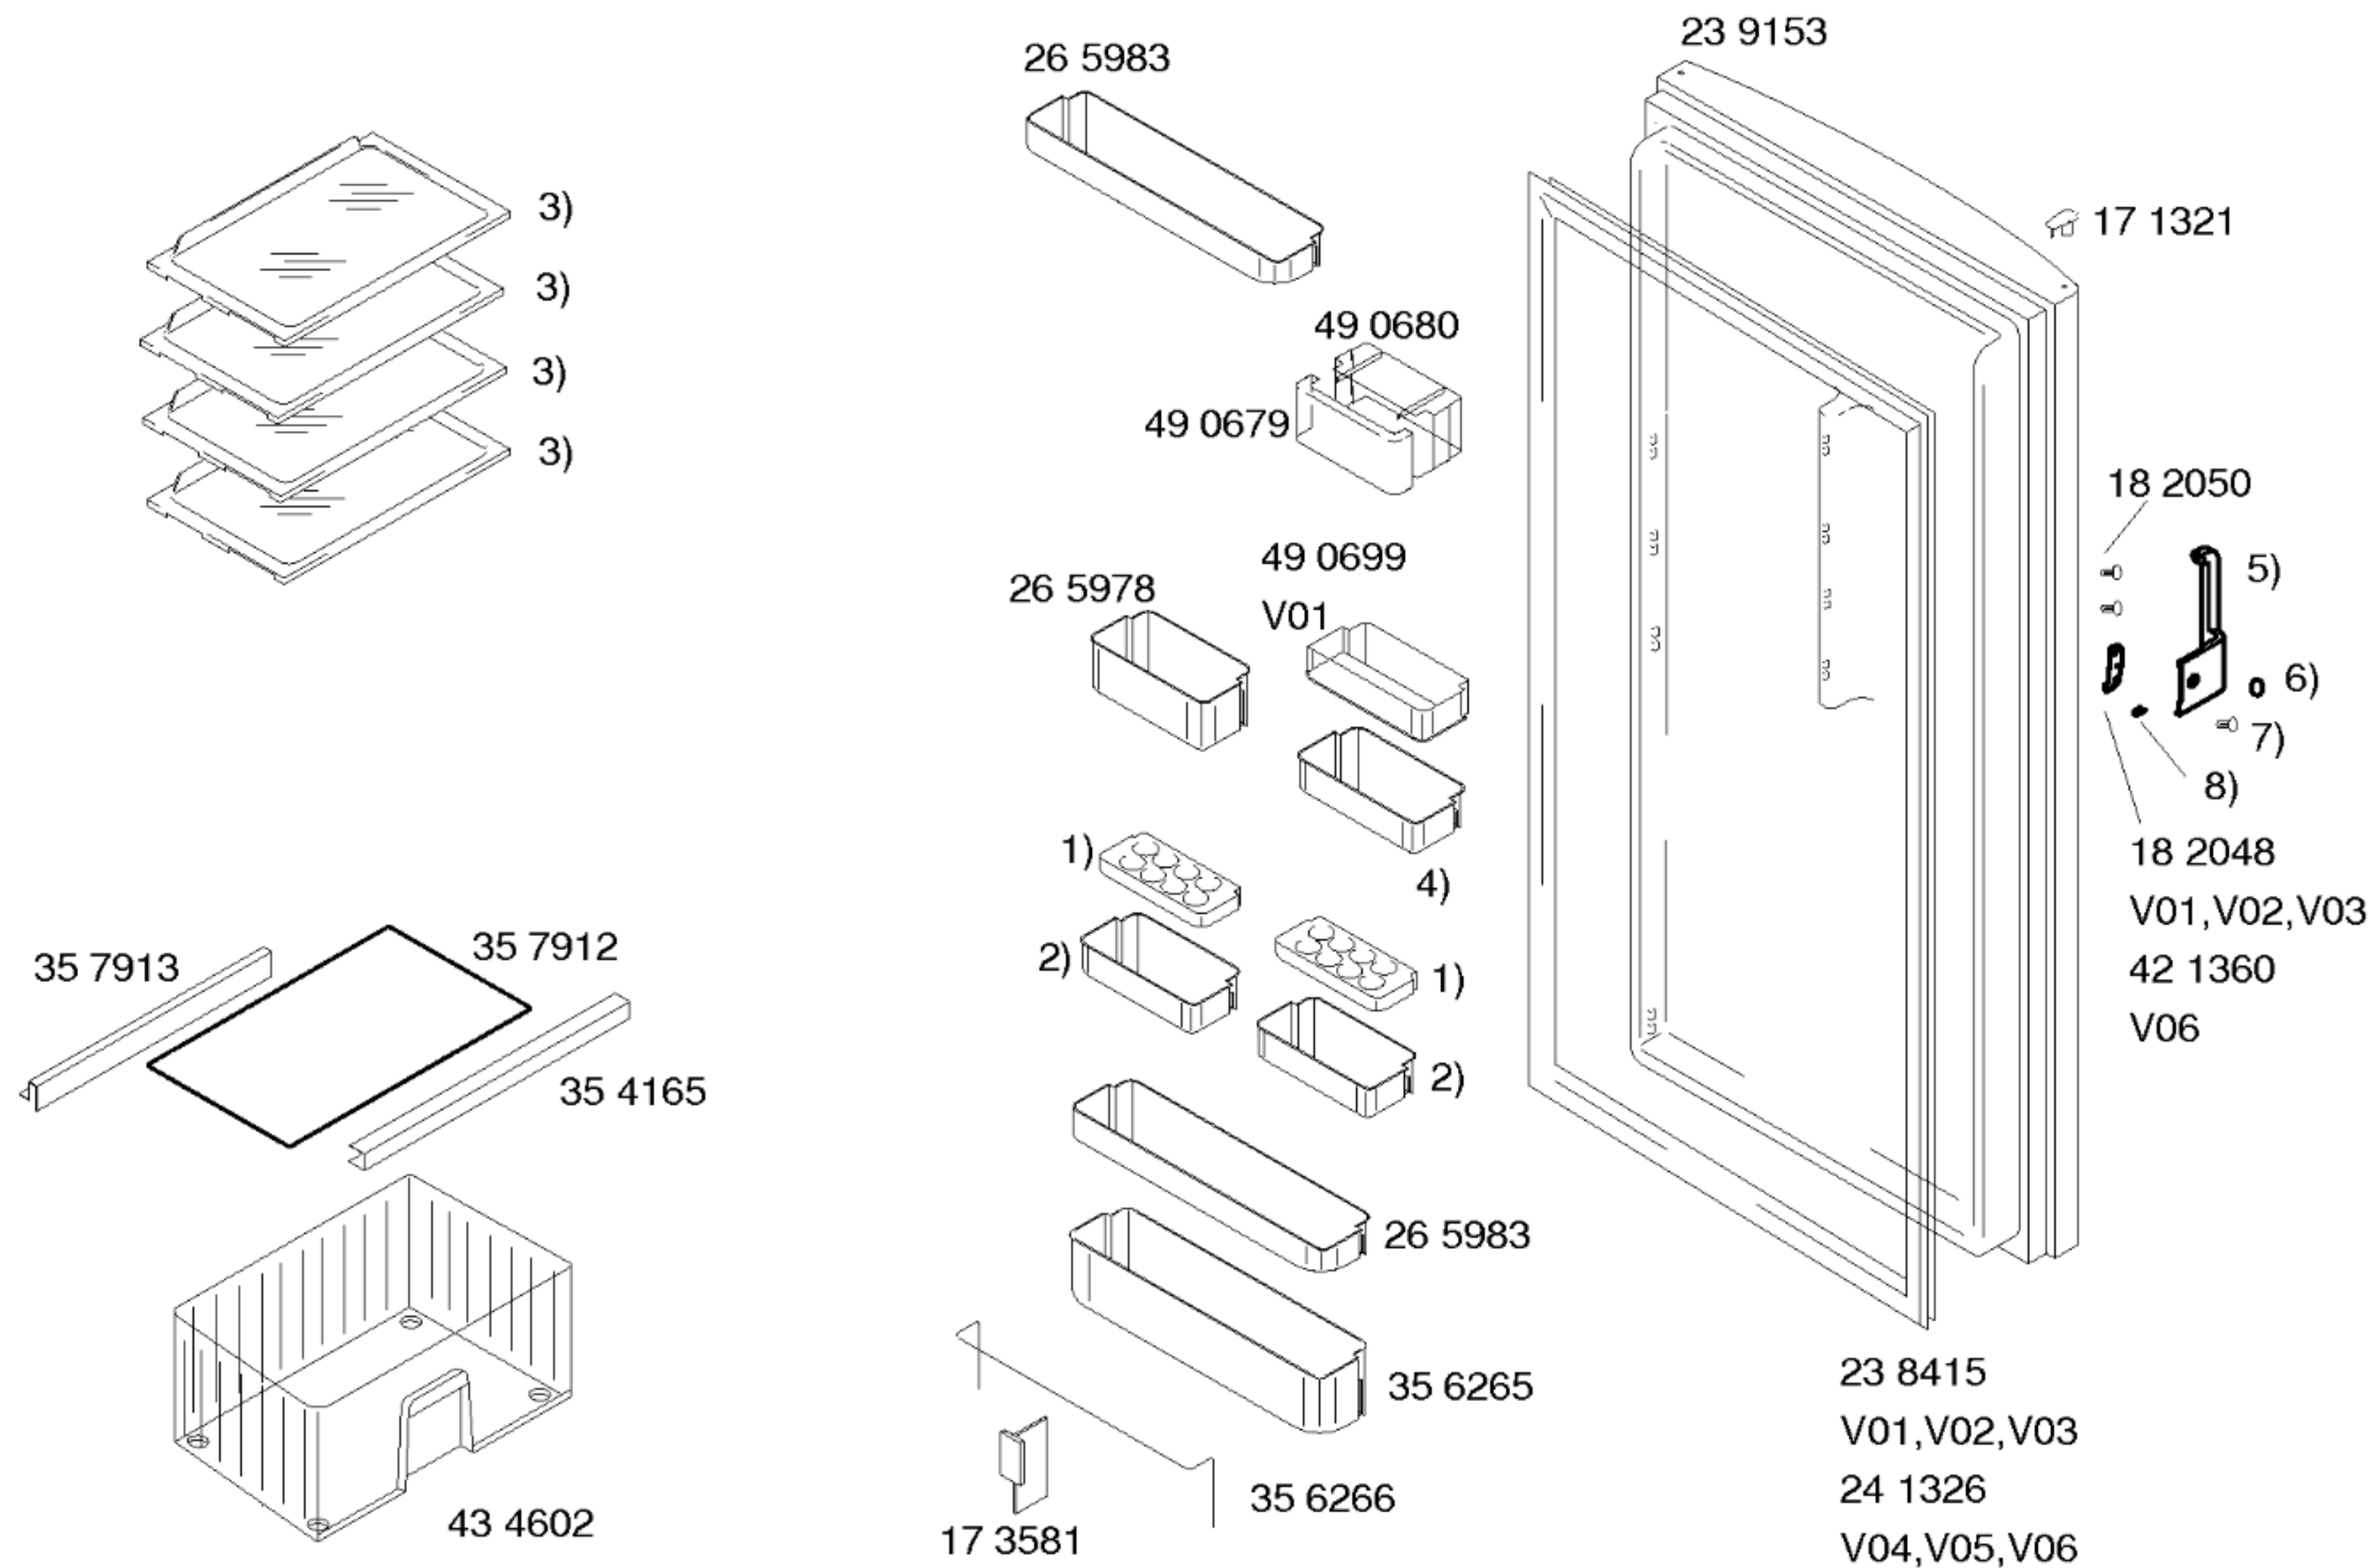

Mat. - Nr. - Konstante
3740

- 1) 26 7186
- 2) 26 5977
- 3) 43 4586
- 4) 49 0698
- V01
- 26 5977
- V02,V03,V04,V05
- V06
- 5) 48 0730
- V01,V02,V03,V04
- V05
- 49 1169
- V06
- 6) 18 2047
- V01,V02,V03,V04
- V05
- 42 1620
- V06
- 7) 18 1773
- V01,V02,V03,V04
- V05
- 42 1625
- V06
- 8) 18 2027
- V01,V02,V03,V04
- V05
- 42 1321
- V06

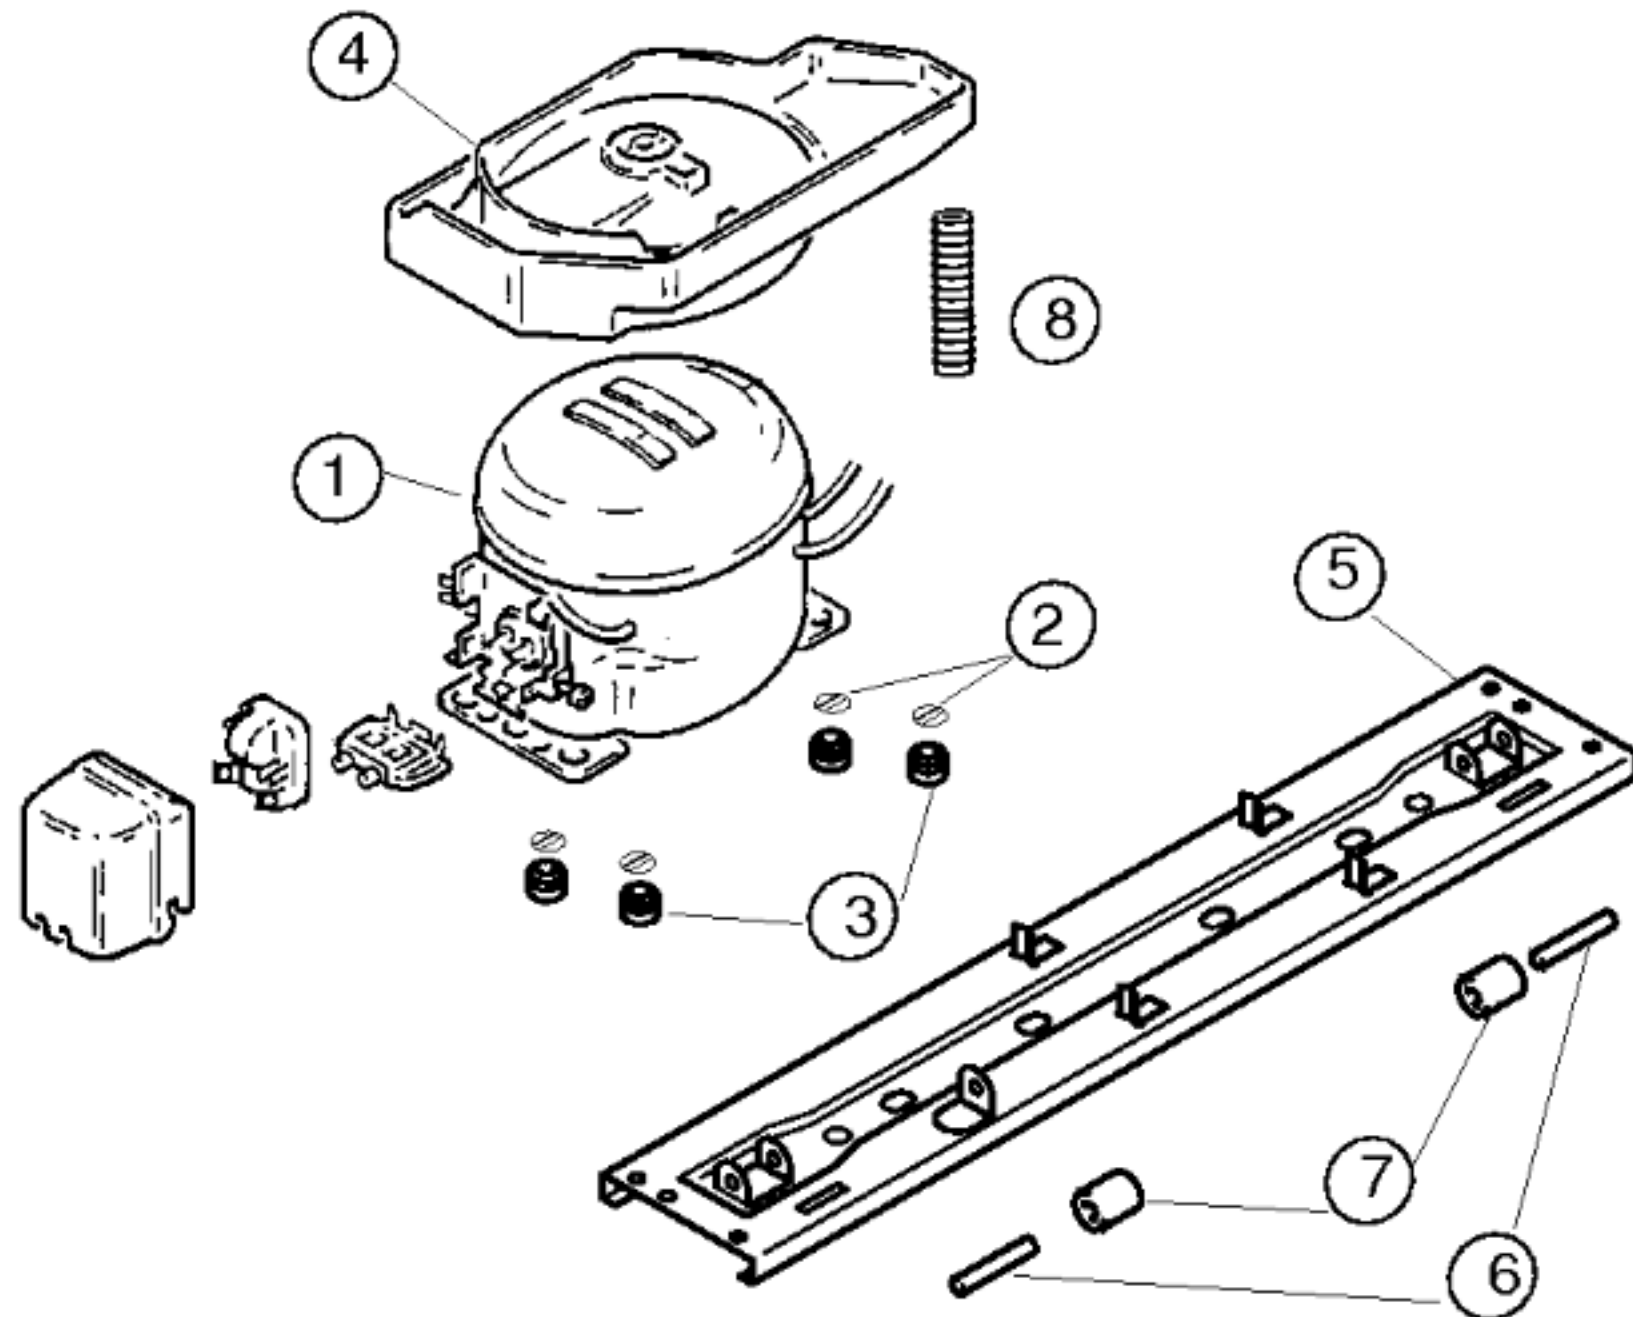

Pos.	Danfoss		
	TLY7KK2		
1	14 3519		
2	17 1519		
3	16 3427		
4	48 9208		
5	35 4158		
6	18 1014		
7	17 1318		
8	48 1782		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör

Typ/Type/Tip

Förderleistung/Delivery/Verim/h

Anlaufstrom/Starting current/Giris akimi

Widerstand/Resistance/Rezistans Ha/

Hi/aux.

A
Ohm

Matsustita
ESS60E

Temp.Reyler/Thermostat/Termostat

Typ/Type/Tip

Reglerstellung/Position/Termostat pozisyonu

Schaltwerte/Acma kapama degerleri

..ein/acma °C

Valeurs de commutation/Termostat degeri

..aus"/kapama

(..abtaven' od)

..alarm'

Füllmenge/Fill. quantily/ Dolum miktari

R600a

g

*

*

Anschlusswert/Comm. load/Giris gucu

W

*

*

Heizung/Heater/Rezistans

Widerstand/Resistance/Direnc

Leistung/Power/Guc

Ohm

W

Ventilador/Blower/Vantilatör

Widerstand/Resistance/Rezistans

Ohm

Magnetventil/Magnetic valve/Manyetik valf

Widerstand/Resistance/Rezistans

Spannung/Voltage/Gerilim

Ohm

V

Temp.Reyler/Thermostat/Termostat

* Siehe Typenschild/Mamul etiketine bakiniz