


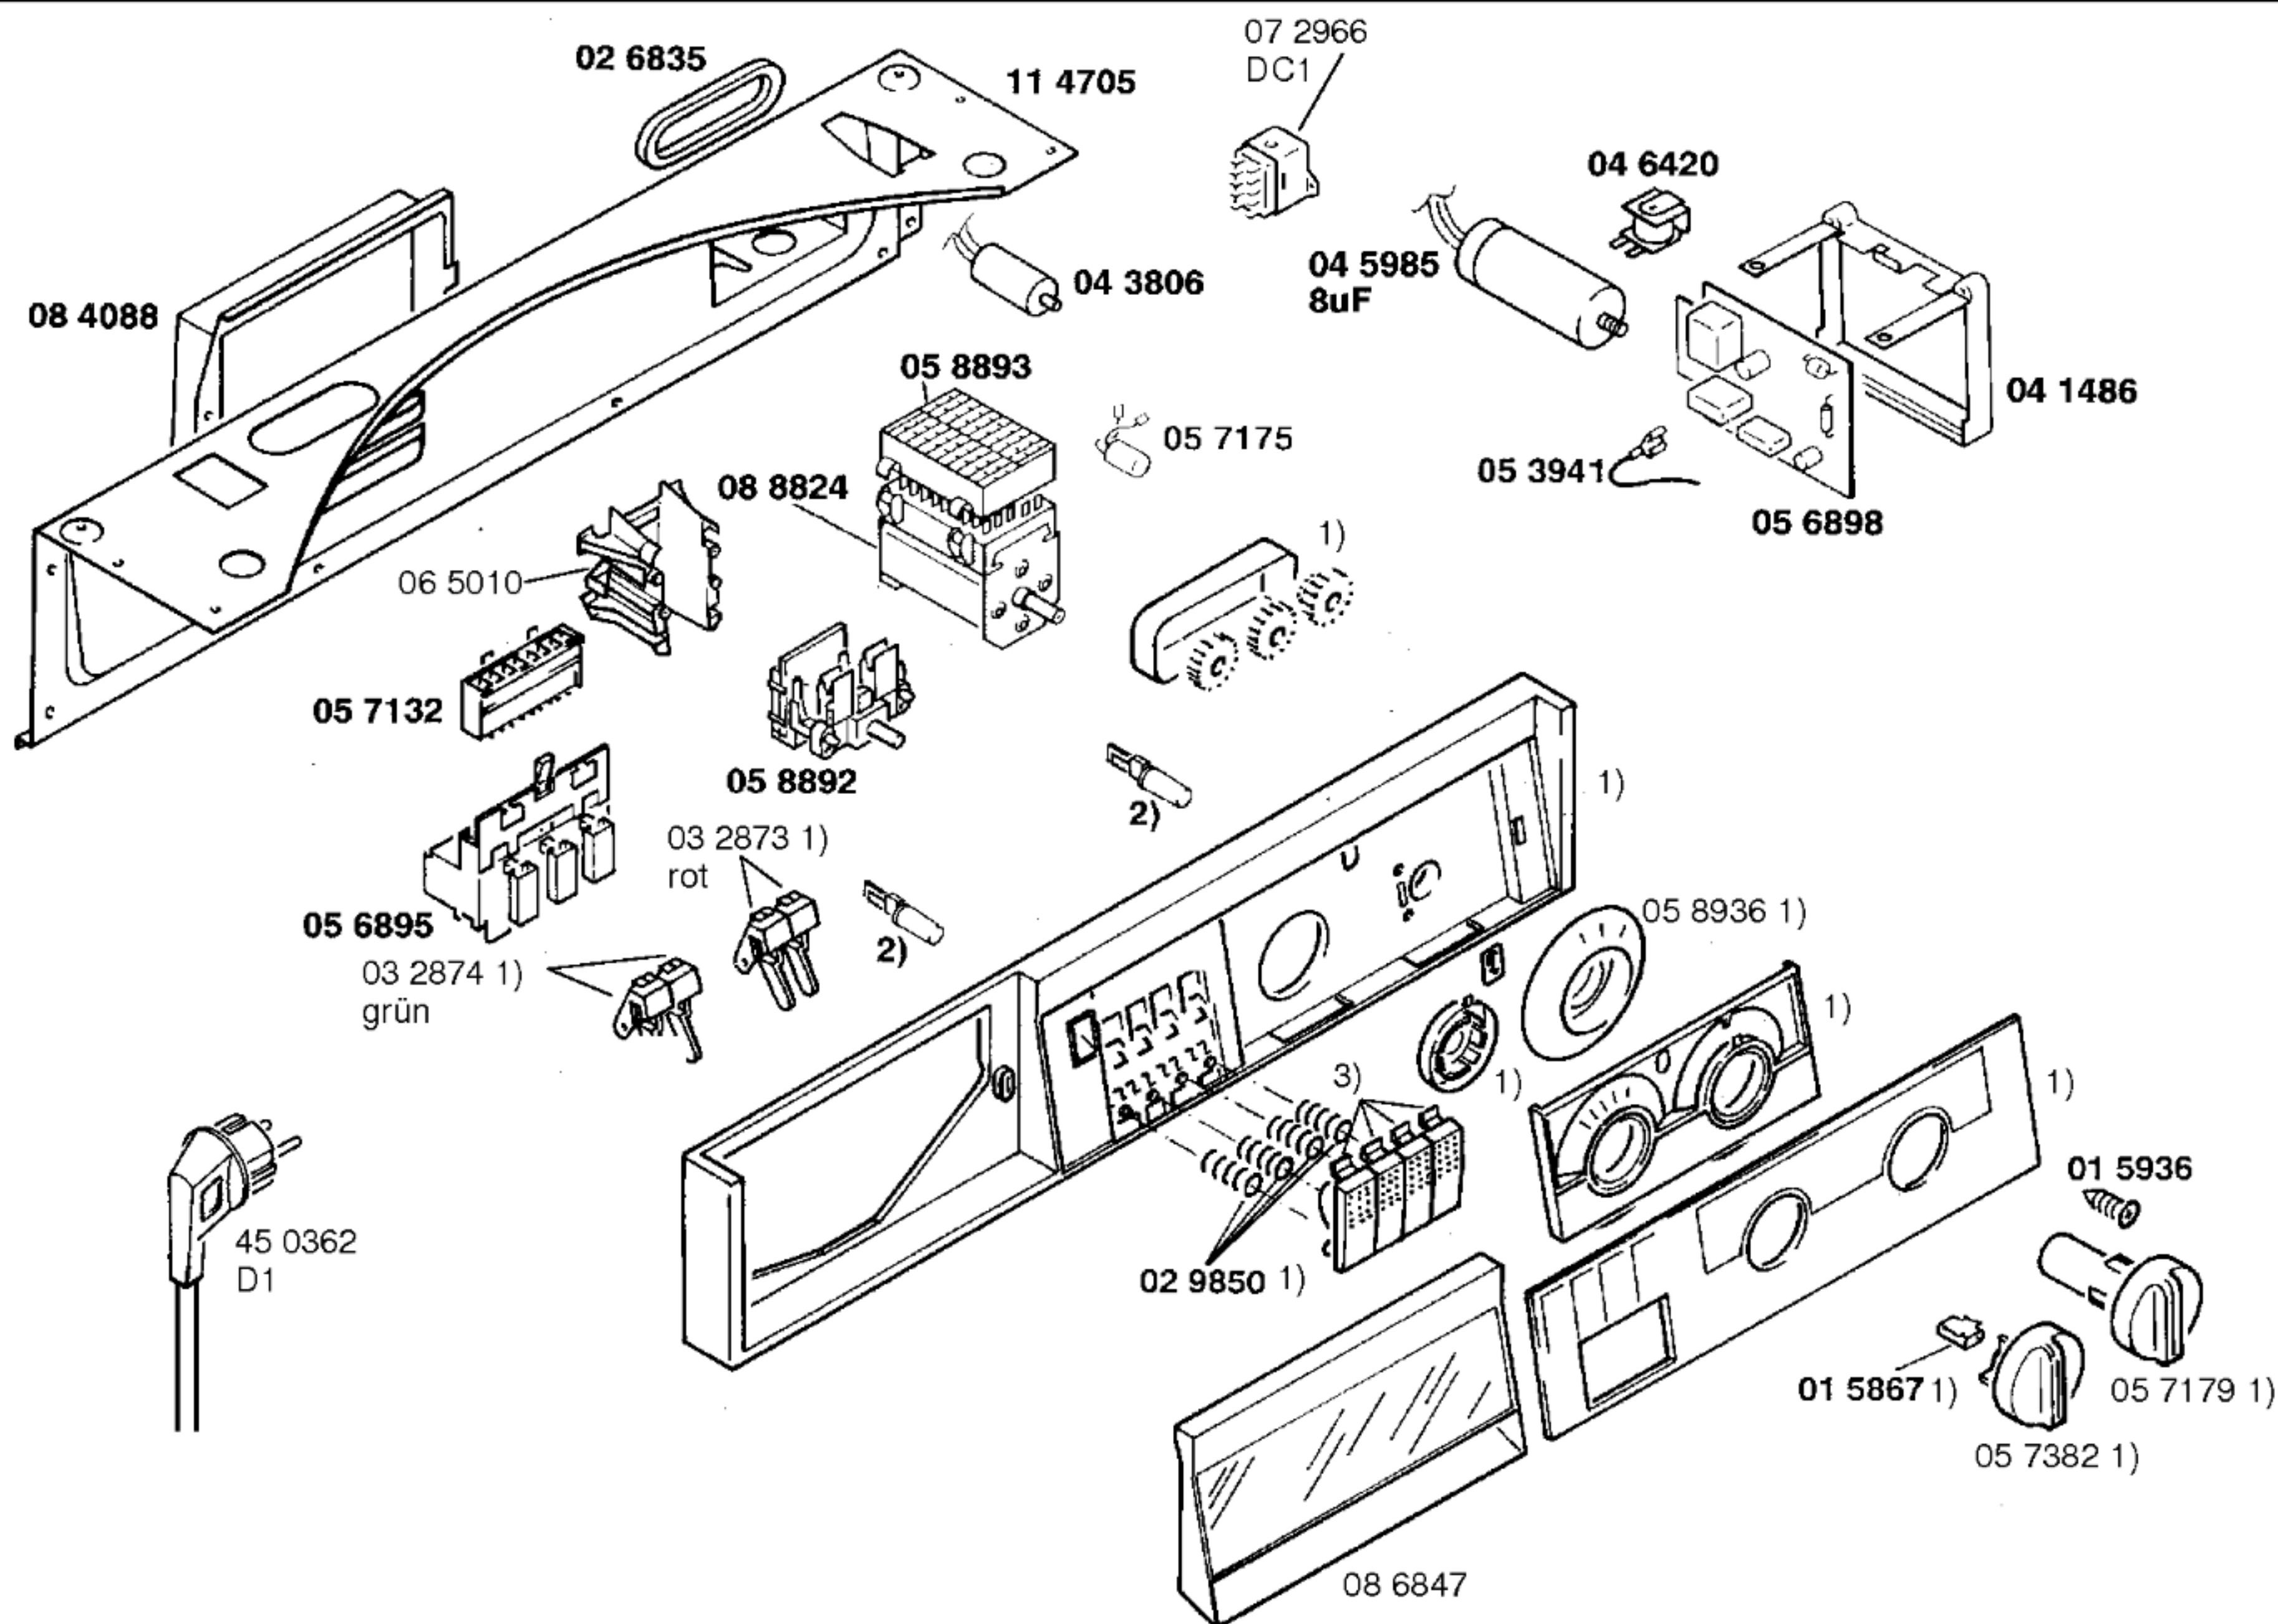

Gebrauchsanweisung

51 5057
(D,GB,F,E,NL)
51 5284
(D,I,F,S,DK)
51 5288
(D,I,S,F,S,N)

Aufstellanweisung

51 4930
(D,NL,F,E,GB)
51 5275
(D,I,F,S,DK)


- 1) 27 3868
Blende kompl.
2) 02 8154
3) 03 0441 1)


Zubehör:

Unterbauszubehör
WX9752


Verlängerung der
Arbeitsplatte
WZ10040

Verbindungssätze für
Wasch/Trockensäule
WZ20030
WZ20090

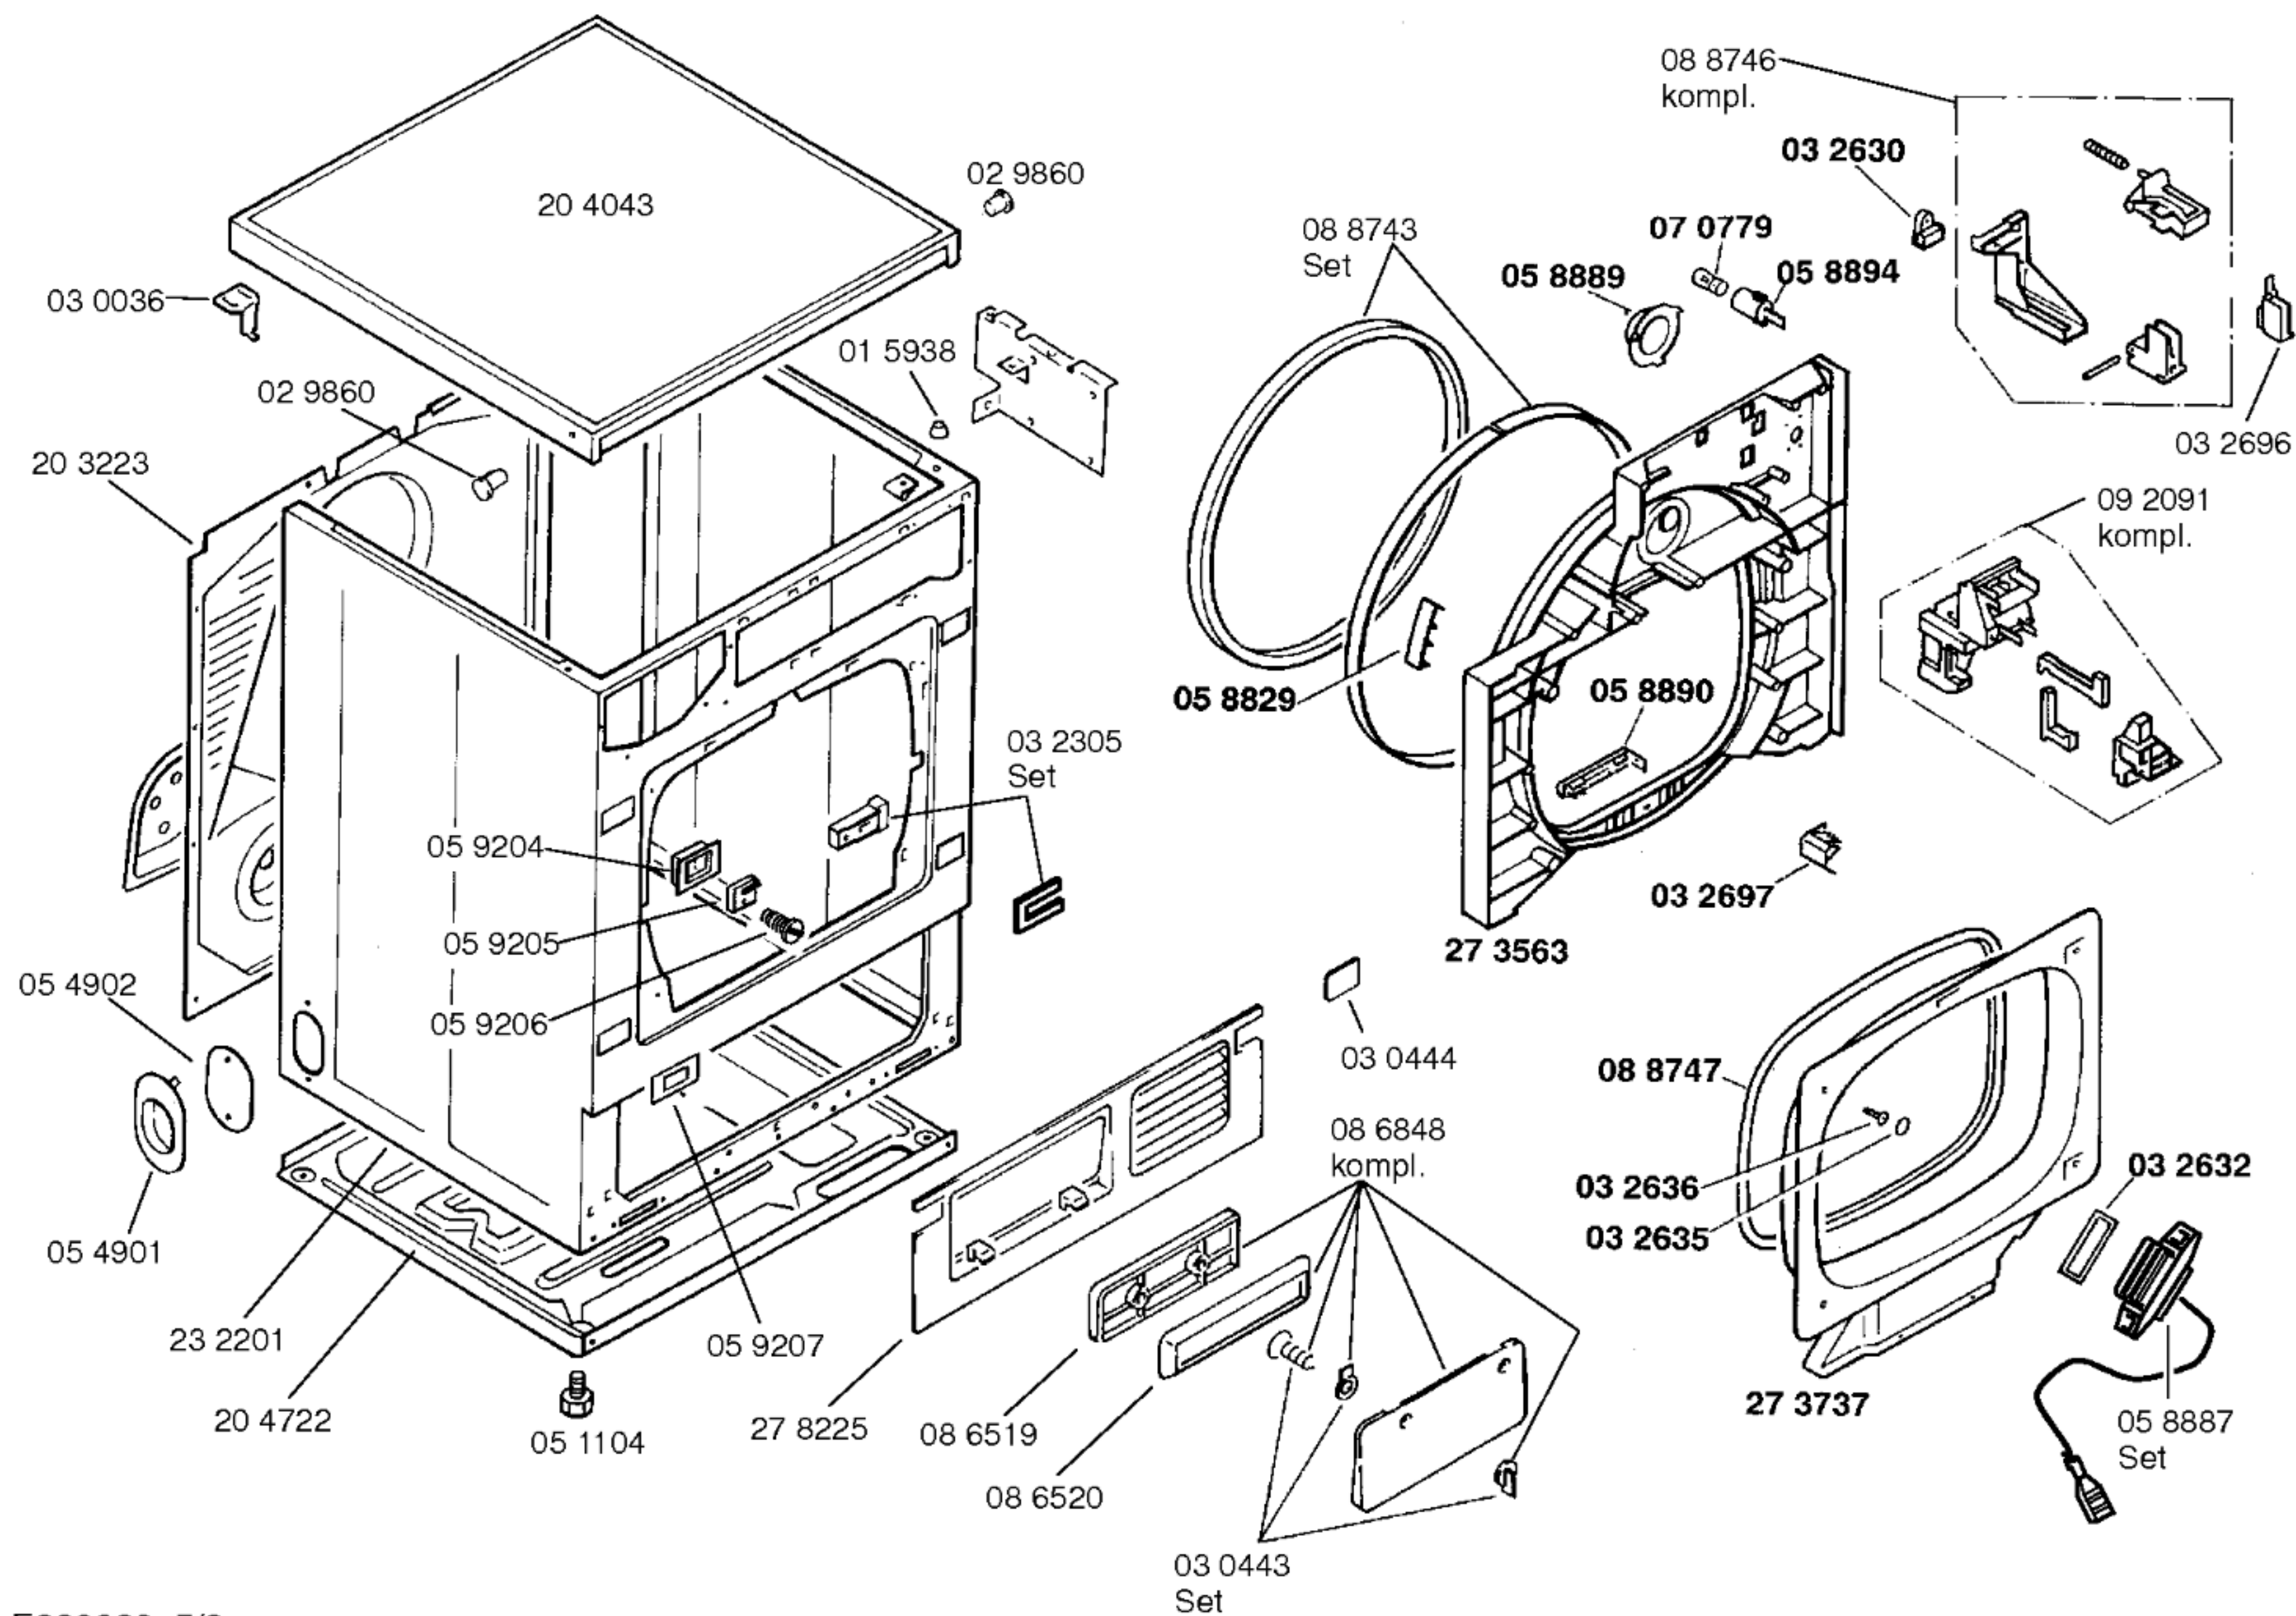

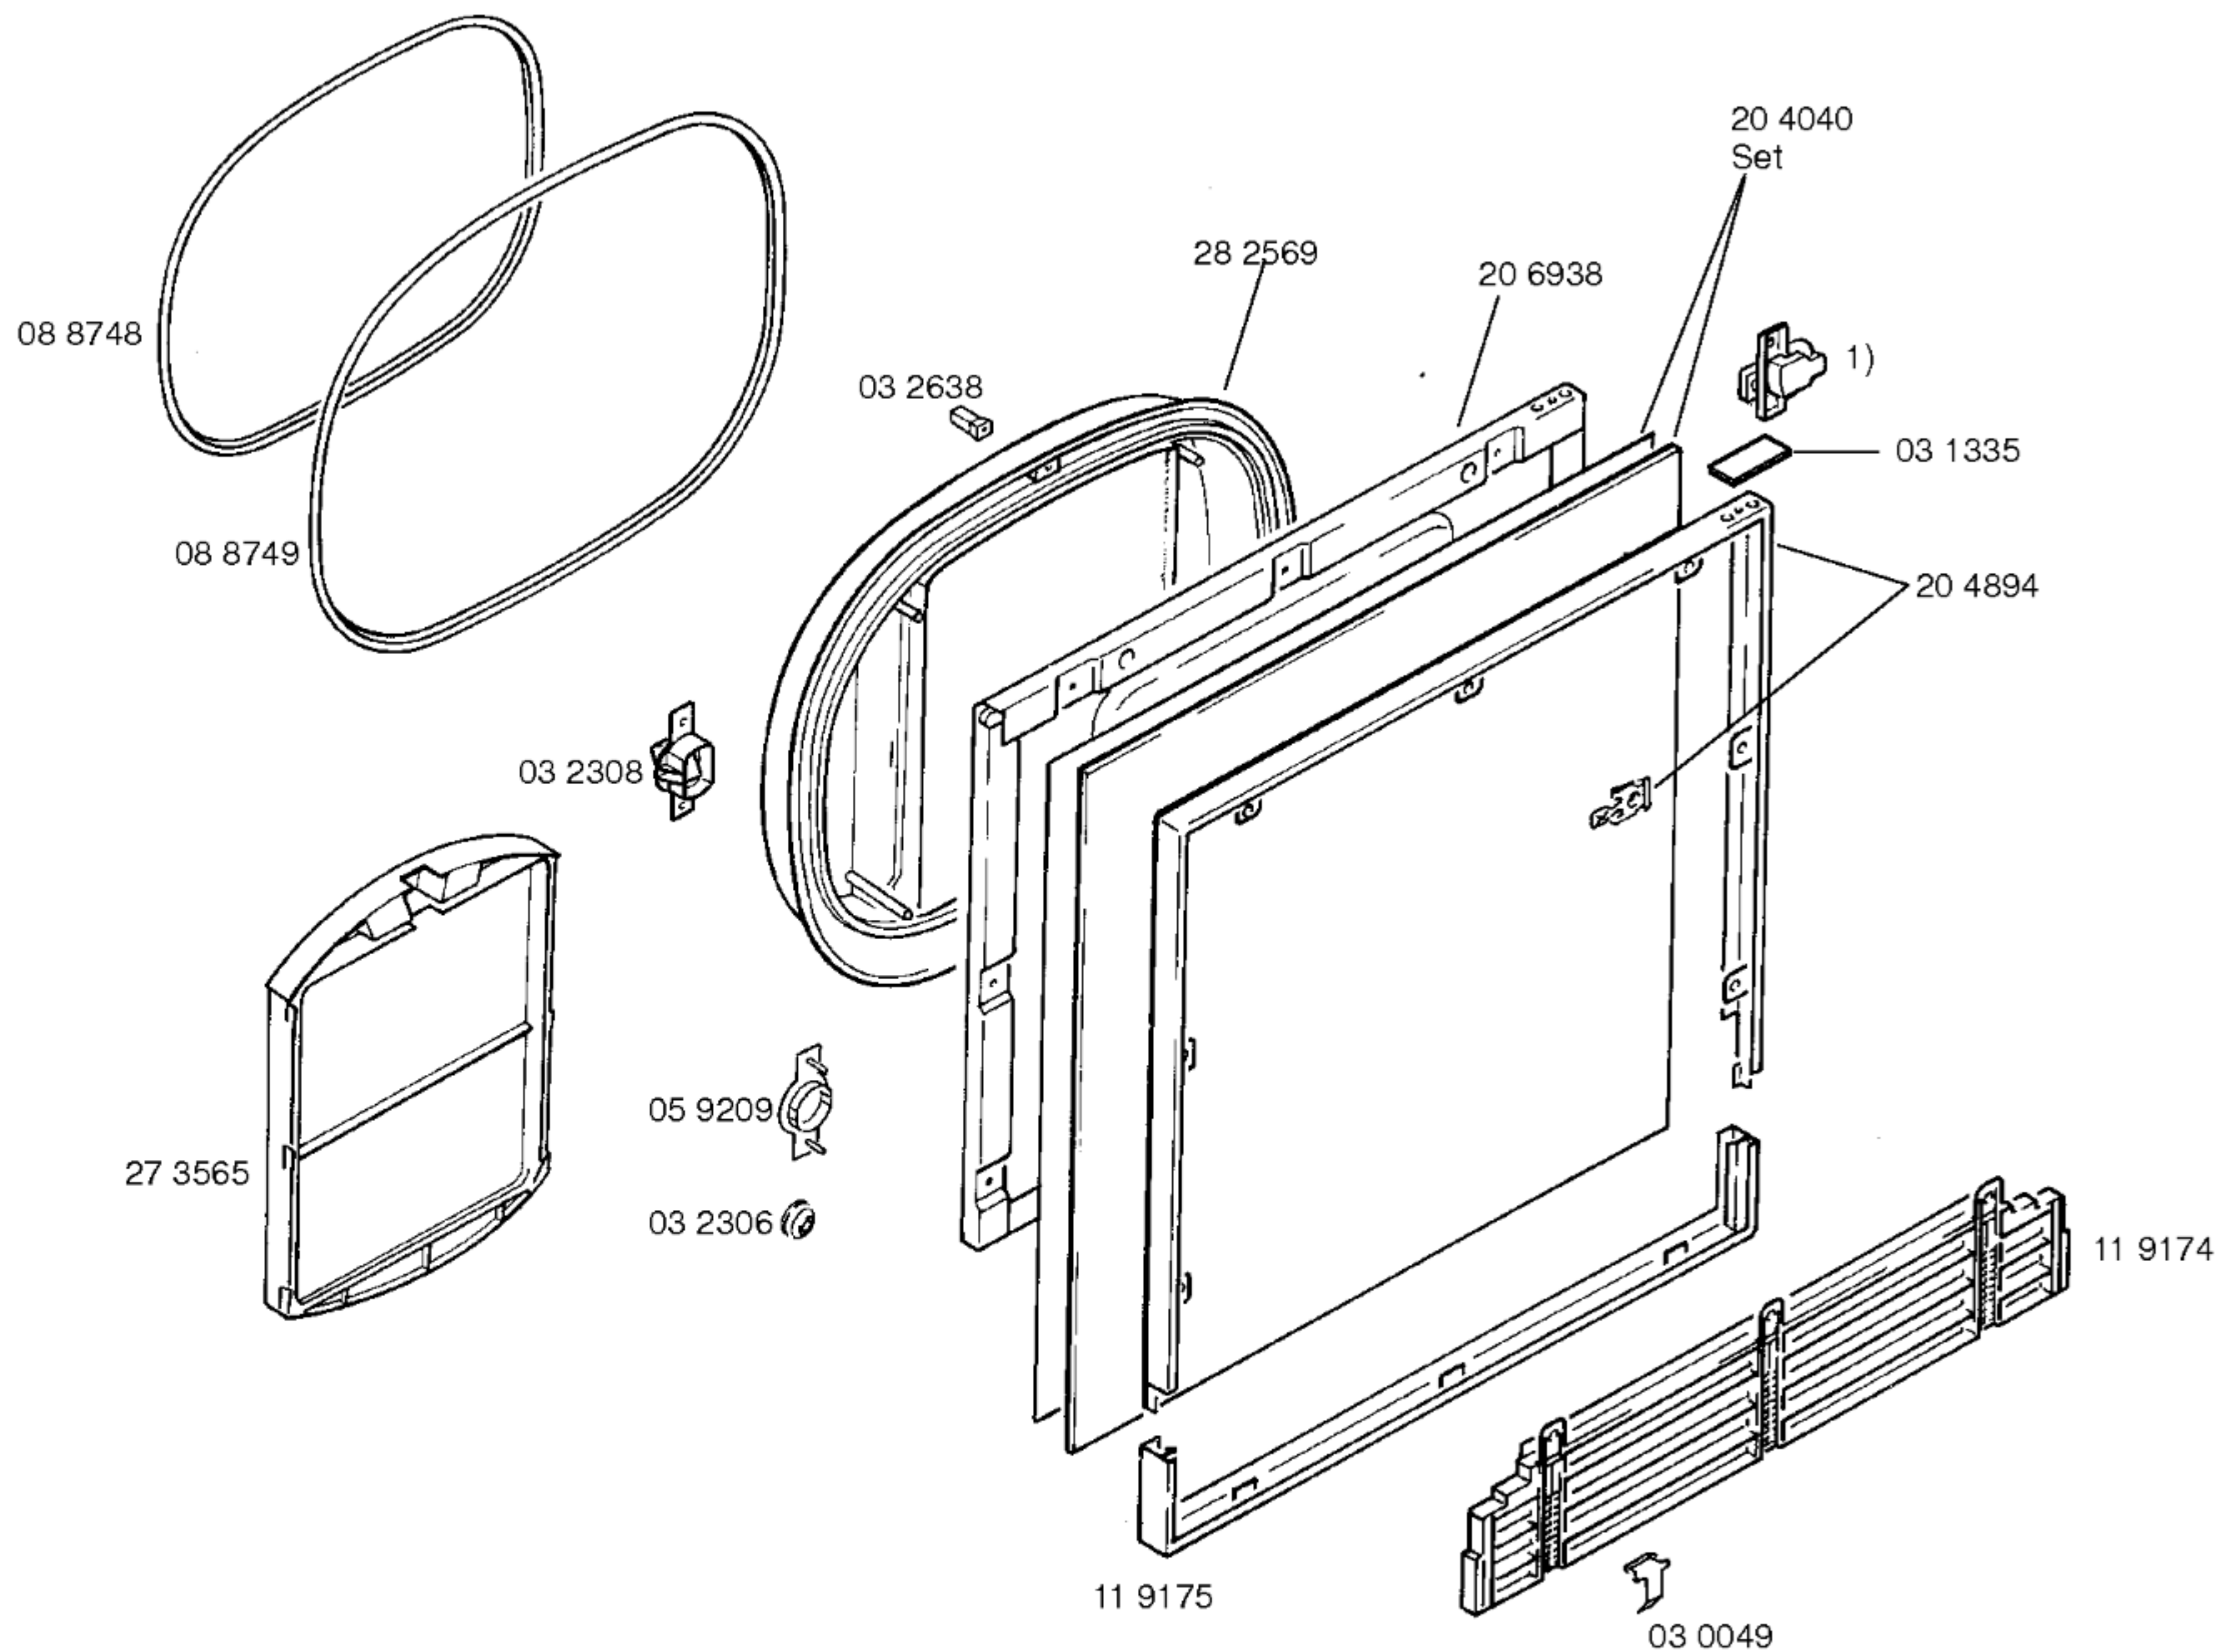

- 1) 05 9208
Öffnung 100 Grad
05 9590
Öffnung 120 Grad

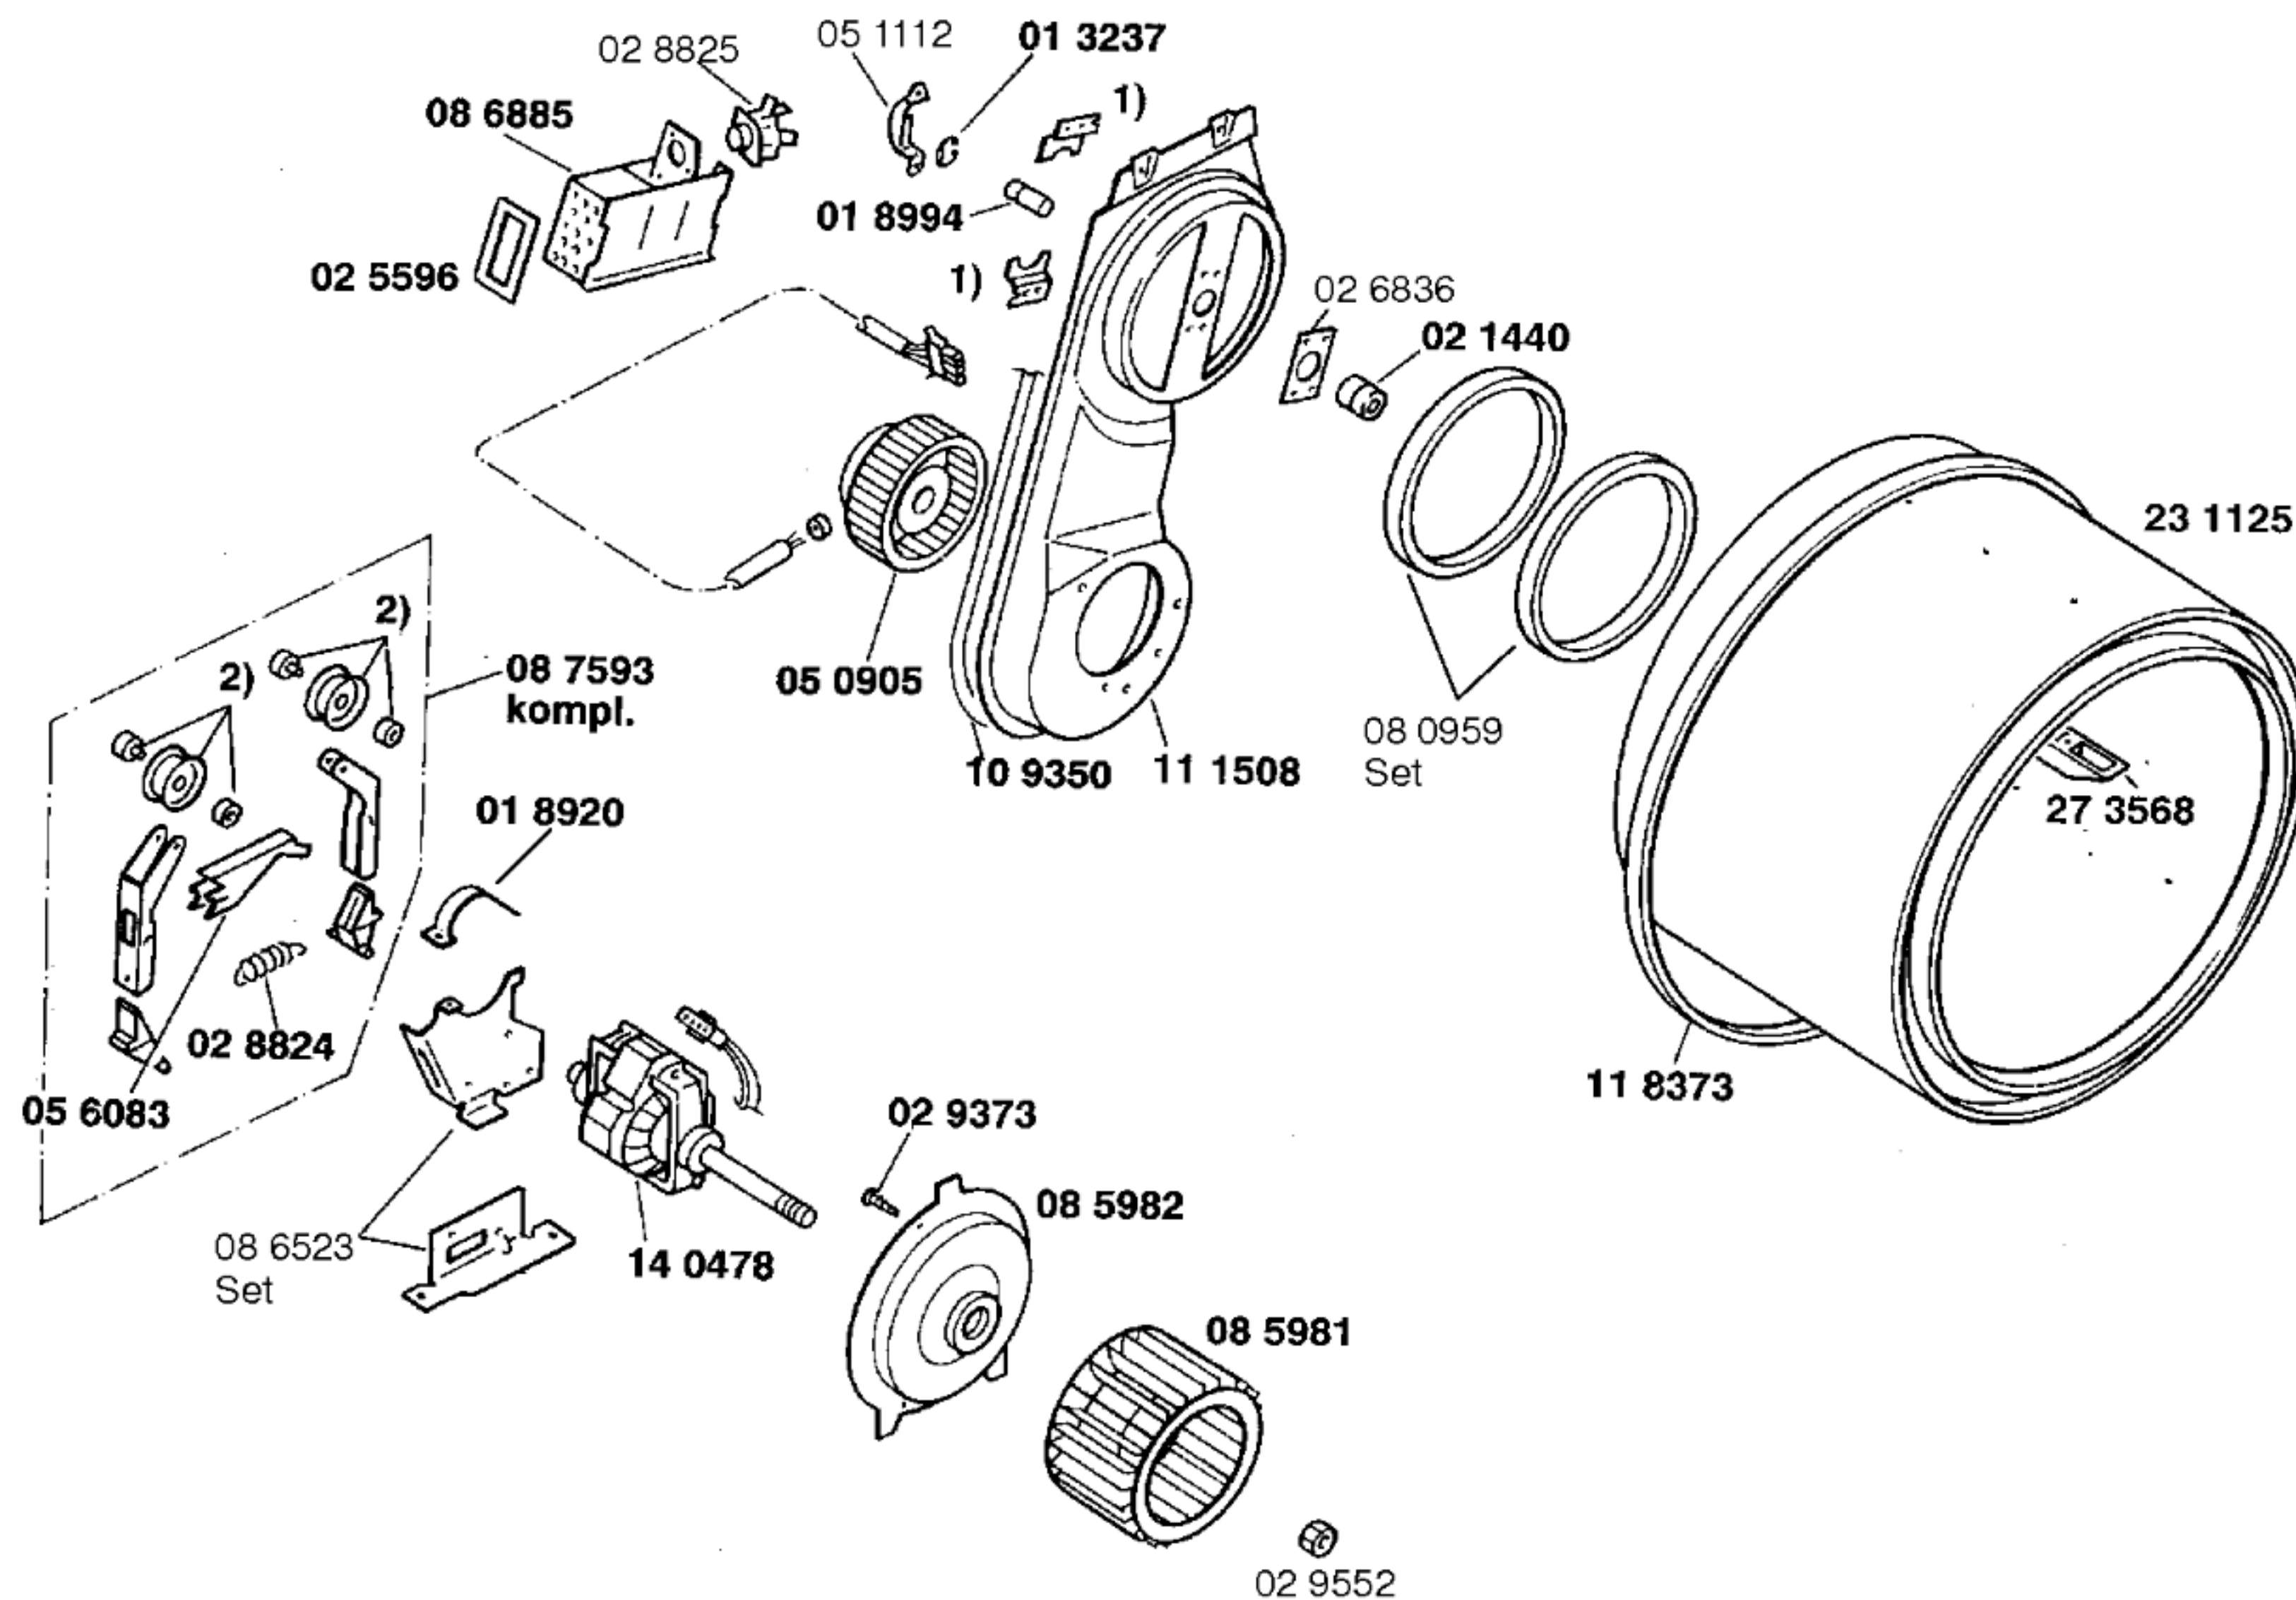

Siliconfett
 16 0413

1) 02 1439
 2) 04 6400

