 
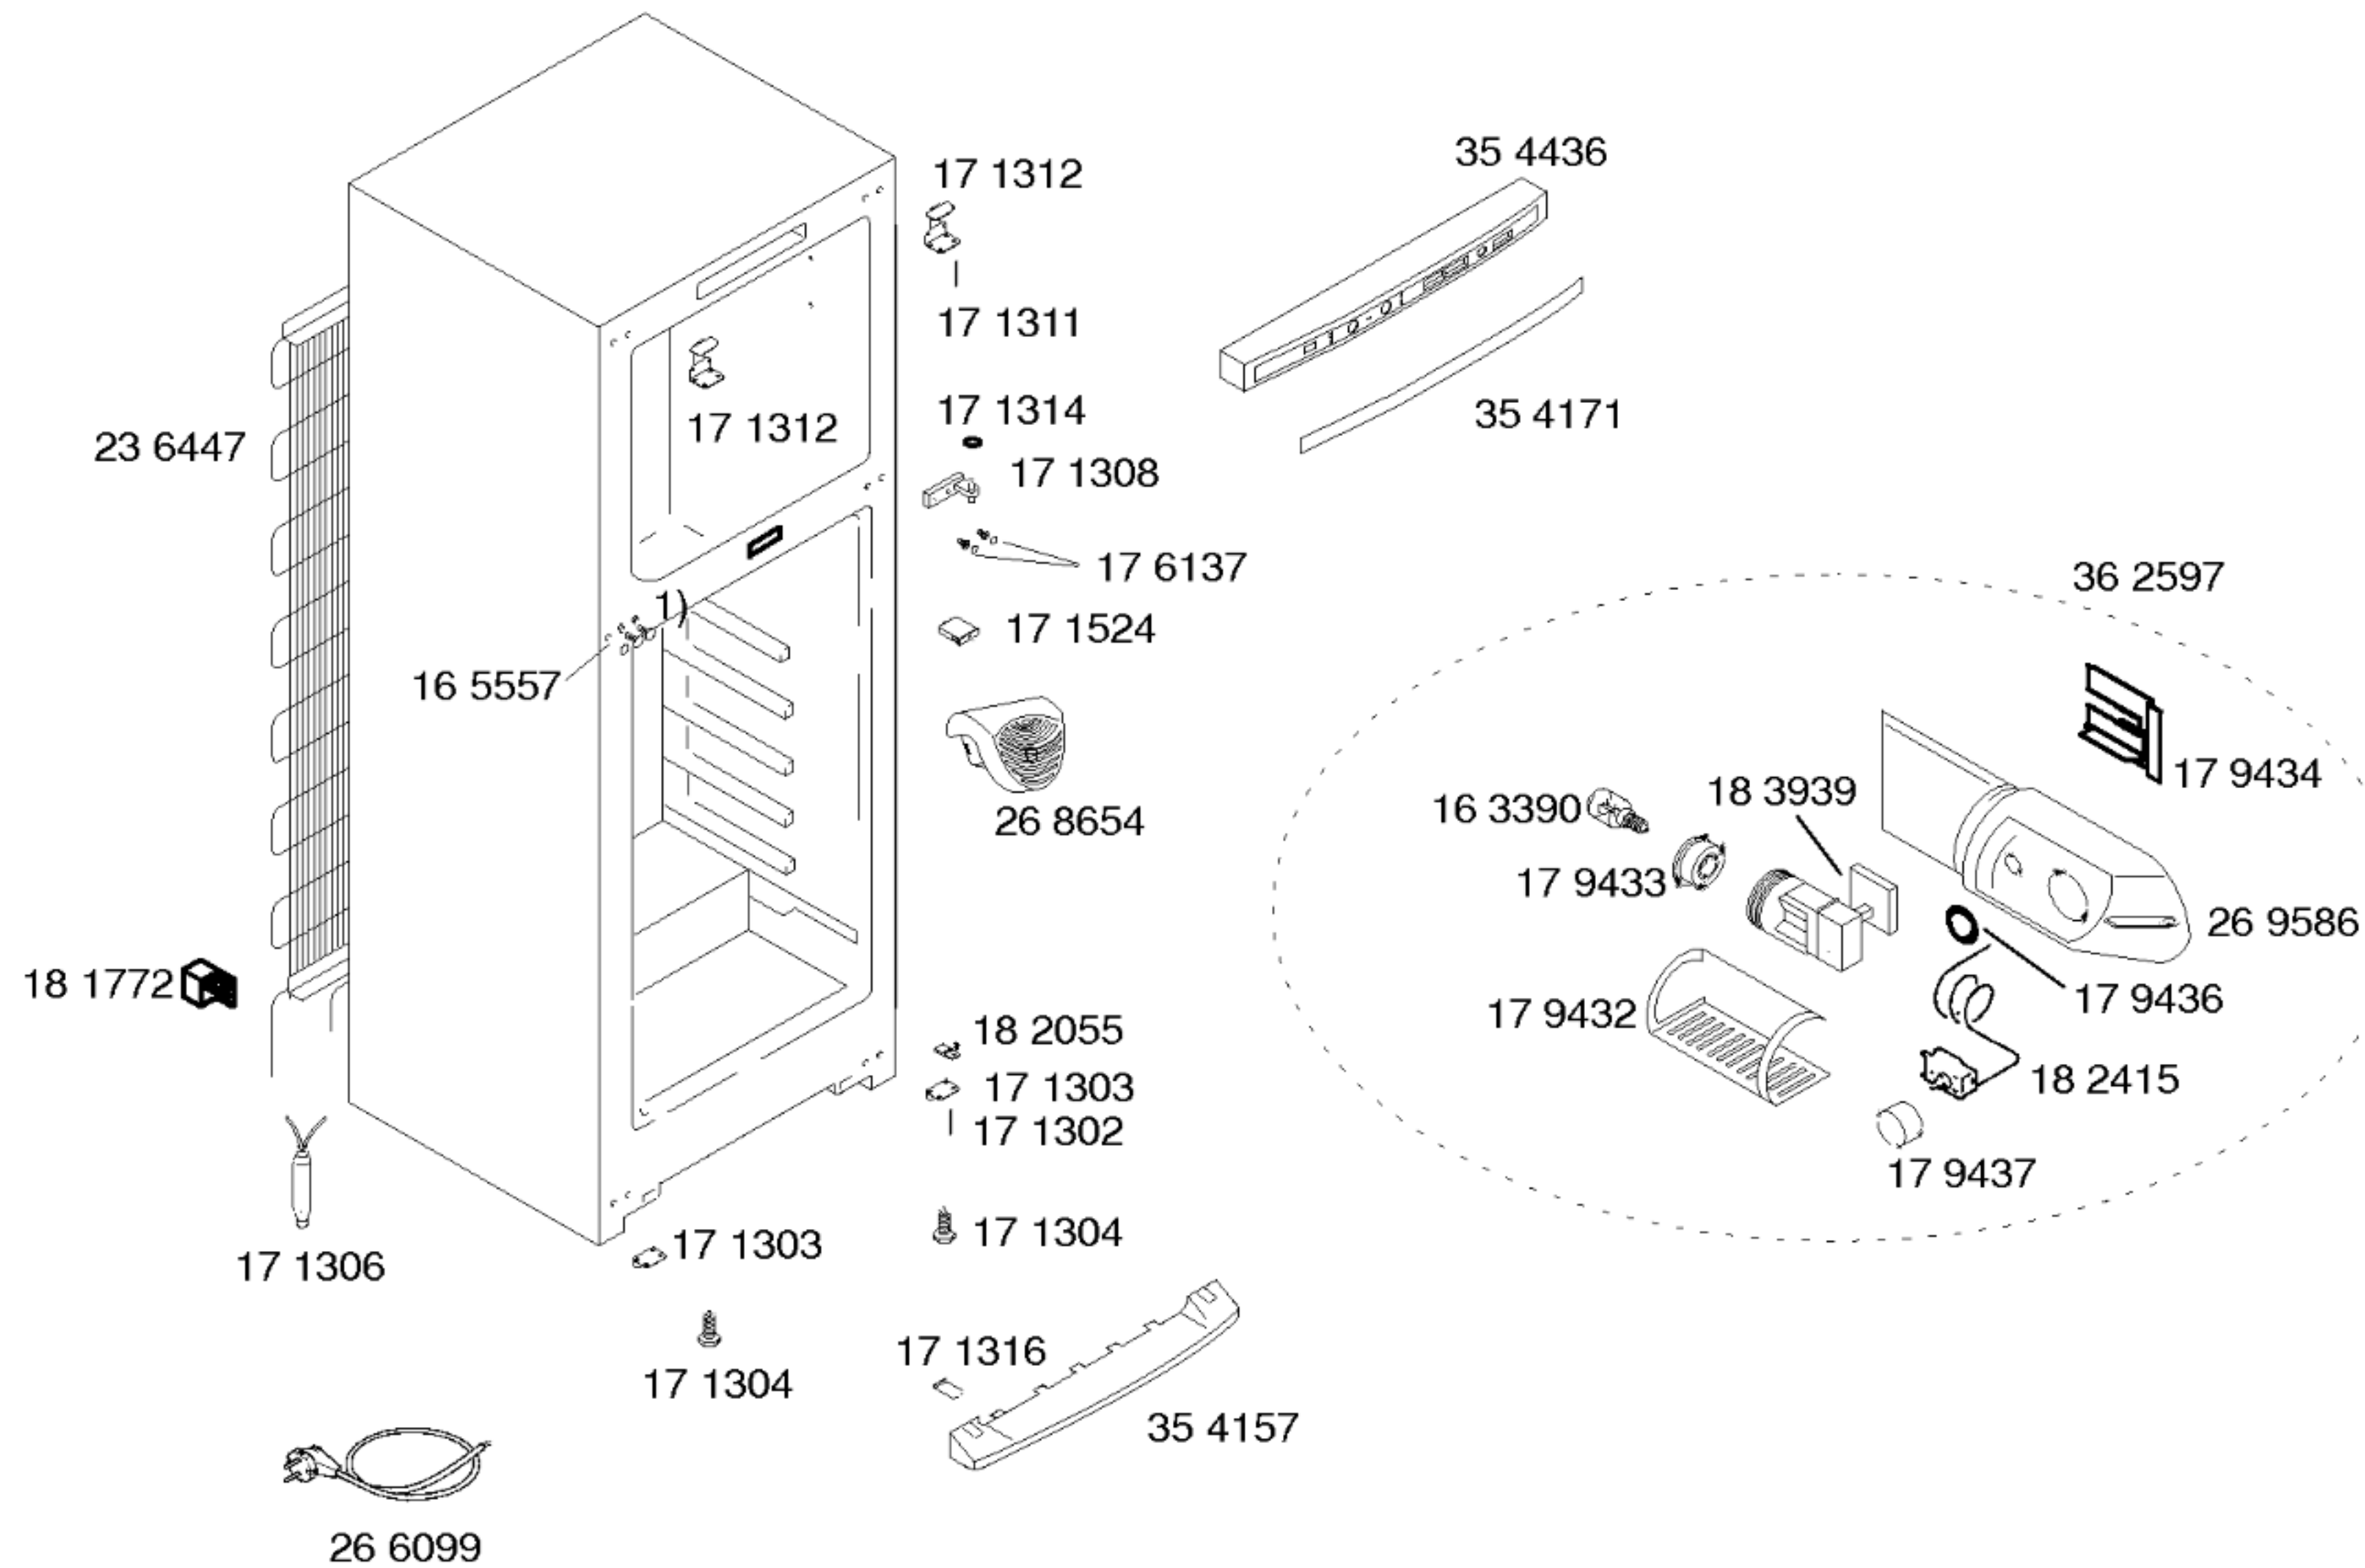 


Mat. – Nr. – Konstante
3740

 
Gebrauchsanweisung
52 9471

1) 16 5552

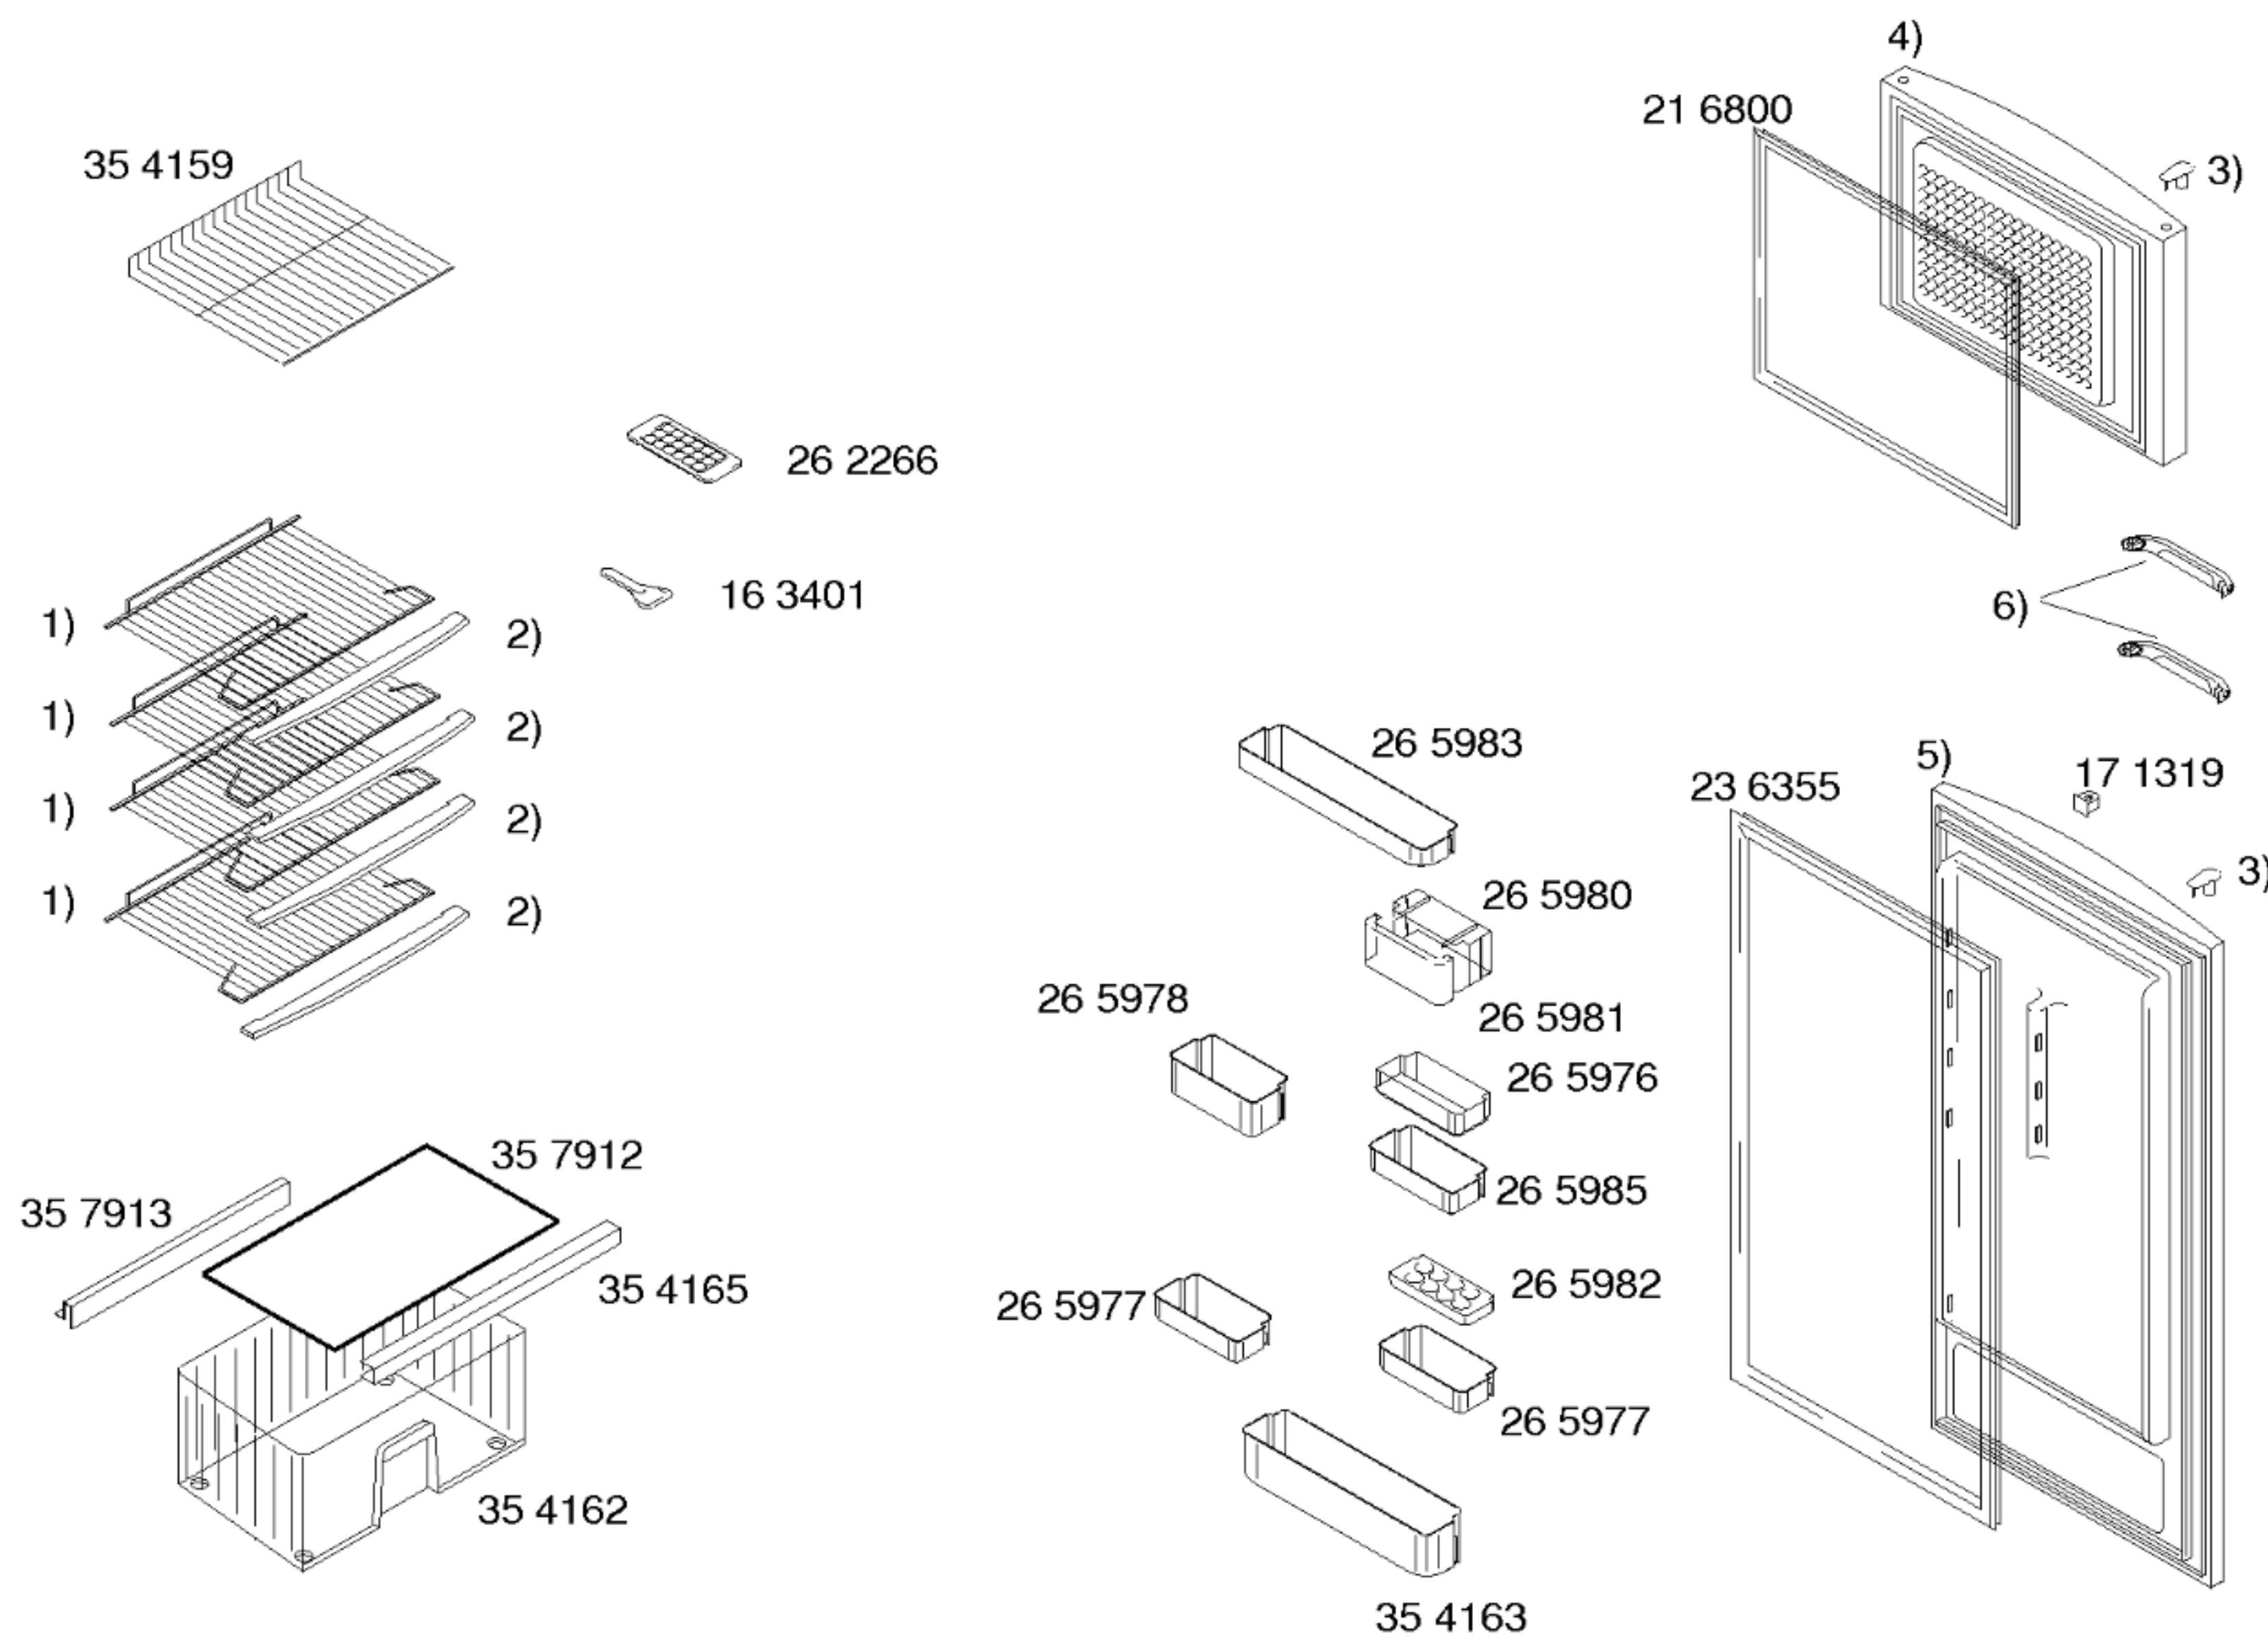

Mat. – Nr. – Konstante
3740

- 1) 35 4164
- 2) 35 4166
- 3) 17 1321
- 4) 21 4740
V01
21 8398
V02,V03,V04
- 5) 23 5098
V01
23 8034
V02,V03,V04
- 6) 48 1020
V01,V02
26 5975
V03,V04

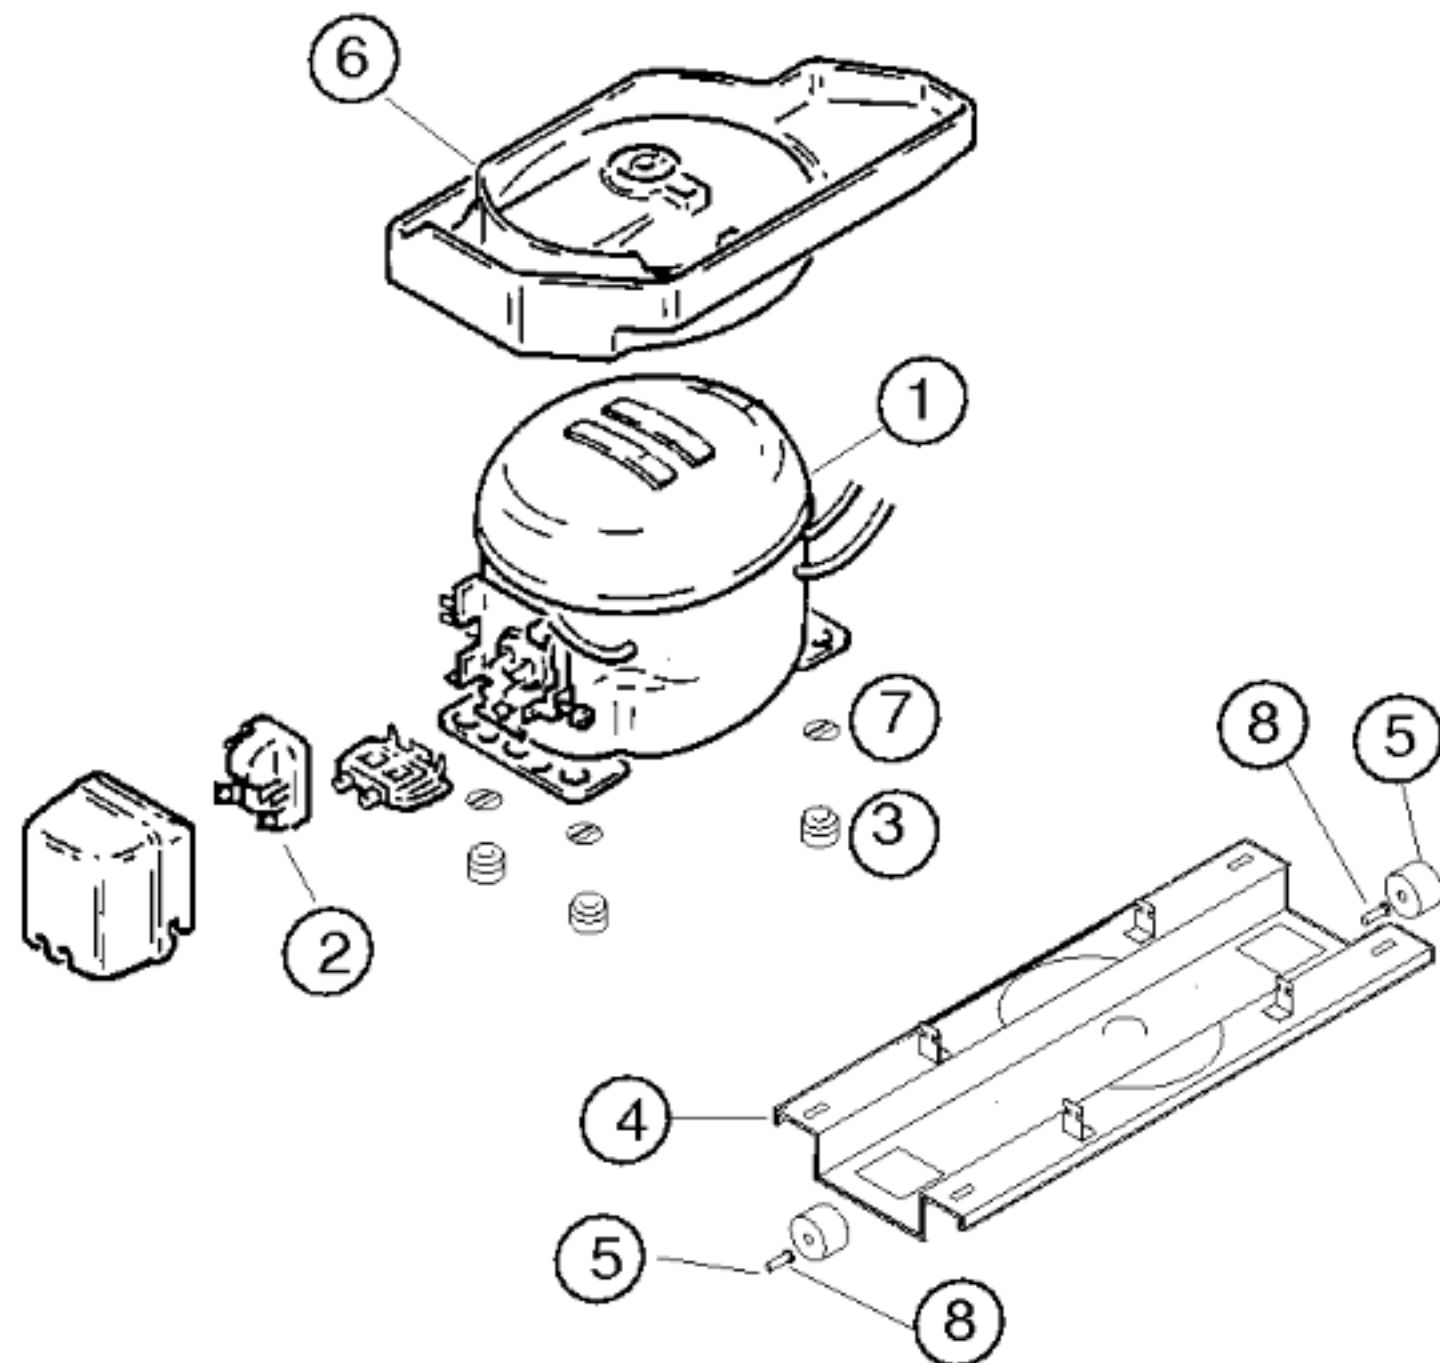

Pos.	Matsushita		
	DA125E		
1	14 2199		
2	18 3873		
3	16 3427		
4	35 4158		
5	17 1318		
6	09 1308		
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Matsushita DA125E		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari	R600	g	
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ohm W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ohm V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz