 


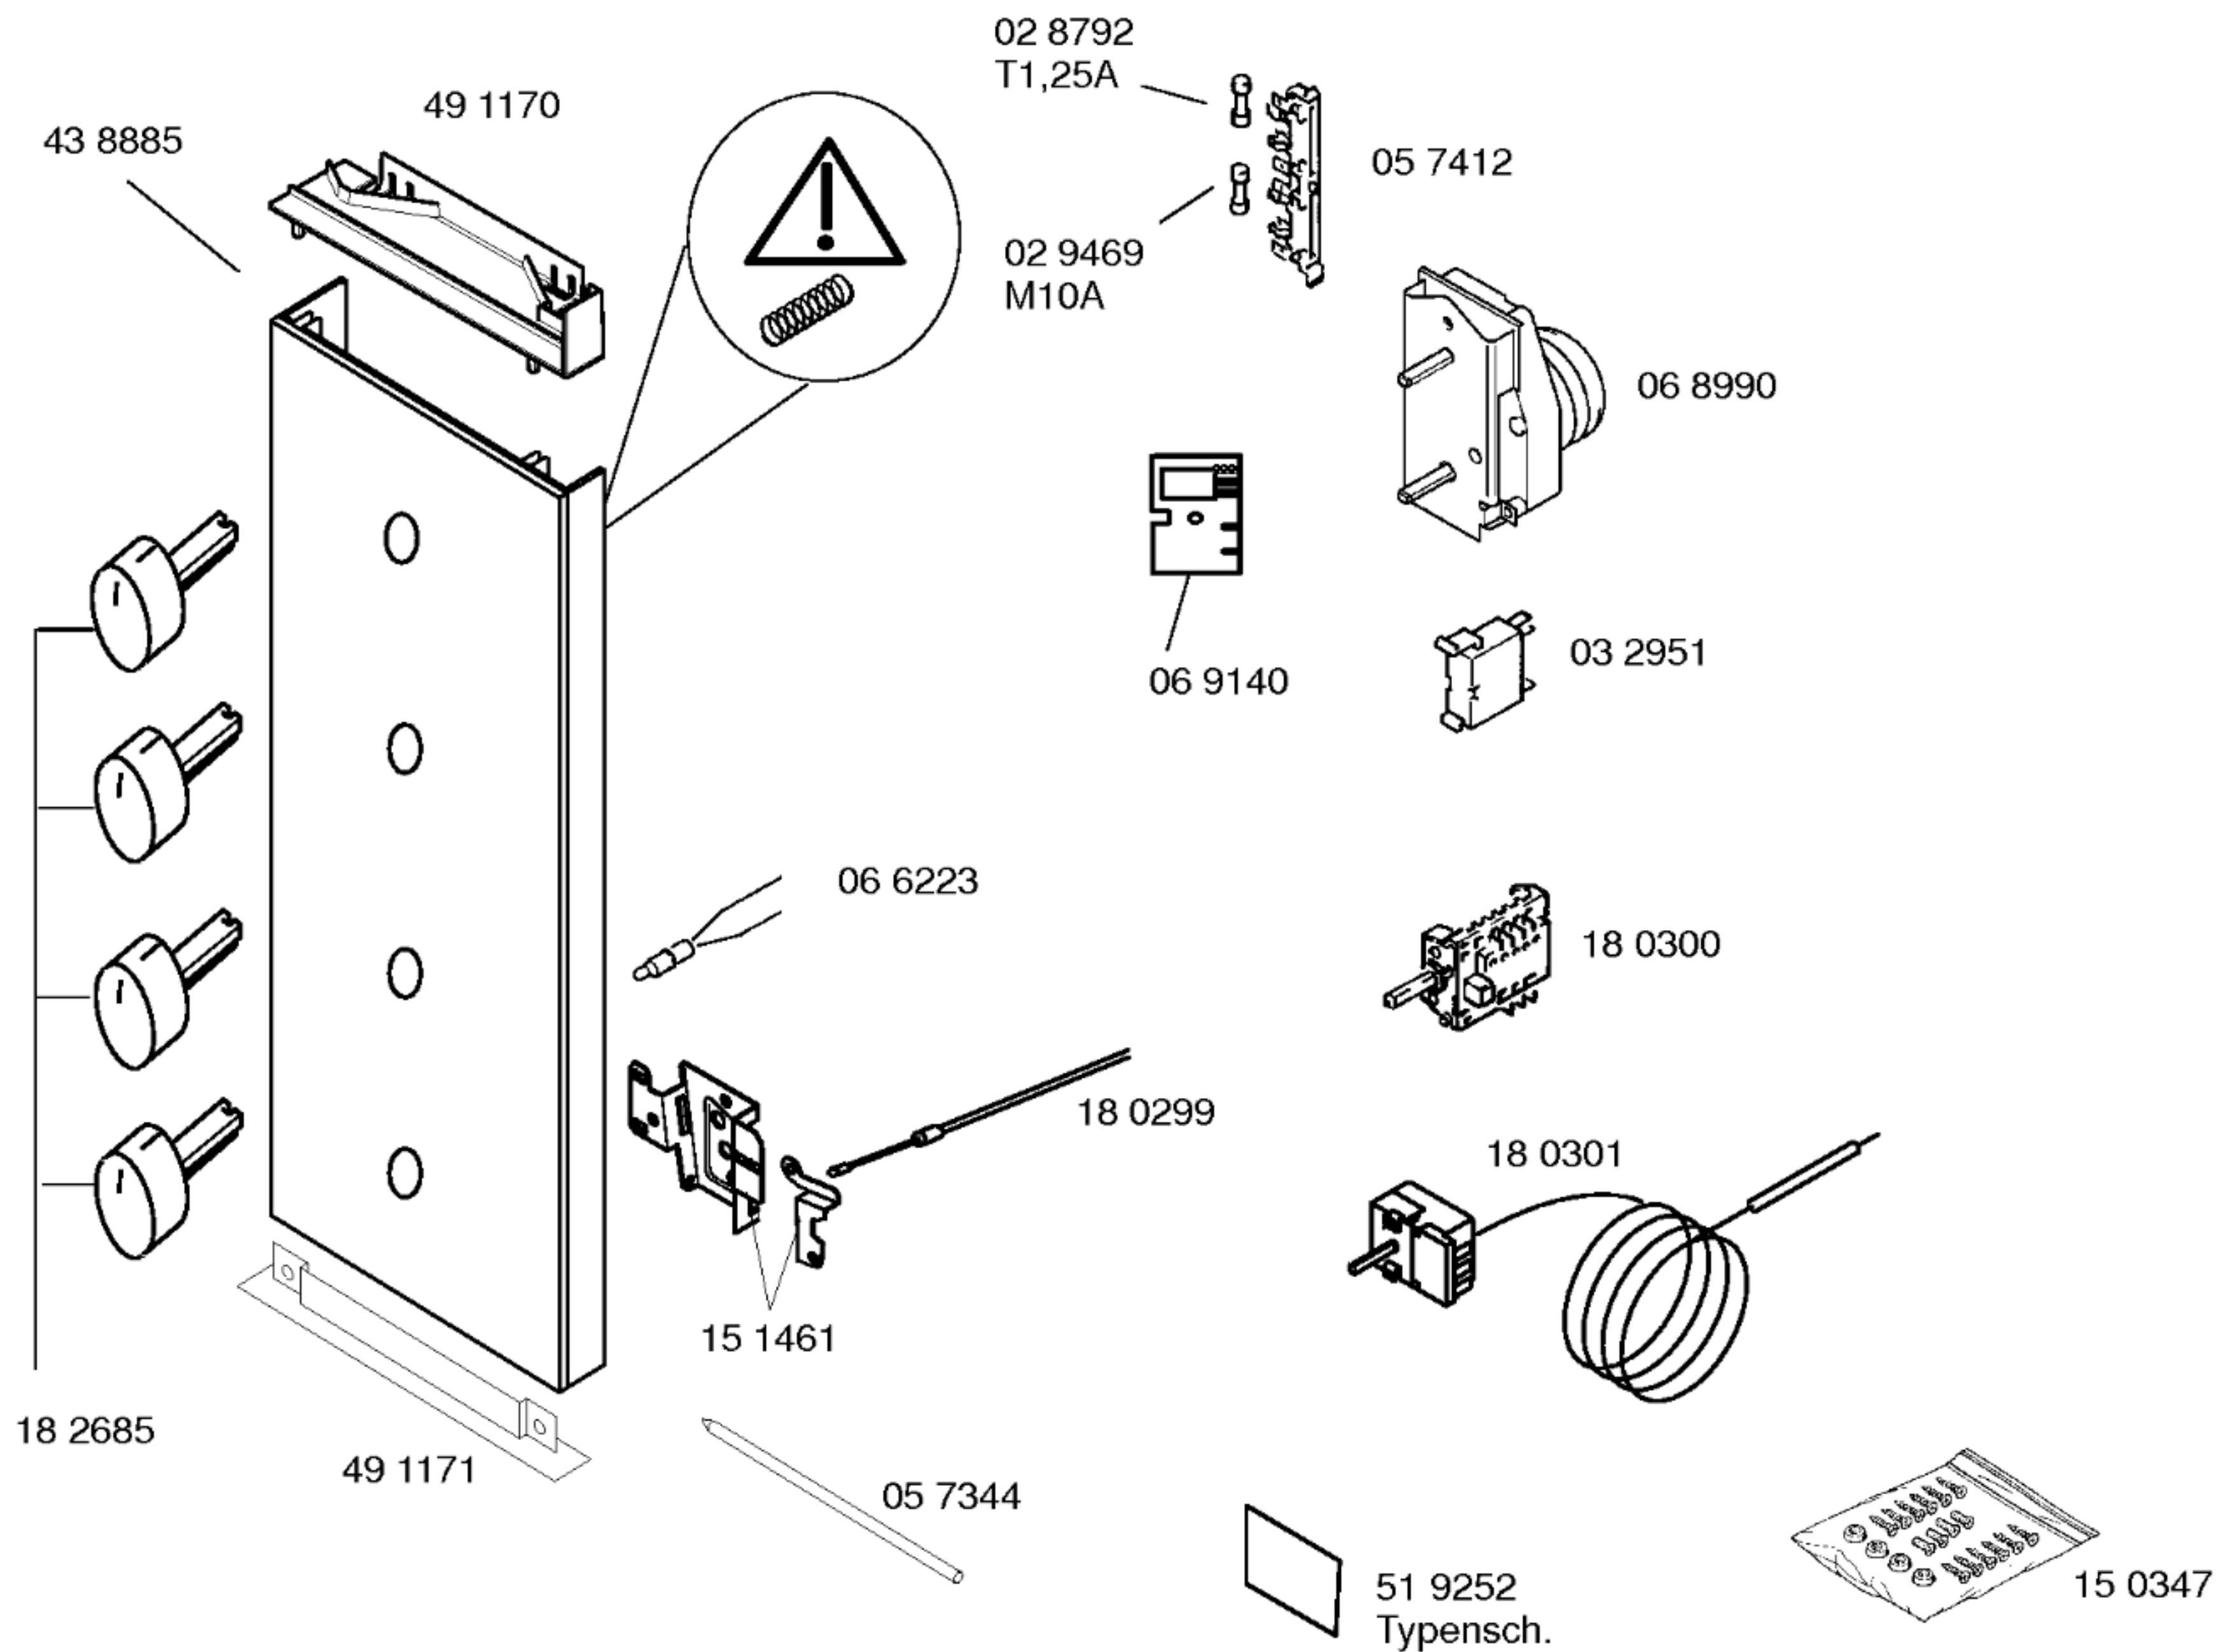

Gebrauchsanleitung:

52 6843

(de)

52 6844

(fr)

52 6845

(nl)

Montageanleitung:

52 8295

(de,en,fr,it,nl)

Kochbuch:

52 6822

(nl)

Zubehör:

HZ8056


Glaspfanne

HZ8055


AL-Backblech

HZ67615

 
Universalpfanne

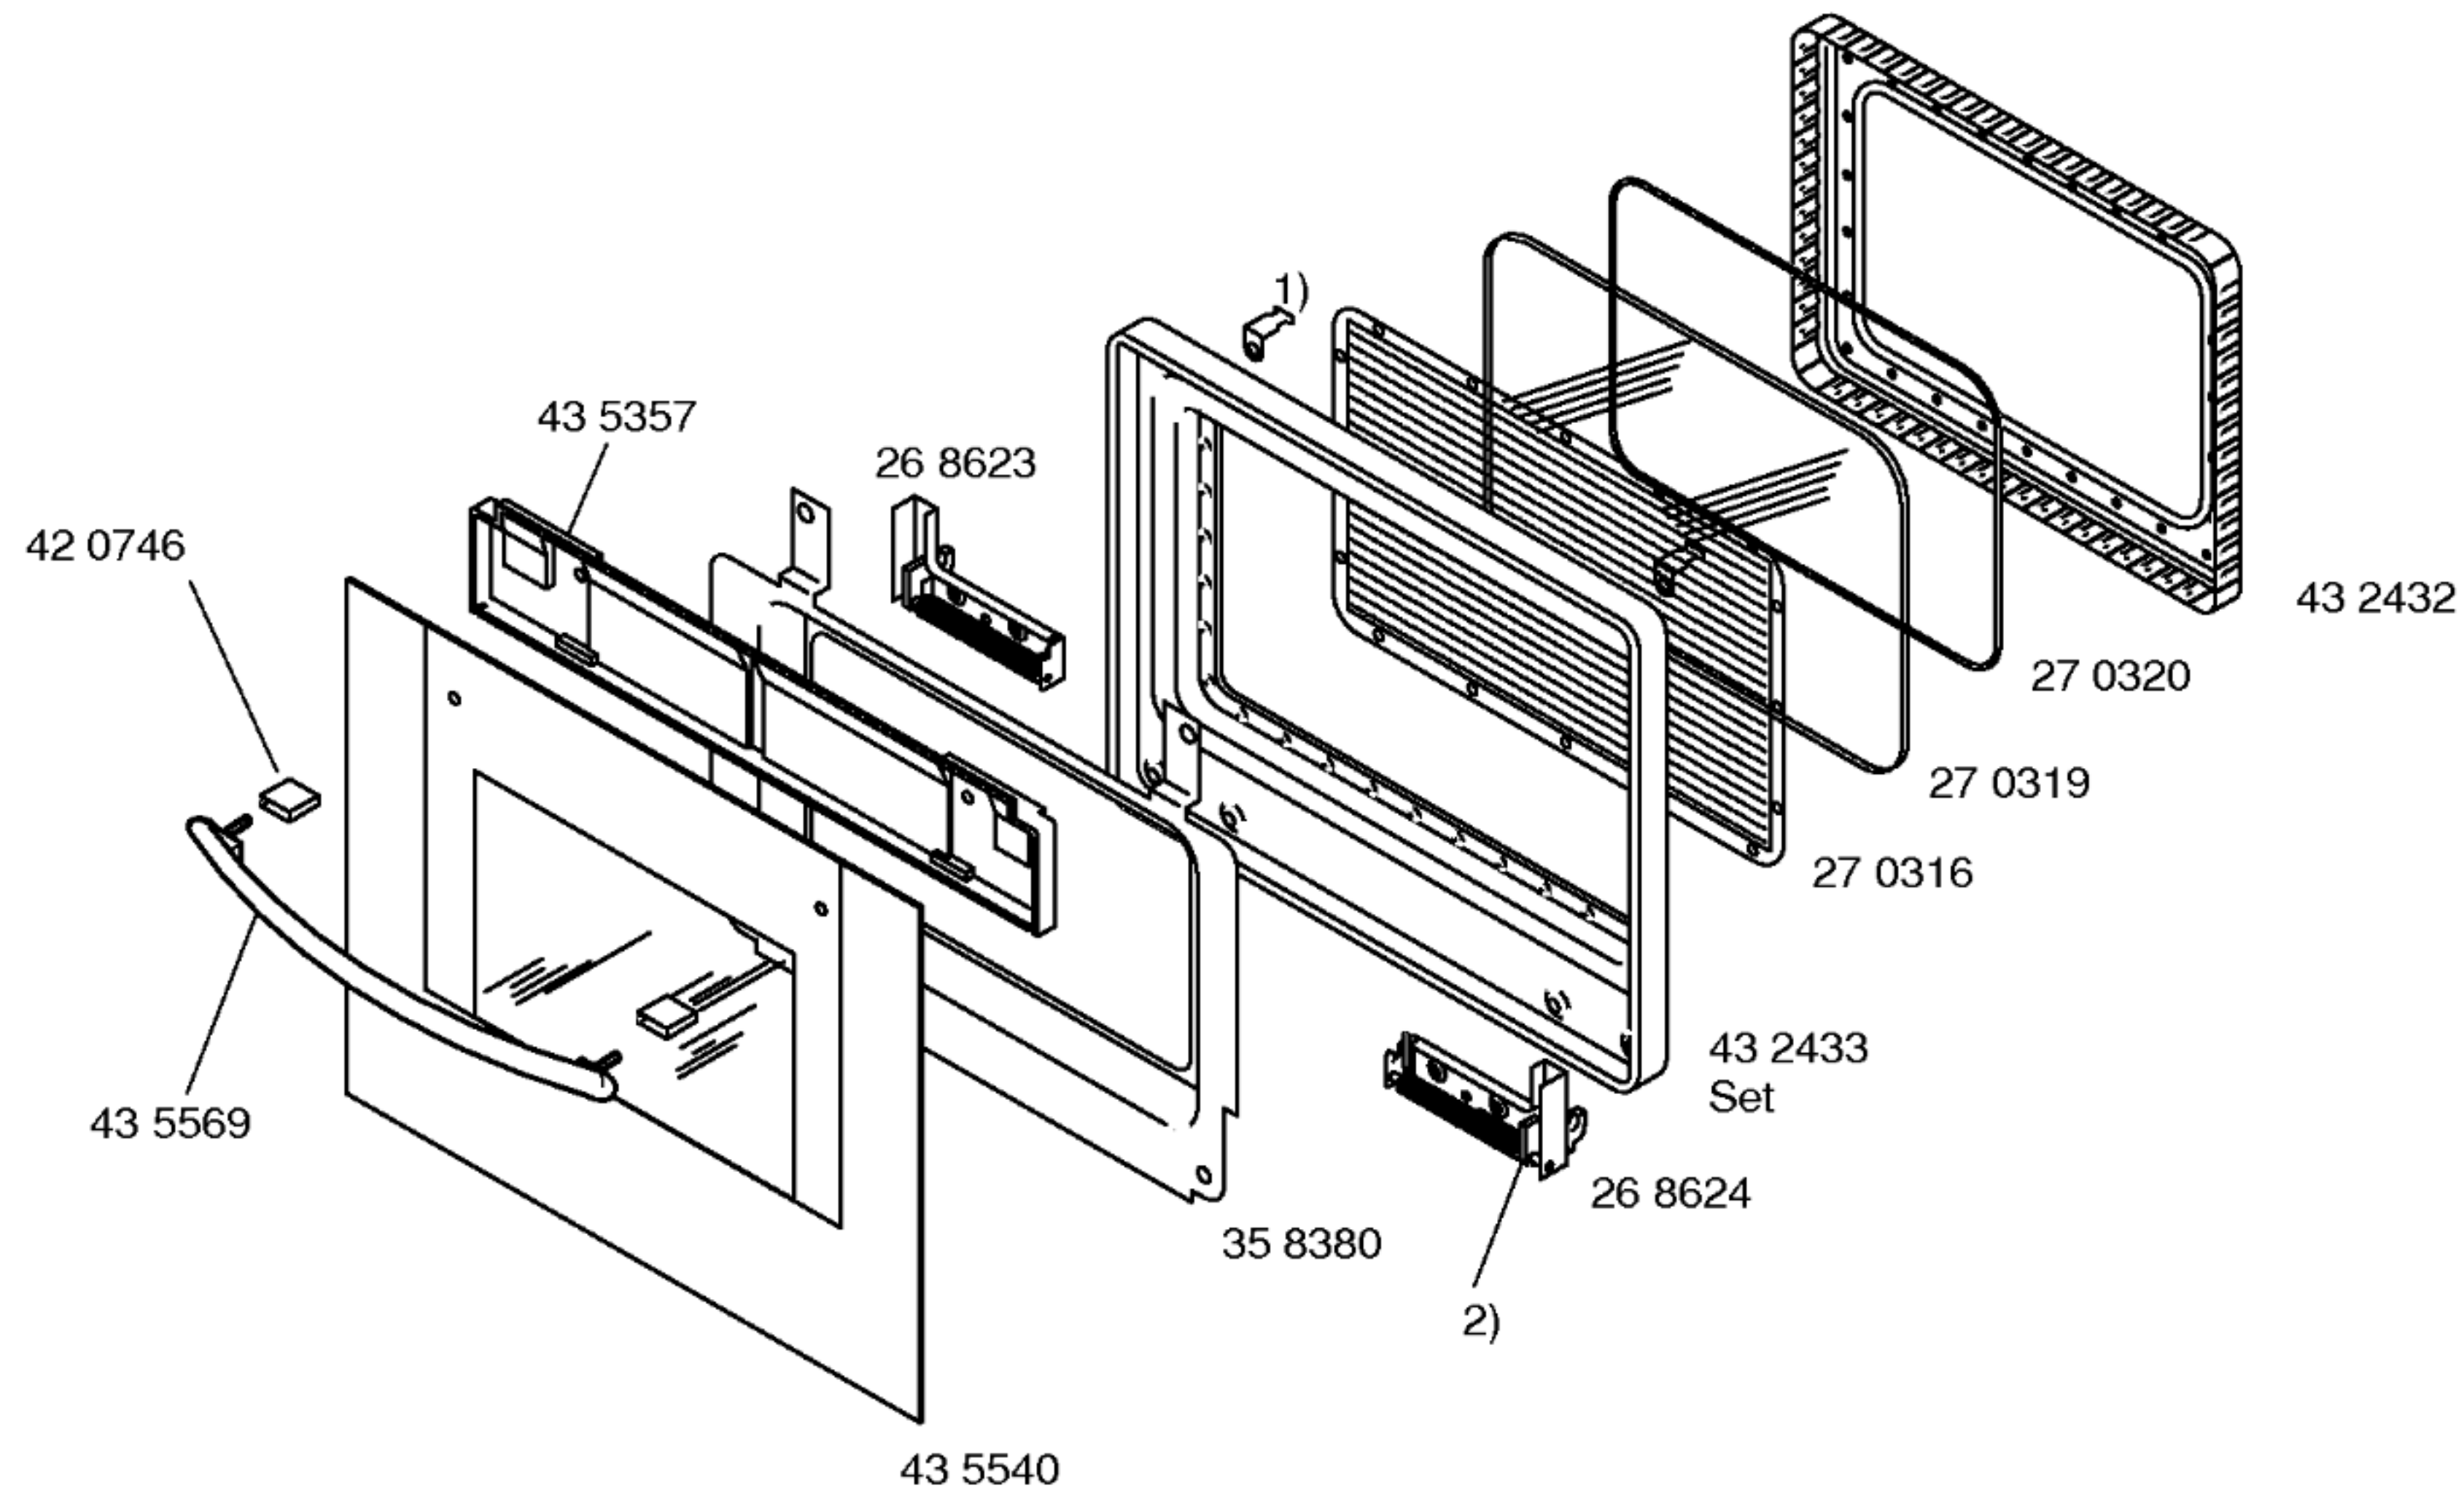

 - 1) 03 0671
2) 03 0813
Arretierstift)

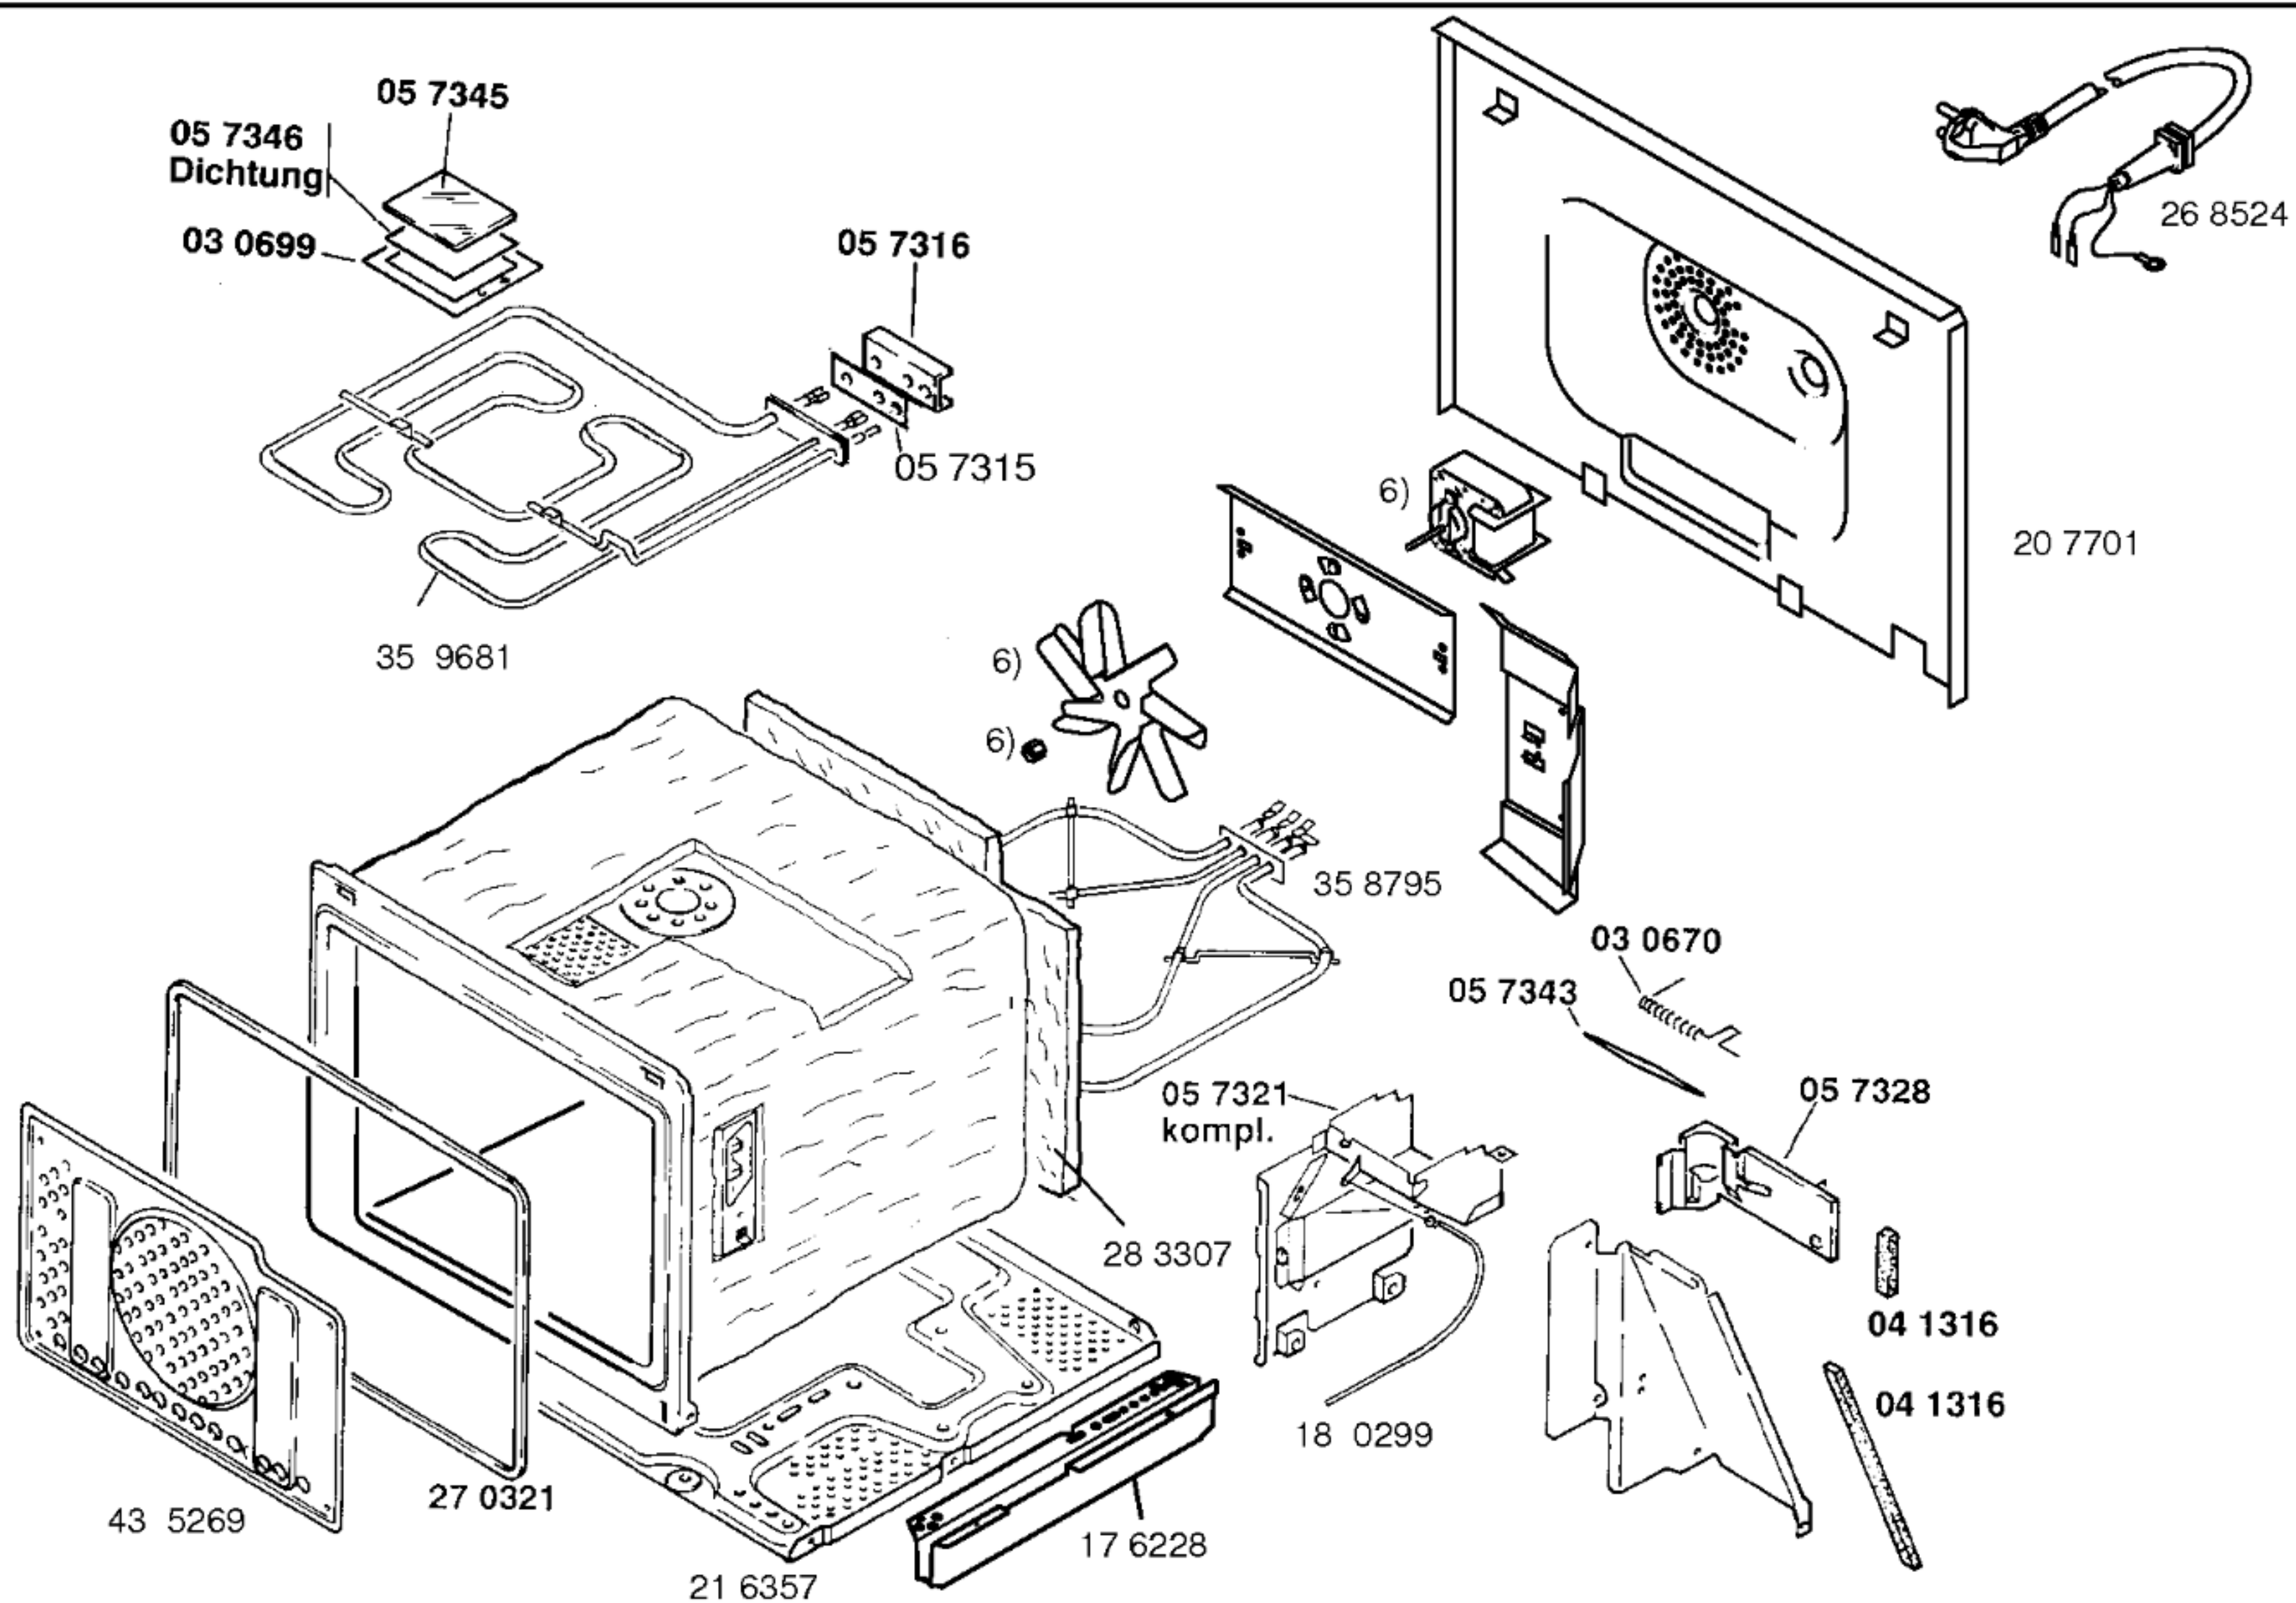

 6) 09 2676
kompl.

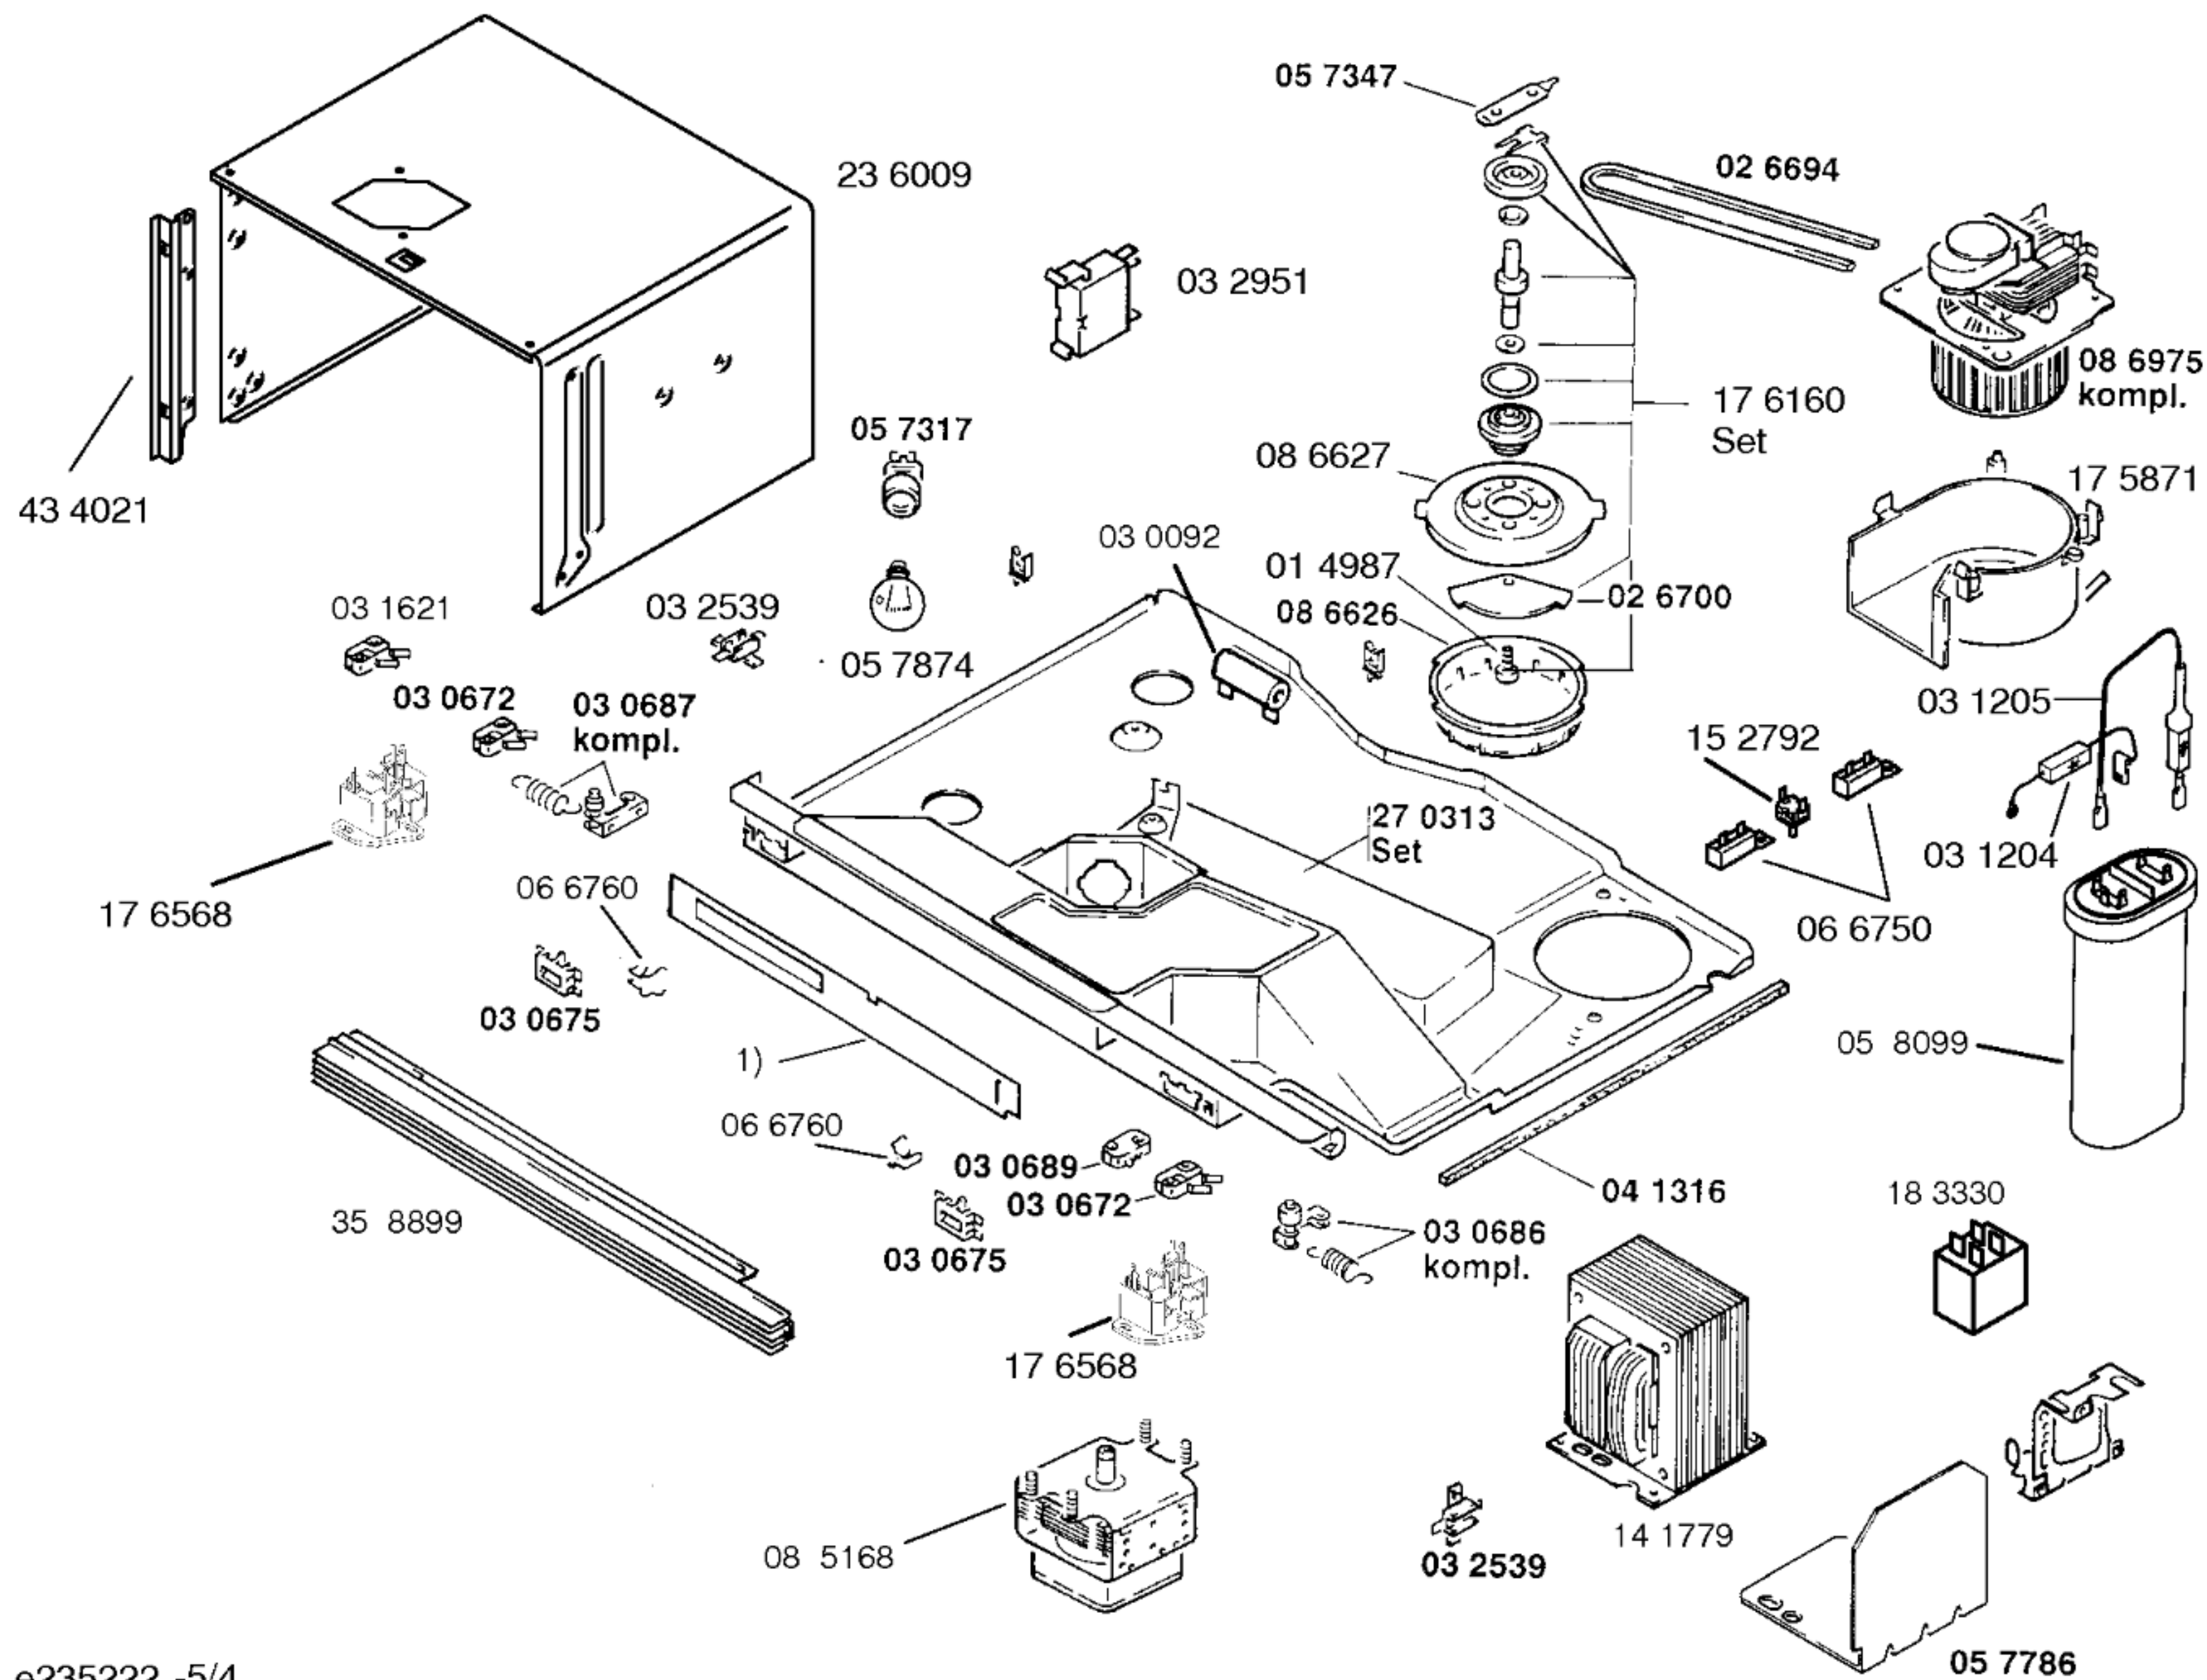

1) 35 9108

1) 17 5720

