


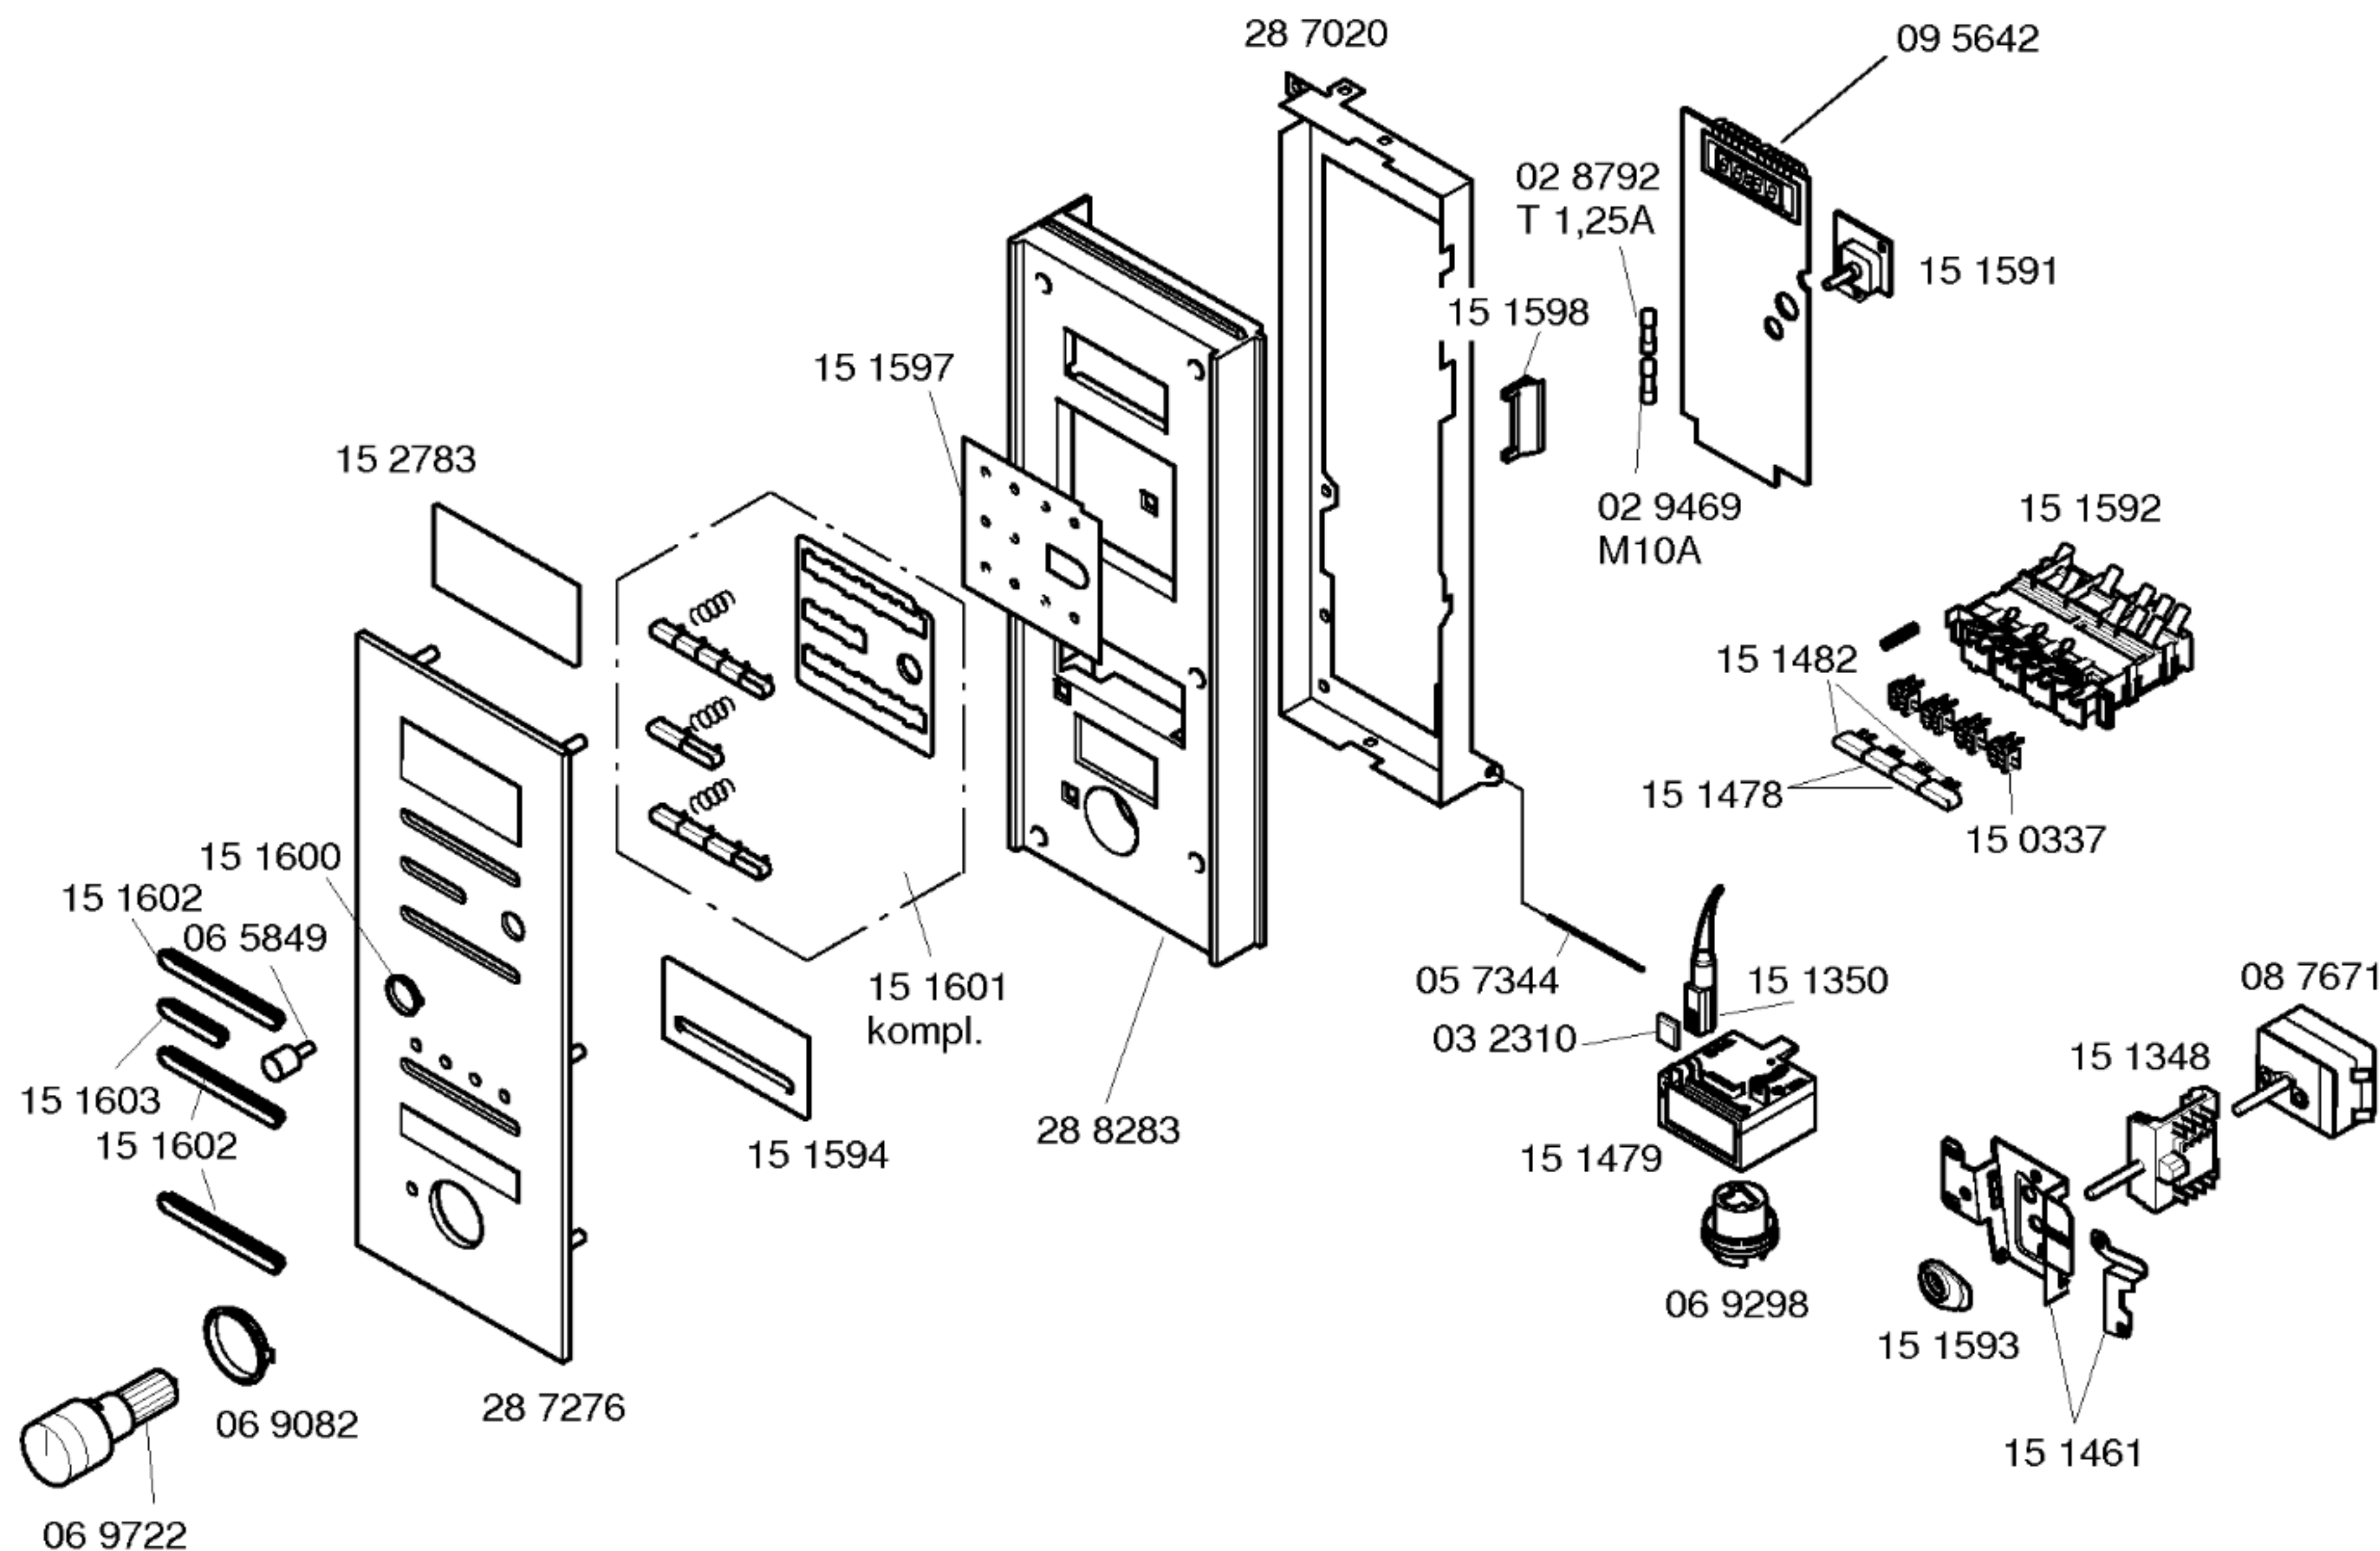

Gebrauchsanweisung
51 6973
(D,F,GB,I,NL,E)

Programmtabelle
51 7579
(D,GB,F,I,NL,E)


Montageanleitung
51 6089
(D,GB,F,I,NL)

Zubehör:


Alu-Backblech
HZ 8055

Glaspfanne
HZ 8056

Glasbräter
HZ 9150

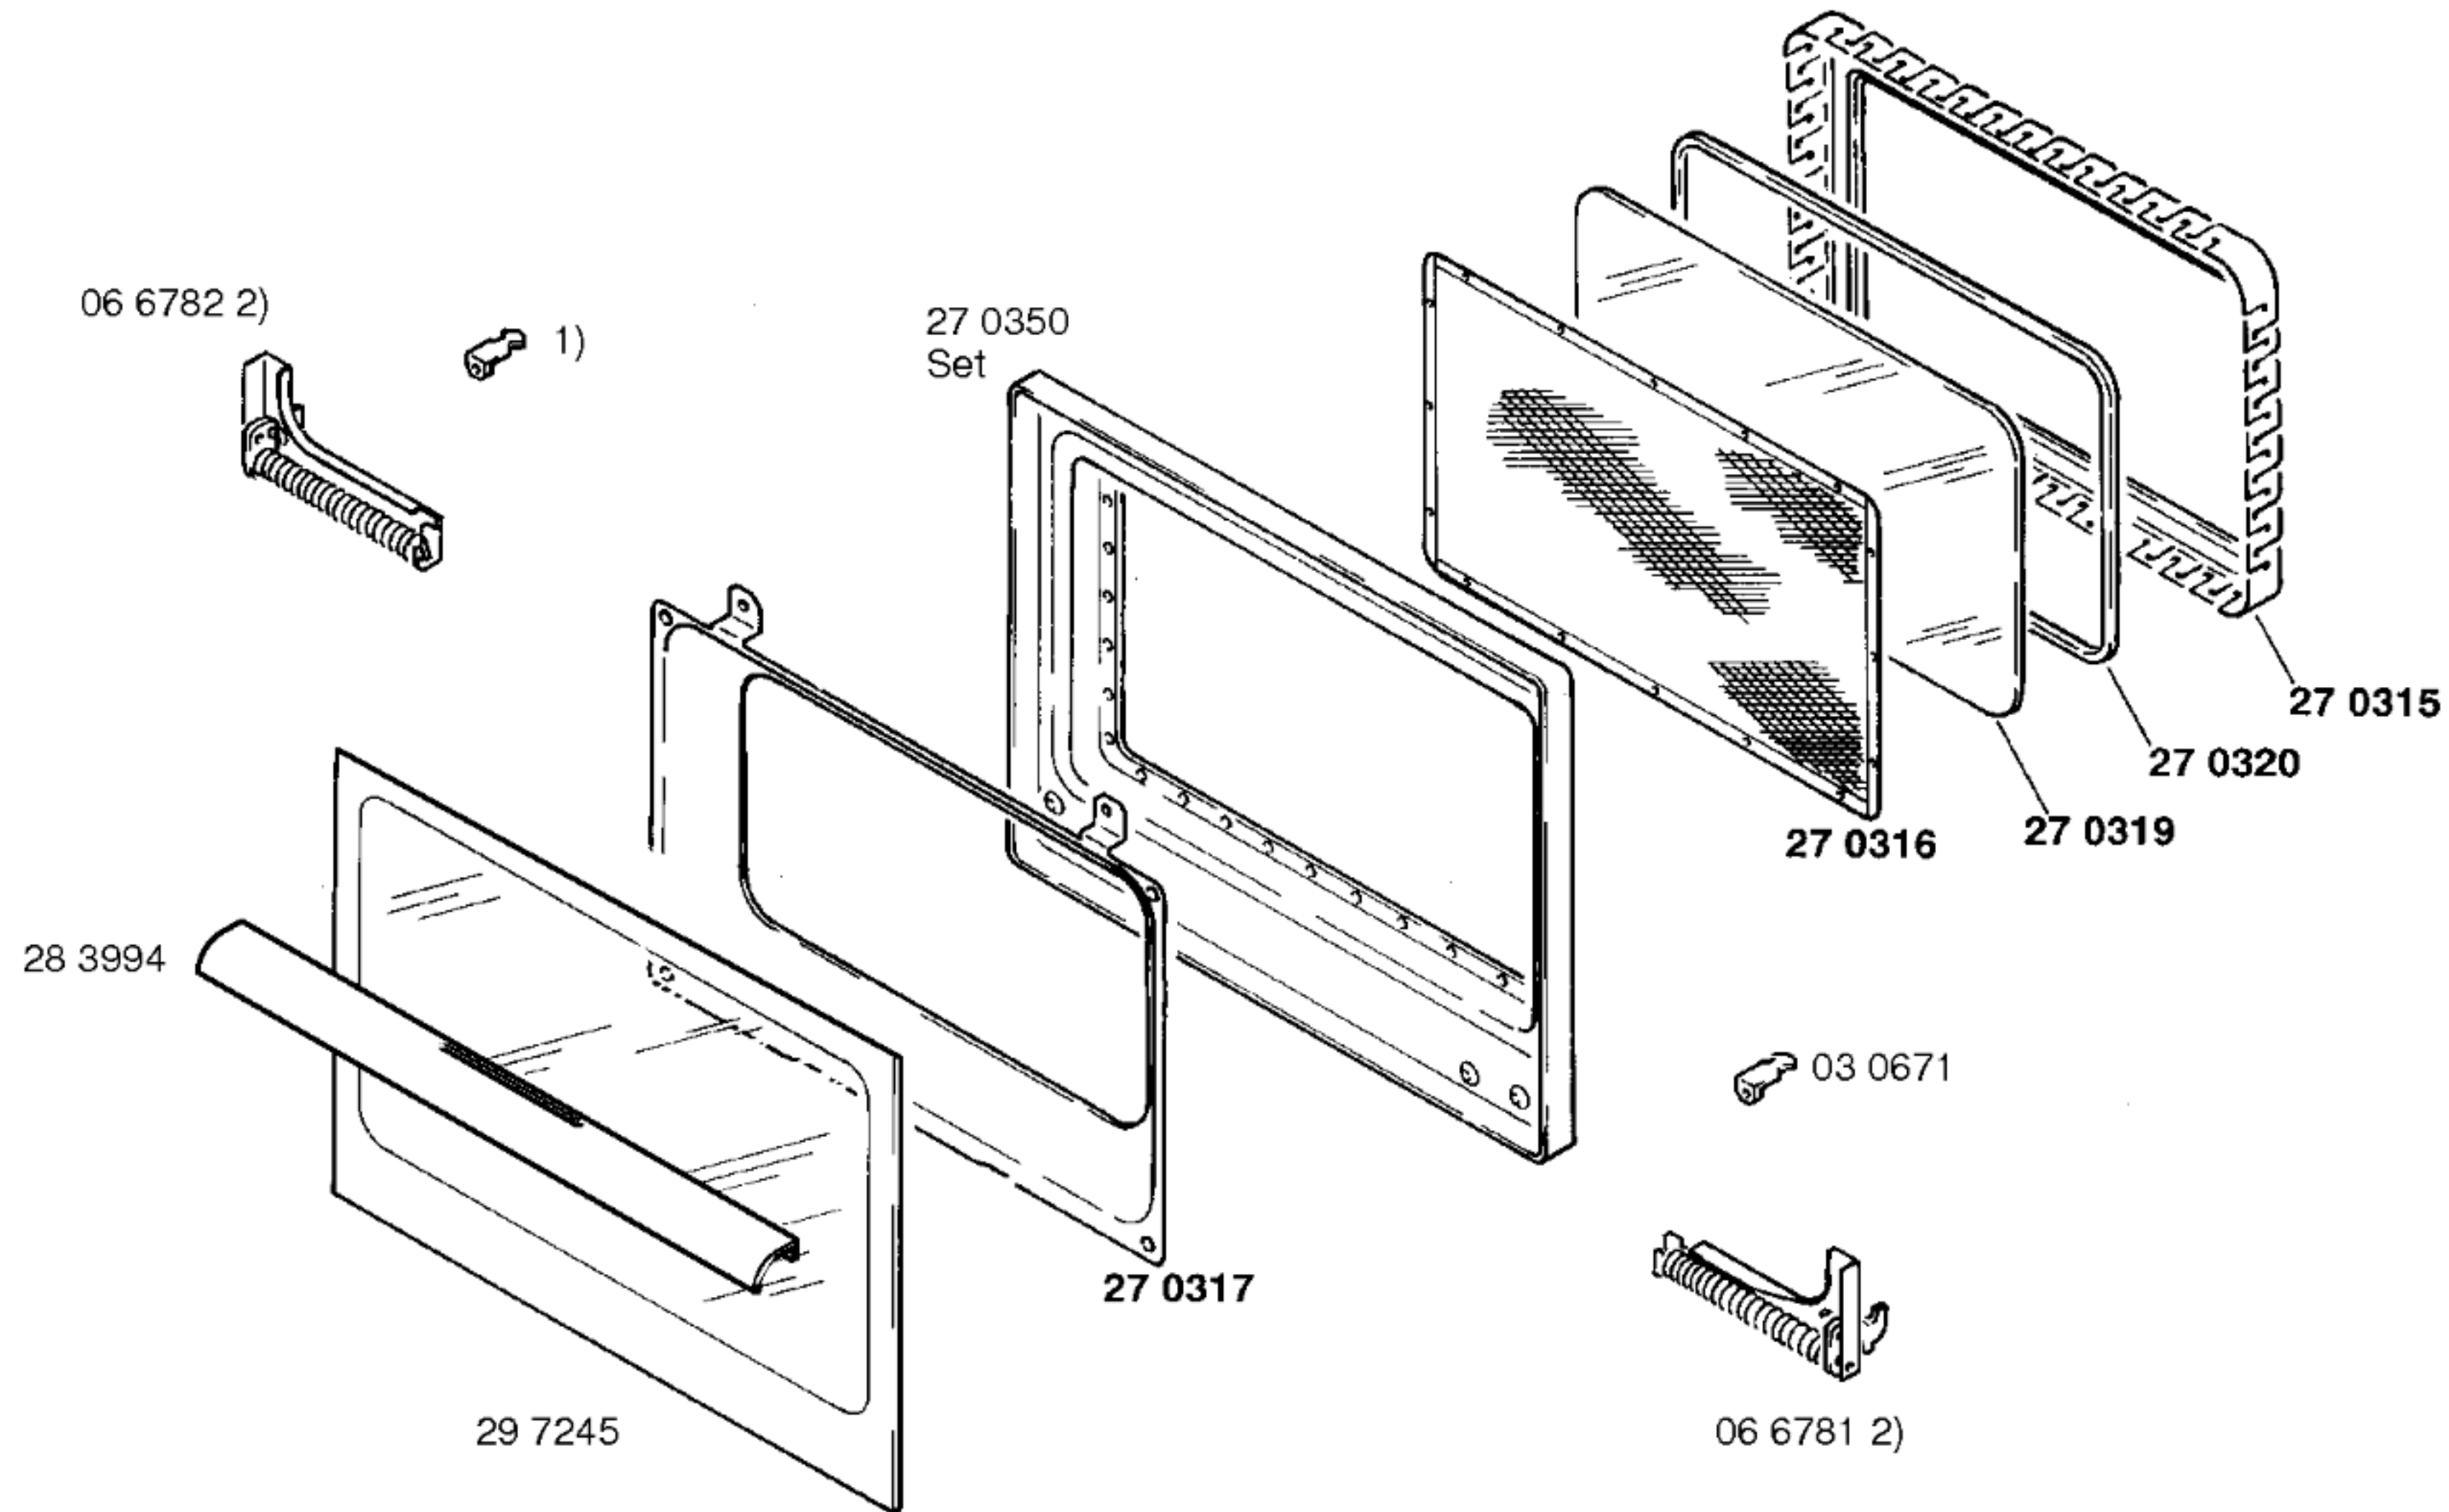


- 1) 03 0671
Stössel
- 2) 03 0813
Arretierstift

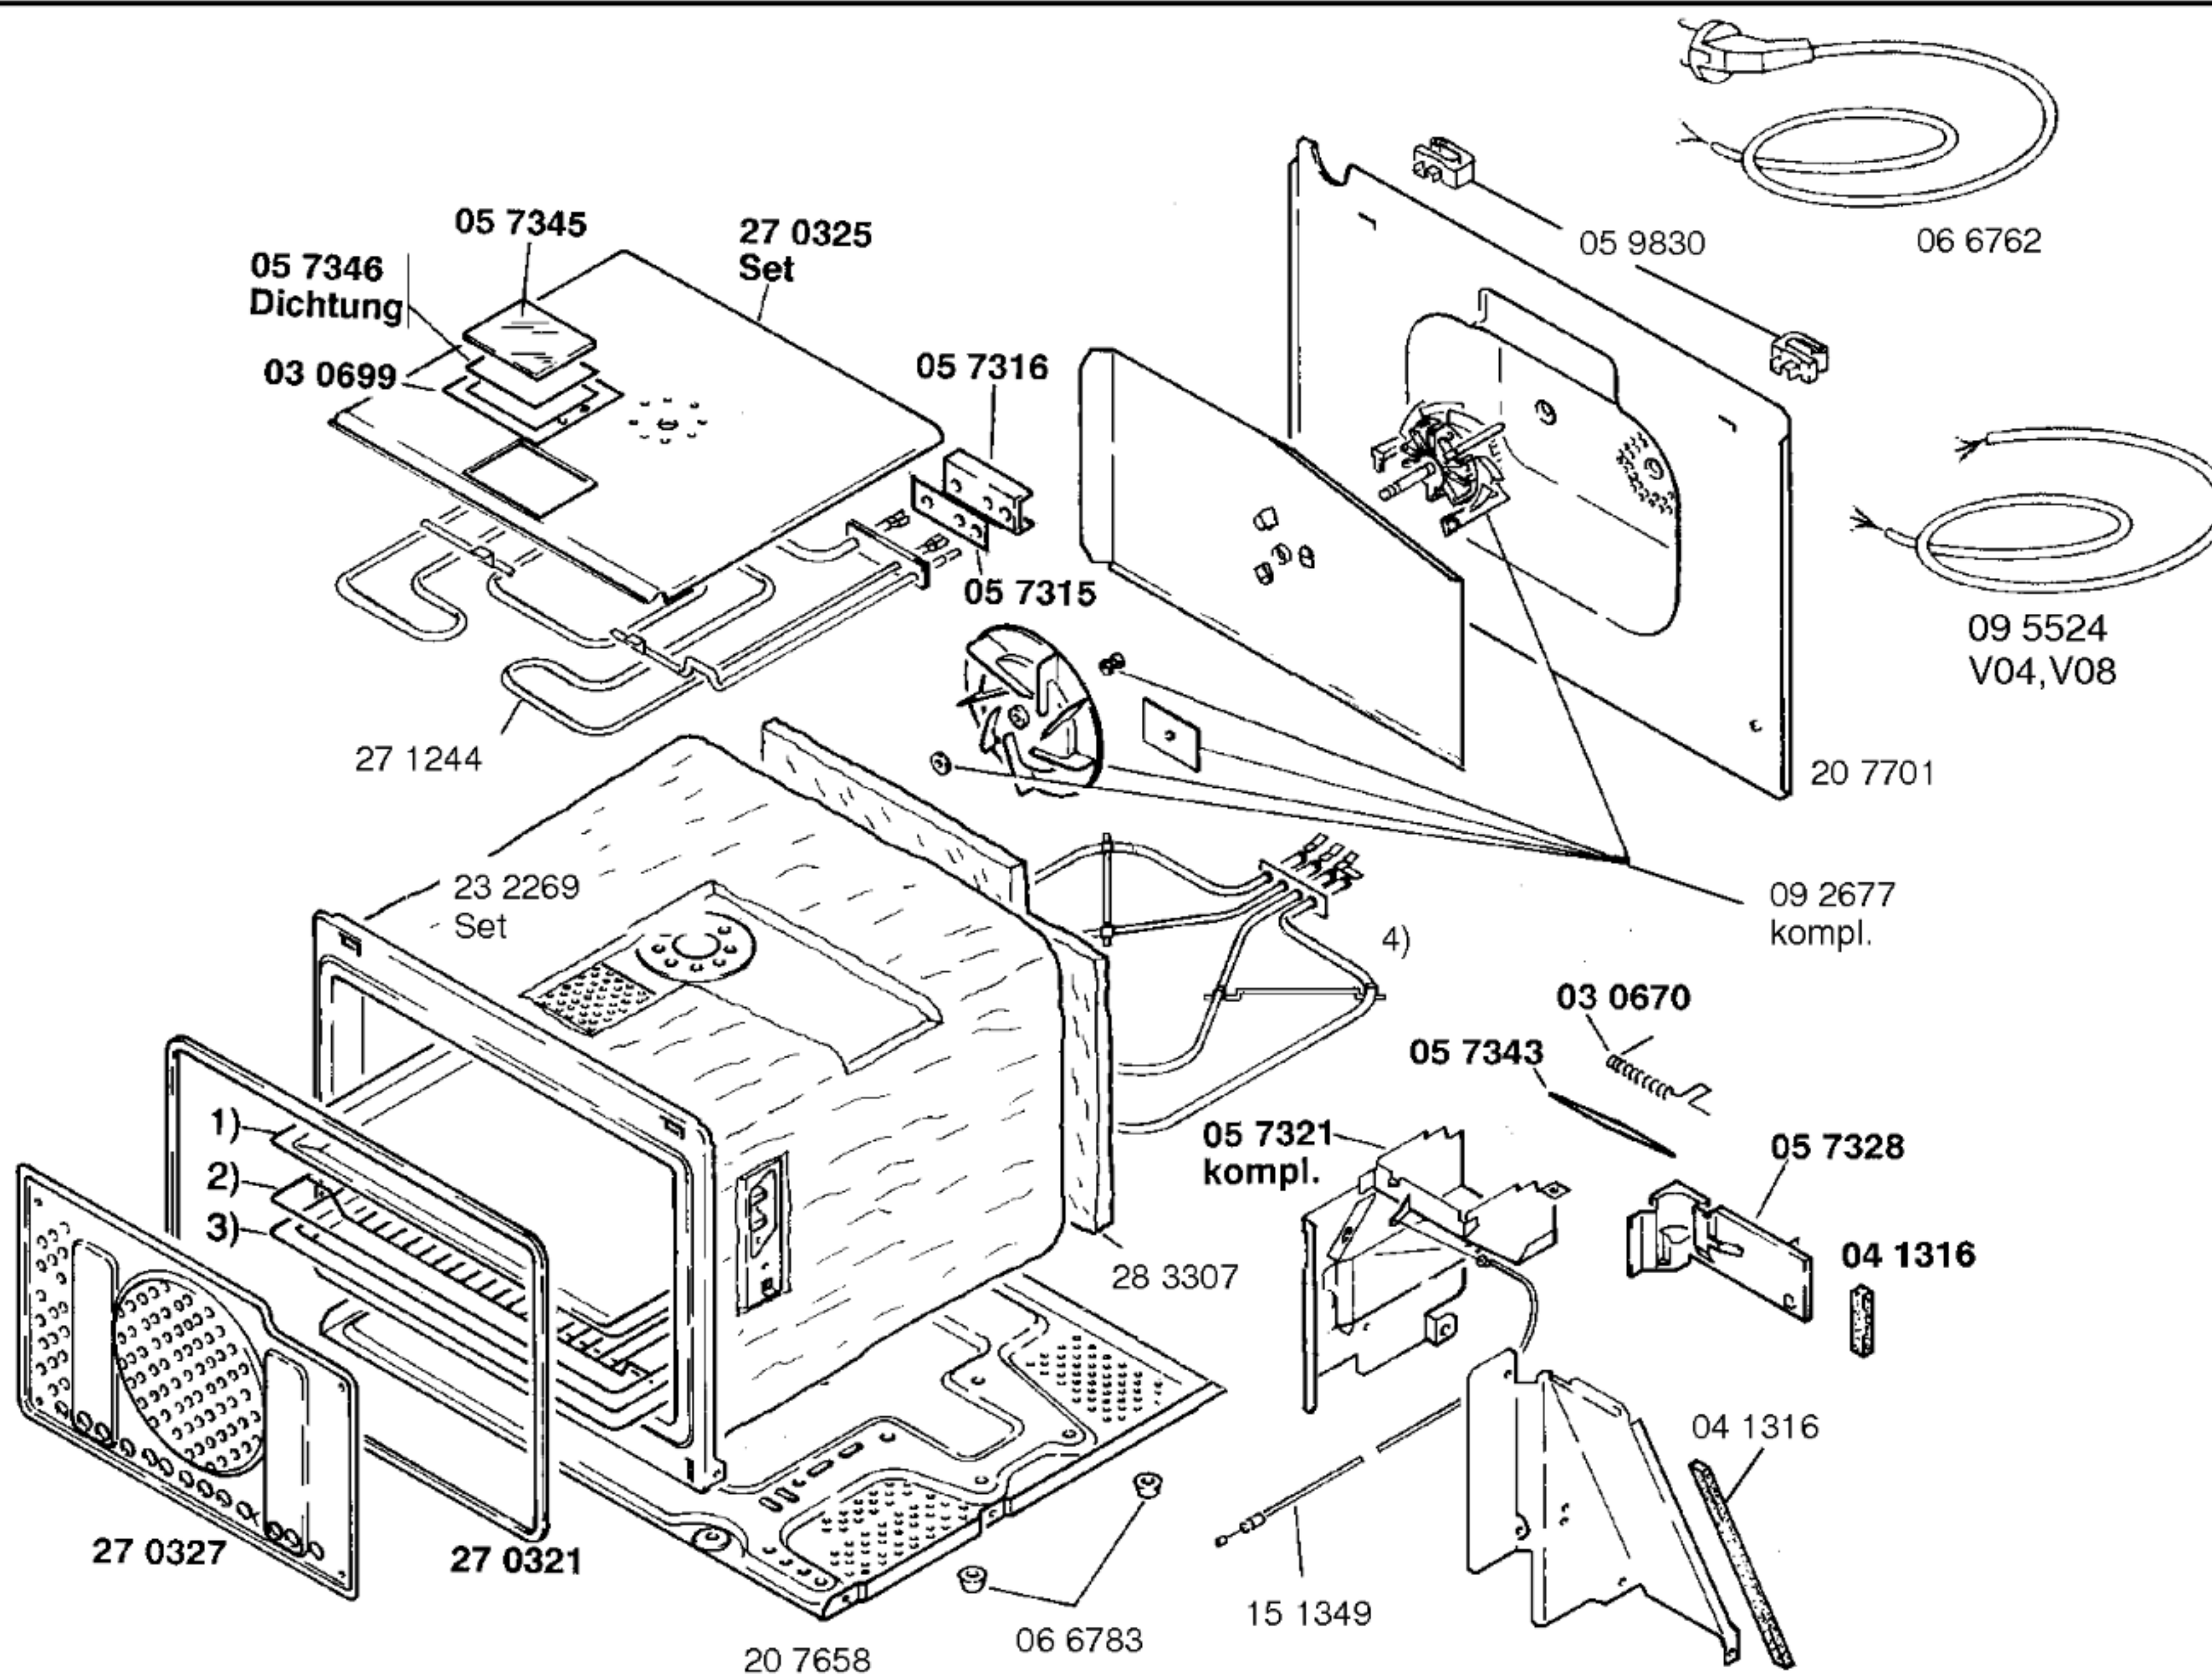

- 1) 11 4538
Backblech
- 2) 11 4539
Rost
- 3) 11 4537
Glasschale
- 4) 27 0323

02 8732
Anschlag für Backblech

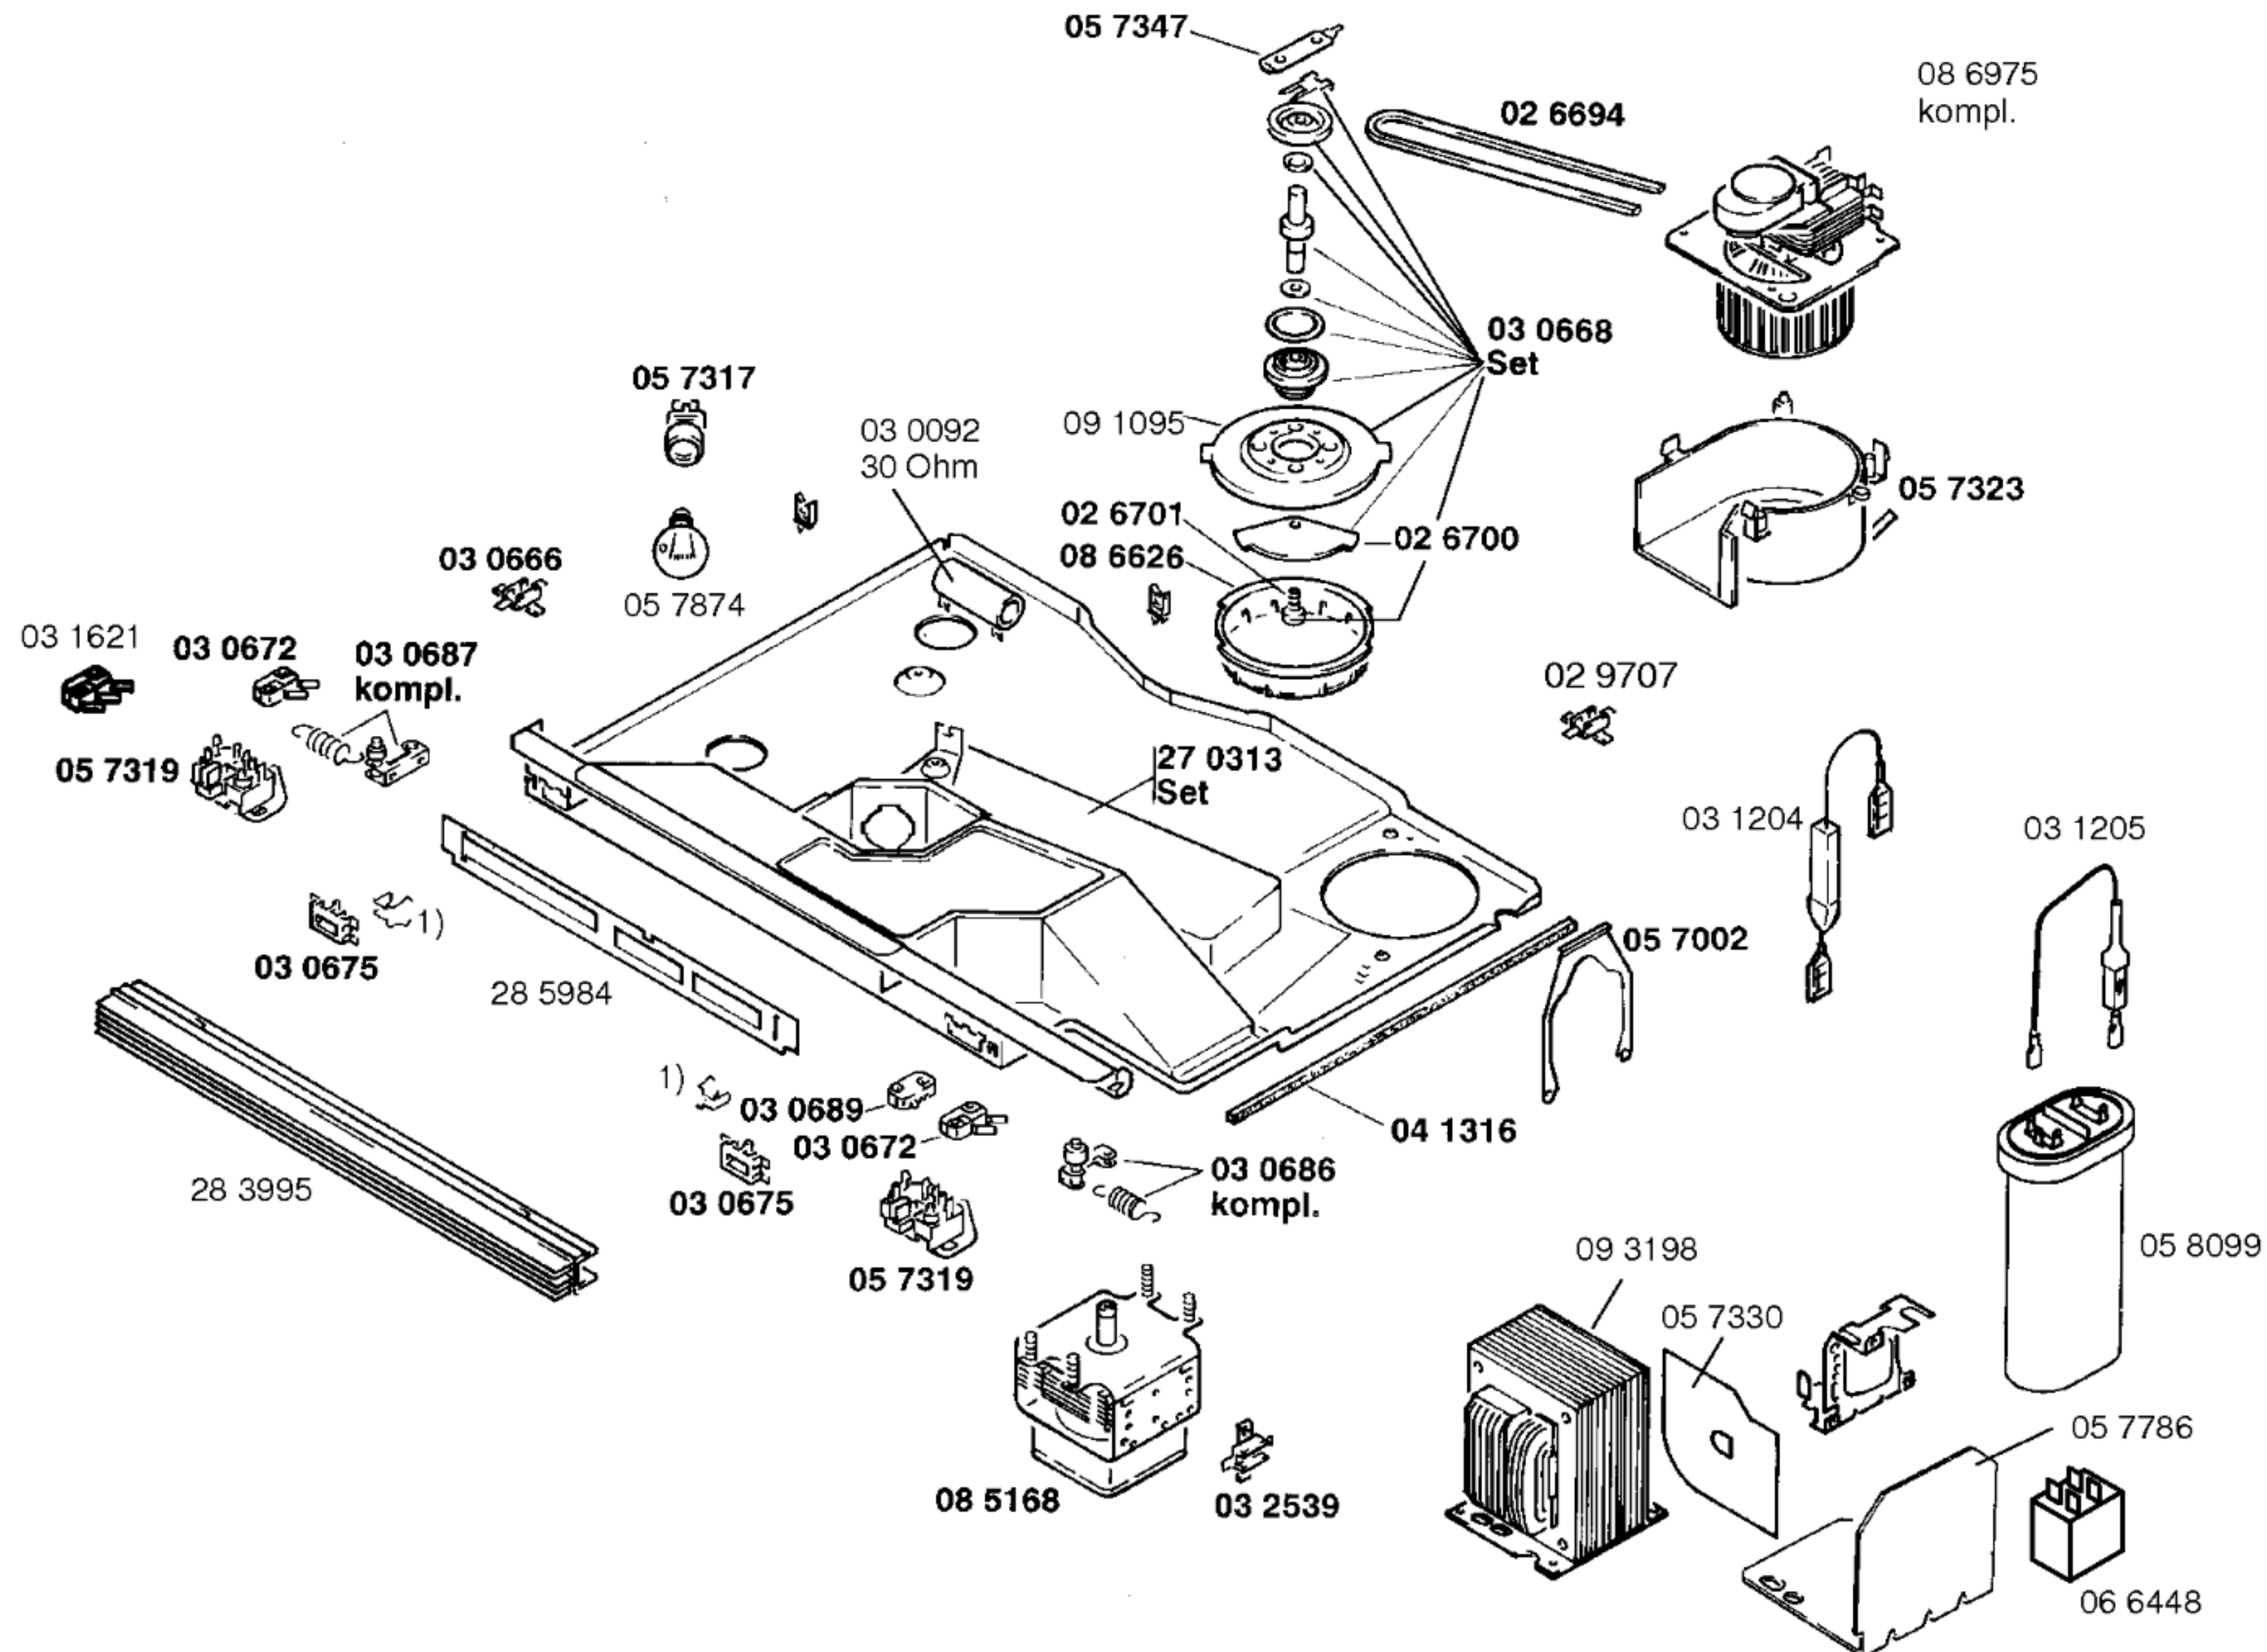

1) 06 6760

1) 06 6979

