 


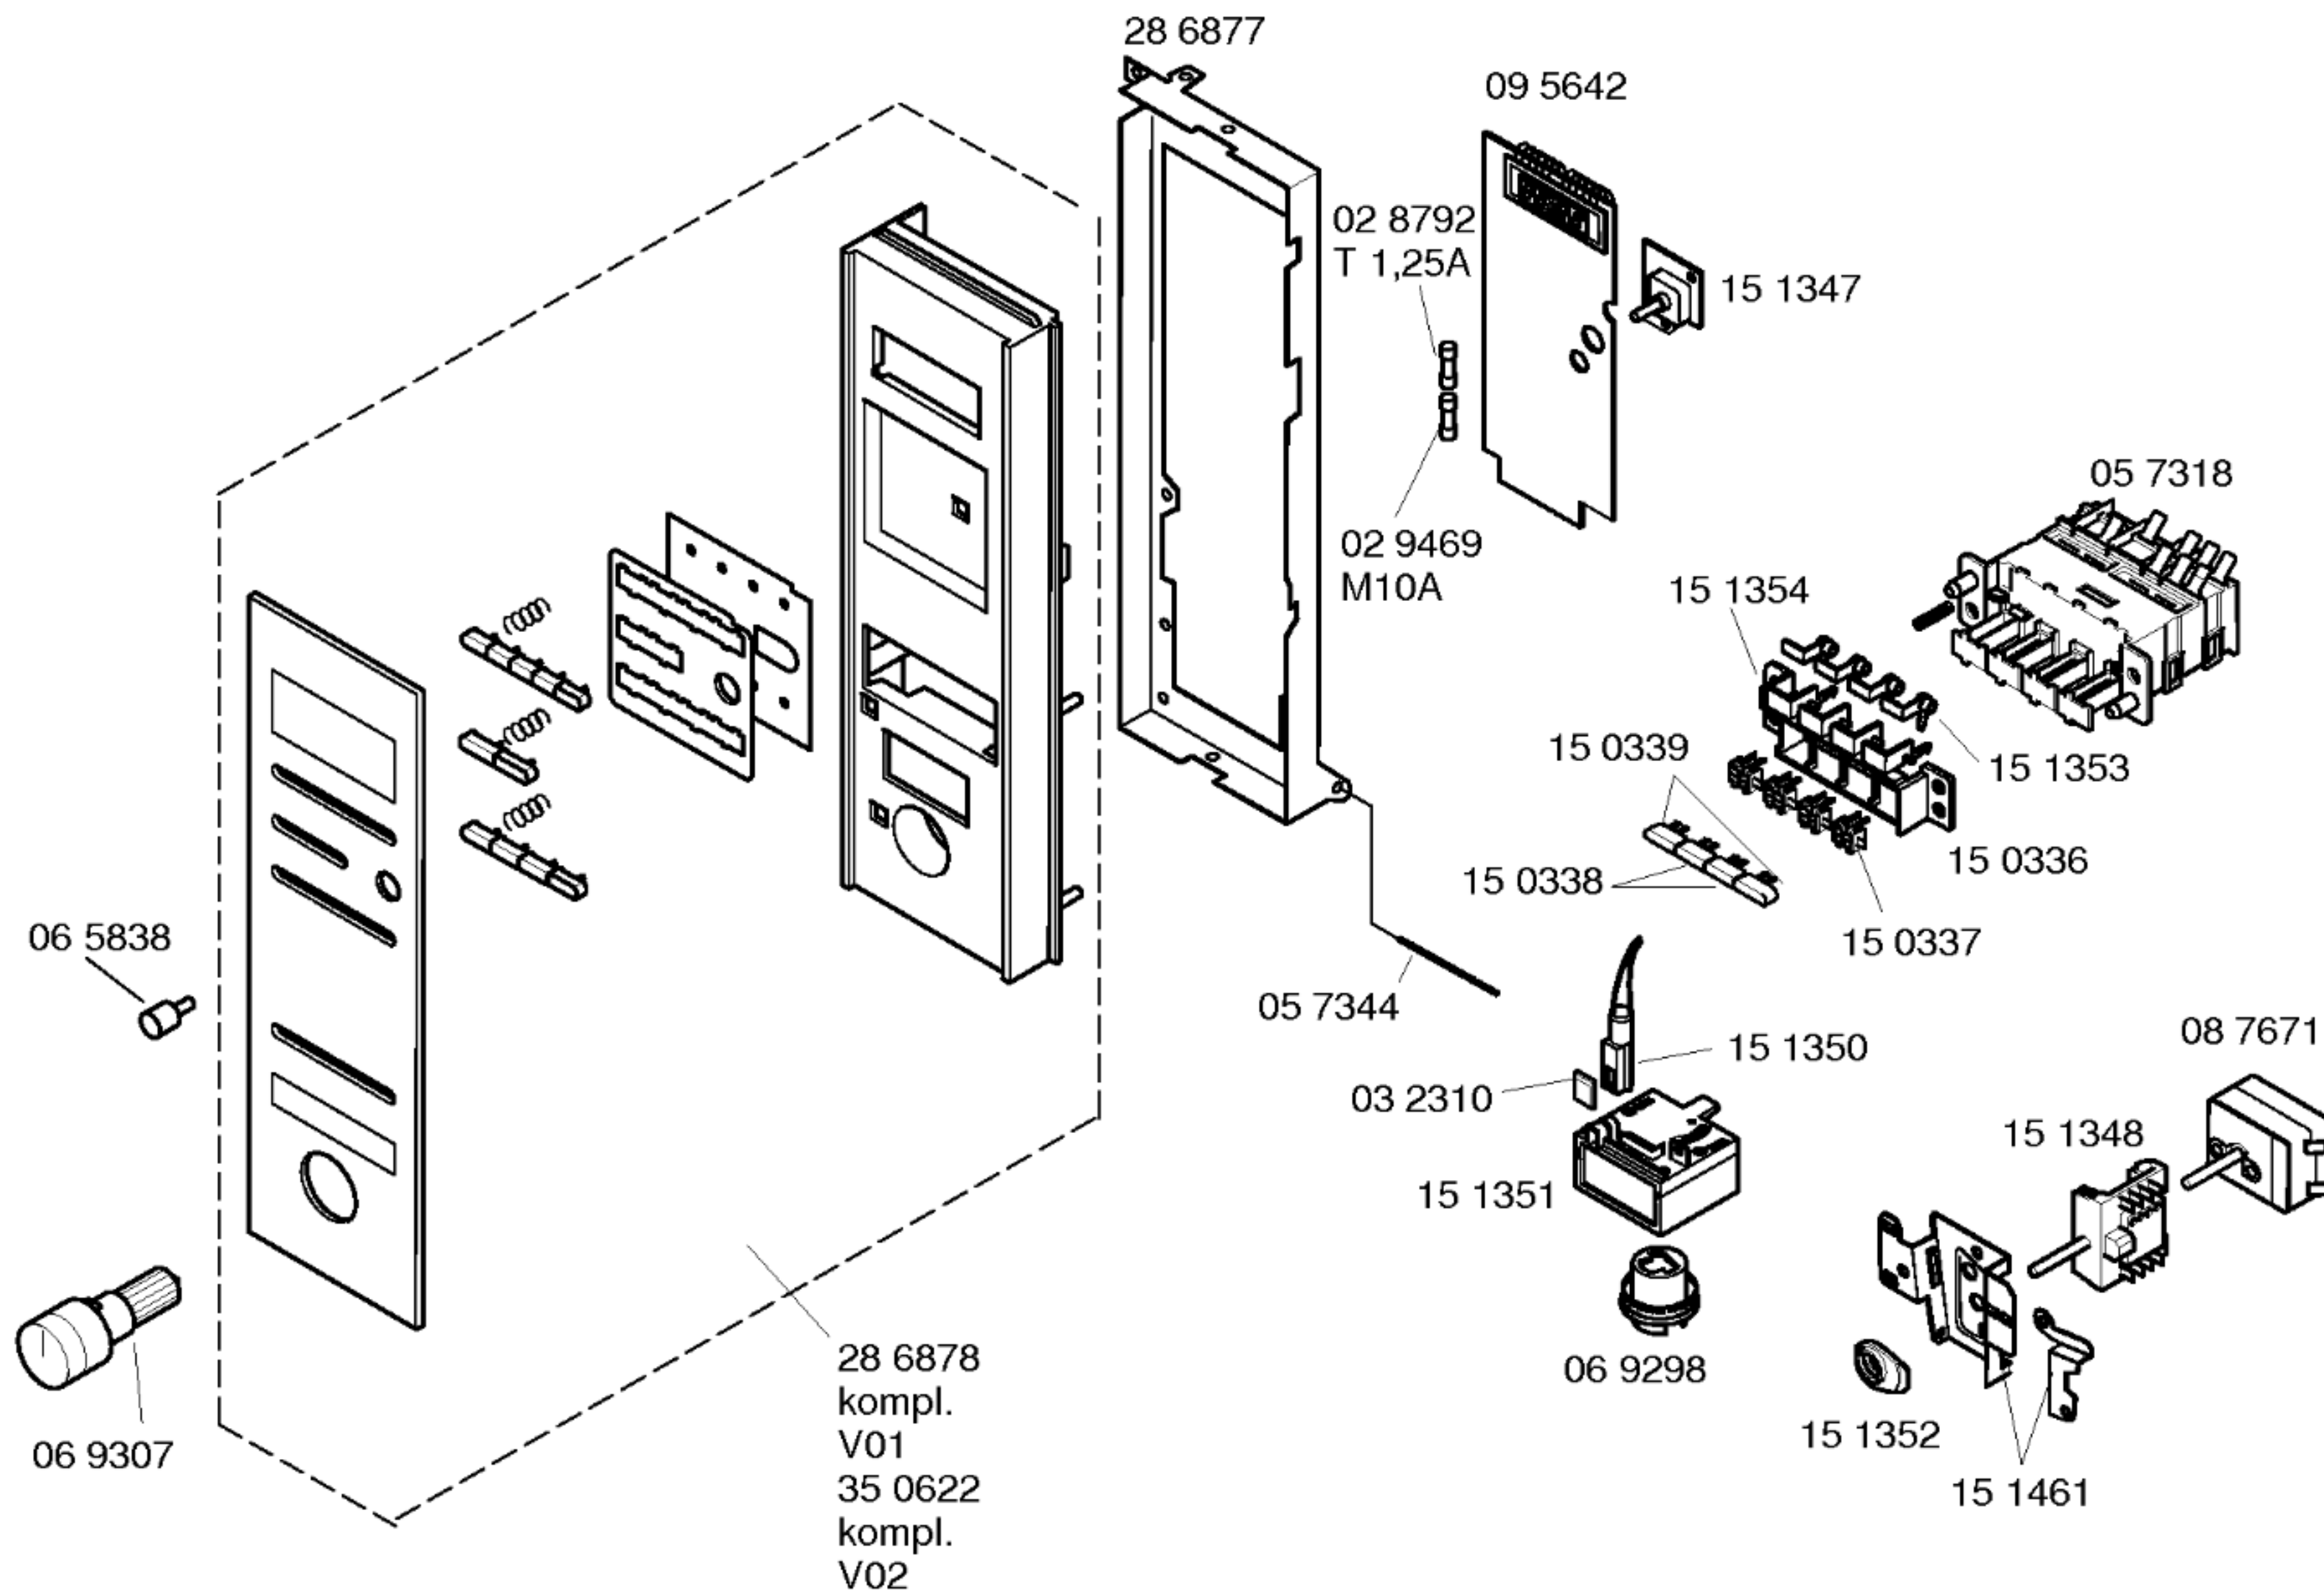



Gebrauchsanweisung
51 7294
V01
(D,F,GB,I,E,NL,DK)
52 0868
(D,GB,F,I,DK)
V02

Programmtabelle
51 7579
(D,GB,F,I,NL,E)

Kochbuch
51 5729
(D)
51 5853
(F)

  Zubehör:
Einbaurahmen
HZ 67042
Alu-Backblech
HZ 8055
Glasbräter
HZ 9150
Glaspfanne
HZ 8056
Abdeckplatte
HZ 67720

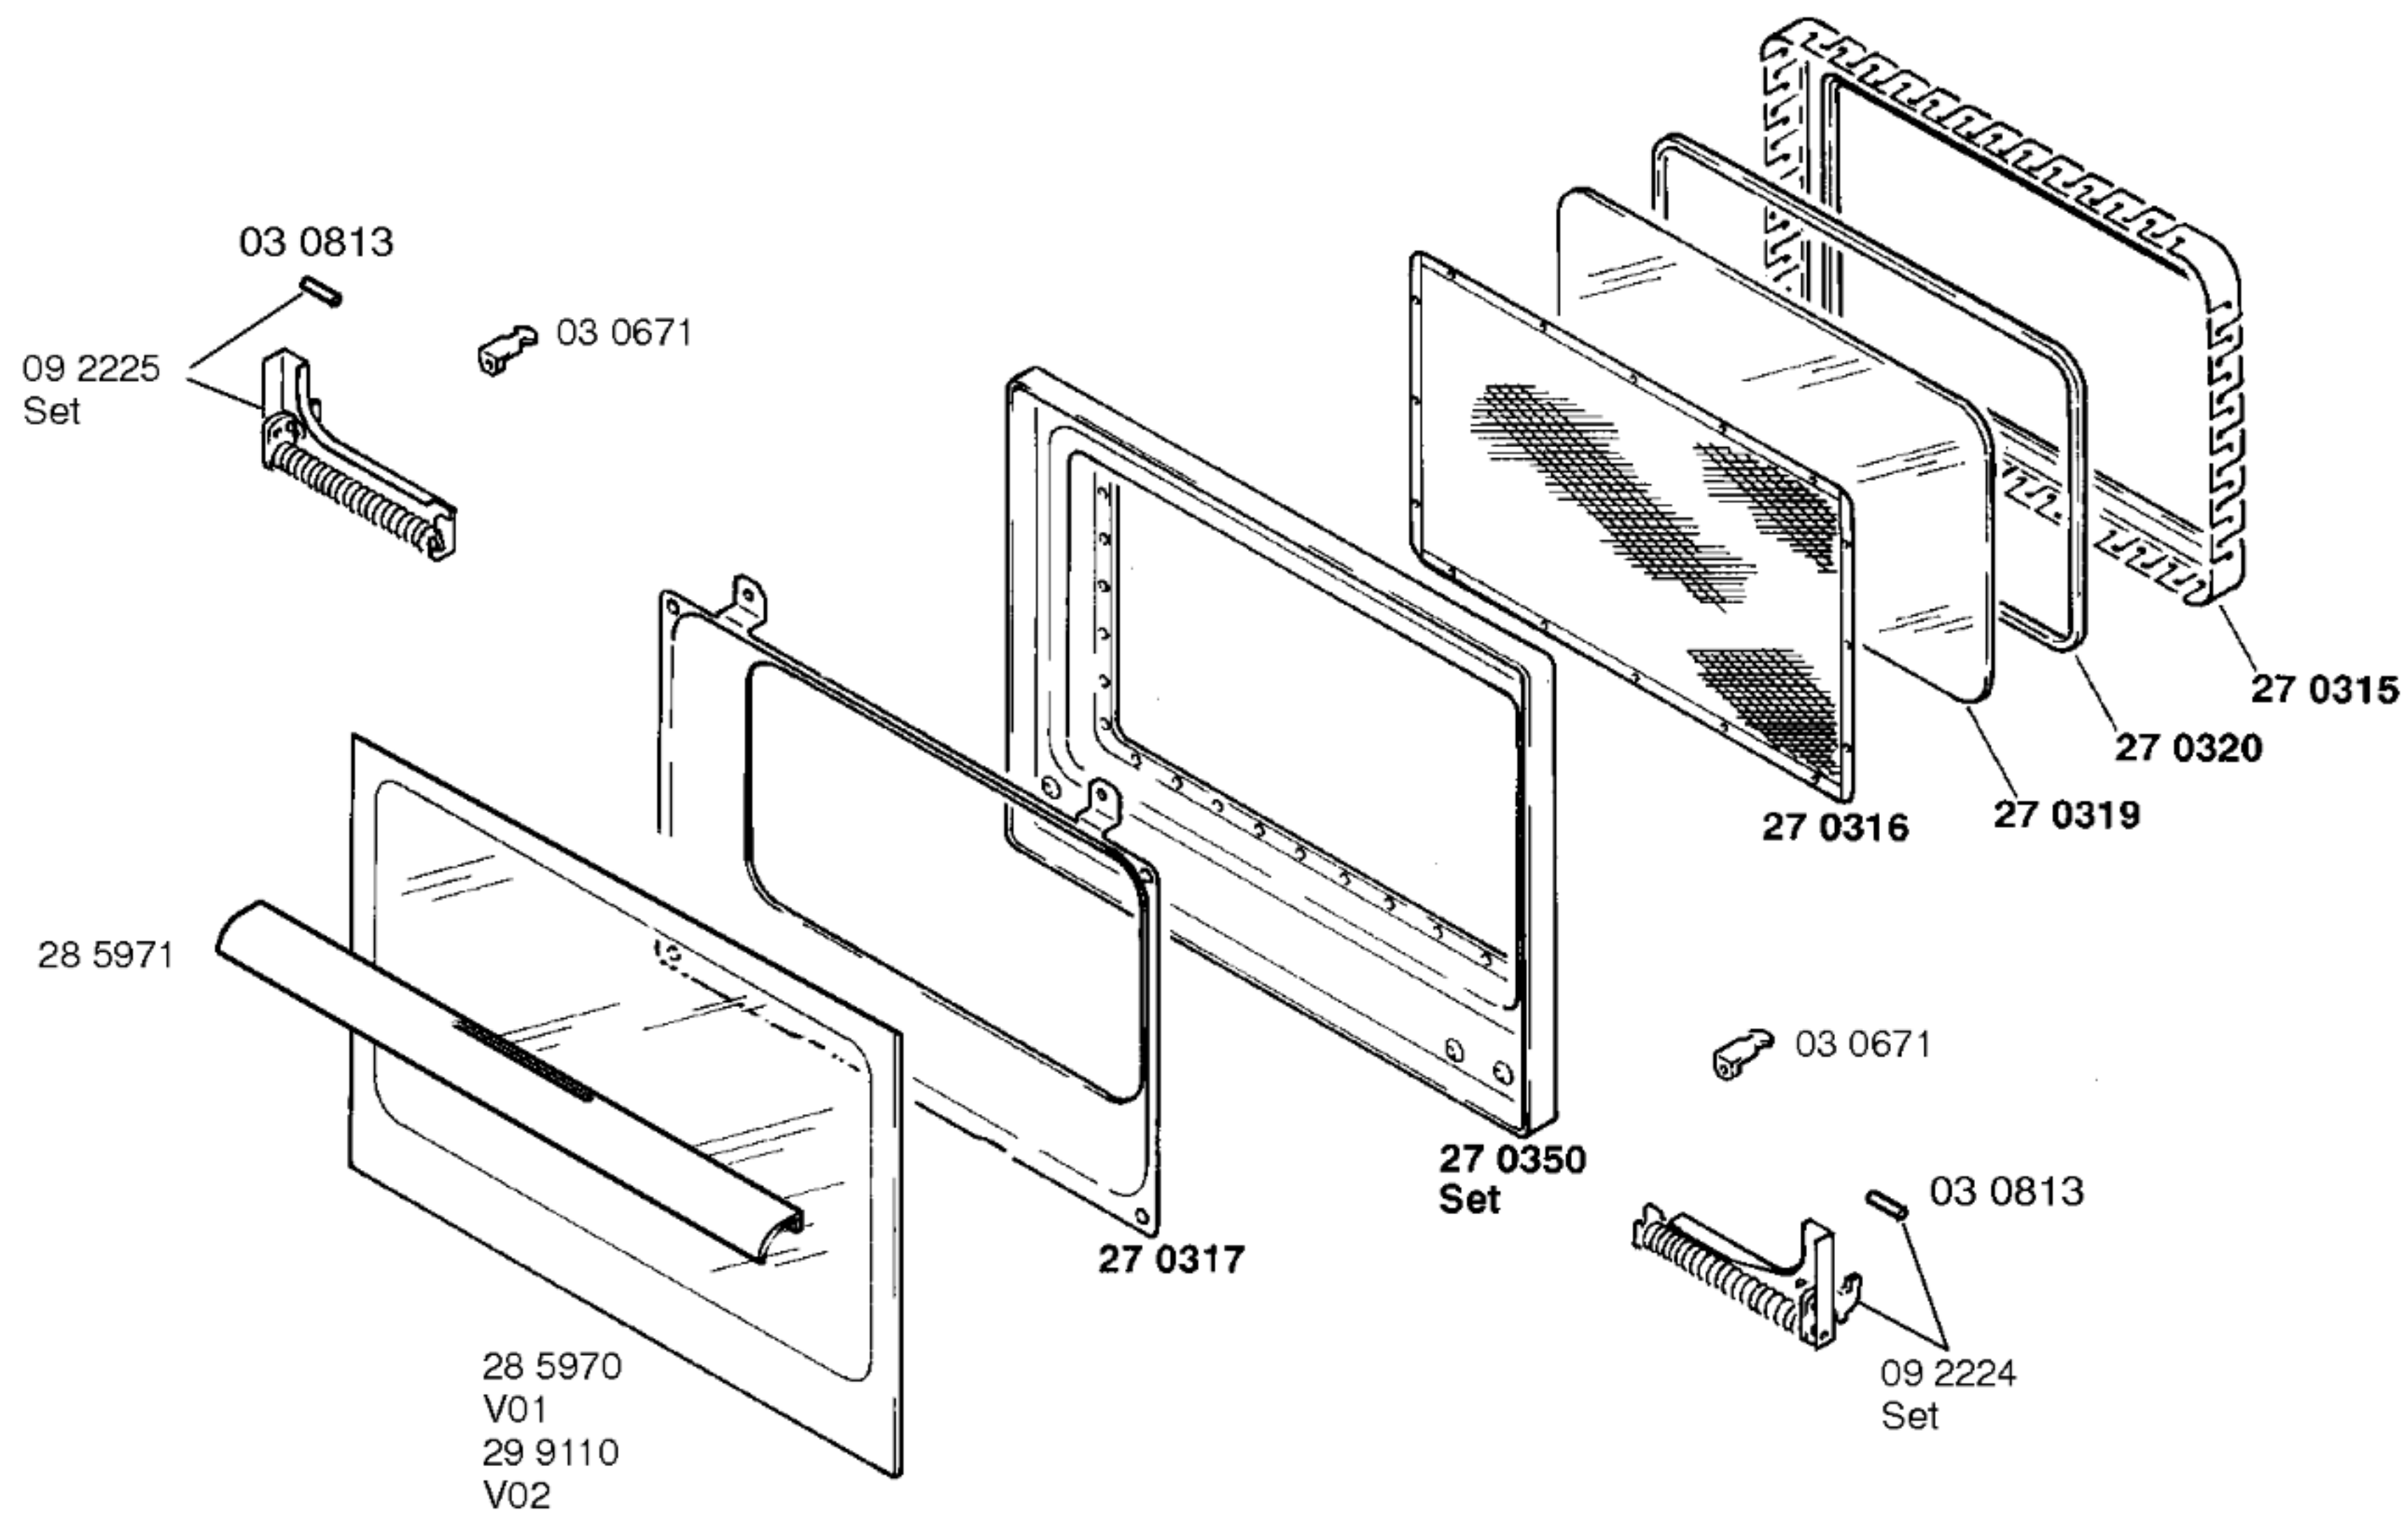

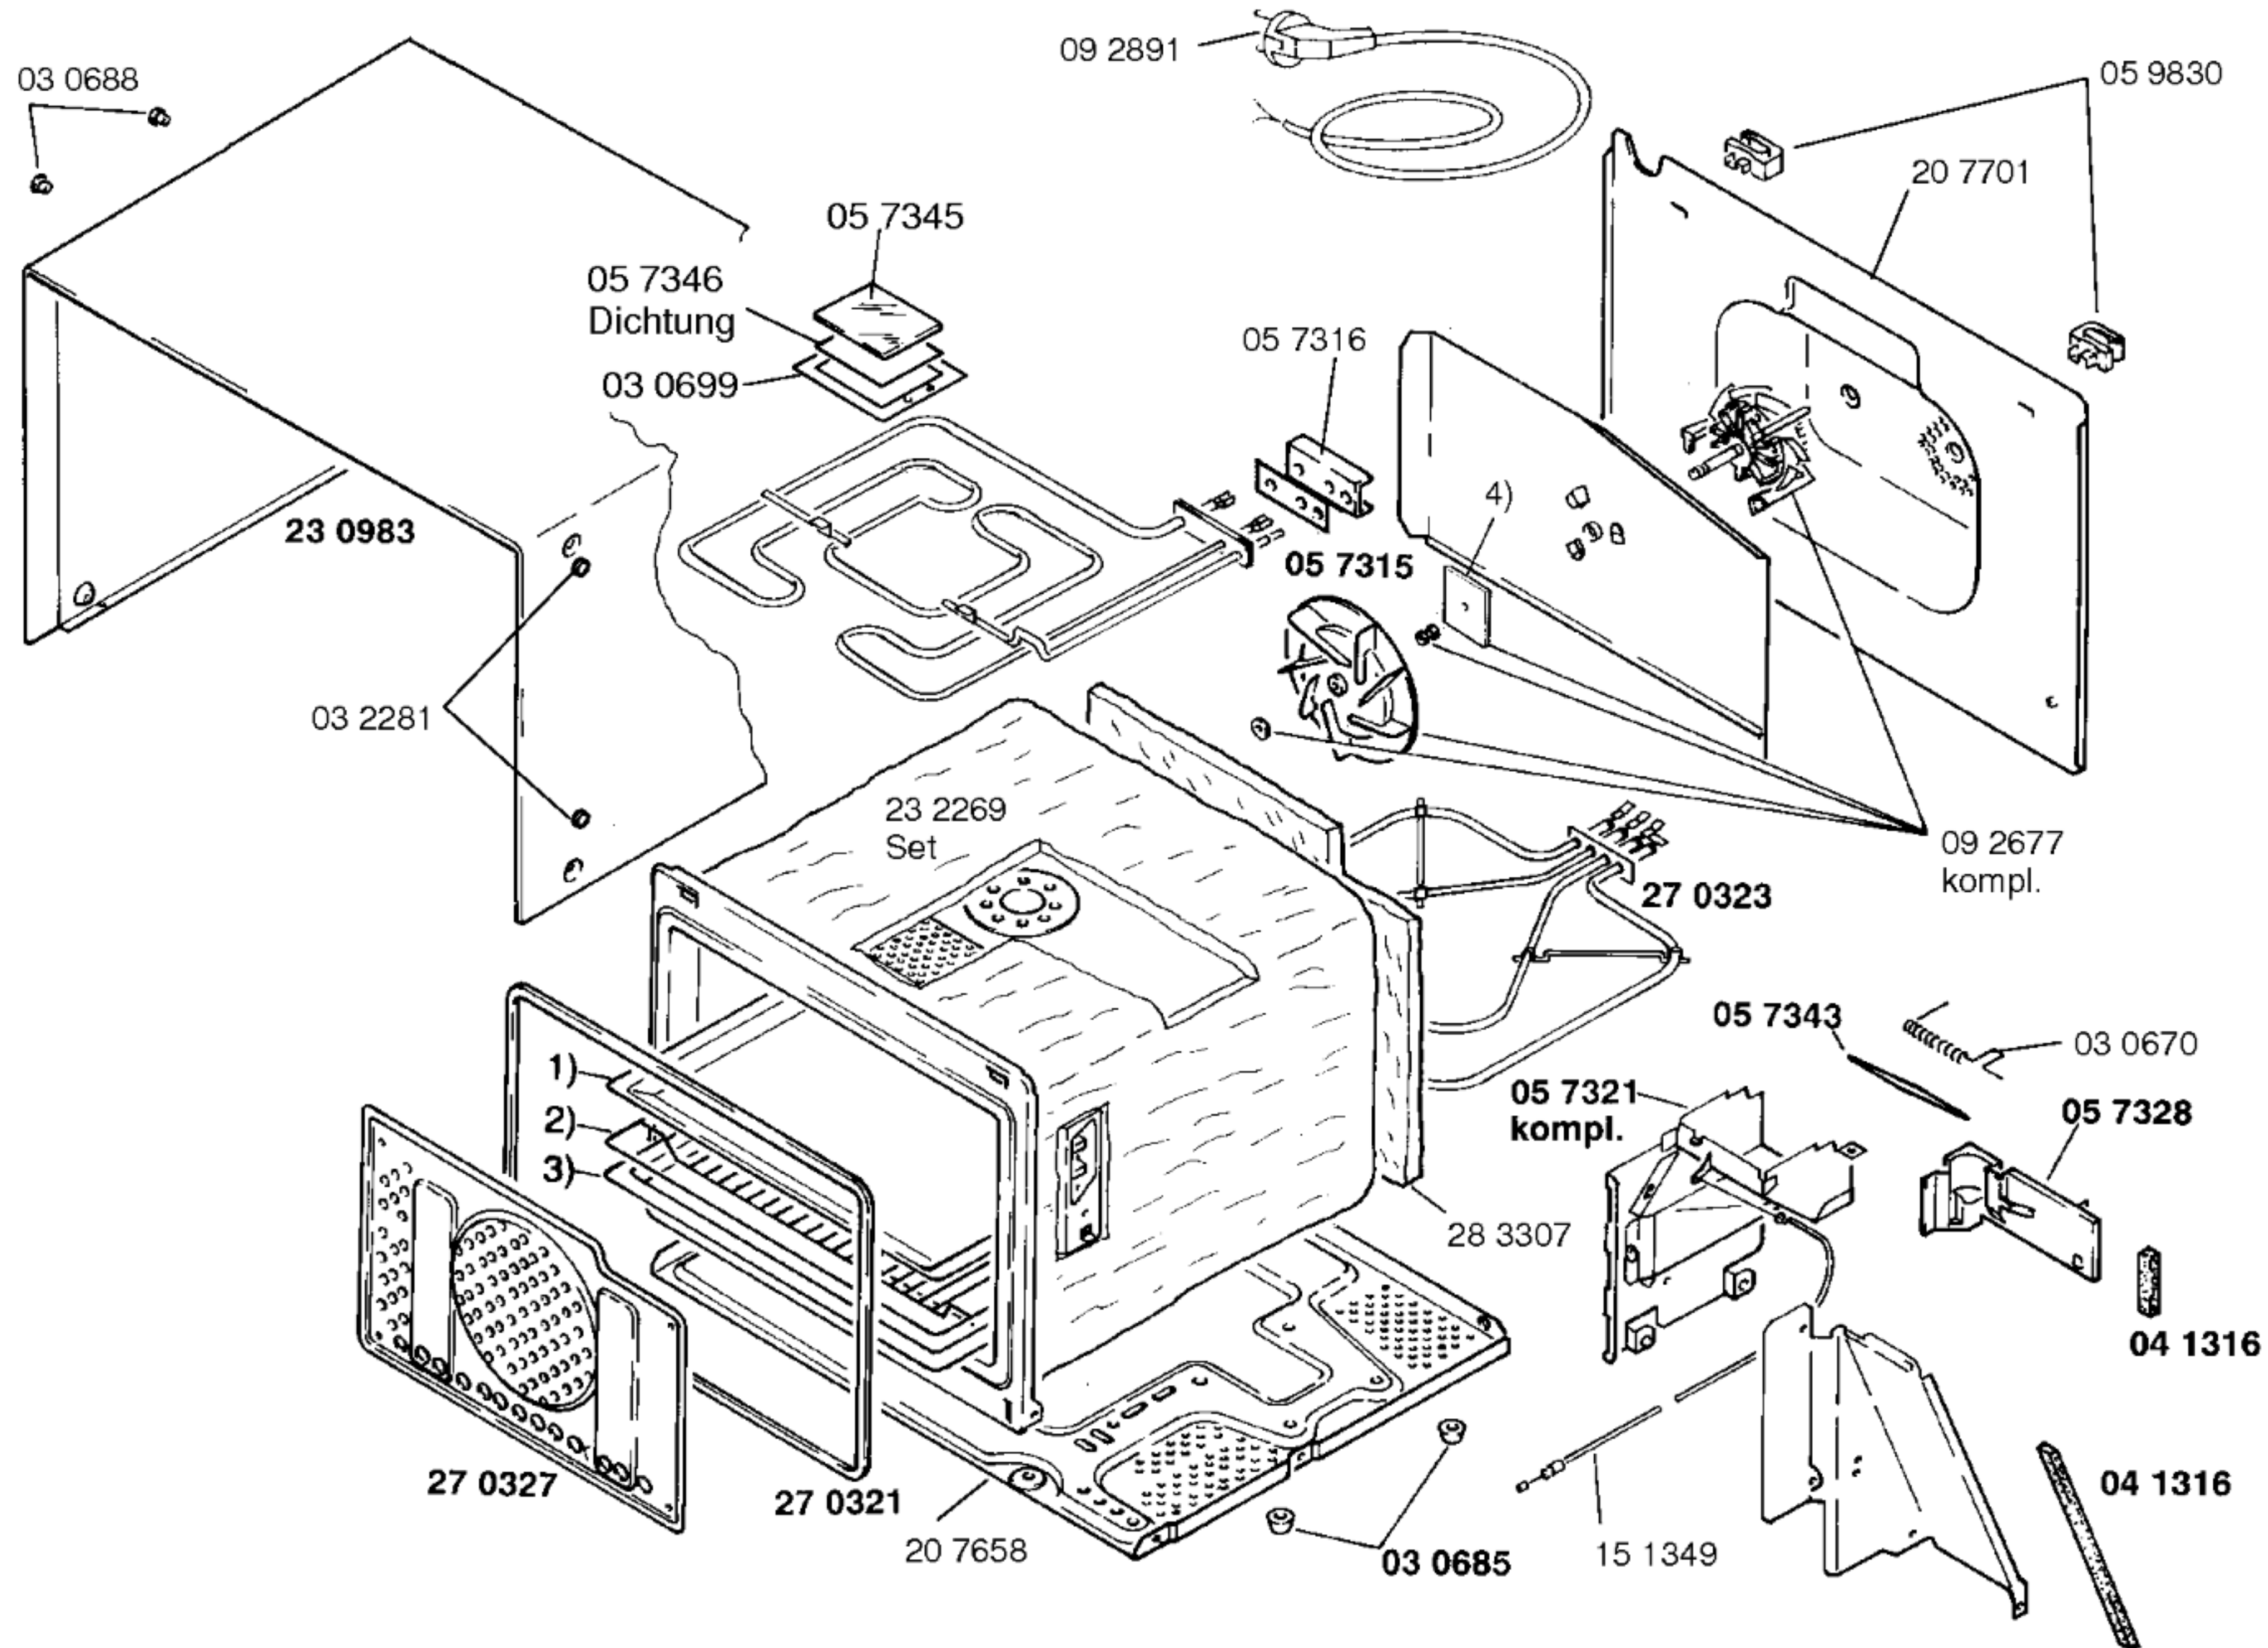

- 1) 11 4537
Glasplatte
- 2) 11 4539
Glasplatte
- 3) 11 4538
Backblech
- 4) 03 2778
Backblech

02 8732
Anschlag-Backblech

