



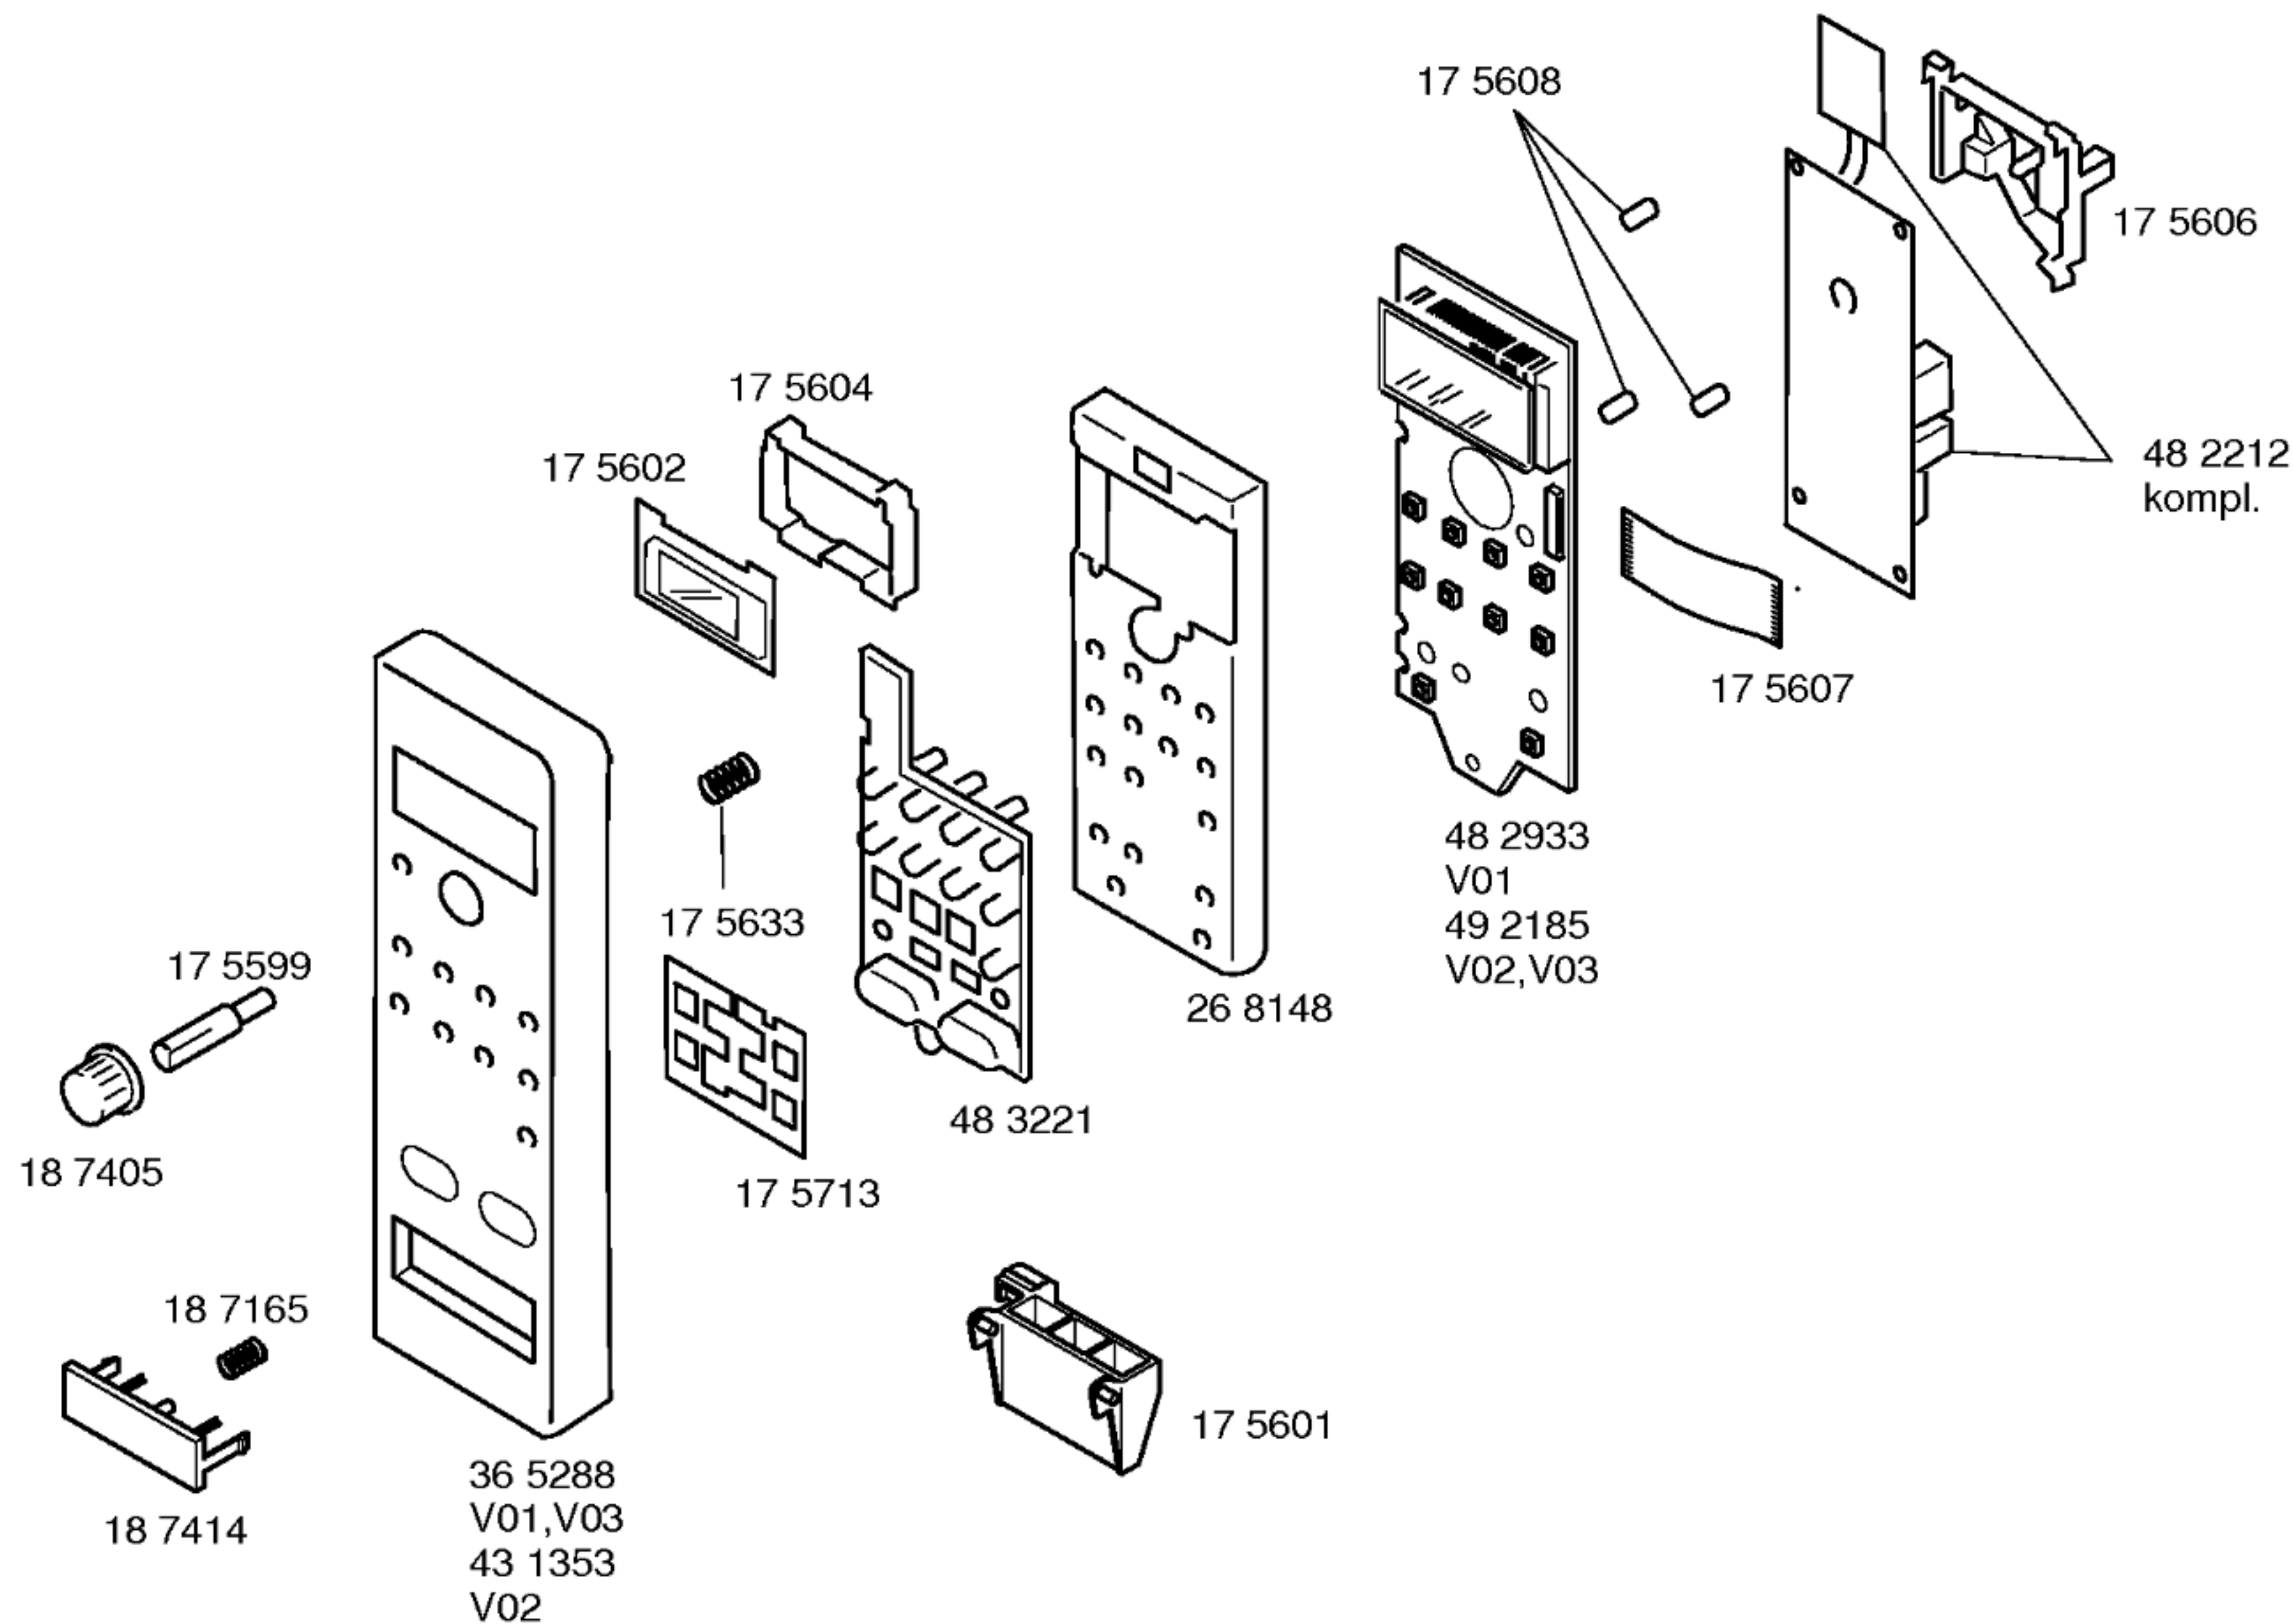


Gebrauchsanweisung
50 0049
(de, en, fr, it, nl)
50 0048
(es, pt, el, ru, tr)
50 0050
(da, sv, no, fi)

Kochbuch
52 9971
(de)
50 0232
(en)
Montageanleitung
52 9653
(de, en, fr, it, nl, da, sv, no,
fi, es, pt, el, ru, tr)

Aufkleber
50 0043
(de, en, fr, it, nl)
50 0046
(es, pt, el, ru, tr)
50 0047
(dk, se, no, fi)

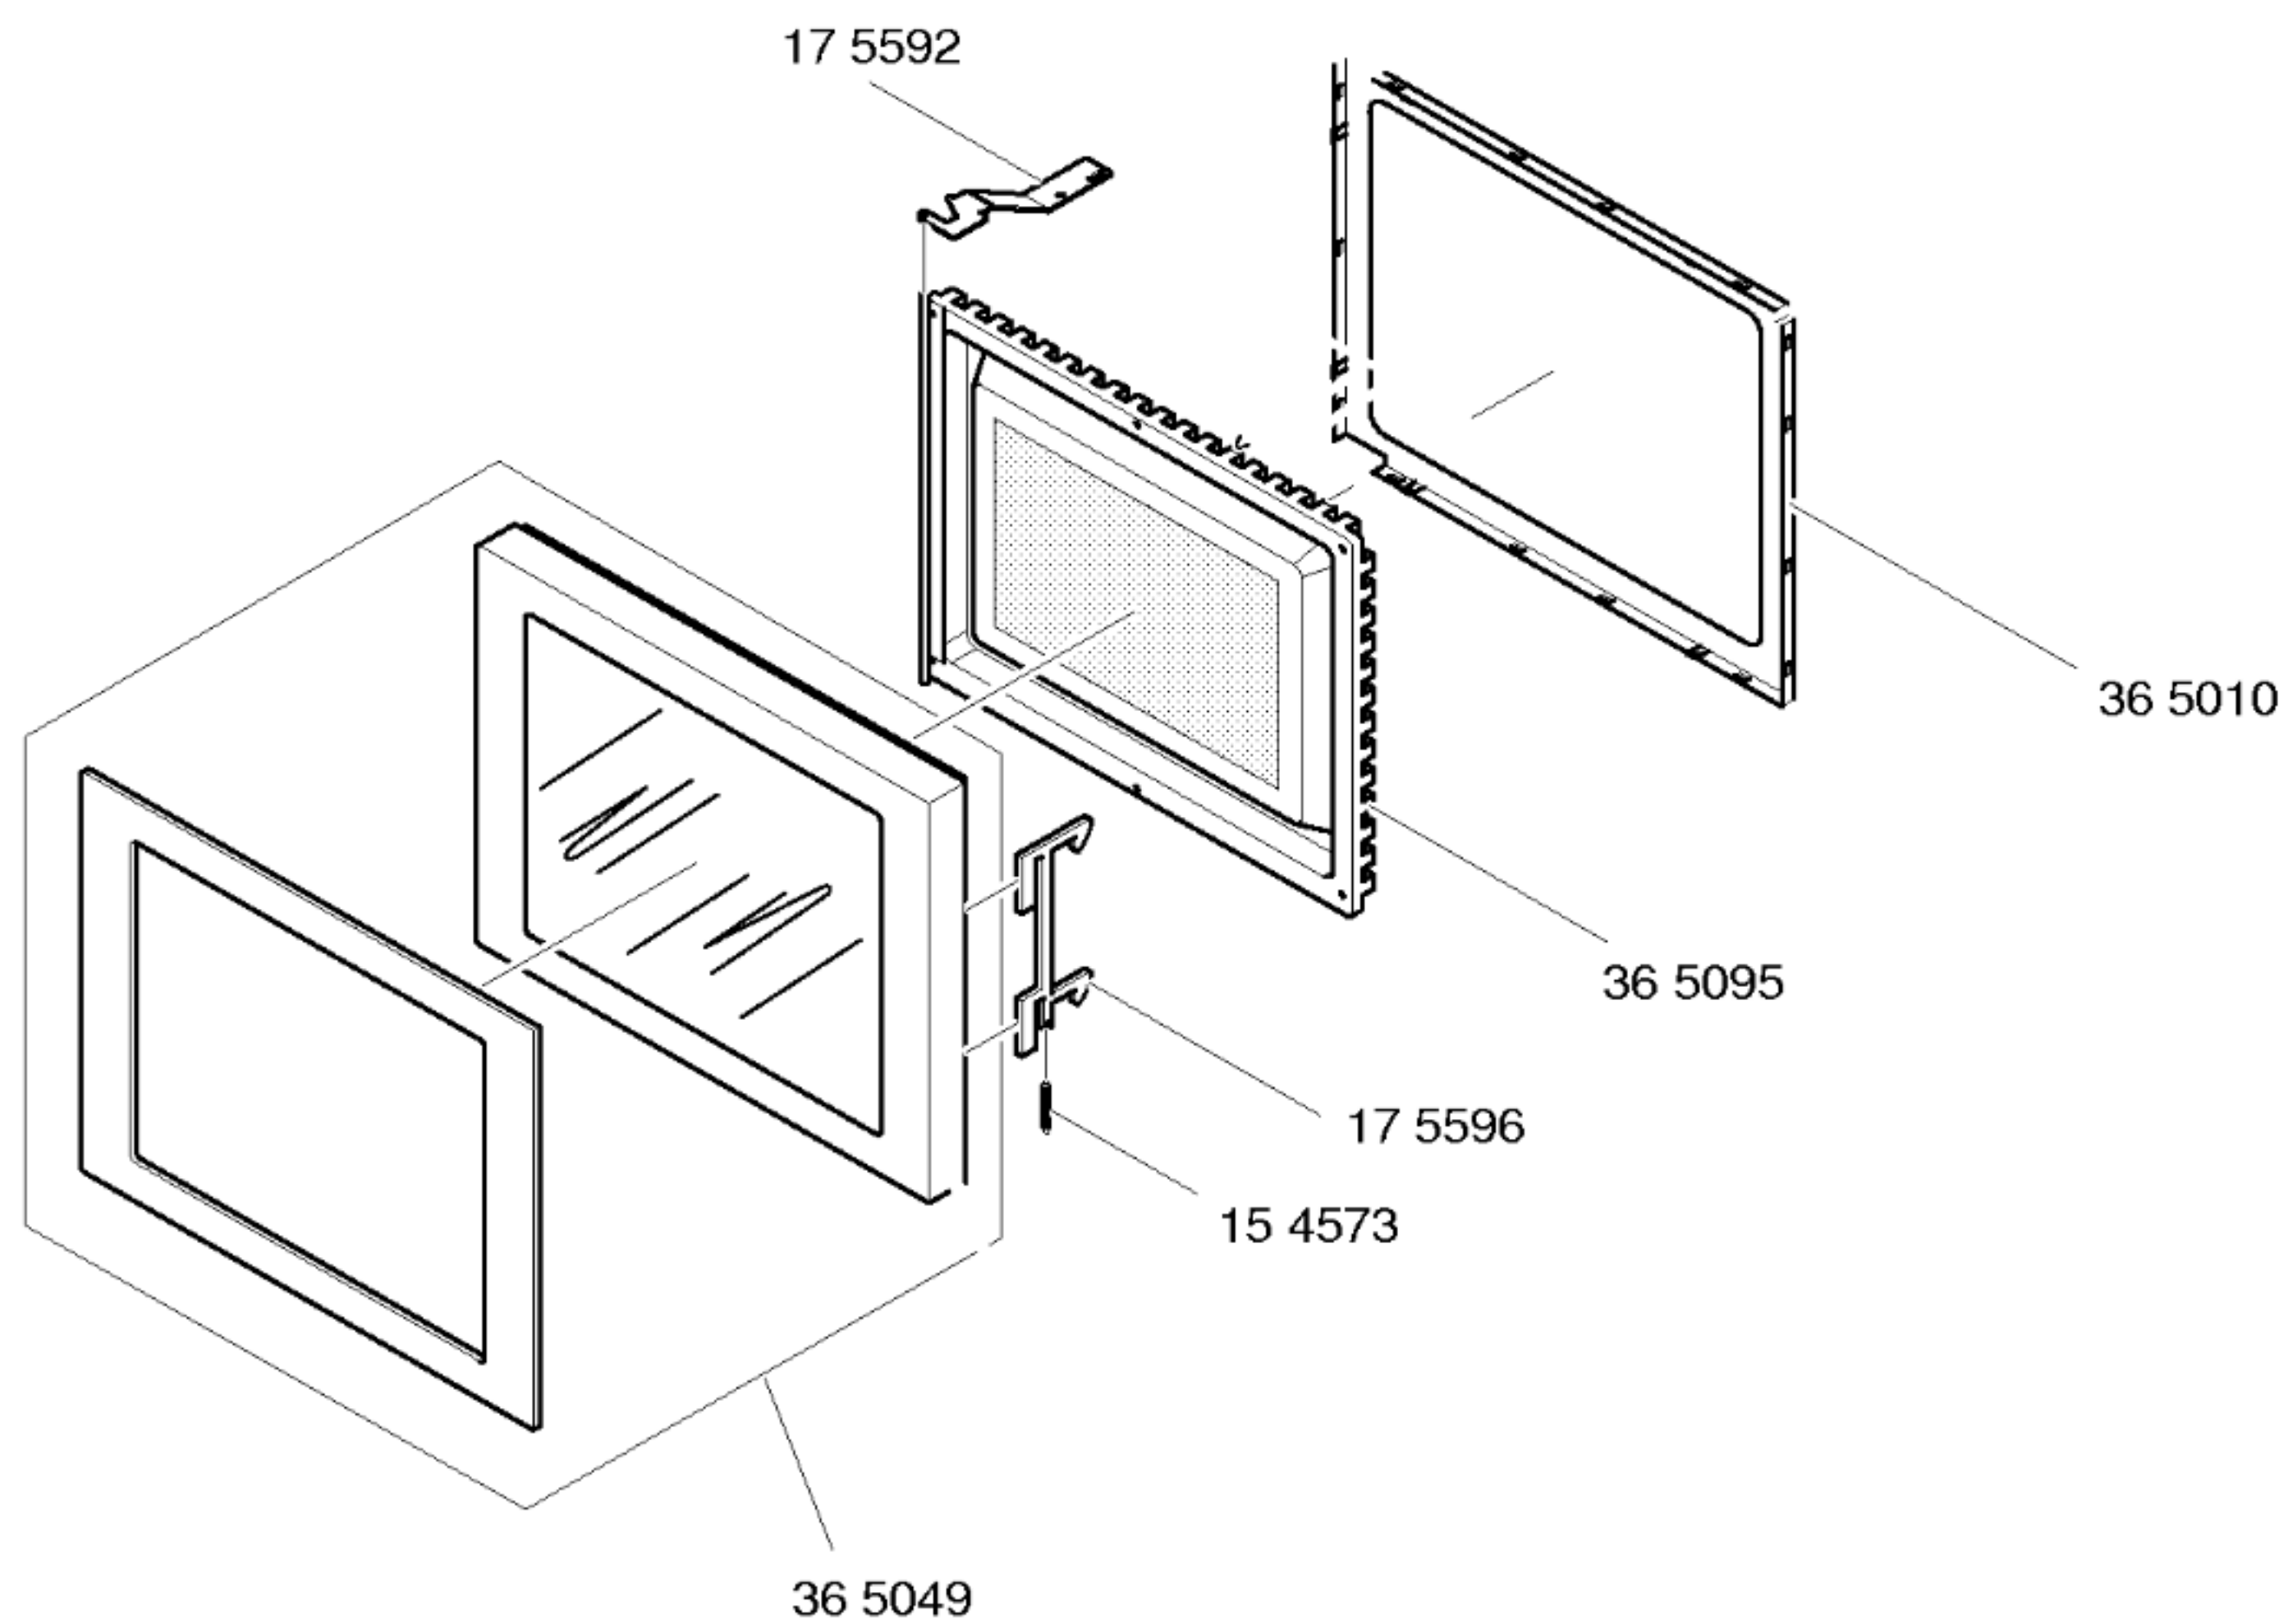

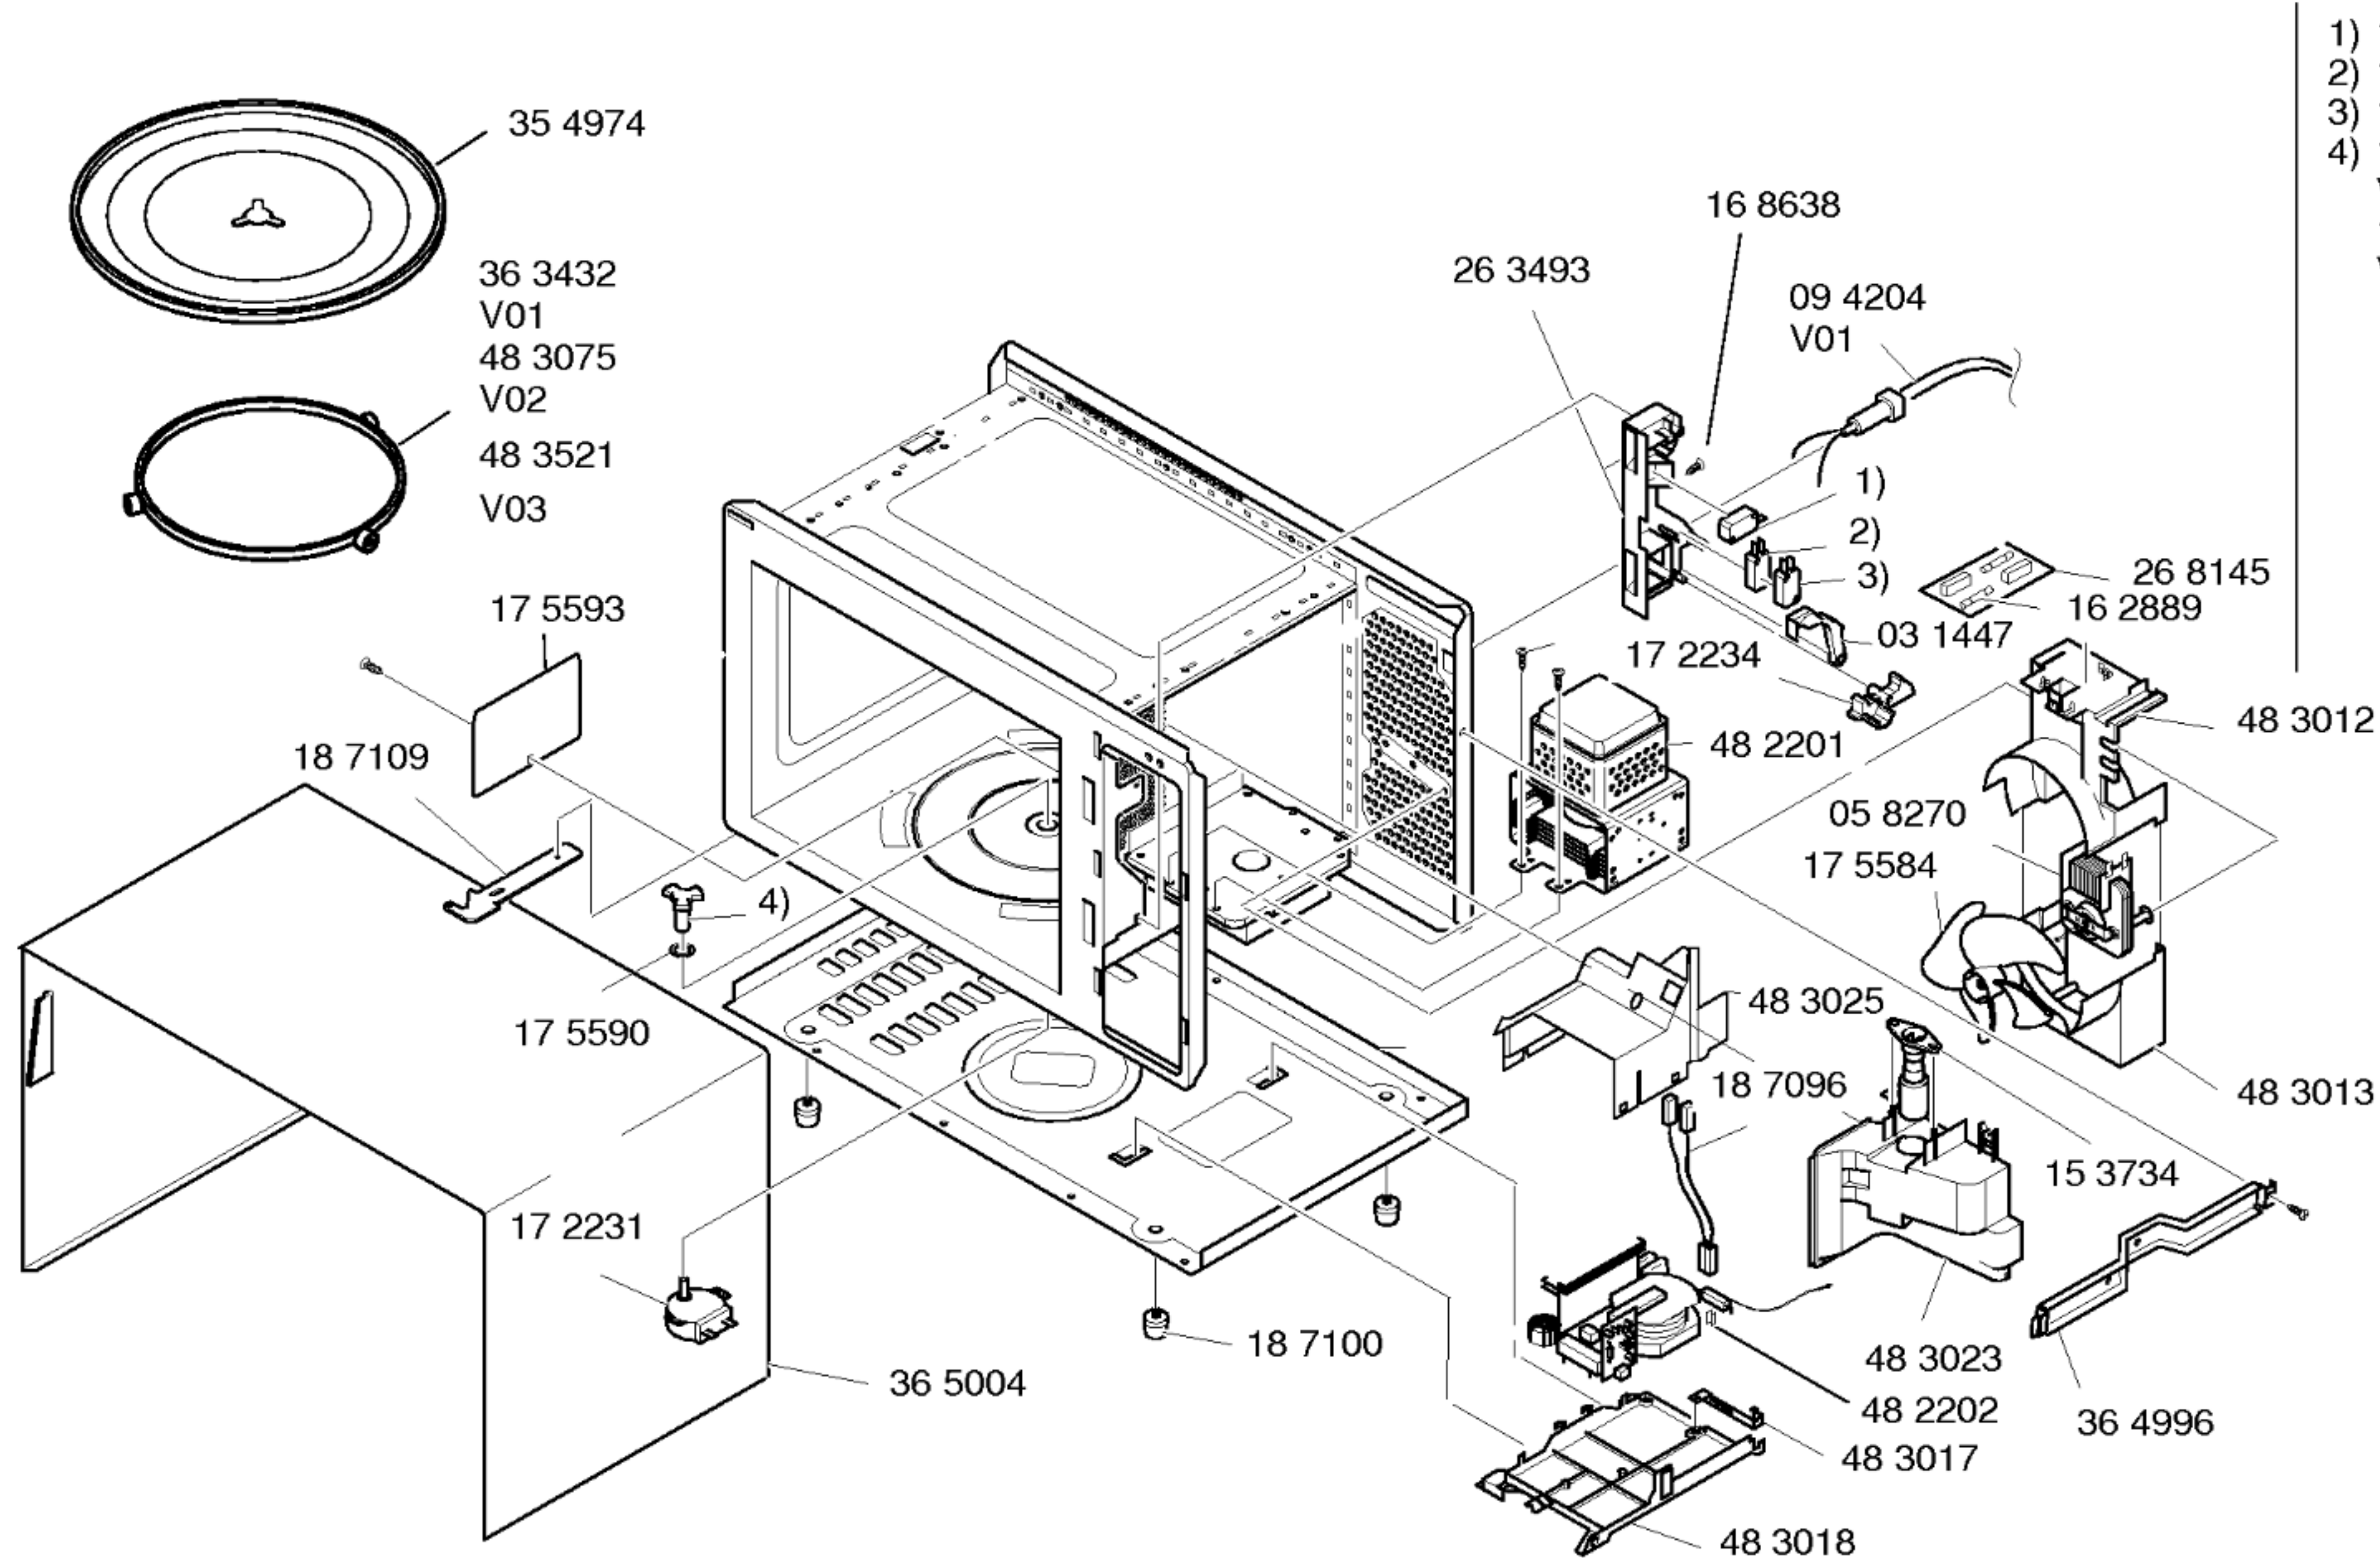

- 1) 18 7095
- 2) 17 5588
- 3) 15 3735
- 4) 16 6300
- V01
- 18 8071
- V02, V03

